

Nikon

DIGITAL CAMERA

COOLPIX L330

Reference Manual



En

- Introduction**
- Parts of the Camera**
- The Basics of Shooting and Playback**
- Shooting Features**
- Playback Features**
- Recording and Playing Back Movies**
- General Camera Setup**
- Connecting the Camera to a TV, Computer, or Printer**
- Reference Section**
- Technical Notes and Index**

Introduction

Read This First

Thank you for purchasing the Nikon COOLPIX L330 digital camera. Before using the camera, please read the information in "For Your Safety" (□ viii-xi) and familiarize yourself with the information provided in this manual. After reading, please keep this manual handy and refer to it to enhance your enjoyment of your new camera.

About This Manual

If you want to start using the camera right away, see "The Basics of Shooting and Playback" (☞ 12).

To learn about the parts of the camera and information that is displayed in the monitor, see "Parts of the Camera" (☞ 1).

Other Information

- Symbols and Conventions

To make it easier to find the information you need, the following symbols and conventions are used in this manual:

Icon	Description
	This icon indicates cautions and information that should be read before using the camera.
	This icon indicates notes and information that should be read before using the camera.
/ /	These icons indicate other pages containing relevant information; : "Reference Section", : "Technical Notes and Index."

- SD, SDHC, and SDXC memory cards are referred to as "memory cards" in this manual.
- The setting at the time of purchase is referred to as the "default setting."
- The names of menu items displayed in the camera monitor, and the names of buttons or messages displayed on a computer monitor appear in bold.
- In this manual, images are sometimes omitted from monitor display samples so that monitor indicators can be more clearly shown.
- Illustrations and monitor content shown in this manual may differ from the actual product.

Information and Precautions

Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually updated information is available online at the following sites:

- For users in the U.S.A.: <http://www.nikonusa.com/>
- For users in Europe and Africa: <http://www.europe-nikon.com/support/>
- For users in Asia, Oceania, and the Middle East: <http://www.nikon-asia.com/>

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. Visit the site below for contact information:

<http://imaging.nikon.com/>

Use Only Nikon Brand Electronic Accessories

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries, and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

THE USE OF NON-NIKON ELECTRONIC ACCESSORIES COULD DAMAGE THE CAMERA AND MAY VOID YOUR NIKON WARRANTY.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

About the Manuals

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort was made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that was digitally copied or reproduced by means of a scanner, digital camera or other device may be punishable by law.

- **Items prohibited by law from being copied or reproduced**

Do not copy or reproduce paper money, coins, securities, government bonds or local government bonds, even if such copies or reproductions are stamped "Sample." The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited. Unless the prior permission of the government was obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

- **Cautions on certain copies and reproductions**

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards and tickets, such as passes and meal coupons.

- **Comply with copyright notices**

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcut prints, maps, drawings, movies, and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.

Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the **Select an image** option in the **Welcome screen** setting (65). Care should be taken to avoid injury or damage to property when physically destroying data storage devices.

For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

WARNINGS

⚠ Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or AC adapter, unplug the AC adapter and remove the batteries immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.

⚠ Do not disassemble

Touching the internal parts of the camera or AC adapter could result in injury. Repairs should be performed only by qualified technicians. Should

the camera or AC adapter break open as the result of a fall or other accident, take the product to a Nikon-authorized service representative for inspection, after unplugging the product and/or removing the batteries.

⚠ Do not use the camera or AC adapter in the presence of flammable gas

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

⚠ Handle the camera strap with care

Never place the strap around the neck of an infant or child.

⚠ Keep out of reach of children

Particular care should be taken to prevent infants from putting the batteries or other small parts into their mouths.

⚠ Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use

Parts of the devices become hot. Leaving the devices in direct contact with the skin for extended periods may result in low-temperature burns.

⚠ Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight

Failure to observe this precaution could cause damage or fire.

⚠ Observe caution when handling batteries

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Before replacing the batteries, turn the product off. If you are using an AC adapter, be sure it is unplugged.
- Use only the batteries approved for use in this product (☞ 13). Do not combine old and new batteries or batteries of different makes or types.
- When charging Nikon EN-MH2 rechargeable Ni-MH batteries, use only the specified charger and charge the batteries four at a time. When replacing the batteries with EN-MH2-B2 batteries (available separately), purchase two sets (total of four batteries).
- The EN-MH2 rechargeable batteries are for use with Nikon digital cameras only, and are compatible with COOLPIX L330.
- Insert batteries in the correct orientation.
- Do not short or disassemble batteries or attempt to remove or break battery insulation or casing.
- Do not expose batteries to flame or to excessive heat.

- Do not immerse in or expose to water.
 - Do not transport or store with metal objects such as necklaces or hairpins.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when no charge remains.
 - Discontinue use immediately should you notice any change in the batteries, such as discoloration or deformation.
 - If liquid from damaged batteries comes in contact with clothing or skin, rinse immediately with plenty of water.
- Do not handle the power cable or go near the battery charger during lightning storms. Failure to observe this precaution could result in electric shock.
 - Do not damage, modify, forcibly tug or bend the power cable, place it under heavy objects, or expose it to heat or flame. Should the insulation be damaged and the wires become exposed, take it to a Nikon-authorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.
 - Do not handle the plug or battery charger with wet hands. Failure to observe this precaution could result in electric shock.
 - Do not use with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters. Failure to observe this precaution could damage the product or result in overheating or fire.

 **Observe the following precautions when handling the Battery Chargers (available separately)**

- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.

⚠ **Use appropriate cables**

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

⚠ **Handle moving parts with care**

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

⚠ **CD-ROMs**

The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

⚠ **Observe caution when using the flash**

Using the flash close to your subject's eyes could cause temporary visual impairment. The flash should be no less than 1 m (3 ft 4 in.) from the subject. Particular care should be observed when photographing infants.

⚠ **Do not operate the flash with the flash window touching a person or object**

Failure to observe this precaution could result in burns or fire.

⚠ **Avoid contact with liquid crystal**

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

⚠ **Turn the power off when using inside an airplane or the hospital**

Turn the power off while inside the airplane during take off or landing.

Do not use wireless network functions while in the air.

Follow the instructions of the hospital when using while in a hospital.

The electromagnetic waves emitted by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital. If you are using an Eye-Fi card, remove it from the camera before boarding an aircraft or entering a hospital.

Notices

Notice for Customers in the U.S.A.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



Nikon
COOLPIX L330

CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Notice for customers in the State of California

WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

Wash hands after handling.

Nikon Inc.,
1300 Walt Whitman Road Melville,
New York 11747-3064 USA
Tel: 631-547-4200

Notice for customers in Canada

CAN ICES-3 B / NMB-3 B

Notice for Customers in Europe

This symbol indicates that electrical and electronic equipment is to be collected separately.



The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the batteries indicates that the batteries are to be collected separately.



The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

Table of Contents

Introduction	ii
Read This First	ii
About This Manual	viii
Information and Precautions	v
For Your Safety	viii
WARNINGS	viii
Notices	xii
Parts of the Camera	1
The Camera Body.....	1
Attaching the Camera Strap and Lens Cap ...	4
Raising and Lowering the Flash	5
Using Menus (the MENU Button).....	6
The Monitor	8
Shooting Mode	8
Playback Mode	10
The Basics of Shooting and Playback...	12
Preparation 1 Insert the Batteries	12
Applicable Batteries	13
Preparation 2 Insert a Memory Card	14
Internal Memory and Memory Cards.....	15
Preparation 3 Setting the Display Language, Date, and Time.....	16
Step 1 Turn the Camera On.....	20
Step 2 Select a Shooting Mode.....	22
Available Shooting Modes.....	23
Step 3 Frame a Picture	24
Using the Zoom	25
Step 4 Focus and Shoot.....	26
The Shutter-release Button	27
Step 5 Play Back Images	28
Step 6 Delete Images.....	29


Shooting Features	31
<i>■ (Easy Auto) Mode</i>	<i>31</i>
Scene Mode (Shooting Suited to Scenes) ...	32
Tips and Notes	33
Smart Portrait Mode	
(Capturing Images of Smiling Faces)	36
<i>■ (Auto) Mode</i>	<i>38</i>
Functions That Can Be Set Using the Multi Selector.....	39
Using the Flash	40
Using the Self-timer.....	43
Using Macro Mode.....	45
Adjusting Brightness	
(Exposure Compensation)	46
Default Settings.....	47
Functions That Can Be Set with the MENU Button (Shooting Menu)	49
Options Available in the Shooting Menus ...	50
Functions That Cannot Be Used	
Simultaneously	51
Focusing.....	52
Using Face Detection	52
Using Skin Softening.....	53
Subjects Not Suitable for Autofocus	54
Focus Lock.....	55
Playback Features	56
Playback Zoom	56
Thumbnail Playback, Calendar Display....	57
Functions That Can Be Set with the MENU Button (Playback Menu)	58
Recording and Playing Back Movies ...	59
Recording Movies	59
Functions That Can Be Set with the MENU Button (Movie Menu)	62
Playing Back Movies.....	63
General Camera Setup	65
Functions That Can Be Set with the MENU Button (Setup Menu)	65
Connecting the Camera to a TV, Computer, or Printer	67
Connection Methods.....	67
Using ViewNX 2	69
Installing ViewNX 2.....	69
Transferring Images to the Computer.....	72
Viewing Images	74

Reference Section	1
Using Panorama Assist.....	2
Editing Still Images.....	5
Before Editing Images	5
D-Lighting:	
Enhancing Brightness and Contrast.....	6
Skin Softening:	
Softening Skin Tones	7
Small Picture:	
Reducing the Size of an Image.....	8
Crop: Creating a Cropped Copy	9
Connecting the Camera to a TV	
(Viewing Images on a TV).....	10
Connecting the Camera to a Printer	
(Direct Print).....	11
Connecting the Camera to a Printer...	12
Printing Individual Images.....	13
Printing Multiple Images.....	15
Editing Movies	18
The Shooting Menu	
(for (Auto) Mode).....	20
Image Mode Settings	
(Image Size and Quality).....	20
White Balance (Adjusting Hue)	22
Continuous Shooting	25
ISO Sensitivity	26
Color Options	27
The Smart Portrait Menu	
Skin Softening.....	28
Smile Timer	29
Blink Proof.....	29
The Playback Menu	30
Print Order	
(Creating a DPOF Print Order)	30
Slide Show	33
Protect	34
Rotate Image	36
Copy (Copy Between Internal Memory and Memory Card).....	37
The Movie Menu	38
Movie Options.....	38
Autofocus Mode	39
Wind Noise Reduction	39
The Setup Menu	40
Welcome Screen	40
Time Zone and Date.....	41
Monitor Settings	43
Print Date (Imprinting Date and Time) ...	45
Vibration Reduction	46
Motion Detection	47
AF Assist	48
Sound Settings.....	48
Auto Off	49
Format Memory/Format Card	50
Language.....	51
Video Mode	51
Blink Warning	52
Eye-Fi Upload	53
Reset All	54
Battery Type	55
Firmware Version.....	55
Error Messages	56
File Names	59
Optional Accessories	60

Technical Notes and Index	1
Caring for the Product	2
The Camera.....	2
Batteries.....	4
Memory Cards.....	6
Cleaning and Storage.....	7
Cleaning.....	7
Storage	7
Troubleshooting	8
Specifications	15
Approved Memory Cards.....	19
Index.....	22

Parts of the Camera



The Camera Body

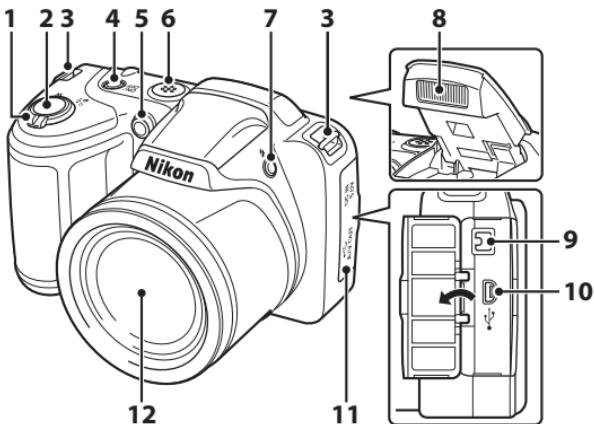

1	Zoom control.....	25
	W : wide-angle.....	25
	T : telephoto.....	25
	Thumbnail : thumbnail playback.....	57
	Q : playback zoom.....	56
	? : help.....	32
2	Shutter-release button.....	26
3	Eyelet for camera strap.....	4
4	Power switch/power-on lamp.....	20
5	Self-timer lamp.....	43
	AF-assist illuminator.....	65

6	Speaker.....	.63
7	Flash (flash pop-up) button.....	5, 40
8	Flash.....	5, 40
9	DC input connector (for AC adapter available separately from Nikon).....	60
10	USB/audio/video output connector	67
11	Connector cover.....	67
12	Lens	


Parts of the Camera

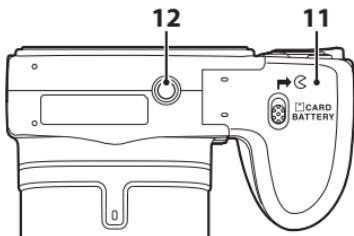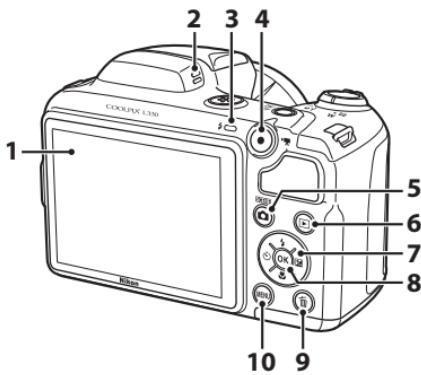

1	Monitor	8
2	Microphone	59
3	Flash lamp	42
4	● (movie-record) button	59
5	■ (shooting mode) button	31, 32, 36, 38
6	▶ (playback) button	28
7	Multi selector	6
8	OK (apply selection) button	6
9	trash (delete) button	29
10	MENU (menu) button	6, 49, 58, 62, 65
11	Battery-chamber/ memory card slot cover	12, 14
12	Tripod socket	17

Attaching the Camera Strap and Lens Cap

Attach the lens cap to the camera strap, and then attach the strap to the camera.

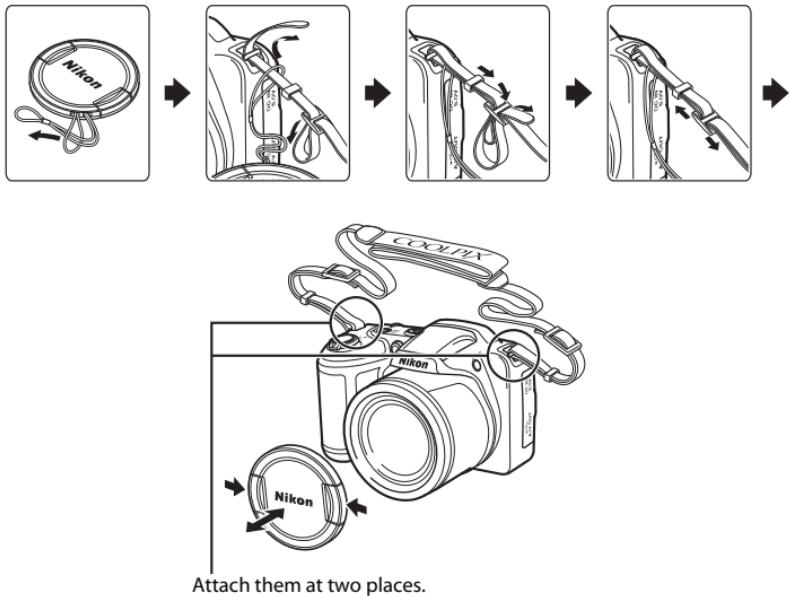


Lens Cap

When the camera is not in use, protect the lens by attaching the lens cap.

Raising and Lowering the Flash

Press the  (flash pop-up) button to raise the flash.

- See "Using the Flash" (40) for more information about flash settings.
- Push the flash down gently to lower the flash until it clicks into place when not in use.

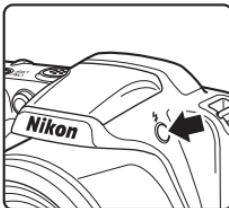


Using Menus (the MENU Button)

Use the multi selector and **OK** button to navigate the menus.


1 Press the MENU button.

- The menu is displayed.

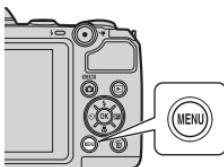

2 Press the multi selector **◀**.


- The current menu icon is displayed in yellow.

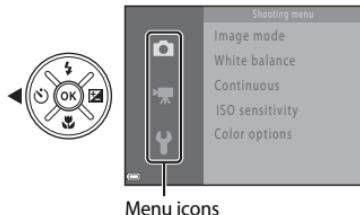

Menu icons


3 Select the desired menu icon.

- The menu is changed.

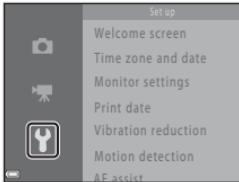


4 Press the **OK** button.

- The menu options become selectable.

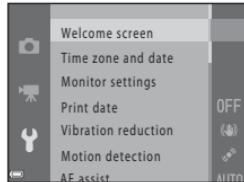

5 Select a menu option.

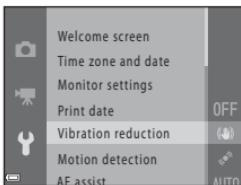


7 Select a setting.



6 Press the OK button.

- The settings for the option you selected are displayed.

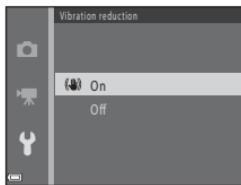

8 Press the OK button.

- The setting you selected is applied.
- When you are finished using the menu, press the MENU button.



Notes About Setting Menu Options


- Certain menu options cannot be set depending on the current shooting mode or the state of the camera. Unavailable options are displayed in gray and cannot be selected.
- When a menu is displayed, you can switch to shooting mode by pressing the shutter-release button, (shooting mode) button, or (movie-record) button.

The Monitor

The information that is displayed in the monitor during shooting and playback changes depending on the camera's settings and state of use.


By default, information is displayed when the camera is first turned on and when you operate the camera, and turns off after a few seconds (when **Photo info** is set to **Auto info** in **Monitor settings** (☞ 65)).

Shooting Mode

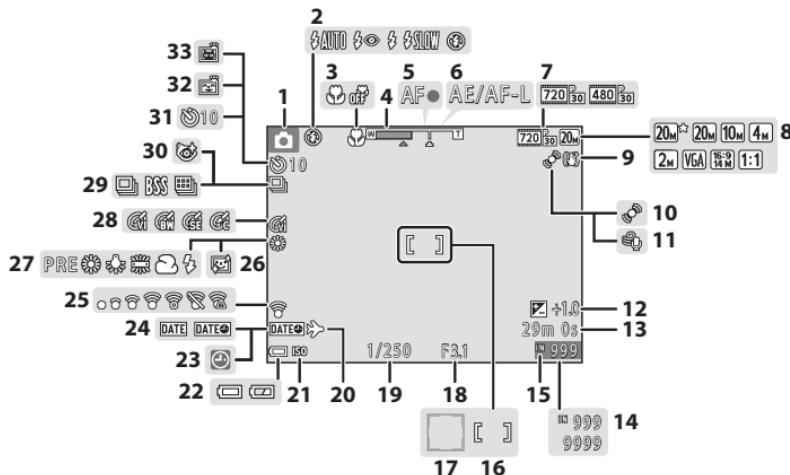

1	Shooting mode.....	22, 23
2	Flash mode.....	40
3	Macro mode	45
4	Zoom indicator.....	25, 45
5	Focus indicator.....	26
6	AE/AFL indicator.....	6, 3
7	Movie options.....	62
8	Image mode	50, 20
9	Vibration reduction icon.....	65
10	Motion detection icon	65
11	Wind noise reduction	62
12	Exposure compensation value	46
13	Movie recording time remaining	59
14	Number of exposures remaining (still images)	20
15	Internal memory indicator.....	20
16	Focus area	26
17	Focus area (face detection, pet detection).....	26, 35, 36
18	Aperture value	27
19	Shutter speed.....	27
20	Travel destination icon	65
21	ISO sensitivity.....	50
22	Battery level indicator	20
23	"Date not set" indicator.....	16, 65
24	Print date	65
25	Eye-Fi communication indicator	66
26	Skin softening.....	50
27	White balance mode	50
28	Color options	50
29	Continuous shooting mode	35, 50
30	Blink proof icon	50
31	Self-timer indicator	43
32	Smile timer	50
33	Pet portrait auto release	35

Playback Mode

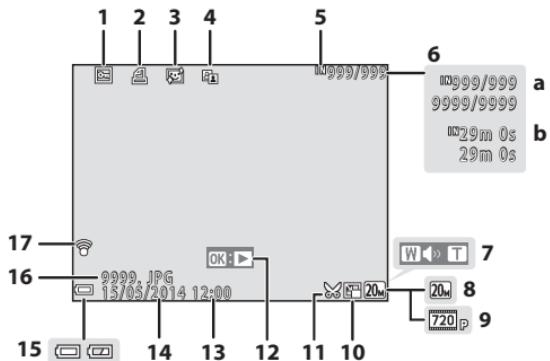


1	Protect icon	58,  34
2	Print order icon	58,  30
3	Skin softening icon.....	58,  7
4	D-Lighting icon.....	58,  6
5	Internal memory indicator	15
6	(a) Current image number/ total number of images	
	(b) Movie length	
7	Volume indicator	63
8	Image mode	50,  20
9	Movie options.....	62,  38
10	Small picture icon	58,  8
11	Crop icon.....	56,  9
12	Movie playback guide.....	63
13	Time of recording	16
14	Date of recording.....	16
15	Battery level indicator	20
16	File number and type.....	 59
17	Eye-Fi communication indicator	66,  53

The Basics of Shooting and Playback

Preparation 1 Insert the Batteries


1 Open the battery-chamber/memory card slot cover.

- Hold the camera upside down to prevent the batteries from falling out.

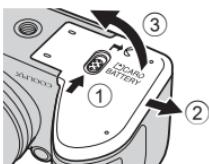


2 Insert the batteries.

- Confirm that the positive (+) and negative (-) terminals are oriented correctly and insert the batteries.

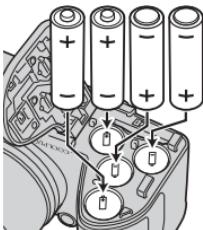

3 Close the battery-chamber/memory card slot cover.

- Slide the cover while securely holding down the area marked ②.

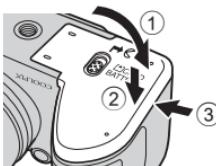

Applicable Batteries

- Four LR6/L40 (AA-size) alkaline batteries (included batteries)
- Four FR6/L91 (AA-size) lithium batteries
- Four EN-MH2 rechargeable Ni-MH (nickel metal hydride) batteries
- * EN-MH1 rechargeable Ni-MH batteries cannot be used.

✓ Removing the Batteries

- Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.
- The camera, batteries, and memory card may be hot immediately after using the camera.

✓ Notes About the Batteries

- Do not combine old and new batteries or batteries of different makes or types.
- Batteries with the following defects cannot be used:



Batteries with peeling



Batteries with insulation that
does not cover the area around
the negative terminal



Batteries with a flat
negative terminal

✓ Battery Type

By setting **Battery type** in the setup menu (65) to match the type of batteries inserted in the camera, the batteries can perform more efficiently.

The default setting is the type of batteries included with purchase.

✓ Notes About EN-MH2 Rechargeable Batteries


When using EN-MH2 batteries with the camera, charge four batteries at a time using Battery Charger MH-73 (60, 4).

✓ Alkaline Batteries


Performance of alkaline batteries may vary greatly depending on the manufacturer. Choose a reliable brand.

Preparation 2 Insert a Memory Card

- 1 Turn off the camera and open the battery-chamber/memory card slot cover.
 - Hold the camera upside down to prevent the batteries from falling out.

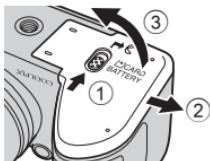

- 2 Insert the memory card.
 - Slide the memory card in until it clicks into place.

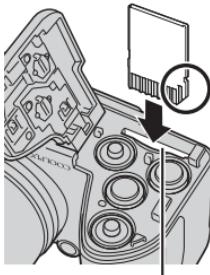


 **Be Careful to Insert the Memory Card in Correct Direction**

Inserting the memory card upside down or backwards could damage the camera and the memory card.



- 3 Close the battery-chamber/memory card slot cover.

• Slide the cover while securely holding down the area marked ②.

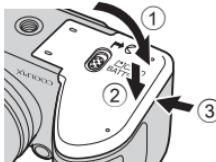


Formatting Memory Cards

The first time you insert a memory card that has been used in another device into this camera, make sure to format it with this camera. Insert the card into the camera, press the **MENU** button, and select **Format card** in the setup menu.

Removing Memory Cards

Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.

Gently push the memory card into the camera (①) to partially eject the card (②).

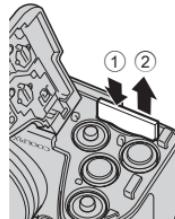

High Temperature Caution

The camera, batteries, and memory card may be hot immediately after using the camera.

Internal Memory and Memory Cards


Camera data, including images and movies, can be saved either in the camera's internal memory or on a memory card. To use the camera's internal memory, first remove the memory card.

Preparation 3 Setting the Display Language, Date, and Time


When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed.

- If you exit without setting the date and time,  will flash when the shooting screen is displayed.

1 Press the power switch to turn on the camera.

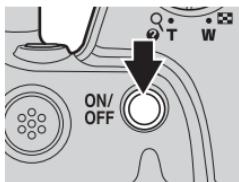

2 Use the multi selector to select the desired language and press the button.

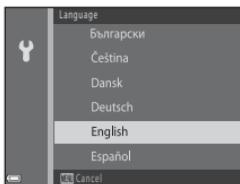

3 Select Yes and press the button.




4 Select your home time zone and press the **OK** button.

- To enable daylight saving time, press **▲**. When the daylight saving time function is enabled, ☀ is displayed above the map. To turn off the daylight saving time function, press **▼**.




5 Select the date format and press the **OK** button.

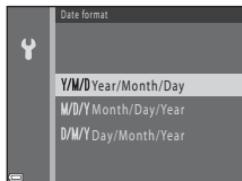


6 Set the date and time, and press the **OK** button.

- Select a field: Press **◀▶** (changes between **D**, **M**, **Y**, **h**, and **m**).
- Edit the date and time: Press **▲▼**.
- Confirm the setting: Select **m** and press the **OK** button.

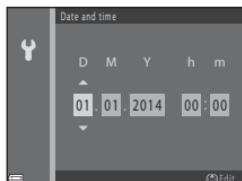

7 Select **Yes** and press the **OK** button.

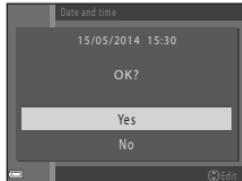


- 8** Make sure that the lens cap has been removed and press the  button.
- The shooting-mode selection screen is displayed.



- 9** When **Easy auto mode** is displayed, press the  button.

- The camera enters the shooting mode and you can take images in Easy auto mode (22).
- To switch to another shooting mode, press   before pressing the .

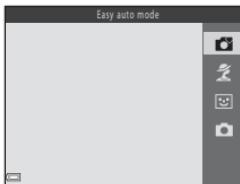

⌚ Changing the Language Setting and the Date and Time Setting

- You can change these settings using the **Language** and **Time zone and date** settings in the **⌚** setup menu (65).
- You can enable or disable daylight saving time in the **⌚** setup menu by selecting **Time zone and date** followed by **Time zone**. Press the multi selector **▶** and then **▲** to enable daylight saving time and move the clock forward one hour, or **▼** to disable daylight saving time and move the clock back one hour.

⌚ The Clock Battery

- The camera's clock is powered by a built-in backup battery. The backup battery is charged when the main batteries are inserted into the camera or when the camera is connected to an optional AC adapter, and it can run the clock for several days after about ten hours of charging.
- If the camera's backup battery becomes exhausted, the date and time setting screen is displayed when the camera is turned on. Set the date and time again. See step 3 (16) of "Preparation 3 Setting the Display Language, Date, and Time" for more information.


⌚ Imprinting the Shooting Date on Printed Images

- You can permanently imprint the shooting date on images as they are captured by setting **Print date** in the setup menu (65).
- If you want the shooting date to be printed without using the **Print date** setting, print using the ViewNX 2 software (69).

Step 1 Turn the Camera On

1 Remove the lens cap and press the power switch.

- The monitor turns on.
- To turn the camera off, press the power switch again.

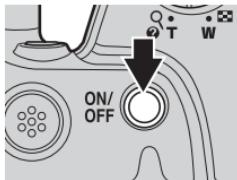

2 Check the battery level indicator and the number of exposures remaining.

Battery level indicator

Display	Description
	The battery level is high.
	The battery level is low.
Battery exhausted.	The camera cannot capture images. Replace the batteries.



Battery level indicator

Number of exposures remaining

Number of Exposures Remaining


The number of images that can be taken is displayed.

- **[IN]** is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.

Notes About the Flash

When you need to use the flash, such as when shooting in dark locations or when the subject is backlit, press the  (flash pop-up) button to raise the flash (□ 5, 40).


The Auto Off Function

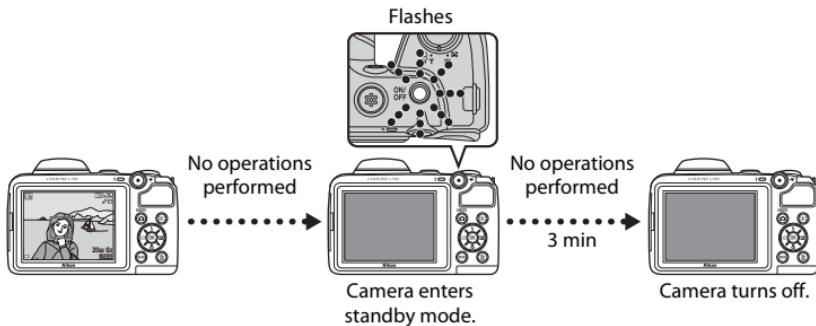

- The time that elapses before the camera enters standby mode is about 30 seconds. The time can be changed using the **Auto off** setting in the setup menu (□ 65).
- While the camera is in standby mode, the monitor turns back on if you perform any of the following operations:
 - Press the power switch, shutter-release button,  (shooting mode) button,  (playback) button, or  (movie-record) button


Step 2 Select a Shooting Mode

1 Press the  button.

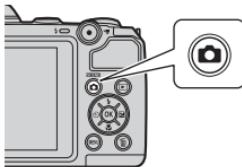

2 Use the multi selector   to select a shooting mode and press the  button.

-  (easy auto) mode is used in this example.
- The shooting mode setting is saved even after the camera is turned off.

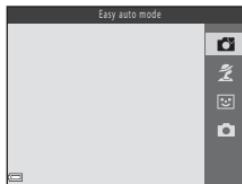

Available Shooting Modes



Easy auto mode

31

The camera automatically selects the optimum scene mode when you frame an image, making it even easier to take images using settings that suit the scene.



Scene mode

32

Camera settings are optimized according to the scene that you select.



Smart portrait

36

When the camera detects a smiling face, you can take an image automatically without pressing the shutter-release button (smile timer). You can also use the skin softening option to smooth the skin tones of human faces.



Auto mode


38

Used for general shooting. Settings can be adjusted to suit the shooting conditions and the type of shot you want to capture.

Step 3 Frame a Picture

1 Hold the camera steady.

- Keep fingers and other objects away from the lens, flash, AF-assist illuminator, microphone, and speaker.

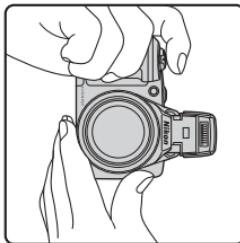

2 Frame the picture.

- When the camera automatically determines the scene mode, the shooting mode icon changes (31).

Shooting mode icon



✓ Notes About Easy Auto Mode

- Depending upon shooting conditions, the camera may not select the desired scene mode. In this case, select another shooting mode (32, 36, 38).
- When the digital zoom is in effect, the scene mode changes to .

When Using a Tripod



- We recommend using a tripod to stabilize the camera in the following situations.
 - When shooting in dim lighting
 - When the flash is lowered or when using a shooting mode in which the flash does not fire
 - When using the telephoto setting
- When using a tripod to stabilize the camera during shooting, set **Vibration reduction** to **Off** in the setup menu (65) to prevent potential errors caused by this function.

Using the Zoom

When you move the zoom control, the zoom lens position changes.

- To zoom in closer to the subject: Move toward **T** (telephoto)
- To zoom out and view a larger area: Move toward **W** (wide-angle)

When you turn the camera on, the zoom moves to the maximum wide-angle position.

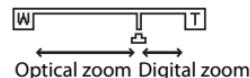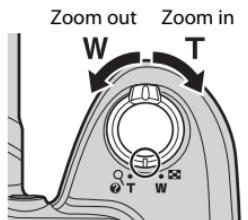

- A zoom indicator is displayed at the top of the monitor when the zoom control is moved.
- Digital zoom, which allows you to further magnify the subject up to approximately 4x the maximum optical zoom ratio, can be activated by moving and holding the zoom control toward **T** when the camera is zoomed in to the maximum optical zoom position.

Digital Zoom and Interpolation

While using digital zoom, the image quality decreases due to interpolation when the zoom is increased beyond the  position. The position of  moves to the right as the size of an image decreases.




Small image size

Step 4 Focus and Shoot

1 Press the shutter-release button halfway.

- When the subject is in focus, the focus area glows green (multiple focus areas can glow green).
- When you are using digital zoom, the camera focuses on the subject in the center of the frame and the focus area is not displayed. When the camera has focused, the focus indicator (8) glows green.
- If the focus area or focus indicator flashes, the camera is unable to focus. Modify the composition and try pressing the shutter-release button halfway again.

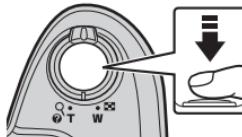

2 Without lifting your finger, press the shutter-release button the rest of the way down.



The Shutter-release Button

Press halfway



To set focus and exposure (shutter speed and aperture value), press the shutter-release button lightly until you feel a slight resistance. Focus and exposure remain locked while the shutter-release button is pressed halfway.

Press all the way



Press the shutter-release button all the way to release the shutter and take an image.

Do not use force when pressing the shutter-release button, as this may result in camera shake and blurred images. Press the button gently.


✓ Notes About Saving Images and Recording Movies

The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open the battery-chamber/memory card slot cover or remove the batteries or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

Step 5 Play Back Images

1 Press the ▶ (playback) button.

- If you press and hold down the ▶ (playback) button while the camera is turned off, the camera turns on in playback mode.

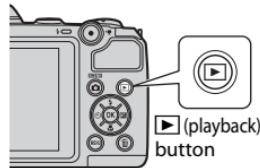

2 Use the multi selector to select an image to display.

- Press and hold down ▲▼◀▶ to scroll through the images quickly.

Display the previous image




Display the next image

- To return to shooting mode, press the button or shutter-release button.




Step 6 Delete Images

- 1 Press the  button to delete the image currently displayed in the monitor.

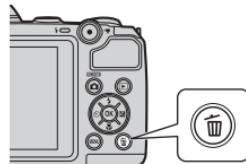


- 2 Use the multi selector   to select the desired deletion method and press the  button.

- To exit without deleting, press the **MENU** button.

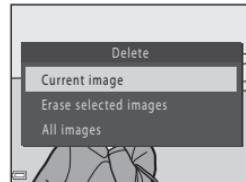

- 3 Select **Yes** and press the  button.

- Deleted images cannot be recovered.
- To cancel, select **No** and press the  button.

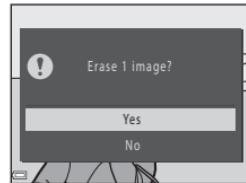

Operating the Erase Selected Images Screen

1 Use the multi selector to select an image to be deleted, and then use to display .

- To undo the selection, press to remove .
- Move the zoom control (1) toward (Q) to switch to full-frame playback or (Q) to switch to thumbnail playback.



2 Add to all images that you want to delete and then press the to confirm the selection.

- A confirmation dialog is displayed. Follow the instructions displayed in the monitor.

Deleting the Last Image Captured While in Shooting Mode

When using shooting mode, press the button to delete the last image that was saved.

Shooting Features

(Easy Auto) Mode

The camera automatically selects the optimum scene mode when you frame an image, making it even easier to take images using settings that suit the scene.

Enter shooting mode →  (shooting mode) button →  (easy auto) mode →  button

When the camera selects a scene mode, the shooting mode icon displayed in the shooting screen changes to that for the scene mode currently enabled.

	Portrait
	Landscape
	Night portrait
	Night landscape
	Close-up
	Backlighting
	Other scenes

Functions Available in (Easy Auto) Mode

- Self-timer (43)
- Exposure compensation (46)
- Easy auto mode menu (49)

Scene Mode (Shooting Suited to Scenes)

When a scene is selected, camera settings are automatically optimized for the selected scene.

Enter shooting mode → (shooting mode) button → (second icon from the top*) → → → → select a scene →

* The icon of the last scene selected is displayed.

Portrait (default setting)	Landscape ²	Sports ¹ (33)	Night portrait ³ (33)
Party/indoor ¹ (33)	Beach ¹	Snow ¹	Sunset ^{1,3}
Dusk/dawn ^{2,3}	Night landscape ^{2,3}	Close-up ¹ (33)	Food ¹ (33)
Museum ¹ (34)	Fireworks show ^{2,3} (34)	Black and white copy ¹ (34)	Backlighting ¹ (34)
Panorama assist ¹ (34)	Pet portrait (35)		


¹ The camera focuses on the area in the center of the frame.

² The camera focuses at infinity.

³ Use of a tripod is recommended, because the shutter speed is slow. Set **Vibration reduction** to **Off** in the setup menu (65) when using a tripod to stabilize the camera during shooting.

To View a Description (Help Display) of Each Scene

Select a scene and move the zoom control (1) toward **T** (2) to view a description of that scene. To return to the original screen, move the zoom control toward **T** (2) again.

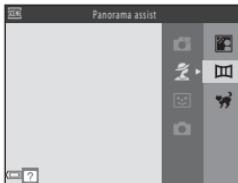

Tips and Notes

Sports

- While the shutter-release button is held all the way down, the camera shoots up to about 4 images continuously at a rate of about 1 fps (when **Image mode** is set to **5152×3864**).
- The frame rate for continuous shooting may vary depending upon the current image mode setting, the memory card used, or shooting condition.
- Focus, exposure, and hue are fixed at the values determined with the first image in each series.

Night portrait

- The flash always fires. Raise the flash before shooting.

Party/indoor

- To avoid the effects of camera shake, hold the camera steady. Set **Vibration reduction** to **Off** in the setup menu (45) when using a tripod to stabilize the camera during shooting.

Close-up

- Macro mode (45) is enabled and the camera automatically zooms to the closest position at which it can focus.

Food

- Macro mode (45) is enabled and the camera automatically zooms to the closest position at which it can focus.
- You can adjust hue by using the multi selector ▲▼. The hue setting is saved in the camera's memory even after the camera is turned off.



Museum

- The camera captures a series of up to ten images while the shutter-release button is held all the way down, and the sharpest image in the series is automatically selected and saved (BSS (Best Shot Selector)).
- The flash does not fire.

Fireworks show

- The shutter speed is fixed at about four seconds.

Black and white copy

- Use together with macro mode ( 45) when shooting subjects that are close to the camera.

Backlighting

- The flash always fires. Raise the flash before shooting.

Panorama assist

- Use this mode when shooting a series of images that can later be joined on a computer to form a single panorama.
 - Use the multi selector  to select the direction in which images are to be joined and press the  button.
 - After shooting the first image, shoot the necessary number of images while confirming the seams. To finish shooting, press the  button.
 - Transfer taken images to a computer and use the Panorama Maker software ( 71) to join them in a single panorama.
- See “Using Panorama Assist” ( 2) for more information.

Pet portrait


- When you point the camera at a dog or cat, the camera detects the pet's face and focuses on it. By default, the shutter is automatically released when the camera detects a dog or cat face (pet portrait auto release).
- From the screen displayed after  **Pet portrait** is selected, select  **Single** or  **Continuous**.
 -  **Single**: Whenever the camera detects a dog or cat face, it captures one image.
 -  **Continuous**: Whenever the camera detects a dog or cat face, it captures three images continuously.

Pet Portrait Auto Release

- Press the multi selector   to change the **Pet portrait auto release** settings.
 - : The shutter is automatically released when the camera detects a dog or cat face.
 -  **OFF**: The camera does not release the shutter automatically, even if a dog or cat face is detected. Press the shutter-release button.
- Pet portrait auto release** is set to **OFF** after five bursts have been taken.
- Shooting is also possible by pressing the shutter-release button, regardless of the **Pet portrait auto release** setting. When  **Continuous** is selected, you can take images continuously while holding down the shutter-release button all the way.

Focus Area

- When the camera detects a face, the face is displayed inside a yellow border. When the camera acquires focus on a face displayed inside a double border (focus area), the double border turns green. If no faces are detected, the camera focuses on the subject in the center of the frame.
- In some shooting conditions, the pet face may not be detected and other subjects may be displayed inside a border.

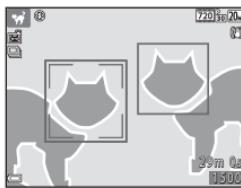

Smart Portrait Mode (Capturing Images of Smiling Faces)

When the camera detects a smiling face, you can take an image automatically without pressing the shutter-release button (smile timer (50)). You can use the skin softening option to smooth the skin tones of human faces.

Enter shooting mode →  (shooting mode) button →  Smart portrait mode → 

1 Frame the picture.

- Point the camera at a human face.

2 Without pressing the shutter-release button, wait for the subject to smile.

- If the camera detects that the face framed by the double border is smiling, the shutter is automatically released.
- Whenever the camera detects a smiling face, it automatically releases the shutter.

3 End automatic shooting.

- Perform one of the operations listed below to end shooting.
 - Set **Smile timer** to **Off**.
 - Press the  button and select a different shooting mode.

Notes About Smart Portrait Mode

Under some shooting conditions, the camera may be unable to detect faces or detect smiles (52). The shutter-release button can also be used for shooting.

When the Self-timer Lamp Flashes

When using smile timer, the self-timer lamp flashes when the camera detects a face and flashes quickly immediately after the shutter is released.

Functions Available in Smart Portrait Mode

- Flash mode (40)
- Self-timer (43)
- Exposure compensation (46)
- Smart portrait menu (49)

(Auto) Mode

Used for general shooting. Settings can be adjusted to suit the shooting conditions and the type of shot you want to capture.

Enter shooting mode →  (shooting mode) button →  (auto) mode → 


- The camera focuses on the area in the center of the frame.

Functions Available in (Auto) Mode

- Flash mode (40)
- Self-timer (43)
- Macro mode (45)
- Exposure compensation (46)
- Shooting menu (49)

Functions That Can Be Set Using the Multi Selector

The functions that are available vary with the shooting mode, as shown below.

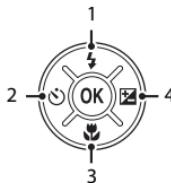

	(easy auto)	Scene	Smart portrait	(auto)
1 Flash mode ¹ (40)	—	2	✓ ²	✓
2 Self-timer (43)	✓		✓ ²	✓
3 Macro (45)	—		—	✓
4 Exposure compensation (46)	✓		✓	✓

1 Can be set when the flash is raised. The flash does not fire while it is lowered.

2 Availability depends on the setting.


Using the Flash

In dark locations or when the subject is backlit, you can take images with the flash by raising the flash.

When using **(auto)** mode and other shooting modes, you can select the flash mode to match the shooting conditions.

1 Press the **Flash pop-up** button.

- The flash pops up.
- The flash does not fire while it is lowered.  is displayed to indicate that the flash does not fire.

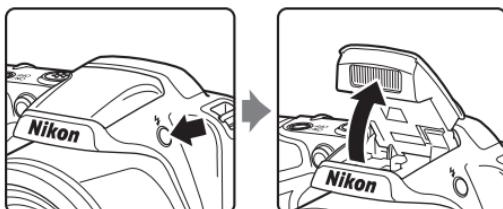


2 Press the multi selector **▲ (Flash)**.



3 Select the desired flash mode (41) and press the **OK** button.

- If a setting is not applied by pressing the **OK** button within a few seconds, the selection will be canceled.

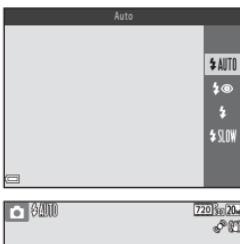

Available Flash Modes



Auto

The flash fires when necessary, such as in dim lighting.

- The flash mode icon on the shooting screen is displayed only immediately after the setting is made.



Auto with red-eye reduction

Reduce red-eye in portraits caused by the flash (42).



Fill flash

The flash fires whenever an image is taken. Use to “fill-in” (illuminate) shadows and backlit subjects.



Slow sync

Suited to evening and night portraits that include background scenery. The flash fires when necessary to illuminate the main subject; slow shutter speeds are used to capture background at night or under dim lighting.

✓ Lowering the Flash


Push the flash down gently to lower the flash until it clicks into place when not in use (□ 5).

setFlash The Flash Lamp

The status of the flash can be confirmed by pressing the shutter-release button halfway.

- On: The flash fires when you press the shutter-release button all the way down.
- Flashing: The flash is charging. The camera cannot shoot images.
- Off: The flash does not fire when an image is taken.

If the battery level is low, the monitor turns off while the flash is charging.

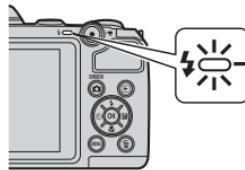

setFlash The Flash Mode Setting

- The setting may not be available with some shooting modes.
- The setting applied in **camera** (auto) mode is saved in the camera's memory even after the camera is turned off.

setFlash Red-eye Reduction

If the camera detects red eye while saving an image, the affected area is processed to reduce red-eye before the image is saved.

Note the following when shooting:

- More time than usual is required to save images.
- Red-eye reduction may not produce the desired results in all situations.
- In some cases, red-eye reduction may be applied to areas of an image unnecessarily. In these cases, select another flash mode and take the image again.

Using the Self-timer

The camera is equipped with a self-timer that releases the shutter about ten seconds after you press the shutter-release button.


Set **Vibration reduction** to **Off** in the setup menu (65) when using a tripod to stabilize the camera during shooting.

- 1 Press the multi selector  (S).



- 2 Select **ON** and press the  button.

- If a setting is not applied by pressing the  button within a few seconds, the selection will be canceled.
- When the shooting mode is **Pet portrait** scene mode,  (pet portrait auto release) is displayed (35). The self-timer cannot be used.

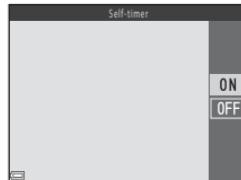



- 3 Frame the picture and press the shutter-release button halfway.

- Focus and exposure are set.



4 Press the shutter-release button the rest of the way down.

- Countdown starts. The self-timer lamp flashes and then glows steadily about one second before the shutter is released.
- When the shutter is released, the self-timer is set to **OFF**.
- To stop the countdown, press the shutter-release button again.

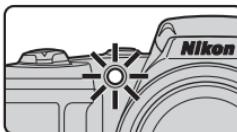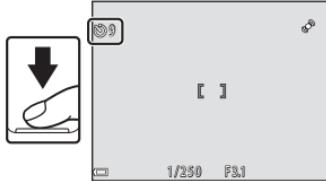

Using Macro Mode


Use macro mode when taking close-up images.

- 1 Press the multi selector ▼ ().




- 2 Select **ON** and press the **OK** button.

- If a setting is not applied by pressing the **OK** button within a few seconds, the selection will be canceled.

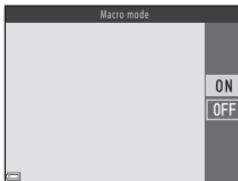

- 3 Move the zoom control to set the zoom ratio to a position where () and the zoom indicator glow green.

- When the zoom ratio is set to a position where () and the zoom indicator glow green, the camera can focus on subjects as close as approximately 10 cm (4 in.) from the lens.
- When the zoom position is in the area indicated by ①, the camera can focus on subjects as close as approximately 1 cm (0.4 in.) from the lens.

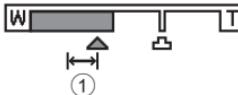

Notes About Using the Flash

The flash may be unable to light the entire subject at distances of less than 50 cm (1 ft 8 in.).

The Macro Mode Setting

- The setting may not be available with some shooting modes.
- The setting applied in **(auto)** mode is saved in the camera's memory even after the camera is turned off.

Adjusting Brightness (Exposure Compensation)


You can adjust overall image brightness.

- 1 Press the multi selector ► (☒).



- 2 Select a compensation value and press the **OK** button.

- To brighten the image, set a positive (+) value.
- To darken the image, set a negative (-) value.
- The compensation value is applied, even without pressing the **OK** button.

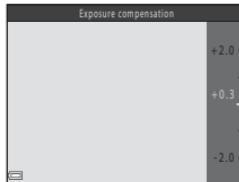

Exposure Compensation Value

The setting applied in **(auto)** mode is saved in the camera's memory even after the camera is turned off.

Default Settings


Default settings for each shooting mode are described below.

	Flash ¹ (40)	Self-timer (43)	Macro (45)	Exposure compensation (46)
(easy auto)	AUTO ²	Off	Off ³	0.0
Scene				
(portrait)		Off	Off ⁴	0.0
(landscape)		Off	Off ⁴	0.0
(sports)		Off ⁴	Off ⁴	0.0
(night portrait)		Off	Off ⁴	0.0
(party/indoor)		Off	Off ⁴	0.0
(beach)	AUTO	Off	Off ⁴	0.0
(snow)	AUTO	Off	Off ⁴	0.0
(sunset)		Off	Off ⁴	0.0
(dusk/dawn)		Off	Off ⁴	0.0
(night landscape)		Off	Off ⁴	0.0
(close-up)		Off	On ⁴	0.0
(food)		Off	On ⁴	0.0
(museum)		Off	Off	0.0
(fireworks show)		Off ⁴	Off ⁴	0.0 ⁴
(black and white copy)		Off	Off	0.0
(backlighting)		Off	Off ⁴	0.0
(panorama assist)		Off	Off	0.0
(pet portrait)			Off	0.0
(smart portrait)	AUTO ⁸	Off ⁹	Off ⁴	0.0
(auto)	AUTO	Off	Off	0.0

- 
- 1 The setting that is used when the flash is raised.
 - 2 The setting cannot be changed. The camera automatically selects the flash mode appropriate for the scene it has selected.
 - 3 The setting cannot be changed. Automatically changes to macro mode when the camera selects **Close-up**.
 - 4 The setting cannot be changed.
 - 5 The setting cannot be changed. The flash mode setting is fixed at fill flash with slow sync and red-eye reduction.
 - 6 Slow sync with red-eye reduction flash mode may be used.
 - 7 Self-timer cannot be used. Pet portrait auto release can be turned on or off (35).
 - 8 Cannot be used when **Blink proof** is set to **On**.
 - 9 Can be set when **Smile timer** is set to **Off**.

Functions That Can Be Set with the MENU Button (Shooting Menu)

The settings listed below can be changed by pressing the **MENU** button during shooting.

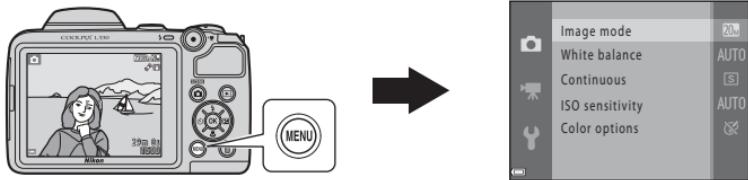

The settings that can be changed vary depending on the shooting mode, as shown below.

	Easy auto mode	Scene	Smart portrait	Auto mode
Image mode*	✓	✓	✓	✓
White balance	-	-	-	✓
Continuous	-	-	-	✓
ISO sensitivity	-	-	-	✓
Color options	-	-	-	✓
Skin softening	-	-	✓	-
Smile timer	-	-	✓	-
Blink proof	-	-	✓	-

* The setting is also applied to other shooting modes.

Options Available in the Shooting Menus

Option	Description	
Image mode	<p>Allows you to set the combination of image size and image quality used when saving images.</p> <ul style="list-style-type: none"> Default setting: 20M 5152x3864 	20
White balance	<p>Allows you to adjust white balance to suit the weather conditions or light source in order to make the colors in images match what you see with your eyes.</p> <ul style="list-style-type: none"> Default setting: Auto 	22
Continuous	<p>Allows you to select single or continuous shooting.</p> <ul style="list-style-type: none"> Default setting: Single 	25
ISO sensitivity	<p>Allows you to control the camera's sensitivity to light.</p> <ul style="list-style-type: none"> Default setting: Auto <p>When Auto is selected, [ISO] is displayed in the monitor while shooting if ISO sensitivity increases.</p>	26
Color options	<p>Allows you to change the color tones of images.</p> <ul style="list-style-type: none"> Default setting: Standard color 	27
Skin softening	<p>Allows you to make the skin tones in human faces smoother.</p> <ul style="list-style-type: none"> Default setting: On 	28
Smile timer	<p>Allows you to select whether or not the camera automatically releases the shutter when it detects a human smiling face.</p> <ul style="list-style-type: none"> Default setting: On 	29
Blink proof	<p>The camera automatically releases the shutter twice with every shot and saves one image in which the subject's eyes are open.</p> <ul style="list-style-type: none"> Default setting: Off 	29

Functions That Cannot Be Used Simultaneously

Some functions cannot be used with other menu options.

Restricted function	Option	Description
Flash mode	Continuous (50)	When a setting other than Single is selected, the flash cannot be used.
	Blink proof (50)	When Blink proof is set to On , the flash cannot be used.
Self-timer	Smile timer (50)	When Smile timer is selected, the self-timer cannot be used.
Digital zoom	Continuous (50)	When Multi-shot 16 is selected, digital zoom cannot be used.
Image mode	Continuous (50)	When Multi-shot 16 is selected, the Image mode setting is fixed at SM (image size: 2560 × 1920 pixels).
White balance	Color options (50)	When Black-and-white , Sepia , or Cyanotype is selected, the White balance setting is fixed at Auto .
Continuous	Self-timer (43)	When the self-timer is used, the setting changes to Single .
ISO sensitivity	Continuous (50)	When Multi-shot 16 is selected, the ISO sensitivity setting is automatically specified according to the brightness.
Motion detection	Flash mode (40)	When the flash fires, Motion detection is disabled.
	Continuous (50)	When Multi-shot 16 is selected, Motion detection is disabled.
	ISO sensitivity (50)	When the ISO sensitivity is set to any setting other than Auto , Motion detection is disabled.
Shutter sound	Continuous (50)	When a setting other than Single is selected, the shutter sound is disabled.


Focusing

The focus area varies depending on the shooting mode.

Using Face Detection

In the following shooting modes, the camera uses face detection to automatically focus on human faces.

- **REC** (easy auto) mode (31)
- **Portrait** and **Night portrait** in scene mode (32)
- Smart portrait mode (36)

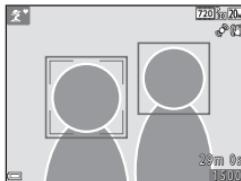

If the camera detects more than one face, a double border is displayed around the face that the camera focuses on, and single borders are displayed around the other faces.

If the shutter button is pressed halfway when no faces are detected:

- In **REC** (easy auto) mode, the focus area changes depending on the scene.
- In **Portrait** and **Night portrait** scene modes, or in smart portrait mode, the camera focuses on the area in the center of the frame.

Notes About Face Detection

- The camera's ability to detect faces depends on a variety of factors, including the direction in which the faces are looking.
- The camera may be unable to detect faces in the following situations:
 - When faces are partially hidden by sunglasses or otherwise obstructed
 - When faces take up too much or too little of the frame

Using Skin Softening

When the shutter is released while using one of the shooting modes listed below, the camera detects human faces and processes the image to soften facial skin tones (up to three faces).

- Smart portrait mode (36)
- **Portrait** or **Night portrait** in  (easy auto) mode (31)
- **Portrait** or **Night portrait** in scene mode (32)

Skin softening can also be applied to saved images (58, 67).

Notes About Skin Softening

- It may take more time than usual to save images after shooting.
- Under some shooting conditions, the desired skin softening results may not be achieved, and skin softening may be applied to areas of the image where there are no faces.

Subjects Not Suitable for Autofocus

The camera may not focus as expected in the following situations. In some rare cases, the subject may not be in focus despite the fact that the focus area or the focus indicator glows green:

- Subject is very dark
- Objects of sharply differing brightness are included in the scene (e.g. the sun behind the subject makes that subject appear very dark)
- No contrast between the subject and surroundings (e.g. a portrait subject wearing a white shirt is standing in front of a white wall)
- Several objects are at different distances from the camera (e.g. the subject is inside a cage)
- Subjects with repeating patterns (window blinds, buildings with multiple rows of similarly shaped windows, etc.)
- Subject is moving rapidly

In the situations noted above, try pressing the shutter-release button halfway to refocus several times, or focus on another subject positioned at the same distance from the camera as the actual desired subject, and use focus lock (55).

Focus Lock

Focus lock shooting is recommended when the camera does not activate the focus area that contains the desired subject.

1 Select **█** (auto) mode (38).


2 Position the subject in the center of the frame and press the shutter-release button halfway.

- Confirm that the focus area glows green.
- Focus and exposure are locked.



3 Without lifting your finger, recompose the picture.

- Make sure to maintain the same distance between the camera and the subject.

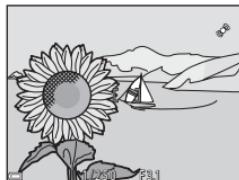


4 Press the shutter-release button the rest of the way down to take the picture.



Playback Features

Playback Zoom

Moving the zoom control toward **T (Q)** in full-frame playback mode (28) zooms in on the image.

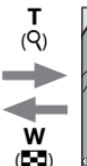

Displayed area guide

- You can change the zoom ratio by moving the zoom control toward **W (Q)** or **T (Q)**.
- To view a different area of the image, press the multi selector **▲▼◀▶**.
- If you are viewing an image that was captured using face detection or pet detection, the camera zooms in on the face detected at the time of shooting (except when viewing an image with an image size that is less than 320×240). To zoom in on an area of the image where there are no faces, adjust the magnification rate and then press **▲▼◀▶**.
- When a zoomed image is displayed, press the **OK** button to return to full-frame playback mode.

Cropping Images

When a zoomed image is displayed, you can press the **MENU** button to crop the image to include only the visible portion and save it as a separate file (69).

Thumbnail Playback, Calendar Display

Moving the zoom control toward **W** (■) in full-frame playback mode (28) displays images as thumbnails.



Full-frame Playback

W
(■)
→
←
T
(Q)



Thumbnail Playback

W
(■)
→
←
T
(Q)



Calendar Display

- You can change the number of thumbnails displayed by moving the zoom control toward **W** (■) or **T** (Q).
- While using thumbnail playback mode, press the multi selector **▲▼◀▶** to select an image and then press the **OK** button to display that image full-frame.
- While using calendar display mode, press **▲▼◀▶** to select a date and then press the **OK** button to display the images captured on that day.

Notes About Calendar Display

Images captured when the camera's date is not set are treated as images captured on January 1, 2014.

Functions That Can Be Set with the MENU Button (Playback Menu)

When viewing images in full-frame playback mode or thumbnail playback mode, you can configure the menu operations listed below by pressing the **MENU** button.

Option	Description	
D-Lighting*	Allows you to create copies with enhanced brightness and contrast, brightening dark portions of an image.	6
Skin softening*	The camera detects human faces in images and creates a copy with softer facial skin tones.	7
Print order	Allows you to select which images are printed, and how many copies of each image are printed, prior to printing.	30
Slide show	Allows you to view images in an automatic slide show.	33
Protect	Protects selected images from accidental deletion.	34
Rotate image	Allows you to rotate the displayed image to portrait or landscape orientation.	36
Small picture*	Creates a small copy of images.	8
Copy	Allows you to copy images between the internal memory and a memory card.	37

* Edited images are saved as separate files. Some images may not be edited.

Recording and Playing Back Movies

Recording Movies

1 Display the shooting screen.

- Check the remaining amount of movie recording time.
- If **Photo info** in the **Monitor settings** (65) in the setup menu is set to **Movie frame+auto info**, the area that will be visible in the movie can be confirmed before movie recording starts.




Movie recording time
remaining

2 Lower the flash (5).

- Recording movies while the flash is raised may cause the audio to be muffled.

3 Press the ● (movie-record) button to start movie recording.

- The camera focuses on the subject in the center of the frame.

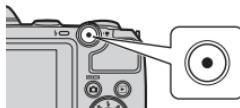

4 Press the ● (movie-record) button again to end recording.

✓ Maximum Movie Length

Individual movie files cannot exceed 4 GB in size or 29 minutes in length, even when there is sufficient free space on the memory card for longer recording.

- The maximum movie length for a single movie is displayed on the shooting screen.
- Recording may end before either limit is reached if camera temperature becomes elevated.
- The actual movie length may vary depending on the movie content, subject movement, or type of memory card.

✓ Notes About Saving Images and Recording Movies

The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open the battery-chamber/memory card slot cover or remove the batteries or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

✓ Notes About Movie Recording

- Memory cards with an SD Speed Class rating of 6 or faster are recommended when recording movies (☞19). Movie recording may stop unexpectedly when memory cards with a lower Speed Class rating are used.
- There may be some degradation in image quality when digital zoom is used. When switching from optical zoom to digital zoom while recording movies, the zoom operation stops temporarily.
- The sounds of zoom control operation, zoom, autofocus lens drive movement, vibration reduction, and aperture operation when brightness changes may be recorded.
- Smear (☞3) visible in the monitor with movie recording is recorded with movies. Avoiding bright objects such as the sun, reflections of the sun, and electric lights is recommended.
- Depending on the distance to the subject or the amount of zoom applied, subjects with repeating patterns (fabrics, lattice windows, etc.) may have colored stripes (interference patterns, moire, etc.) in them during movie recording and playback. This occurs when the pattern in the subject and the layout of the image sensor interfere with each other; it is not a malfunction.

✓ Camera Temperature

- The camera may become warm when shooting movies for an extended period of time or when the camera is used in a hot area.
- If the inside of the camera becomes extremely hot when recording movies, the camera will automatically stop recording.
The amount of time remaining until the camera stops recording (10s) is displayed.
After the camera stops recording, it turns itself off.
Leave the camera off until the inside of the camera has cooled.

✓ Notes About Autofocus


Autofocus may not perform as expected (54). Should this occur, try the following:

1. Set **Autofocus mode** in the movie menu to **Single AF** (default setting) before starting movie recording.
2. Frame another subject—positioned at the same distance from the camera as the intended subject—in the center of the frame, press the ● (movie-record) button to start recording, and then modify the composition.

Functions That Can Be Set with the MENU Button (Movie Menu)

Enter shooting mode → MENU button →  menu icon → 

The settings of the menu options listed below can be configured.

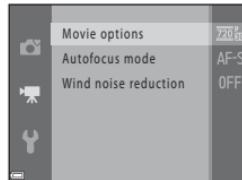

Option	Description	
Movie options	Select the movie type. <ul style="list-style-type: none">Default setting: 720p 720/30p	 38
Autofocus mode	Select either Single AF , which locks focus when movie recording begins, or Full-time AF , which continues focusing during movie recording. <ul style="list-style-type: none">Default setting: Single AF	 39
Wind noise reduction	Set whether or not to reduce wind noise during movie recording. <ul style="list-style-type: none">Default setting: Off	 39

Playing Back Movies

Press the  button to enter playback mode.

Movies are indicated by the movie options icon ( 62).

Press the  button to play back movies.



Movie options

- To adjust the volume, move the zoom control ( 1).



Volume indicator

Functions Available During Playback

Playback controls are displayed in the monitor.

The operations listed below can be performed by using the multi selector  to select a control and then pressing the  button.



Function	Icon	Description
Rewind		Hold down the  button to rewind the movie.
Advance		Hold down the  button to advance the movie.
Pause		Pause playback. The operations listed below can be performed while paused.
		 Rewind the movie one frame. Hold down the  button for continuous rewinding.
		 Advance the movie one frame. Hold down the  button for continuous advancing.
		 Resume playback.
		 Extract the desired portion of a movie and save it as a separate file (18).
End		Return to full-frame playback mode.

Deleting movies


To delete a movie, select the desired movie in full-frame playback mode (28) or thumbnail playback mode (57) and press the  button (29).

General Camera Setup

Functions That Can Be Set with the MENU Button (Setup Menu)

Press the **MENU** button →  (setup) menu icon →  button

The settings of the menu options listed below can be configured.

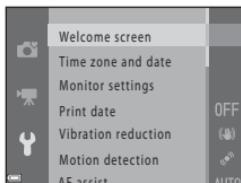


Option	Description	
Welcome screen	Allows you to select whether or not the welcome screen is displayed when the camera is turned on.	 40
Time zone and date	Allows you to set the camera clock.	 41
Monitor settings	Allows you to adjust photo information display and monitor brightness settings.	 43
Print date	Allows you to imprint the shooting date and time on images.	 45
Vibration reduction	Allows you to select the vibration reduction setting used when shooting.	 46
Motion detection	Allows you to set whether or not the camera automatically increases the shutter speed to reduce blurring caused by camera shake if motion is detected when shooting still images.	 47
AF assist	Allows you to enable or disable the AF-assist illuminator.	 48
Sound settings	Allows you to adjust sound settings.	 48
Auto off	Allows you to set the amount of time that passes before the monitor turns off to save power.	 49

Option	Description	
Format memory/ Format card	Allows you to format the internal memory or the memory card.	6650
Language	Allows you to change the camera's display language.	6651
Video mode	Allows you to adjust TV-connection settings.	6651
Blink warning	Allows you to set whether or not closed eyes are detected when taking images of people using face detection.	6652
Eye-Fi upload	Allows you to set whether or not to enable the function for sending images to a computer using a commercially available Eye-Fi card.	6653
Reset all	Allows you to reset the camera's settings to their default values.	6654
Battery type	Change this setting to match the type of batteries that are inserted in the camera.	6655
Firmware version	View the current camera firmware version.	6655

Connecting the Camera to a TV, Computer, or Printer

Connection Methods

You can enhance your enjoyment of images and movies by connecting the camera to a TV, computer, or printer.

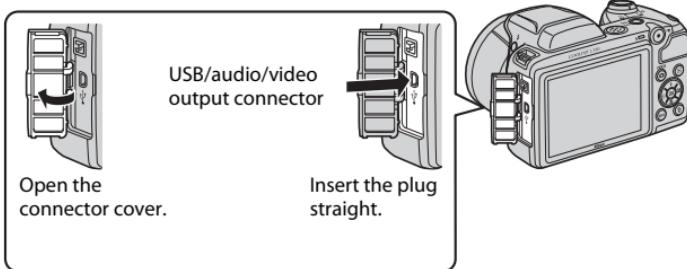

- Before connecting the camera to an external device, make sure the remaining battery level is sufficient and turn the camera off. Before disconnecting, make sure to turn the camera off.
- If the AC Adapter EH-67 (available separately) is used, this camera can be powered from an electrical outlet. Do not use any other make or model of AC adapter as it may cause the camera to heat up or malfunction.
- For information about the connection methods and subsequent operations, refer to the documentation included with the device in addition to this document.

Viewing images on a TV

10



Images and movies captured with the camera can be viewed on a TV.
Connection method: Connect the video and audio plugs of the optional audio video cable to the TV's input jacks.

Viewing and organizing images on a computer

69



You can transfer images to a computer to perform simple retouching and manage image data.

Connection method: Connect the camera to the computer's USB port with the included USB cable.

- Before connecting to a computer, install ViewNX 2 on the computer (69).

Printing images without using a computer

12



If you connect the camera to a PictBridge-compatible printer, you can print images without using a computer.

Connection method: Connect the camera directly to the printer's USB port with the USB cable.

Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images.

Install ViewNX 2 using the included ViewNX 2 CD-ROM.



Installing ViewNX 2

- An Internet connection is required.

Compatible Operating Systems

Windows

Windows 8.1, Windows 7, Windows Vista, Windows XP

Mac

OS X 10.9, 10.8, 10.7

Refer to the Nikon website for details on system requirements, including the latest information on operating system compatibility.

1 Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.

- Windows: If instructions for operating the CD-ROM are displayed in the window, follow the instructions to proceed to the installation window.
- Mac: When the **ViewNX 2** window is displayed, double-click the **Welcome** icon.

2 Select a language in the language selection dialog to open the installation window.

- If the desired language is not available, click **Region Selection** to choose a different region and then choose the desired language (the **Region Selection** button is not available in the European release).
- Click **Next** to display the installation window.



3 Start the installer.

- We recommend clicking **Installation Guide** in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click **Typical Installation (Recommended)** in the installation window.

4 Download the software.

- When the **Software Download** screen is displayed, click **I agree - Begin download**.
- Follow the on-screen instructions to install the software.

5 Exit the installer when the installation completion screen is displayed.

- Windows: Click **Yes**.
- Mac: Click **OK**.

The following software is installed:

- ViewNX 2 (consisting of the three modules below)
 - Nikon Transfer 2: For transferring images to the computer
 - ViewNX 2: For viewing, editing, and printing transferred images
 - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama photo using a series of images shot in panorama assist scene mode)


6 Remove the ViewNX 2 CD-ROM from the CD-ROM drive.

Transferring Images to the Computer

1 Choose how images will be copied to the computer.

Choose one of the following methods:

- **Direct USB connection:** Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the USB cable. Turn the camera on. To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.

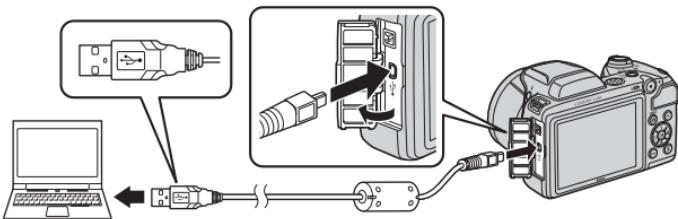

- **SD card slot:** If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader:** Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

- **When using Windows 7**

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

- 1 Under **Import pictures and videos**, click **Change program**. A program selection dialog will be displayed; select **Import File using Nikon Transfer 2** and click **OK**.
- 2 Double-click **Import File**.



If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

✓ Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

2 Transfer images to the computer.

- Click **Start Transfer**.



- At default settings, all the images on the memory card will be copied to the computer.

3 Terminate the connection.

- If the camera is connected to the computer, turn the camera off and disconnect the USB cable. If you are using a card reader or card slot, choose the appropriate option in the computer operating system to eject the removable disk corresponding to the memory card, and then remove the card from the card reader or card slot.

Viewing Images

Start ViewNX 2.

- Images are displayed in ViewNX 2 when transfer is complete.
- Consult online help for more information on using ViewNX 2.



Starting ViewNX 2 Manually

- **Windows:** Double-click the **ViewNX 2** shortcut on the desktop.
- **Mac:** Click the **ViewNX 2** icon in the Dock.



Reference Section

The Reference Section provides detailed information and hints about using the camera.

Shooting

Using Panorama Assist	882
-----------------------------	-----

Playback

Editing Still Images	885
Connecting the Camera to a TV (Viewing Images on a TV).....	8810
Connecting the Camera to a Printer (Direct Print)	8811
Editing Movies	8818

Menu

The Shooting Menu (for (Auto) Mode).....	8820
The Smart Portrait Menu.....	8828
The Playback Menu.....	8830
The Movie Menu	8838
The Setup Menu.....	8840

Additional Information

Error Messages	8856
File Names.....	8859
Optional Accessories	8860

Using Panorama Assist

Using a tripod makes the composition easier. Set **Vibration reduction** (6046) to **Off** in the setup menu when using a tripod to stabilize the camera.

Enter shooting mode → (shooting mode) button → (second icon from the top*) → → → → (panorama assist) →

* The icon of the last scene selected is displayed.

- 1 Use the multi selector to select the direction in which images are joined, and press the button.

- Apply flash mode (40), self-timer (43), macro mode (45), and exposure compensation (46) settings in this step, if necessary.
- Press the button to reselect the direction.



- 2 Frame the first edge of the panorama scene, and take the first image.

- The camera focuses on the area in the center of the frame.
- About 1/3 of the image will be displayed as translucent.



3 Shoot the next image.

- Match the outline of the next image so that 1/3 of the frame overlaps the previous image, and press the shutter-release button.



4 Press the **OK** button when shooting is completed.

- The camera returns to step 1.



Notes About Panorama Assist

- The panorama series is terminated if the auto off function (649) triggers the standby mode during shooting. To prevent this, setting a longer time for the auto off function is recommended.
- Images cannot be deleted while shooting in panorama assist mode. When shooting a new image, return to step 1 and start over again.

AE/AF-L (Exposure Lock) Indicator

When using panorama assist mode, all images in the panorama have the same exposure, white balance, and focus as the first image of the panorama.

When the first image is shot, **AE/AF-L** is displayed in the monitor to indicate that exposure, white balance, and focus are locked.





Panorama Creation with Panorama Maker

Transfer images to a computer (72) and use Panorama Maker to join them in a single panorama.

- Panorama Maker can be installed on a computer using the included ViewNX 2 CD-ROM (69).
- For more information on using Panorama Maker, refer to the on-screen instructions and help information contained in Panorama Maker.

Editing Still Images

Before Editing Images

You can easily edit images on this camera. Edited copies are saved as separate files.

- Edited copies are saved with the same shooting date and time as the original.



Restrictions on Image Editing


An image can be edited up to ten times.

D-Lighting: Enhancing Brightness and Contrast

Press the button (playback mode) → select an image → MENU button → D-Lighting → button

Use the multi selector to select **OK** and press the button.

- The edited version is displayed on the right.
- To exit without saving the copy, select **Cancel** and press the button.

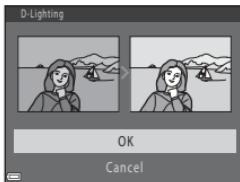

Skin Softening: Softening Skin Tones

Press the **▶** button (playback mode) → select an image → **MENU** button → Skin softening → **OK** button

1 Use the multi selector **▲▼** to select the amount of effect applied and press the **OK** button.

- The confirmation dialog is displayed with the face to which the effect was applied enlarged in the monitor.
- To exit without saving the copy, press **◀**.



2 Preview the result and press the **OK** button.

- Skin tones of up to 12 faces, in the order of that closest to the center of the frame, are softened.
- If more than one face was processed, use **◀▶** to display a different face.
- Press the **MENU** button to adjust the amount of effect applied. The monitor display returns to that shown in step 1.



✓ Notes About Skin Softening


- Skin softening cannot be applied if no faces are detected in the image.
- Depending upon the direction in which faces are looking, or the brightness of faces, the camera may be unable to accurately detect faces, or the skin softening function may not perform as expected.

Small Picture: Reducing the Size of an Image

Press the button (playback mode) → select an image → MENU button → Small picture → button


- 1** Use the multi selector to select the desired copy size and press the button.

- For images taken at an image mode setting of **5120x2880**, only **640x360** is displayed.

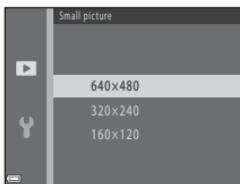

- 2** Select **Yes** and press the button.

- An edited copy is created (compression ratio of approximately 1:16).

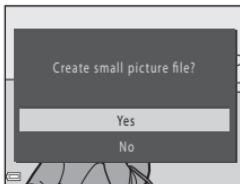

Notes About Small Picture

Images with an aspect ratio of 1:1 cannot be edited.

Crop: Creating a Cropped Copy

1 Move the zoom control to enlarge the image (□ 56).

2 Refine copy composition and press the **MENU** button.

- Move the zoom control toward **T** (Q) or **W** (P) to adjust the zoom ratio. Set a zoom ratio at which **MENU**:**8** is displayed.
- Use the multi selector **▲▼◀▶** to scroll the image so that only the portion to be copied is visible in the monitor.



3 Select **Yes** and press the **OK** button.

- An edited copy is created.



Image Size

When the image size of the cropped copy is 320×240 or smaller, the image is displayed at a smaller size during playback.

Cropping the Image in Its Current “Tall” Orientation


Use the **Rotate image** option (636) to rotate the image so that it is displayed in landscape orientation. After cropping the image, rotate the cropped image back to “tall” orientation.

Connecting the Camera to a TV (Viewing Images on a TV)

Connect the camera to a TV using the audio/video cable (60) to play back images on the TV.

1 Turn off the camera and connect it to the TV.

- Make sure that the plugs are properly oriented. Do not insert or remove the plugs at an angle when connecting or disconnecting them.

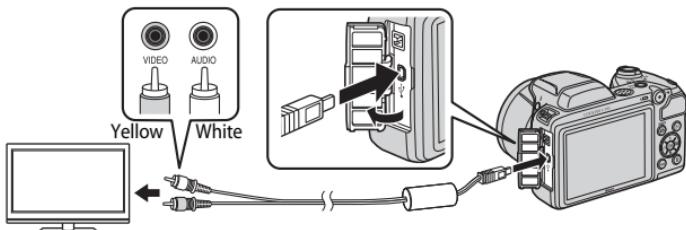


2 Set the TV's input to external video input.

- See the documentation provided with your TV for details.

3 Hold down the ▶ button to turn on the camera.

- Images are displayed on the TV.
- The camera monitor does not turn on.

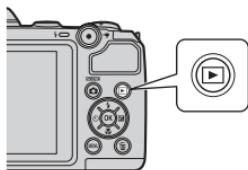


✓ If Images Are Not Displayed on the TV

Make sure that **Video mode** (51) in the setup menu conforms to the standard used by your TV.

Connecting the Camera to a Printer (Direct Print)

Users of PictBridge-compatible printers can connect the camera directly to the printer and print images without using a computer.

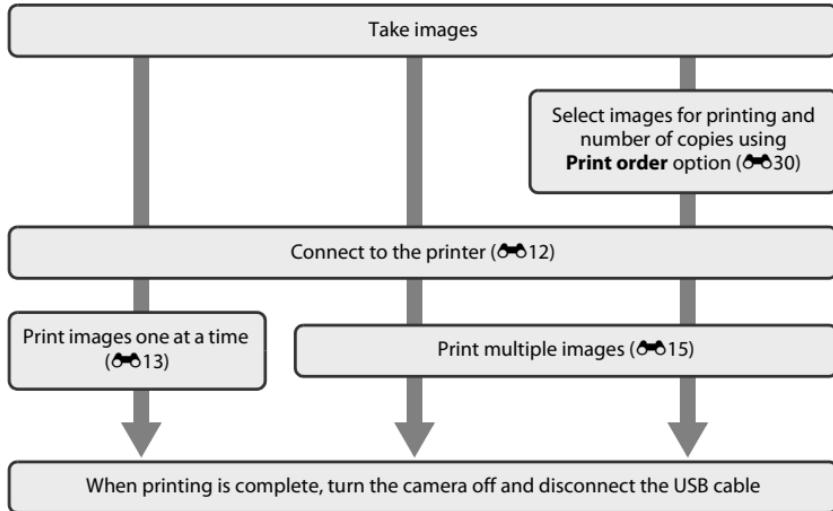

Connecting the Camera to a Printer


1 Turn off the camera.

2 Turn on the printer.

- Check printer settings.

3 Connect the camera to the printer using the USB cable.

- Make sure that the plugs are properly oriented. Do not insert or remove the plugs at an angle when connecting or disconnecting them.

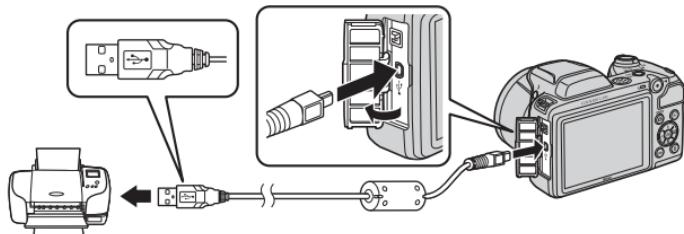

4 Turn on the camera.

- The **PictBridge** startup screen (①) is displayed in the camera monitor, followed by the **Print selection** screen (②).




Printing Individual Images

1 Use the multi selector to select the desired image and press the **OK** button.

- Move the zoom control toward **W** (☒) to switch to thumbnail playback or **T** (☒) to switch to full-frame playback.




2 Use **▲▼** to select **Copies** and press the **OK** button.

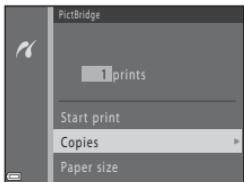

3 Select the desired number of copies (up to nine) and press the **OK** button.




4 Select **Paper size** and press the **OK** button.

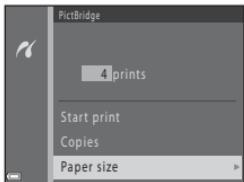


5 Select the desired paper size and press the **OK** button.

- To apply the paper size setting configured on the printer, select **Default** as the paper size option.
- The paper size options available on the camera vary depending on the printer that you use.

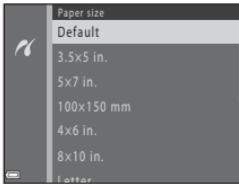

6 Select **Start print** and press the **OK** button.

- Printing starts.
- To cancel printing, press the **OK** button.

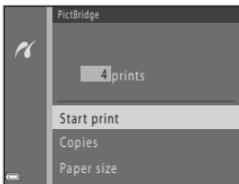


Printing Multiple Images

- When the **Print selection** screen is displayed, press the **MENU** button.




- Use the multi selector **▲▼** to select **Paper size** and press the **OK** button.

- To exit the print menu, press the **MENU** button.

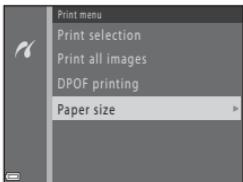


- Select the desired paper size and press the **OK** button.

- To apply the paper size setting configured on the printer, select **Default** in the paper size option.
- The paper size options available on the camera vary depending on the printer that you use.

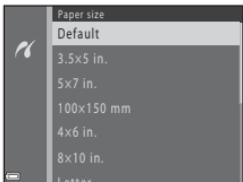


- Select **Print selection**, **Print all images**, or **DPOF printing** and press the **OK** button.

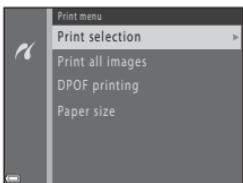

Print selection

Select images (up to 99) and the number of copies (up to nine) of each.


- Use the multi selector **◀▶** to select images, and use **▲▼** to specify the number of copies to be printed.
- Images selected for printing are indicated by **A** and the numeral indicating the number of copies to be printed. If no copies have been specified for images, the selection is canceled.
- Move the zoom control toward **T (Q)** to switch to full-frame playback or **W (☒)** to switch to thumbnail playback.
- Press the **OK** button when setting is complete.
- When the screen shown on the right is displayed, select **Start print** and press the **OK** button to start printing.

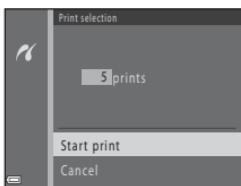

Print all images

One copy each of all images saved in the internal memory, or on the memory card, is printed.


- When the screen shown on the right is displayed, select **Start print** and press the **OK** button to start printing.

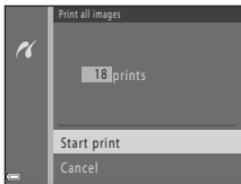

DPOF printing

Print images for which a print order was created using the **Print order** option (6630).

- When the screen shown on the right is displayed, select **Start print** and press the **OK** button to start printing.
To view the current print order, select **View images** and press the **OK** button. To print images, press the **OK** button again.

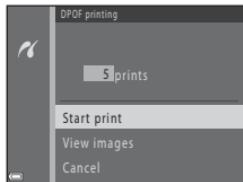

More Information


See "Printing Images of Size 1:1" (6621) for more information.

Editing Movies

The desired portions of a recorded movie can be saved as a separate file.

- 1 Play back the desired movie and pause at the start point of the portion that is to be extracted (64).

- 2 Use the multi selector  to select the  control, and then press the .

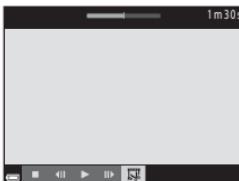


- 3 Use  to select the  control (choose start point).

- Use  to move the start point.
- To cancel editing, select (return), and press the .




- 4 Use  to select  (choose end point).

- Use  to move the end point.
- To preview the specified portion, select  and then press the  button. Press the  button again to stop previewing.

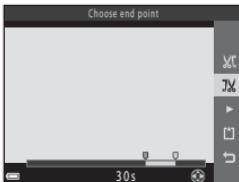

- 5** Use **▲▼** to select **◀ (Save)** and press the **OK** button.
- Follow the instructions on the screen to save the movie.

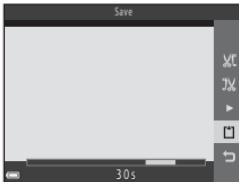

✓ Notes About Movie Editing

- Use batteries with a sufficient amount of charge remaining to prevent the camera from turning off during editing. When the battery level indicator is **■**, movie editing is not possible.
- A movie that was created by editing cannot be trimmed again.
- The actual trimmed portion of a movie may differ slightly from the portion selected using the start and end points.
- Movies cannot be trimmed so that they are less than two seconds long.

The Shooting Menu (for (Auto) Mode)

Image Mode Settings (Image Size and Quality)

Enter shooting mode → MENU button → Shooting menu → Image mode → button

Select the combination of image size and compression ratio that is used when saving images. The higher the image mode setting, the larger the size at which images can be printed, and the lower the compression ratio, the higher the quality of the images, but the number of images that can be saved is reduced.

Option*	Compression ratio	Aspect ratio (horizontal to vertical)
5152x3864★	Approx. 1:4	4:3
5152x3864 (default setting)	Approx. 1:8	4:3
3648x2736	Approx. 1:8	4:3
2272x1704	Approx. 1:8	4:3
1600x1200	Approx. 1:8	4:3
640x480	Approx. 1:8	4:3
5120x2880	Approx. 1:8	16:9
3864x3864	Approx. 1:8	1:1

* The total number of pixels captured, and the number of pixels captured horizontally and vertically.
Example: **5152x3864** = approx. 20 megapixels, 5152 × 3864 pixels

Notes About Image Mode

- The image mode setting can also be changed in shooting modes other than  (auto) mode. The changed setting is also applied to other shooting modes.
- The setting may not be changed when using certain settings of other functions.

Number of Images That Can Be Saved

- The approximate number of images that can be saved can be checked in the monitor when shooting (20).
- Note that due to JPEG compression, the number of images that can be saved may vary greatly depending on the image content, even when using memory cards with the same capacity and the same image mode setting. In addition, the number of images that can be saved may vary depending on the make of the memory card.
- If the number of exposures remaining is 10,000 or more, the number of exposures remaining display shows "9999".

Printing Images of Size 1:1

Change the printer setting to "Border."

The images may not be printed in 1:1 ratio depending on the printer.

White Balance (Adjusting Hue)

Select (auto) mode → MENU button → White balance → button

Adjust white balance to suit the light source or weather conditions in order to make the colors in images match what you see with your eyes.

- Use **Auto** under most conditions. Change the setting when you want to adjust the hue of the image you are taking.

Option	Description
AUTO Auto (default setting)	White balance is automatically adjusted to suit lighting conditions.
PRE Preset manual	Use when the desired result is not achieved with Auto , Incandescent , etc. (623).
Daylight	White balance adjusted for direct sunlight.
Incandescent	Use under incandescent lighting.
Fluorescent	Use under fluorescent lighting.
Cloudy	Use when taking images under overcast skies.
Flash	Use with the flash.

Notes About White Balance

- Lower the flash when white balance is set to any setting other than **Auto** and **Flash** (5).
- The setting may not be changed when using certain settings of other functions.


Using Preset Manual

Use the procedure below to measure the white balance value under the lighting used during shooting.

1 Place a white or gray reference object under the lighting that will be used during shooting.


2 Use the multi selector **▲▼** to select **Preset manual** in the **White balance** menu, and press the **OK** button.

- The camera zooms in to the position for measuring white balance.

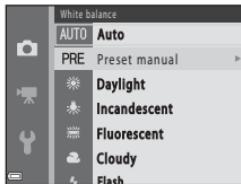


3 Select **Measure**.

- To apply the last measured value, select **Cancel** and press the **OK** button.

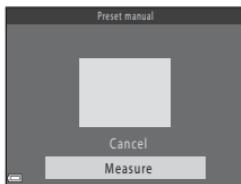

4 Frame the reference object in the measuring window.

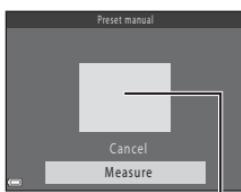

5 Press the button to measure the value.


- The shutter is released and measurement is complete. No image is saved.

Notes About Preset Manual

A value for flash lighting cannot be measured with **Preset manual**. When shooting using the flash, set **White balance** to **Auto** or **Flash**.

Continuous Shooting

Select **(auto)** mode → **MENU** button → Continuous → **OK** button

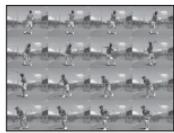Option	Description
S Single (default setting)	One image is taken each time the shutter-release button is pressed.
C Continuous	While the shutter-release button is held all the way down, images are captured continuously. <ul style="list-style-type: none">The frame rate for continuous shooting is about 1 fps and the maximum number of continuous shots is about 4 (when image mode is set to 20M 5152×3864).
BSS BSS (Best Shot Selector)	While the shutter-release button is held all the way down, the camera captures a series of up to ten images and automatically saves the sharpest image. Use when shooting a stationary subject in a place where flash photography is prohibited and camera shake is likely to occur.
M Multi-shot 16	Each time the shutter-release button is pressed all the way down, the camera captures a series of 16 images and saves it as a single image. <ul style="list-style-type: none">The frame rate for continuous shooting is about 30 fps.Image mode is fixed at 5M (image size: 2560 × 1920 pixels).Digital zoom cannot be used. 

Notes About Continuous Shooting

- When a setting other than **Single** is selected, the flash cannot be used. Focus, exposure, and white balance are fixed at the values determined with the first image in each series.
- The frame rate for continuous shooting may vary depending upon the current image mode setting, the memory card used, or shooting condition.
- The setting may not be changed when using certain settings of other functions.

✓ Notes About Multi-shot 16

Smear (⌚3) visible in the monitor when shooting with **Multi-shot 16** enabled is saved with images. Avoiding bright objects such as the sun, reflections of the sun, and electric lights when shooting with **Multi-shot 16** enabled is recommended.

ISO Sensitivity

Select (auto) mode → MENU button → ISO sensitivity →

Higher ISO sensitivity allows darker subjects to be captured. Additionally, even with subjects of similar brightness, images can be taken at faster shutter speeds, and blurring caused by camera shake and subject movement can be reduced.

- When higher ISO sensitivity is set, images may contain noise.

Option	Description
AUTO Auto (default setting)	Sensitivity is automatically selected from the range of ISO 80 to 1600.
80, 100, 200, 400, 800, 1600	Sensitivity is locked at the specified value.

✓ Notes About ISO Sensitivity

The setting may not be changed when using certain settings of other functions.

ISO Sensitivity Display on the Shooting Screen

When **Auto** is selected, is displayed if the ISO sensitivity automatically increases.

Color Options

Select (auto) mode → MENU button → Color options → button

Make colors more vivid or save images in monochrome.

Option	Description
Standard color (default setting)	Use for images exhibiting natural color.
Vivid color	Use to achieve a vivid, "photoprint" effect.
Black-and-white	Save images in black-and-white.
Sepia	Save images in sepia tones.
Cyanotype	Save images in cyan-blue monochrome.

Notes About Color Options

The setting may not be changed when using certain settings of other functions.

The Smart Portrait Menu

- See "Image Mode Settings (Image Size and Quality)" (6620) for information about **Image mode**.

Skin Softening

Enter smart portrait mode → **MENU** button → Skin softening → **OK** button

Option	Description
 On (default setting)	When the shutter is released, the camera detects one or more human faces (up to three), and processes the image to soften facial skin tones before saving the image.
Off	Turns skin softening off.

The result of skin softening effect on your subject cannot be confirmed when framing images for shooting. Check the results in playback mode, after taking images.

Smile Timer

Enter smart portrait mode → MENU button → Smile timer → OK button

The camera detects human faces and then automatically releases the shutter whenever a smile is detected.

Option	Description
<input checked="" type="checkbox"/> On (default setting)	Enables the smile timer.
Off	Turns the smile timer off.

Blink Proof

Enter smart portrait mode → MENU button → Blink proof → OK button

Option	Description
<input checked="" type="checkbox"/> On	<p>The camera automatically releases the shutter twice with every shot and saves one image in which the subject's eyes are open.</p> <ul style="list-style-type: none"> If the camera saved an image in which the subject's eyes may have been closed, the dialog shown on the right is displayed for a few seconds. The flash cannot be used.
Off (default setting)	Turns the blink proof off.



The Playback Menu

- See "Editing Still Images" (65) for information about image editing functions.


Print Order (Creating a DPOF Print Order)

Press the **▶** button (playback mode) → **MENU** button → Print order → **OK** button

If you configure print order settings in advance, you can use them with the printing methods listed below.

- Taking the memory card to a digital photo lab that supports DPOF (Digital Print Order Format) printing.
- Inserting the memory card into a DPOF-compatible printer's card slot.
- Connecting the camera to a PictBridge-compatible printer (611).

- 1 Use the multi selector **▲▼** to select **Select images** and press the **OK** button.

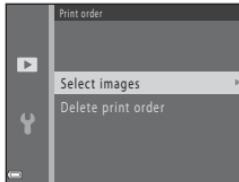


2 Select images (up to 99) and the number of copies (up to nine) of each.

- Use the multi selector **◀▶** to select images, and use **▲▼** to specify the number of copies to be printed.
- Images selected for printing are indicated by **A** and the numeral indicating the number of copies to be printed. If no copies have been specified for images, the selection is canceled.
- Move the zoom control toward **T (Q)** to switch to full-frame playback or **W (☒)** to switch to thumbnail playback.
- Press the **OK** button when setting is complete.



3 Select whether or not to print shooting date and shooting information.

- Select **Date** and press the **OK** button to print the shooting date on all images.
- Select **Info** and press the **OK** button to print the shutter speed and aperture value on all images.
- Lastly, select **Done** and press the **OK** button to complete the print order.

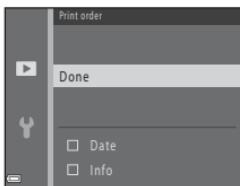

Notes About Printing Shooting Date and Shooting Information

- Some printers may not be able to print the shooting date and shooting information.
- Shooting information is not printed when the camera is connected to a printer.
- The **Date** and **Info** settings are reset each time the **Print order** option is displayed.
- The date printed is that saved when the image was captured.
- For images taken with the **Print date** (645) option enabled, only the date and time imprinted at the time of shooting are printed, even if the **Print order** date option is enabled for the images.



Canceling Existing Print Order

Select **Delete print order** in step 1 of "Print Order (Creating a DPOF Print Order)" (630).

More Information

See "Printing Images of Size 1:1" (621) for more information.


Slide Show

Press the button (playback mode) → MENU button → Slide show → button

Play back images one by one in an automated “slide show.” When movie files are played back in the slide show, only the first frame of each movie is displayed.

1 Use the multi selector to select Start and press the button.

- The slide show begins.
- To change the interval between images, select **Frame intvl**, press the button, and specify the desired interval time before selecting **Start**.
- To repeat the slide show automatically, select **Loop** and press the button before selecting **Start**.
- The maximum playback time is up to about 30 minutes even if **Loop** is enabled.

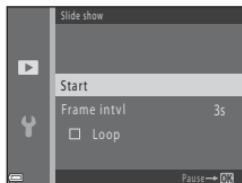

2 Select End or Restart.

- The screen shown on the right is displayed after the slide show ends or is paused.
To exit the show, select and then press the button.
To resume the slide show, select and then press the button.



Operations During Playback

- Use to display the previous/next image. Press and hold to rewind/fast forward.
- Press the button to pause or end the slide show.

Protect

Press the  button (playback mode) → MENU button → Protect →  button

The camera protects selected images from accidental deletion.

Select images to protect or cancel protection for previously protected images from the image selection screen (6635).

Note that formatting the camera's internal memory or the memory card permanently deletes protected files (6650).

The Image Selection Screen

When an image selection screen such as the one shown on the right is displayed while operating the camera, follow the procedures described below to select the images.



1 Use the multi selector to select an image.

- Move the zoom control (1) toward **T** (Q) to switch to full-frame playback or **W** (Q) to switch to thumbnail playback.
- When selecting an image for **Rotate image** or **Welcome screen**, or when using the **Print selection** screen to print individual images, only one image can be selected.
Proceed to step 3.



2 Use to select or deselect (or to specify the number of copies).

- When an image is selected, an icon is displayed below the image. Repeat steps 1 and 2 to select additional images.



3 Press the button to apply image selection.

- When **Selected images** is selected, a confirmation dialog is displayed. Follow the instructions displayed in the monitor.

Rotate Image



Press the **▶** button (playback mode) → **MENU** button → **Rotate image** → **OK** button

Specify the orientation in which saved images are displayed during playback.
Still images can be rotated 90 degrees clockwise or 90 degrees counterclockwise.

Select an image from the image selection screen (635). When the Rotate image screen is displayed, press the multi selector **◀▶** to rotate the image 90 degrees.



Rotate 90 degrees
counterclockwise

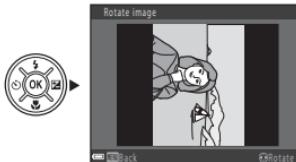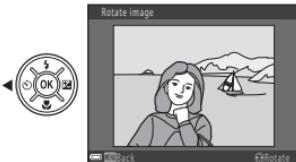

Rotate 90 degrees
clockwise


Press the **OK** button to finalize display orientation, and save orientation information with the image.

Copy (Copy Between Internal Memory and Memory Card)

Press the **◀** button (playback mode) → **MENU** button → **Copy** → **OK** button


Copy images between the internal memory and a memory card.

- 1 Use the multi selector **▲▼** to select a destination option to which images are copied and press the **OK** button.

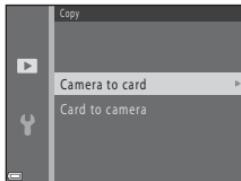

- 2 Select a copy option and press the **OK** button.

- If you choose the **Selected images** option, use the image selection screen to specify images (635).

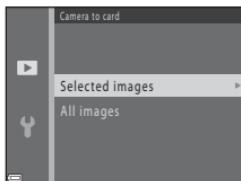

✓ Notes About Copying Images

- Only files in formats that this camera can record can be copied.
- Operation is not guaranteed with images captured with another make of camera or that have been modified on a computer.
- The **Print order** (630) settings configured for images are not copied.

⌚ Copying to a Memory Card That Contains No Images

When the camera is switched to playback mode, **Memory contains no images.** is displayed. Press the **MENU** button to select **Copy**.

The Movie Menu

Movie Options

Enter shooting mode → MENU button →  menu icon → Movie options →  button

Select the desired movie option to record.

- Memory cards (Class 6 or higher) are recommended for recording movies (:19).

Option (Image size/Frame rate, File format)	Image size	Aspect ratio (horizontal to vertical)
 720/30p (default setting)	1280 × 720	16:9
 480/30p	640 × 480	4:3

Autofocus Mode

Enter shooting mode → MENU button →  menu icon → Autofocus mode → 

Set how the camera focuses in movie mode.

Option	Description
AF-S Single AF (default setting)	Focus is locked when the  (movie-record) button is pressed to start recording. Select this option when the distance between the camera and the subject will remain fairly consistent.
AF-F Full-time AF	Camera focuses continuously. Select this option when the distance between the camera and subject will change significantly during recording. The sound of the camera focusing may be heard in the recorded movie. Use of Single AF is recommended to prevent the sound of the camera focusing from interfering with recording.

Wind Noise Reduction

Enter shooting mode → MENU button →  menu icon → Wind noise reduction → 

Set whether or not to reduce wind noise during movie recording.

Option	Description
 On	Reduces the sound produced when wind passes over the microphone. Other sounds may become difficult to hear during playback.
Off (default setting)	Wind noise reduction is not enabled.

The Setup Menu

Welcome Screen

MENU button →  menu icon → Welcome screen → 

Configure the welcome screen that is displayed when you turn on the camera.

Option	Description
None (default setting)	Does not display the welcome screen.
COOLPIX	Displays a welcome screen with the COOLPIX logo.
Select an image	Displays an image selected for the welcome screen. <ul style="list-style-type: none">The image selection screen is displayed. Select an image (6835) and press the  button.Because a copy of the selected image is saved in the camera, it will be displayed when the camera is turned on, even if the original image is deleted.An image cannot be selected if its aspect ratio is different from that of the screen, or if the image size is extremely small after the small picture or crop function is applied.

Time Zone and Date


MENU button →  menu icon → Time zone and date → 

Set the camera clock.

Option	Description
Date and time	<ul style="list-style-type: none"> Select an item: Press the multi selector  (changes between D, M, Y, h, and m). Edit the date and time: Press  . Apply the setting: Select m and press the .
Date format	Select Year/Month/Day , Month/Day/Year , or Day/Month/Year .
Time zone	<p>Set time zone and daylight saving time.</p> <ul style="list-style-type: none"> When Travel destination (


Setting the Time Zone

- 1 Use the multi selector   to select **Time zone** and press the .

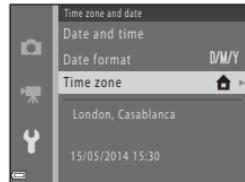


2 Select Home time zone or Travel destination and press the button.

- The date and time displayed in the monitor changes depending on whether the home time zone or travel destination is selected.


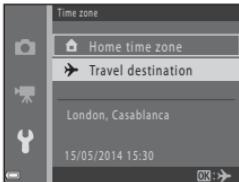


3 Press .

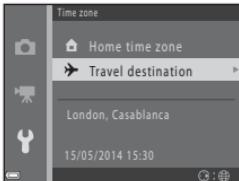

4 Use to select the time zone.

- Press to enable daylight saving time function, and is displayed. Press to disable the daylight saving time function.
- Press the button to apply the time zone.
- If the correct time is not displayed for the home or travel destination time zone setting, set the appropriate time in **Date and time**.

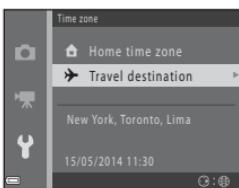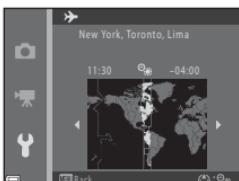

Monitor Settings

MENU button →  menu icon → Monitor settings → 

Option	Description
Photo info	Set whether or not to display information in the monitor.
Brightness	Select from five settings. <ul style="list-style-type: none">Default setting: 3

Photo Info

	Shooting mode	Playback mode
Show info		
Auto info (default setting)	Current settings and operation guide are displayed as in Show info . If no operations are performed for a few seconds, the information is hidden as in Hide info . Information is displayed again when the next operation is performed.	
Hide info		

	Shooting mode	Playback mode
Framing grid+auto info	 <p>In addition to information shown with Auto info, a framing grid is displayed to help frame images. The framing grid is not displayed when recording movies.</p>	The current settings or operation guide is displayed as in Auto info .
Movie frame+auto info	 <p>In addition to information shown with Auto info, a frame is displayed before recording begins that represents the area that will be captured when recording movies. The movie frame is not displayed when recording movies.</p>	The current settings or operation guide is displayed as in Auto info .

Print Date (Imprinting Date and Time)

MENU button →  menu icon → Print date → 

The shooting date and time can be imprinted on the images when shooting, allowing the information to be printed even from printers that do not support date printing (632).



Option	Description
DATE Date	Date is imprinted on images.
DATE+ Date and time	Date and time are imprinted on images.
Off (default setting)	Date and time are not imprinted on images.

Notes About Print Date

- Imprinted dates form a permanent part of image data and cannot be deleted. The date and time cannot be imprinted on images after they have been captured.
- The date and time cannot be imprinted in the following situations:
 - When using **Panorama assist** or **Pet portrait** (when  **Continuous** is selected) scene mode
 - When shooting movies
- The imprinted date and time may be difficult to read when using a small image size.

Vibration Reduction

MENU button →  menu icon → Vibration reduction →  button

Set to reduce the effects of camera shake while shooting.

Set **Vibration reduction** to **Off** when using a tripod to stabilize the camera during shooting.

Option	Description
 On (default setting)	Vibration reduction is enabled.
Off	Vibration reduction is disabled.

Notes About Vibration Reduction

- After turning on the camera or after switching from playback mode to shooting mode, wait for the shooting mode screen to be displayed completely before taking images.
- Images displayed in the camera monitor immediately after shooting may be displayed blurry.
- Vibration reduction may be unable to completely eliminate the effects of camera shake in some situations.

Motion Detection

MENU button →  menu icon → Motion detection →  button

Enable motion detection to reduce the effects of subject movement and camera shake when shooting still images.

Option	Description
 Auto (default setting)	Motion detection is enabled with some shooting modes or settings, when  is displayed on the shooting screen. When the camera detects subject movement or camera shake,  turns green, and the ISO sensitivity and shutter speed are automatically increased to reduce blurring. <ul style="list-style-type: none">Set ISO sensitivity ( 26) to Auto in  (auto) mode.
Off	Motion detection is disabled.

Notes About Motion Detection

- Motion detection may be unable to eliminate the effects of subject movement and camera shake in some situations.
- Motion detection may be disabled if the subject exhibits significant movement or is too dark.
- The images captured using motion detection may be somewhat "grainy" in appearance.

AF Assist

MENU button →  menu icon → AF assist → 

Enable or disable the AF-assist illuminator which assists autofocus operation.

Option	Description
AUTO Auto (default setting)	The AF-assist illuminator automatically lights up when the subject is dimly lit. The illuminator has a range of about 4.5 m (14 ft) at the maximum wide-angle position and about 3.0 m (9 ft 10 in.) at the maximum telephoto position. <ul style="list-style-type: none">• Note that for some scene modes, the AF-assist illuminator may not light.
Off	The AF-assist illuminator does not light.

Sound Settings

MENU button →  menu icon → Sound settings → 

Option	Description
Button sound	When On (default setting) is selected, the camera produces one beep when operations are performed, two beeps when focus is acquired on the subject, and three beeps when an error occurs. The start-up sound is also produced. <ul style="list-style-type: none">• Sounds are disabled when using Pet portrait scene mode.
Shutter sound	When On (default setting) is selected, the shutter sound is produced when the shutter is released. <ul style="list-style-type: none">• The shutter sound is not produced when using continuous shooting mode, when recording movies, or when using Pet portrait scene mode.

Auto Off

MENU button →  menu icon → Auto off → 

Set the amount of time that elapses before the camera enters standby mode (21).

Option	Description
Auto off	Select 30 s (default setting), 1 min , 5 min , or 30 min .
Sleep mode	If On (default setting) is selected, the camera enters standby mode when there is no change in the brightness of the subject, even before the time selected for Auto off has elapsed. The camera enters standby mode after 30 seconds when Auto off is set to 1 min or less, or after one minute when Auto off is set to 5 min or more.

Notes About Auto Off

The time that passes before the camera enters standby mode is fixed in the following situations:

- When shooting using **Pet portrait auto release**: 5 minutes (when auto off is set to **30 s** or **1 min**)
- When shooting using **Smile timer**: 5 minutes (when auto off is set to **30 s** or **1 min**)
- When a menu is displayed: 3 minutes
- When the AC Adapter EH-67 is connected: 30 minutes

Format Memory/Format Card

MENU button →  menu icon → Format memory/Format card →  button


Use this option to format the internal memory or a memory card.

Formatting the internal memory or memory cards permanently deletes all data. Data that has been deleted cannot be recovered. Make sure to transfer important images to a computer before formatting.

- Do not turn the camera off or open the battery-chamber/memory card slot cover during formatting.


Formatting the Internal Memory

Remove the memory card from the camera. The **Format memory** option is displayed in the setup menu.

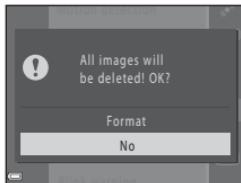

Formatting Memory Cards

Insert a memory card in the camera. The **Format card** option is displayed in the setup menu.

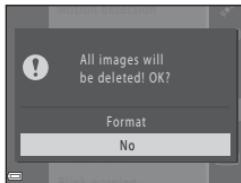

Language

MENU button →  menu icon → Language → 

Select a language for display of camera menus and messages.

Video Mode

MENU button →  menu icon → Video mode → 

Adjust settings for connection to a TV.

Select from **NTSC** and **PAL**.

Both **NTSC** and **PAL** are standards for analog color television broadcasting.

Blink Warning

MENU button →  menu icon → Blink warning → 

Select whether or not the camera detects human subjects that have blinked using face detection (52) when shooting in the following modes:

-  (easy auto) mode
- **Portrait** or **Night portrait** scene mode (32)

Option	Description
On	When one or more human subjects may have blinked in an image captured using face detection, the Did someone blink? screen is displayed in the monitor. Check the image and determine whether or not another image should be captured.
Off (default setting)	Blink warning is disabled.

The Blink Warning Screen

Faces detected by the blink warning are displayed inside a border.

The operations described below are available.

- To enlarge the face: Move the zoom control toward **T** (Q). If more than one face is detected, use the multi selector  to select the desired face.
- To switch to full-frame playback: Move the zoom control toward **W** (S).



If you press the  button, or if no operations are performed for a few seconds, the camera returns to shooting mode.

Notes About Blink Warning

The blink warning may not function properly in some shooting conditions.

Eye-Fi Upload

MENU button →  menu icon → Eye-Fi upload → 

Select whether or not the camera's Eye-Fi card (available from third-party manufacturers) sends images to your computer.

Option	Description
 Enable	Upload images created by the camera to a preselected destination.
 Disable (default setting)	Images are not uploaded.

Notes About Eye-Fi Cards

- Note that images will not be uploaded if signal strength is insufficient even if **Enable** is selected.
- Remove your Eye-Fi card from the camera where wireless devices are prohibited. Signals may be transmitted even if **Disable** is selected.
- Refer to the instruction manual of your Eye-Fi card for more information. In the event of malfunction, contact the card manufacturer.
- The camera can be used to turn Eye-Fi cards on and off, but may not support other Eye-Fi functions.
- The camera is not compatible with the Endless Memory function. When it is set on a computer, disable the function. If the Endless Memory function is enabled, the number of images taken may not be displayed correctly.
- Eye-Fi cards are for use only in the country of purchase. Observe all local laws concerning wireless devices.
- Leaving the setting as **Enable** will result in the batteries being depleted in a shorter period of time.

Eye-Fi Communication Indicator

The communication status of the Eye-Fi card in the camera can be confirmed in the monitor (8, 10).

-  **Eye-Fi upload** is set to **Disable**.
-  (lights): Eye-Fi upload enabled; waiting to begin upload.
-  (flashes): Eye-Fi upload enabled; uploading data.
-  Eye-Fi upload enabled but no images available for upload.
-  An error occurred. The camera cannot control the Eye-Fi card.

Reset All

MENU button →  menu icon → Reset all → 

When **Reset** is selected, the camera's settings are restored to their default values.

- Some settings, such as **Time zone and date** or **Language**, are not reset.



Resetting File Numbering

To reset file numbering to "0001", delete all images saved in the internal memory or on the memory card (29) before selecting **Reset all**.

Battery Type

MENU button →  menu icon → Battery type → 

To ensure that the camera shows the correct battery level (20), select the type that matches the batteries currently in use.

Option	Description
 LR6 Alkaline (default setting)	LR6/L40 (AA-size) alkaline batteries
 COOLPIX (Ni-MH)	Nikon EN-MH2 rechargeable Ni-MH (nickel metal hydride) batteries
 Lithium	FR6/L91 (AA-size) lithium batteries

Firmware Version

MENU button →  menu icon → Firmware version → 

View the current camera firmware version.

Error Messages

Refer to the table below if an error message is displayed.

Display	Cause/Solution	
Turn the camera off, remove the lens cap, and turn the camera on.	The lens cap may be attached, or a lens error occurred. Make sure that the lens cap has been removed, and turn the camera off and then on again. If the error persists, contact your retailer or Nikon-authorized service representative.	4, 20
Memory card is write protected.	The write-protect switch is in the "lock" position. Slide the write-protect switch to the "write" position.	—
This card cannot be used.	An error occurred while accessing the memory card. <ul style="list-style-type: none">• Use an approved card.	14,  19
This card cannot be read.	<ul style="list-style-type: none">• Check that the terminals are clean.• Confirm that the memory card is correctly inserted.	
Card is not formatted. Format card?	The memory card has not been formatted for use in the camera. Formatting deletes all data saved on the memory card. If you need to keep copies of any images, make sure to select No and save the copies to a computer or other medium before formatting the memory card. Select Yes and press the  button to format the memory card.	 6
Not available if Eye-Fi card is locked.	The write-protect switch of the Eye-Fi card is in the "lock" position.	—
	An error occurred while accessing the Eye-Fi card. <ul style="list-style-type: none">• Check that the terminals are clean.• Confirm that the Eye-Fi card is correctly inserted.	14
Out of memory.	Delete images or insert a new memory card.	14, 29, 64


Display	Cause/Solution	
Image cannot be saved.	An error occurred while saving the image. Insert a new memory card or format the internal memory or memory card.	 50
	The camera has run out of file numbers. Insert a new memory card or format the internal memory or memory card.	 50
	The image cannot be used for the welcome screen.	 40
	There is insufficient space to save the copy. Delete images from the destination.	29
Image cannot be modified.	Select images that support the editing function.	 5,  13
Cannot record movie.	A time-out error occurred while saving the movie on the memory card. Select a memory card with a faster write speed.	60,  19
Memory contains no images.	<p>There are no images in the internal memory or on the memory card.</p> <ul style="list-style-type: none"> Remove the memory card from the camera to play back images in the camera's internal memory. To copy the images saved in the camera's internal memory to the memory card, press the MENU button to select Copy in the playback menu. 	15  37
File contains no image data.	<p>The file was not created or edited with this camera. The file cannot be viewed on this camera. View the file using a computer or the device used to create or edit this file.</p>	-
All images are hidden.	There are no images available for a slide show.	 33
This image cannot be deleted.	The image is protected. Disable protection.	 34

Display	Cause/Solution	
Raise the flash.	The flash is lowered. Raise the flash when shooting in Night portrait or Backlighting scene mode.	33, 34, 40
Communications error	An error occurred while communicating with the printer. Turn the camera off and reconnect the USB cable.	 12
System error	An error occurred in the camera's internal circuitry. Turn the camera off, remove and reinsert the batteries, and turn the camera on. If the error persists, contact your retailer or Nikon-authorized service representative.	12, 20
Printer error: check printer status.	After solving the problem, select Resume and press the  button to resume printing.*	–
Printer error: check paper.	Load the specified size of paper, select Resume , and press the  button to resume printing.*	–
Printer error: paper jam.	Remove the jammed paper, select Resume , and press the  button to resume printing.*	–
Printer error: out of paper.	Load the specified size of paper, select Resume , and press the  button to resume printing.*	–
Printer error: check ink.	There is a problem with the printer's ink. Check the ink, select Resume , and press the  button to resume printing.*	–
Printer error: out of ink.	Replace the ink cartridge, select Resume , and press the  button to resume printing.*	–
Printer error: file corrupt.	There is a problem with the image file to be printed. Select Cancel and press the  button to cancel printing.	–

* See the documentation provided with your printer for further guidance and information.

File Names

Images or movies are assigned file names as follows.

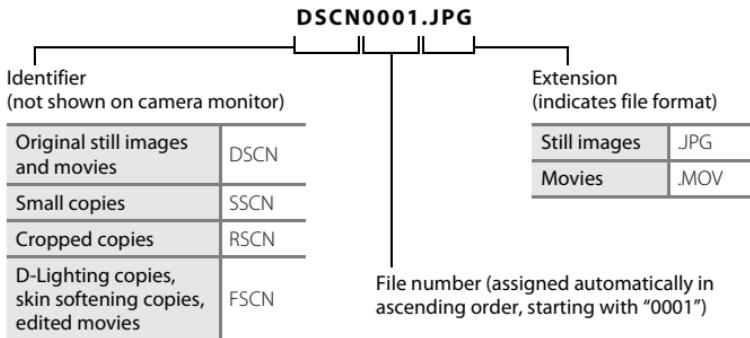

- A new folder is created each time a series of images are captured using panorama assist, and the images are saved in that folder with file numbers starting with "0001."

Optional Accessories

Battery charger, rechargeable batteries*	<ul style="list-style-type: none">• Battery Charger MH-73 (includes four EN-MH2 rechargeable Ni-MH batteries)• Replacement rechargeable batteries: Rechargeable Ni-MH batteries EN-MH2-B4 (set of four EN-MH2 batteries)
AC adapter	AC Adapter EH-67
Audio/video cable	Audio Video Cable EG-CP14
Hand strap	Hand Strap AH-CP1

- * When using EN-MH2 rechargeable Ni-MH batteries with the camera, charge the batteries four at a time using Battery Charger MH-73. Also, do not charge batteries at the same time if they have different amounts of charge remaining (☞4). EN-MH1 rechargeable Ni-MH batteries cannot be used.

Availability may vary with country or region.

See our website or brochures for the latest information.



Technical Notes and Index

Caring for the Product	2
The Camera.....	2
Batteries	4
Memory Cards	6
Cleaning and Storage	7
Cleaning.....	7
Storage	7
Troubleshooting	8
Specifications	15
Approved Memory Cards	19
Index	22

Caring for the Product

The Camera

To ensure continued enjoyment of this Nikon product, observe the precautions described below in addition to the warnings in "For Your Safety" (☞ viii-xiv) when using or storing the device.

Do Not Drop

The product may malfunction if subjected to strong shock or vibration.

Handle the Lens and All Moving Parts with Care

Do not apply force to the lens, lens cover, monitor, memory card slot, or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.

Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.

Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

Keep away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.



Do Not Point the Lens at Strong Light Sources for Extended Periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the image sensor, producing a white blur effect in photographs.



Turn the Product off Before Removing or Disconnecting the Power Source

Do not remove the batteries while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.



Notes About the Monitor

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.
- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.



Notes About Smear

White or colored streaks may be visible when bright subjects are framed in the monitor. This phenomenon, known as "smear," occurs when extremely bright light strikes the image sensor; it is characteristic of image sensors and does not indicate a malfunction. Smear may also take the form of partial discoloration in the monitor during shooting. It does not appear in images saved with the camera except in the cases of movies and of images saved with **Multi-shot 16** selected for **Continuous**. When shooting in these modes, we recommend that you avoid bright subjects such as the sun, reflected sunlight, and electric lights.

Batteries

Be sure to read and follow the warnings in "For Your Safety" (☞ viii-xiv) before use.

✓ Notes About Using Batteries

- Used batteries may overheat. Handle with caution.
- Do not use batteries beyond their recommended expiration date.
- Do not turn the camera on and off repeatedly if discharged batteries are inserted in the camera.

✓ Spare Batteries

We recommend carrying spare batteries depending on where you are shooting. It may be difficult to purchase batteries in certain areas.

✓ Charging Batteries

If using optional rechargeable batteries, charge the batteries before taking pictures. Batteries are not charged at the time of purchase.

Be sure to read and follow the warnings noted in the operating instructions included with the battery charger.

✓ Charging Rechargeable Batteries

- Do not mix batteries with different amounts of charge remaining, or batteries of a different make or model.
- When using EN-MH2 batteries with this camera, charge four batteries at a time using Battery Charger MH-73. Use only Battery Charger MH-73 to charge EN-MH2 batteries.
- When using Battery Charger MH-73, only charge EN-MH2 batteries.
- EN-MH1 rechargeable Ni-MH batteries cannot be used.

Notes About Rechargeable Ni-MH Batteries

- If you repeatedly charge rechargeable Ni-MH batteries while they still have some charge remaining, the message **Battery exhausted.** may be displayed prematurely when using the batteries. This is due to the “memory effect,” in which the amount of charge the batteries can hold decreases temporarily. Use the batteries until there is no charge remaining and they will return to their normal behavior.
- Rechargeable Ni-MH batteries discharge even when not being used. We recommend charging the batteries just before using them.

Cold Environment Usage

Battery performance decreases in cold environments. When using the camera in cold environments, try not to let the camera and batteries become too cold. The camera may not function if you use discharged batteries in cold environments. Keep spare batteries warm and alternate between two sets of batteries. Batteries that cannot be used because they have become too cold can often be used again when they have been warmed up.

Battery Terminals

Dirt on the battery terminals can prevent the camera from functioning. Remove dirt from the terminals using a dry cloth.

Remaining Battery Charge

If you insert discharged batteries into the camera, the camera may indicate that the batteries have adequate charge remaining. This is a characteristic of batteries.

Recycling

Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations. Cover the battery terminals with plastic tape when recycling.

Memory Cards

- Use only Secure Digital memory cards. See “Approved Memory Cards” (☞19) for recommended memory cards.
- Observe the precautions noted in the documentation included with your memory card.
- Do not affix labels or stickers to the memory card.
- Do not format the memory card using a computer.
- The first time you insert a memory card that has been used in another device into this camera, be sure to format it with this camera. We recommend formatting new memory cards with this camera before using them with this camera.
- Note that **formatting a memory card permanently deletes all images and other data on the memory card**. If there is data saved on the memory card that you wish to keep, copy that data to a computer before formatting.
- If the message **Card is not formatted. Format card?** is displayed when the camera is turned on, the memory card must be formatted. If there is data on the memory card that you do not want to delete, select **No** and press the **OK** button. Copy that data to a computer before formatting. To format the memory card, select **Yes**.
- Observe the following precautions while formatting the memory card, saving and deleting images, and copying images to a computer, otherwise data or the memory card itself may be damaged.
 - Do not open the battery-chamber/memory card slot cover or remove the memory card or batteries.
 - Do not turn off the camera.
 - Do not disconnect the AC adapter.

Cleaning and Storage

Cleaning

Do not use alcohol, thinner, or other volatile chemicals.

Lens	Avoid touching glass parts with your fingers. Remove dust or lint with a blower (typically a small device with a rubber bulb attached to one end that is pumped to produce a stream of air out the other end). To remove fingerprints or other stains that cannot be removed with a blower, wipe the lens with a soft cloth, using a spiral motion that starts at the center of them and working toward the edges. If this fails, clean the lens using a cloth lightly dampened with commercial lens cleaner.
Monitor	Remove dust or lint with a blower. To remove fingerprints and other stains, clean the monitor with a soft, dry cloth, being careful not to apply pressure.
Body	Use a blower to remove dust, dirt, or sand, then wipe gently with a soft, dry cloth. After using the camera at the beach or other sandy or dusty environment, wipe off any sand, dust, or salt with a dry cloth lightly dampened with fresh water and dry thoroughly. Note that foreign matter inside the camera could cause damage not covered by the warranty.

Storage

Turn the camera off when not in use. Be sure that the power-on lamp is off before putting the camera away. Remove the batteries if the camera will not be used for an extended period. Do not store the camera with naphtha or camphor moth balls, or in any of the following locations:

- Next to equipment that produces strong electromagnetic fields, such as televisions or radios
- Exposed to temperatures below –10°C (14°F) or above 50°C (122°F)
- Places that are poorly ventilated or subject to humidity of over 60%

To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting the camera away again.

For storing the batteries, follow the precautions in “Batteries” (☞4) in “Caring for the Product” (☞2).

Troubleshooting

If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon-authorized service representative.

Power, Display, Settings Issues

Problem	Cause/Solution	
The camera is on but does not respond.	<p>Wait for recording to end. If the problem persists, turn the camera off. If the camera does not turn off, remove and reinsert the battery or batteries or, if you are using an AC adapter, disconnect and reconnect the AC adapter. Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by removing or disconnecting the power source.</p>	12, 20,  60
Camera turns off without warning.	<ul style="list-style-type: none">The camera automatically turns off to save power (auto off function).The camera or batteries have become too cold and cannot operate properly.The inside of the camera has become hot. Leave the camera off until the inside of the camera has cooled, and then try turning it on again.	21  -
Monitor is blank.	<ul style="list-style-type: none">The camera is off.The batteries are exhausted.The camera has entered standby mode to save power. Press the power switch, shutter-release button,  button,  button, or  movie-record button.The flash lamp flashes while the flash is charging. Wait for the flash to charge.The camera and computer are connected via a USB cable.The camera and TV are connected via an audio/video cable.	20 20 1, 21 42 67, 72 67,  10

Problem	Cause/Solution	
Monitor is hard to read.	<ul style="list-style-type: none"> Adjust the monitor brightness. The monitor is dirty. Clean the monitor. 	65, 43 7
Date and time of recording are not correct.	<ul style="list-style-type: none"> If the camera clock has not been set, flashes during shooting and movie recording. Images and movies saved before the clock is set are dated "00/00/0000 00:00" or "01/01/2014 00:00" respectively. Set the correct time and date from the Time zone and date option in the setup menu. The camera clock is not as accurate as ordinary watches or clocks. Periodically compare the time of the camera clock with that of a more accurate timepiece and reset as required. 	16, 65, 41
No indicators displayed in monitor.	Hide info is selected for Photo info in Monitor settings in the setup menu.	65, 43
Print date not available.	Time zone and date has not been set in the setup menu.	16, 65, 41
Date not imprinted on images even when Print date is enabled.	<ul style="list-style-type: none"> The current shooting mode does not support Print date. The date cannot be imprinted on movies. 	65, 45
Screen for setting time zone and date is displayed when camera is turned on.	The clock battery is exhausted; all settings were restored to their default values.	16, 19
Camera settings reset.		
Camera becomes hot.	The camera may become hot when used for an extended period of time to shoot movies or send images using an Eye-Fi card, or when used in a hot environment; this is not a malfunction.	-
Camera makes sound.	When Autofocus mode is set to Full-time AF or while in some shooting modes, the camera may produce an audible focusing sound.	62, 39

Shooting Issues

Problem	Cause/Solution	
Cannot switch to shooting mode.	Disconnect the USB cable.	67, 72,  12
No image captured when the shutter-release button is pressed.	<ul style="list-style-type: none">When the camera is in playback mode, press the  button or the shutter-release button.When menus are displayed, press the MENU button.The batteries are exhausted.When the flash lamp is flashing, the flash is charging.	1, 28 3 20 42
Camera cannot focus.	<ul style="list-style-type: none">The subject is too close. Try shooting using easy auto mode, Close-up scene mode, or macro mode.The subject is hard to focus on.Set AF assist in the setup menu to Auto.Turn the camera off and then on again.	31, 33, 45 54 65,  48 20
Images are blurred.	<ul style="list-style-type: none">Use the flash.Increase the ISO sensitivity value.Enable vibration reduction or motion detection.Use BSS (Best Shot Selector).Use a tripod to stabilize the camera when shooting (using the self-timer at the same time is more effective).	40 50,  26 65,  46,  47 34,  25 43

Problem	Cause/Solution	
Streaks of light or partial discoloration are visible in the monitor.	Smear occurs when extremely bright light strikes the image sensor. When shooting with Continuous set to Multi-shot 16 and when recording movies, avoiding bright objects, such as the sun, reflections of the sun, and electric lights is recommended.	 50,  25,  3
Bright specks appear in images captured with flash.	The flash is reflecting off particles in the air. Lower the flash.	5, 40
Flash does not fire.	<ul style="list-style-type: none"> The flash is lowered. A scene mode that restricts the flash is selected. On is selected for Blink proof in the smart portrait menu. A function that restricts the flash is enabled. 	5, 40 47 50,  29 51
Digital zoom cannot be used.	<ul style="list-style-type: none"> Digital zoom cannot be used in the following situations. <ul style="list-style-type: none"> - When Portrait, Night portrait or Pet portrait is selected in scene mode - When smart portrait mode is selected - When Continuous in the shooting menu is set to Multi-shot 16 	32 36 50,  25
Image mode not available.	A function that restricts the Image mode option is enabled.	51
No sound when shutter is released.	<ul style="list-style-type: none"> Off is selected for Sound settings > Shutter sound in the setup menu. No sound is produced with some shooting modes and settings, even when On is selected. Do not block the speaker. 	65,  48 1
AF-assist illuminator does not light.	Off is selected for the AF assist option in the setup menu. AF-assist illuminator may not light depending on the current scene mode, even when Auto is selected.	65,  48
Images appear smeared.	The lens is dirty. Clean the lens.	 7

Problem	Cause/Solution	
Colors are unnatural.	White balance or hue is not adjusted properly.	33, 50,  22
Randomly spaced bright pixels ("noise") appear in image.	The subject is dark, and the shutter speed is too slow or ISO sensitivity is too high. Noise can be reduced by: <ul style="list-style-type: none"> Using the flash. Specifying a lower ISO sensitivity setting. 	40 50,  26
Images are too dark (underexposed).	<ul style="list-style-type: none"> The flash is lowered or a shooting mode that restricts the flash is selected. The flash window is blocked. The subject is beyond the range of the flash. Adjust exposure compensation. Increase ISO sensitivity. The subject is backlit. Select Backlighting scene mode or raise the flash and set the flash mode setting to  (fill flash). 	5, 40, 47  16 46 50,  26 34, 40
Images are too bright (overexposed).	Adjust exposure compensation.	46
Unexpected results when flash set to  (auto with red-eye reduction).	When taking images with  (auto with red-eye reduction), or when taking images with Night portrait (either in easy auto mode or in scene mode) and the fill flash with slow sync and red-eye reduction is used, In-Camera Red Eye Fix may be applied to areas not affected by red-eye in rare cases. Use auto mode or any scene mode other than Night portrait , and change the flash mode to any setting other than  (auto with red-eye reduction) and try taking an image again.	33, 40
Skin tones are not softened.	<ul style="list-style-type: none"> In some shooting conditions, facial skin tones may not be softened. For images containing four or more faces, try using the Skin softening effect in the playback menu. 	53 58,  7

Problem	Cause/Solution	
Saving images takes time.	<p>It may take more time to save images in the following situations.</p> <ul style="list-style-type: none"> When the noise reduction function is in operation, such as when shooting in a dark environment When the flash mode is set to (auto with red-eye reduction) When the skin softening function is applied while shooting 	<p>-</p> <p>42</p> <p>53</p>

Playback Issues

Problem	Cause/Solution	
File cannot be played back.	<ul style="list-style-type: none"> This camera may not be able to play back images saved with another make or model of digital camera. This camera cannot play back movies recorded with another make or model of digital camera. This camera may not be able to play back data edited on a computer. 	<p>-</p>
Cannot zoom in on image.	<ul style="list-style-type: none"> Playback zoom cannot be used with movies, and images with an image size of 160 × 120 or smaller. When viewing small images, the playback zoom ratio that is displayed may not match the actual image zoom ratio. This camera may not be able to zoom in on images captured with another make or model of digital camera. 	<p>-</p>
Cannot edit image.	<ul style="list-style-type: none"> Images with an image size of 160 × 120 or smaller cannot be edited. Some images cannot be edited. Images that have already been edited may not be edited again. There is not enough free space in the internal memory or on the memory card. This camera is unable to edit images captured with other cameras. Editing functions used for images are not available for movies. 	<p>-</p> <p> 5</p> <p>-</p> <p>-</p> <p>-</p>

Problem	Cause/Solution	
Cannot rotate image.	This camera cannot rotate images captured with another make or model of digital camera.	-
Images are not displayed on TV.	<ul style="list-style-type: none"> • Video mode is not correctly set in the setup menu. • The memory card contains no images. Replace the memory card. Remove the memory card to play back images from the internal memory. 	66,  51 14
Nikon Transfer 2 does not start when camera is connected to a computer.	<ul style="list-style-type: none"> • The camera is off. • The batteries are exhausted. • The USB cable is not correctly connected. • The camera is not recognized by the computer. • The computer is not set to start Nikon Transfer 2 automatically. For more information about Nikon Transfer 2, refer to help information contained in ViewNX 2. 	20 20 67, 72 - 74
Images to be printed are not displayed.	<ul style="list-style-type: none"> • The memory card contains no images. Replace the memory card. • Remove the memory card to print images from the internal memory. 	14 15
Cannot select paper size with camera.	<p>The camera cannot be used to select the paper size in the following situations, even when printing from a PictBridge-compatible printer. Use the printer to select the paper size.</p> <ul style="list-style-type: none"> • The printer does not support the paper sizes specified by the camera. • The printer automatically selects the paper size. 	67,  13,  15 -

Specifications

Nikon COOLPIX L330 Digital Camera

Type	Compact digital camera
Number of effective pixels	20.2 million
Image sensor	1/2.3-in. type CCD; approx. 20.48 million total pixels
Lens	NIKKOR lens with 26x optical zoom
Focal length	4.0–104.0 mm (angle of view equivalent to that of 22.5–585 mm lens in 35mm [135] format)
f-number	f/3.1–5.9
Construction	12 elements in 9 groups (1 ED lens element)
Digital zoom magnification	Up to 4x (angle of view equivalent to that of approx. 2340 mm lens in 35mm [135] format)
Vibration reduction	Lens shift
Motion blur reduction	Motion detection (still pictures)
Autofocus (AF)	Contrast-detect AF
Focus range	<ul style="list-style-type: none">[W]: Approx. 50 cm (1 ft 8 in.)–∞[T]: Approx. 1.5 m (5 ft)–∞ <p>(All distances measured from center of front surface of lens)</p>
Focus-area selection	Center, face detection
Monitor	7.5 cm (3-in.), approx. 460k-dot, TFT LCD with anti-reflection coating and 5-level brightness adjustment
Frame coverage (shooting mode)	Approx. 98% horizontal and 98% vertical (compared to actual picture)
Frame coverage (playback mode)	Approx. 100% horizontal and 100% vertical (compared to actual picture)

Storage	
Media	Internal memory (approx. 43 MB), SD/SDHC/SDXC memory card
File system	DCF, Exif 2.3, and DPOF compliant
File formats	Still pictures: JPEG Movies: MOV (Video: H.264/MPEG-4 AVC, Audio: LPCM monaural)
Image size (pixels)	<ul style="list-style-type: none"> • 20M (High) [5152 × 3864★] • 20M [5152 × 3864] • 10M [3648 × 2736] • 4M [2272 × 1704] • 2M [1600 × 1200] • VGA [640 × 480] • 16:9 [5120 × 2880] • 1:1 [3864 × 3864]
ISO sensitivity (Standard output sensitivity)	ISO 80–1600
Exposure	
Metering mode	Matrix, center-weighted (digital zoom less than 2×), spot (digital zoom 2× or more)
Exposure control	Programmed auto exposure and exposure compensation (−2.0 – +2.0 EV in steps of 1/3 EV)
Shutter	Mechanical and charge-coupled electronic shutter
Speed	<ul style="list-style-type: none"> • 1/1500–1 s • 4 s (Fireworks show scene mode)
Aperture	Electronically-controlled ND filter (−3.3 AV) selection
Range	2 steps (f/3.1 and f/9.9 [W])
Self-timer	Approx. 10 s
Flash	
Range (approx.) (ISO sensitivity: Auto)	[W]: 0.5–5.0 m (1 ft 8 in.–16 ft) [T]: 1.5–2.5 m (5 ft–8 ft 2 in.)
Flash control	TTL auto flash with monitor preflashes

Interface	Hi-Speed USB
Data transfer protocol	MTP, PTP
Video output	Can be selected from NTSC and PAL
I/O terminal	Audio/video (A/V) output; digital I/O (USB) DC input connector
Supported languages	Arabic, Bengali, Bulgarian, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Marathi, Norwegian, Persian, Polish, Portuguese (European and Brazilian), Romanian, Russian, Serbian, Spanish, Swedish, Tamil, Telugu, Thai, Turkish, Ukrainian, Vietnamese
Power sources	<ul style="list-style-type: none"> • Four LR6/L40 (AA-size) alkaline batteries • Four FR6/L91 (AA-size) lithium batteries • Four EN-MH2 rechargeable Ni-MH batteries (available separately) • AC Adapter EH-67 (available separately)
Battery life¹	
Still pictures	<ul style="list-style-type: none"> • Approx. 370 shots when using alkaline batteries • Approx. 960 shots when using lithium batteries • Approx. 580 shots when using EN-MH2 batteries
Movies (actual battery life for recording)²	<ul style="list-style-type: none"> • Approx. 1 h 40 min when using alkaline batteries • Approx. 4 h 40 min when using lithium batteries • Approx. 2 h 50 min when using EN-MH2 batteries
Tripod socket	1/4 (ISO 1222)
Dimensions (W × H × D)	Approx. 111.1 × 76.3 × 83.3 mm (4.4 × 3.1 × 3.3 in.) (excluding projections)
Weight	Approx. 430 g (15.2 oz) (including batteries and SD memory card)
Operating environment	
Temperature	0°C–40°C (32°F–104°F)
Humidity	85% or less (no condensation)

- Unless otherwise stated, all figures assume fresh LR6/L40 (AA-size) alkaline batteries and an ambient temperature of $23 \pm 3^\circ\text{C}$ ($73.4 \pm 5.4^\circ\text{F}$) as specified by the Camera and Imaging Products Association (CIPA).
- 1 Battery life may vary depending on conditions of use, such as the interval between shots or the length of time that menus and images are displayed.
The included batteries are for trial use only. Figures listed for lithium batteries are measured using commercially available FR6/L91 (AA-size) Energizer(R) Ultimate Lithium batteries.
- 2 Individual movie files cannot exceed 4 GB in size or 29 minutes in length. Recording may end before this limit is reached if camera temperature becomes elevated.



Specifications

- Nikon will not be held liable for any errors this manual may contain.
- The appearance of this product and its specifications are subject to change without notice.

Approved Memory Cards

The following Secure Digital (SD) memory cards have been tested and approved for use in this camera.

- Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies. When using a memory card with a lower Speed Class rating, movie recording may stop unexpectedly.

	SD memory card	SDHC memory card ²	SDXC memory card ³
SanDisk	2 GB ¹	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB
TOSHIBA	–	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Panasonic	2 GB ¹	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Lexar	–	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB

¹ If the memory card will be used with a card reader or similar device, make sure that the device supports 2 GB cards.



² SDHC compliant.

If the memory card will be used with a card reader or similar device, make sure that the device supports SDHC.



³ SDXC compliant.

If the memory card will be used with a card reader or similar device, make sure that the device supports SDXC.

- Contact the manufacturer for details on the above cards. We cannot guarantee camera performance when using memory cards made by other manufacturers.

AVC Patent Portfolio License

This product is licensed under the AVC Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, LLC.

See <http://www.mpeglallc.com>.

Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mac and OS X are trademarks or registered trademarks of Apple Inc. in the U.S. and other countries.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.
- SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.
- PictBridge is a trademark.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

FreeType License (FreeType2)

Portions of this software are copyright © 2014 The FreeType Project
(<http://www.freetype.org>). All rights reserved.

MIT License (HarfBuzz)

Portions of this software are copyright © 2014 The HarfBuzz Project
(<http://www.freedesktop.org/wiki/Software/HarfBuzz>). All rights reserved.

Index

Symbols

AE/AE-L	3
T Telephoto	25
W Wide-angle	25
Q Playback zoom	56
Thumbnail playback	57
Easy auto mode	31
Scene mode	32
Smart portrait mode	36
Auto mode	38
Playback mode	28
Setup menu	65, 40
Apply selection button	3
Shooting mode button	3
Movie-record button	3
Playback button	3, 28
Delete button	3, 29
MENU button	3, 6, 49, 50, 58, 62, 65
(flash pop-up) button	1, 5, 40
Flash mode	40
Self-timer	43
Macro mode	45
Exposure compensation	46
Help	32
A	
AC adapter	60

AF assist	65, 48
AF-assist illuminator	1
Alkaline batteries	13
Aperture value	27
Audio/video cable	67, 68, 10, 60
Audio/video-in jack	68, 10
Auto flash	41
Auto mode	38
Auto off	21, 65, 49
Autofocus	54, 62, 39
Autofocus mode	62, 39
B	
Backlighting	32, 34
Battery	12, 19
Battery charger	60
Battery level	20
Battery type	66, 55
Battery-chamber/memory card slot cover	3, 14
Beach	32
Best shot selector	34, 25
Black and white copy	32, 34
Black-and-white	27
Blink proof	50, 29
Blink warning	66, 52

Brightness	43
BSS	25, 25
Button sound	48
C	
Calendar display	57
Close-up 	32, 33
Color options	27, 27
Compression ratio	20, 20
Computer	72
Connector cover	1
Continuous shooting	25, 25
Copy	37, 37
Crop	9, 9
Cyanotype	27
D	
Date and time	41, 41, 41
Date format	41, 41
Daylight saving time	42, 42
DC input connector	1
Delete	29
Digital zoom	25
Direct print	11, 11
D-Lighting	6, 6
DPOF print	17
DSCN	59
Dusk/dawn 	32
E	
Easy auto mode	31
Editing movies	18
EN-MH2	4, 60
Exposure compensation	46
Extension	59
Eye-Fi upload	53, 66
Eyelet for camera strap	1
F	
Face detection	52
File name	59
Fill flash	41
Fireworks show 	34, 32
Firmware version	55, 55
Flash	40, 1, 5, 40
Flash lamp	42, 3, 42
Flash mode	40
Flash pop-up button	40, 1, 5, 40
Focus	52, 26
Focus indicator	9
Focus lock	55
Food 	33, 32
Format internal memory	50, 50, 66
Format memory cards	50, 50, 66
Formatting	50, 50, 15, 15
F SCN	59
Full-frame playback	28
Full-time AF	39, 62
H	
Help	32

I	
Identifier	59
Image mode	50, 20
Imprinting date and time	19, 45
Internal memory	15
ISO sensitivity	50, 26
J	
JPG	59
L	
Landscape	32
Language	66, 51
Lens	1, 15
Lithium batteries	13
M	
Macro mode	45
Memory card	14, 19
Memory card slot	14
Microphone	3
Monitor	3, 8, 7
Monitor settings	65, 43
Motion detection	65, 47
MOV	59
Movie length	59
Movie menu	62, 38
Movie options	62, 38
Movie playback	63
Movie recording	59
Movie-record button	3
N	
Night landscape	32
Night portrait	32, 33
Nikon Transfer 2	71, 72
Number of exposures remaining	20, 21
O	
Optical zoom	25
Optional accessories	60
P	
Panorama assist	32, 34, 62
Panorama Maker	34, 71, 64
Paper size	13, 15
Party/indoor	32, 33
Pet portrait auto release	35
Pet portrait	32, 35
Photo info	643
PictBridge	68, 11
Playback	28, 63
Playback button	3, 28
Playback menu	58, 30
Playback mode	28
Playback zoom	56
Portrait	32
Power	20

Power switch/power-on lamp	1, 20
Preset manual	23
Pressing halfway	27
Print	58, 68, 13, 15, 30
Print date	19, 65, 45
Print order	58, 30
Print order option	19, 31, 32
Printer	68, 11
Protect	58, 34
R	
Rechargeable battery	60
Rechargeable nickel-metal hydride batteries	13
Recording movies	59
Red-eye reduction	41, 42
Reset all	66, 54
Rotate image	58, 36
RSCN	59
S	
Scene mode	32
Self-timer	43
Self-timer lamp	1, 44
Sepia	27
Setup menu	65, 40
Shooting	20, 24, 26
Shooting menu	49, 20
Shooting mode button	3
Shutter sound	48
Shutter speed	27
Shutter-release button	1, 26
Single AF	62, 39
Single-frame shooting	50, 25
Skin softening	50, 58, 7, 28
Sleep mode	49
Slide show	58, 33
Slow sync	41
Small picture	58, 8
Smart portrait menu	49, 28
Smart portrait mode	36
Smile timer	50, 29
Snow	32
Sound settings	65, 48
Speaker	1
Sports	32, 33
SSCN	59
Standard color	27
Strap	4
Sunset	32
I	
Thumbnail playback	57
Time difference	41
Time zone	17, 41
Time zone and date	16, 65, 41
Tripod socket	3, 17
TV	68, 10

U

- USB cable 67, 72, 12
USB/audio/video output connector 1, 67, 72, 10, 11

V

- Vibration reduction 65, 46
Video mode 66, 51
ViewNX 2 69, 70
Vivid color 27
Volume 63

W

- Welcome screen 65, 40
White balance 50, 22
Wind noise reduction 62, 39

Z

- Zoom 25
Zoom control 1, 25
Zoom in 25
Zoom out 25





No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

NIKON CORPORATION

© 2014 Nikon Corporation



CT3K01(11)
6MN33411-01