


First Steps	5
Shooting and Playback	14
Using ViewNX 2	20
Other Functions	26
For Your Safety	32

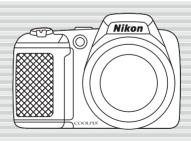

COOLPIX L330

En

Thank you for purchasing a Nikon COOLPIX L330 digital camera. This guide introduces the procedures necessary for first time use of this camera. To ensure proper use, please read and thoroughly understand the information in "For Your Safety" (pages 32-35) before using the camera.

Downloading the "Reference Manual"

Refer to the Reference Manual (PDF format) for more detailed information.

The Reference Manual can be downloaded from the Nikon website.

http://nikonimglib.com/manual/

The Reference Manual can be viewed using Adobe Reader, available for free download from the Adobe website.

Nikon User Support

Should you need technical support, we offer a number of options.

Internet

Please visit the Nikon support home page, where you can:

- Search Nikon's continuously updated Knowledge Database for the latest technical support information.
- Use "Ask Nikon a Question" to receive a prompt reply from a Nikon professional advisor to your e-mail.
- Download the latest versions of Nikon software or firmware updates for your product, or register to receive e-mail notification for software or firmware updates.

For customers in the United States: www.nikonusa.com For customers in Canada: www.nikon.ca (English), fr.nikon.ca (Français) For customers in Mexico: www.nikon.com.mx For customers in Brazil: www.nikon.com.br

Telephone

Please call for technical support and other product assistance. Our professional advisers are standing by to help with your digital camera needs.

For customers in the United States: 1-800-NIKON-US (1-800-645-6687)

For customers in Canada: 1-877-534-9910

For customers in Mexico: 001-888-565-5452

For customers in Brazil: 0800-886-4566 (0800-88 NIKON)

An Important Notice about Accessories

Nikon COOLPIX digital camera is designed to the highest standards and includes complex electronic circuitry. Only Nikon accessories, such as battery chargers, batteries, and AC adapters are certified by Nikon specifically for your Nikon COOLPIX camera and are engineered and tested to operate within the requirements of the electronic circuitry of our cameras. THE USE OF NON-NIKON ACCESSORIES MAY DAMAGE YOUR CAMERA AND WILL VOID YOUR NIKON WARRANTY. Genuine Nikon accessories are available through your Nikon-authorized dealer.

Confirming the Package Contents

In the event that any items are missing, please contact the store where you purchased the camera.



COOLPIX L330 Digital Camera



COOLPIX

Camera Strap



USB Cable UC-E16

Lens Cap LC-CP25 (with cord)

- Quick Start Guide (this guide)

Warranty

- * The included batteries are for trial use only.
- **NOTE:** A Secure Digital (SD) memory card, hereafter referred to as a "memory card," is not included with the camera.




LR6/L40 (AA-size) alkaline batteries (×4)*



ViewNX 2 CD

Parts of the Camera

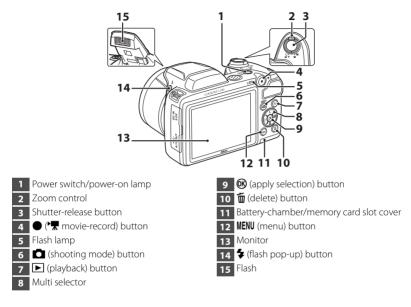




4

First Steps

Step 1 Attach the Camera Strap and Lens Cap

 Attach the lens cap to the camera strap, and then attach the strap to the camera.

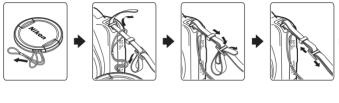



Attach them at two places.





Step 2 Insert the Batteries and a Memory Card

 
If a memory card is inserted, images are saved on the memory card when you take images. If a memory card is not inserted, images are saved in the camera's internal memory.

2.1 Open the battery-chamber/memory card slot cover.



2.2 Insert the batteries and the memory card.



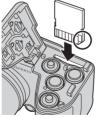

Slide the memory card in until it clicks into place.

Removing the memory card

Press the card in to partially eject the card. The card can then be removed by hand.



🖄 When Inserting Batteries or a Memory Card

- Confirm that the positive (+) and negative (-) terminals are oriented correctly.
- Inserting the memory card upside down or backwards could damage the camera and the memory card. Make sure that the memory card is correctly oriented.

Removing the Batteries and the Memory Card

- Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.
- Hold the camera upside down to prevent the batteries from falling out.
- The camera, batteries, and memory card may be hot immediately after using the camera.

Applicable Batteries

 
- Four LR6/L40 (AA-size) alkaline batteries
- Four FR6/L91 (AA-size) lithium batteries
- Four EN-MH2 rechargeable Ni-MH (nickel metal hydride) batteries

Performance of alkaline batteries may vary greatly depending on the manufacturer. Choose a reliable brand.

First Ste


See the Reference Manual for more information.

2.3 Close the battery-chamber/memory card slot cover. Slide the cover while securely holding down the area marked ②.

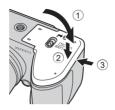


Step 3 Turn On the Camera

Remove the lens cap and press the power switch.

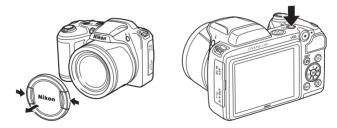


The Auto Off Function

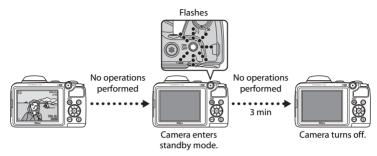


- The time that elapses before the camera enters standby mode is about 30 seconds. The time can be changed using the **Auto off** setting in the setup menu.
- While the camera is in standby mode, the monitor turns back on if you perform any of the following operations:
 - → Press the power switch, shutter-release button, 🖸 (shooting mode) button,
 - ▶ (playback) button, or (▶ movie-record) button

Step 4 Select a Language and Set the Camera Clock

  When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed. Use the multi selector to make the settings.

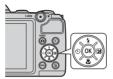

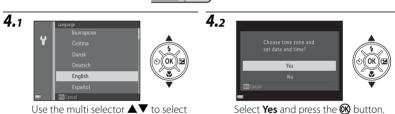

First Steps

60 button.

the desired language and press the

4.3



4.5

Select your home time zone and press the 🕅 button.



Select the date format and press the (K) button.

Daylight Saving Time

If daylight saving time is in effect, press to enable the daylight saving time function.

- When the daylight saving time function is enabled, 😪 is displayed above the map.
- To turn off the daylight saving time function, press $\mathbf{\nabla}$.





Set the date and time

- Select a field: Press ◀► (changes between **M**. **D**. **Y**. **h**. and **m**).
- Edit the date and time. Press AV
- Confirm the setting: Select m and press the 🕅 button.





Select **Yes** and press the **®** button.



Make sure that the lens cap has been removed and then press the

button.

4.7

• The shooting-mode selection screen is displayed.



When **Easy auto mode** is displayed, press the **(B)** button.

• The camera enters the shooting mode and you can take images in easy auto mode.

The next step explains basic shooting operations using 💕 (easy auto) mode.



Imprinting the Shooting Date on Printed Images

After setting the date and time, enable print date from the **Print date** option in the **Y** (setup) menu.

Display the \P (setup) menu (\square 29) using the following procedure and change the settings. Press the **MENU** button \rightarrow press the multi selector $\P \rightarrow$ press $\clubsuit \nabla$ to select the \P (setup) menu icon and press the W button \rightarrow press $\clubsuit \nabla$ to select **Print date** and press the W button.

🖉 Changing the Language Setting and the Date and Time Setting

Follow the procedure above and select Language or Time zone and date.

: This icon indicates that more information is available elsewhere in this guide.



Shooting and Playback

Step 1 Check the Battery Level and the Number of Exposures Remaining

Display	Description	
	The battery level is high.	
	The battery level is low.	
Battery exhausted.	The camera cannot capture images. Replace the batteries.	

Battery level indicator



Battery level indicator Number of exposures remaining

Number of Exposures Remaining

The number of images that can be taken is displayed.

III is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.

Step 2 Frame a Picture

2.1 Hold the camera steady.

• Keep fingers and other objects away from the lens, flash, AF-assist illuminator, microphone, and speaker.



Using the Flash

In situations where you want to use the flash, such as in dark locations or when the subject is backlit, press the \clubsuit (flash pop-up) button to raise the flash.

- When the flash is lowered, flash mode is fixed at (3) (off).
- Push the flash down gently to lower the flash until it clicks into place when not in use.









2.2 Frame the picture.

• When the camera automatically determines the scene mode, the shooting mode icon changes.

 


 
Using the Zoom

Move the zoom control.

- To zoom in closer to the subject, move toward T (telephoto).
- To zoom out and view a larger area, move toward
 W (wide-angle).


When you turn the camera on, the zoom moves to the maximum wide-angle position.

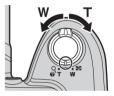

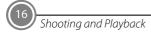

Step 3 Focus and Shoot

- **3.1** Press the shutter-release button halfway, stopping when you feel resistance.
 - When the subject is in focus, the focus area glows green (multiple focus areas can glow green).
 - When you are using digital zoom, the camera focuses on the subject in the center of the frame and the focus area is not displayed. When the camera has focused, the focus indicator glows green.
 - If the focus area or focus indicator flashes, the camera is unable to focus. Modify the composition and try pressing the shutterrelease button halfway again.

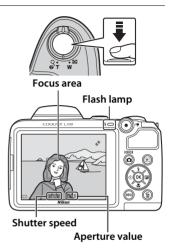

Flash lamp

The status of the flash can be confirmed by pressing the shutter-release button halfway.

1	On The flash fires when you press the shutter-release butter the way down.	
₽ ,,,-	Flashing	The flash is charging.*
	Off	The flash does not fire when an image is taken.

* If the battery level is low, the monitor turns off while the flash is charging.



- 3.2 Without lifting your finger, press the shutter-release button the rest of the way down.
 - The shutter is released and the image is saved to the memory card or internal memory.
 - If you press the shutter-release button with too much force, the camera may shake, causing images to be blurred. Press the button gently.

 
Step 4 **Play Back Images**

Press the (playback) button. The camera enters playback mode.

 
- To display previous or subsequent images, use the multi selector $\blacktriangle \nabla \blacktriangleleft \flat$
- To return to shooting mode, press the button or shutter-release button.



Display the previous image

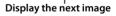



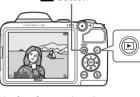

button


Deleting Images

To delete the image currently displayed in the monitor, press the $\overleftarrow{\mathbf{m}}$ (delete) button.

When the deletion screen is displayed, use the multi selector $\blacktriangle \mathbf{V}$ to select **Current image** and press the **W** button.

When the confirmation dialog is displayed, select **Yes** and press the W button to delete the image that is displayed.

 - After pressing the m button, select Erase selected images and select multiple images to be deleted. Select All images to delete all images.
- Deleted images cannot be recovered. To cancel without deleting, select No in the confirmation dialog and press the button.

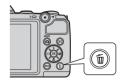





Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images.

Install ViewNX 2 using the included ViewNX 2 CD-ROM.

Your Imaging Toolbox



Installing ViewNX 2

An Internet connection is required.

Compatible Operating Systems

Windows

Windows 8.1, Windows 7, Windows Vista, Windows XP



Mac

OS X 10.9, 10.8, 10.7

Refer to the Nikon website for details on system requirements, including the latest information on operating system compatibility.

- **1** Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.
 - Windows: If instructions for operating the CD-ROM are displayed in the window, follow the instructions to proceed to the installation window.
 - Mac: When the ViewNX 2 window is displayed, double-click the Welcome icon.
- **2** Select a language in the language selection dialog to open the installation window.
 - If the desired language is not available, click **Region Selection** to choose a different region and then choose the desired language (the **Region Selection** button is not available in the European release).
 - Click Next to display the installation window.



3 Start the installer.

- We recommend clicking **Installation Guide** in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click Typical Installation (Recommended) in the installation window.

4 Download the software.

- When the Software Download screen is displayed, click I agree Begin download.
- Follow the on-screen instructions to install the software.
- 5 Exit the installer when the installation completion screen is displayed.
 - Windows: Click Yes.
 - Mac: Click OK.

The following software is installed:

- ViewNX 2 (consisting of the three modules below)
 - Nikon Transfer 2: For transferring images to the computer
 - ViewNX 2: For viewing, editing, and printing transferred images
 - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama image of a landscape, etc. from a series of images that each capture a separate portion of the subject)

6 Remove the ViewNX 2 CD-ROM from the CD-ROM drive.



 
Transferring Images to the Computer

1 Choose how images will be copied to the computer.

Choose one of the following methods:

• **Direct USB connection**: Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the USB cable. Turn the camera on.

To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.

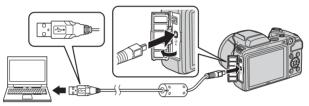

- **SD card slot**: If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader**: Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

• When using Windows 7

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

- 1 Under Import pictures and videos, click Change program. A program selection dialog will be displayed; select Import File using Nikon Transfer 2 and click OK.
- 2 Double-click Import File.

			100000
		• 4	
HARTIN COLUMN HART - 179 E 1975 - weaking	Barrensen		
at device a			٦
view the and folders on your device	3 Charge Rose	your device works with Windows	
	Internet Cooling Internet Pro-	MACA DIC COULD INF 179 Michael Market Information Information Information advance phases, and inform: Phases Information	en Banco coso de la Constancia de la Con

If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

2 Transfer images to the computer.

• Click Start Transfer.



• At default settings, all the images on the memory card will be copied to the computer.



3 Terminate the connection.

 If the camera is connected to the computer, turn the camera off and disconnect the USB cable. If you are using a card reader or card slot, choose the appropriate option in the computer operating system to eject the removable disk corresponding to the memory card, and then remove the card from the card reader or card slot.

Viewing Images

Start ViewNX 2.

- Images are displayed in ViewNX 2 when transfer is complete.
- Consult online help for more information on using ViewNX 2.




Starting ViewNX 2 Manually

- Windows: Double-click the ViewNX 2 shortcut on the desktop.
- Mac: Click the ViewNX 2 icon in the Dock.

Other Functions

Flash Mode, Self-Timer, Macro Mode, and Exposure Compensation

Use the multi selector in shooting mode to apply the following settings. Availability depends on the setting.

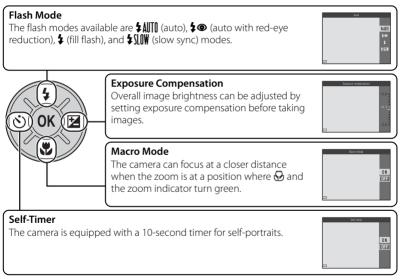

Other Functions

Selecting a Shooting Mode

Press the D button in shooting mode to display the shooting-mode selection screen.

Use the multi selector $\blacktriangle \nabla$ to select the desired shooting mode and press the M button.





- 1. 💕 Easy auto mode
- 2. 💈 Scene mode*
- 3. 🕑 Smart portrait mode
- 4. 🖸 Auto mode
- * The icon displayed varies depending on which scene was selected last.

Auto Mode

Used for general shooting.

Image mode, white balance, continuous shooting, ISO sensitivity, and color options in the shooting menu (\square 29) can be set for shooting. You can also change the flash mode setting (\square 26).





 
Scene Mode

 
Camera settings are automatically optimized according to the scene that you select.



Recording Movies

You can record movies by simply pressing the ● (* movie-record) button. Press the ● (* movie-record) button to start movie recording. Press the ● (* movie-record) button again to end recording.

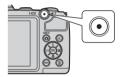

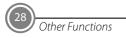

Using Camera Menus

A variety of shooting and playback settings can be adjusted from the camera menus.

Press the **MENU** button to display the menu for the current mode and use the multi selector to select a menu option $(\Box 4)$.

Select one of the menu icons on the left side of the monitor to display the contents of the corresponding menu.

Press the **MENU** button again to exit the menu.





Switching Between Menus



Press the multi selector ◀. The current menu icon is displayed in yellow.



Press $\blacktriangle \nabla$ to select the desired menu icon, and press either the B button or \blacktriangleright .



The menu options become selectable.

Playback Mode

The following options are available in full-frame playback mode.



То	Use	Description
Select images		Press the multi selector $\blacktriangle \lor \blacklozenge \lor$ to display previous or subsequent images. Press and hold $\blacktriangle \lor \blacklozenge \lor$ to scroll through the images quickly.
View thumbnails/ enable calendar display	W (EE)	Displays images as thumbnails. Move the zoom control toward W () in the thumbnail playback mode to switch to the calendar display.
Zoom during playback	T (Q)	Magnifies the image displayed in the monitor. Press the \mathfrak{W} button to return to full-frame playback mode.
Play back movies	©®	Plays back the movie currently displayed.
Delete image	Ó	Allows you to delete images.
Display menus	MENU	Displays the menu for the selected mode.

То	Use	Description
Switch to shooting mode		Press the 🖸 button or shutter-release button to switch to shooting mode.
	Ľ	



For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.

This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

WARNINGS

Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or AC adapter, unplug the AC adapter and remove the batteries immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.

\Lambda Do not disassemble

Touching the internal parts of the camera or AC adapter could result in injury.

Repairs should be performed only by qualified technicians. Should the camera or AC adapter break open as the result of a fall or other accident, take the product to a Nikon-authorized service representative for inspection, after unplugging the product and/or removing the batteries.

▲ Do not use the camera or AC adapter in the presence of flammable gas

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.



🔺 Handle the camera strap with care

Never place the strap around the neck of an infant or child.

\Lambda Keep out of reach of children

Particular care should be taken to prevent infants from putting the batteries or other small parts into their mouths.

Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use

Parts of the devices become hot. Leaving the devices in direct contact with the skin for extended periods may result in lowtemperature burns.

Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight

Failure to observe this precaution could cause damage or fire.

Observe caution when handling batteries

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Before replacing the batteries, turn the product off. If you are using an AC adapter, be sure it is unplugged.
- Use only the batteries approved for use in this product (¹). Do not combine old and new batteries or batteries of different makes or types.
- When charging Nikon EN-MH2 rechargeable Ni-MH batteries, use only the specified charger and charge the batteries four at a time. When replacing the batteries with EN-MH2-B2 batteries (available separately), purchase two sets (total of four batteries).
- The EN-MH2 rechargeable batteries are for use with Nikon digital cameras only, and are compatible with COOLPIX L330.
- Insert batteries in the correct orientation.
- Do not short or disassemble batteries or attempt to remove or break battery insulation or casing.





- Do not expose batteries to flame or to excessive heat.
- Do not immerse in or expose to water.
- Do not transport or store with metal objects such as necklaces or hairpins.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when no charge remains.
- Discontinue use immediately should you notice any change in the batteries, such as discoloration or deformation.
- If liquid from damaged batteries comes in contact with clothing or skin, rinse immediately with plenty of water.

▲ Observe the following precautions when handling the Battery Chargers (available separately)

- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.
- Do not handle the power cable or go near the battery charger during lightning storms. Failure to observe this precaution could result in electric shock.

- Do not damage, modify, forcibly tug or bend the power cable, place it under heavy objects, or expose it to heat or flame. Should the insulation be damaged and the wires become exposed, take it to a Nikon-authorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug or battery charger with wet hands. Failure to observe this precaution could result in electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters. Failure to observe this precaution could damage the product or result in overheating or fire.

\Lambda Use appropriate cables

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

A Handle moving parts with care

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

CD-ROMs

The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

▲ Observe caution when using the flash

Using the flash close to your subject's eyes could cause temporary visual impairment. The flash should be no less than 1 m (3 ft 4 in.) from the subject. Particular care should be observed when photographing infants.

Do not operate the flash with the flash window touching a person or object

Failure to observe this precaution could result in burns or fire.

🔺 Avoid contact with liquid crystal

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

Turn the power off when using inside an airplane or the hospital

Turn the power off while inside the airplane during take off or landing. Do not use wireless network functions while in the air. Follow the instructions of the hospital when using while in a hospital. The electromagnetic waves emitted by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital. If you are using an Eye-Fi card, remove it from the camera before boarding an aircraft or entering a hospital.

For Your Safety

Notices

Notice for Customers in the U.S.A.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.





CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Notice for customers in the State of California

WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

Wash hands after handling.

Nikon Inc.,

1300 Walt Whitman Road Melville, New York 11747-3064 USA Tel: 631-547-4200

Notice for customers in Canada

CAN ICES-3 B / NMB-3 B

Notices

Caring for the Camera

To ensure continued enjoyment of this Nikon product, observe the precautions described below in addition to the warnings in "For Your Safety" (\square 32-35) when using or storing the device.

Do Not Drop

The product may malfunction if subjected to strong shock or vibration.

Handle the Lens and All Moving Parts with Care

Do not apply force to the lens, lens cover, monitor, memory card slot, or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.

Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.

Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

Keep away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.



Do Not Point the Lens at Strong Light Sources for Extended Periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the image sensor, producing a white blur effect in photographs.

Turn the Product off Before Removing or Disconnecting the Power Source

Do not remove the batteries while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.

Notes About the Monitor

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.
- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

About the Manuals

Nikon will not be held liable for any damages resulting from the use of this product.



Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility. Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the **Select an image** option in the **Welcome screen** setting. Care should be taken to avoid injury or damage to property when physically destroying data storage devices.



AVC Patent Portfolio License

This product is licensed under the AVC Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C.

See http://www.mpegla.com.

Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mac and OS X are trademarks or registered trademarks of Apple Inc. in the U.S. and other countries.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.

 SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.



- PictBridge is a trademark.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

FreeType License (FreeType2)

Portions of this software are copyright © 2012 The FreeType Project (http:// www.freetype.org). All rights reserved.

MIT License (HarfBuzz)

Portions of this software are copyright © 2014 The HarfBuzz Project (http:// www.freedesktop.org/wiki/Software/ HarfBuzz). All rights reserved.

500
Notices

<u> </u>
Notices 43

NIKON CORPORATION

© 2014 Nikon Corporation

CT4E02(11) 6MN33911-02