



割り当てられる機能		Fn1	Fn2	Fn3	Fn	ISO		Fn4	AF-ON	DISP	OK	WB	QUAL			AF-ON	ISO			L-Fn	BKT	Fn	L-Fn2	M-SET	Fn		
☑	[美肌効果]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[人物印象調整]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[測光モード]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[フラッシュモード/調光補正]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[リリースモード]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[フォーカスモード/AFエリアモード]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[オートブラケティング]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[多重露出]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[HDR合成]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[露出ディレーモード]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[操作のロック]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[シャッター・絞り値1段選択]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[手動設定済みレンズの選択]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	—	✓	—	—	—	—	—
☑	[フォーカス (M/A)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
☑	[絞り]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
☑	[絞り (最小絞り側)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
☑	[絞り (開放絞り側)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
☑	[露出補正 (+側)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
☑	[露出補正 (-側)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
☑	[ISO感度 (高感度側)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
☑	[ISO感度 (低感度側)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
☑	[設定しない]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	✓
コマンドダイヤルに設定できる機能		Fn1	Fn2	Fn3	Fn	ISO		Fn4	AF-ON	DISP	OK	WB	QUAL			AF-ON	ISO			L-Fn	BKT	Fn	L-Fn2	M-SET	Fn		
☑	[露出設定]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—
☑	[フォーカスモード/AFエリアモード設定]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—
☑	[拡大表示中のサブコマンドダイヤル]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—



## 再生時

カスタムメニュー f3 [カスタムボタンの機能 (再生)] で設定します。

### ■機能を割り当てられるボタン



- [Fn1 ボタン]
- [Fn2 ボタン]
- [Fn3 ボタン]
- [縦位置 Fn ボタン]
- [プロテクト/Fn4 ボタン]
- [DISP ボタン]
- [音声ボタン]



- [OK ボタン]
- [WB ボタン]
- [QUAL ボタン]
- [縦位置マルチセレクター]
- [再生ボタン]
- [メインコマンドダイヤル]
- [サブコマンドダイヤル]



- [動画撮影ボタン]
- [露出補正ボタン]
- [ISO 感度ボタン]
- [BKT ボタン]
- [フラッシュモードボタン]
- [レンズの Fn2 ボタン]
- [レンズの Fn ボタン]

### ■各ボタンに割り当てられる機能

割り当てられる機能		Fn1	Fn2	Fn3	Fn	Fn4	DISP	Audio	OK	WB	QUAL	Multi-selector	Play	Main dial	Sub dial	Movie shoot	White balance	ISO	BKT	Flash	L-Fn2	L-Fn
	[プロテクト]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[削除]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[拡大画面との切り換え]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[フィルター再生]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[フィルター再生 (条件設定)]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[グループ内の画像送り]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[音声メモ]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[送信指定 (PC)]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[送信指定 (FTP)]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[1コマとサムネイルの切り換え]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[ヒストグラム表示]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[スロット/フォルダー指定]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[情報表示の切り換え]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[撮影に戻る]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[レーティング]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	—	—
	[RAW 現像 (表示画像)]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[RAW 現像 (複数画像)]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[トリミング]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[リサイズ (表示画像)]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[リサイズ (複数画像)]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
割り当てられる機能		Fn1	Fn2	Fn3	Fn	Fn4	DISP	Audio	OK	WB	QUAL	Multi-selector	Play	Main dial	Sub dial	Movie shoot	White balance	ISO	BKT	Flash	L-Fn2	L-Fn
	[D-ライティング]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[傾き補正]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[ゆがみ補正]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[アオリ効果]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[モノトーン]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[加算合成]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[比較明合成]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[比較暗合成]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[比較動合成]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
	[上下左右操作入れ換えする]	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—	—	—	—
	[上下左右操作入れ換えしない]	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—	—	—	—
	[設定しない]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓	✓	✓
コマンドダイヤルに設定できる機能		Fn1	Fn2	Fn3	Fn	Fn4	DISP	Audio	OK	WB	QUAL	Multi-selector	Play	Main dial	Sub dial	Movie shoot	White balance	ISO	BKT	Flash	L-Fn2	L-Fn
	[画像送り]	—	—	—	—	—	—	—	—	—	—	—	—	✓	✓	—	—	—	—	—	—	—
	[動画再生]	—	—	—	—	—	—	—	—	—	—	—	—	✓	✓	—	—	—	—	—	—	—
	[画像送り時の拡大位置]	—	—	—	—	—	—	—	—	—	—	—	—	✓	✓	—	—	—	—	—	—	—
	[拡大再生中の顔送り]	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—