Nikon

DIGITAL CAMERA

 \mathbb{Z} 50 \mathbb{I}

Reference Guide

- · Read this document thoroughly before using the camera.
- To ensure proper use of the camera, be sure to read "For your safety" (page 30).
- After reading this document, keep it readily accessible for future reference.

Table of contents

Before you	u begin	22
When your fi	rst photo can't wait	22
Content by N	likon to enjoy photos	25
	About content provided by Nikon	25
	Recommended service and app	26
Package conf	tents	28
About this do	ocument	29
For your safe	ty	30
Notices		39
Parts of th	e camera	43
Camera body	/	43
The monitor		47
	Photo mode	47
	Video mode	50
	Angling the monitor	51
	Shooting in self-portrait mode	53
The viewfind	er	56
	Photo mode	56
	Video mode	59
	The monitor mode button and the eye sensor	60
Touch contro	ls	64
	Focusing and releasing the shutter	64
	Adjusting settings	64
	Playback	65
	Viewing videos	67
	The $m{i}$ menu	67
	Text entry	68
	Navigating the menus	68
The Fn1 and	Fn2 buttons	70
🔁 (Picture C	ontrol) button	71

Using the	menus	72
The MENU but	tton	
	Using the menus	73
The $m{i}$ butto	n (i menu)	79
	The i menu	79
	The still photography i menu	81
	The video i menu	82
	The playback i menu	83
	Customizing the i menu	83
First step	s	85
Attaching th	ne strap	
Inserting the	e battery and a memory card	86
	Battery level	87
	Number of exposures remaining	88
Charging th	e battery	90
	lens	
	Detaching lenses	95
Opening the	e monitor	96
Camera setu	ıp	97
Basic pho	tography and playback	101
Taking phot	ographs (🗖 auto)	
Recording v	ideos (🏜 auto)	108
Playback		113
	Viewing videos	113
	Deleting unwanted pictures	115
Shooting	settings	117
Image recor	ding options (image area, quality, and size).	117
	Changing image area	117
	Changing image quality	118
	Choosing an image size	120

Focus		122
	Focus mode	122
	AF-area mode	124
	Subject detection	129
	Focus-point selection	134
	The touch shutter	135
	Focus lock	137
	Manual focus	139
Exposure		143
	Choosing a shooting mode	143
	(auto)	144
	P (programmed auto)	144
	S (shutter-priority auto)	145
	A (aperture-priority auto)	146
	M (manual)	147
	U1, U2, and U3 (user setting mode)	150
	SCN (scene modes)	152
	Long time-exposures (mode M only)	160
	Autoexposure (AE) lock	162
	Exposure compensation	164
Release mode		166
	Choosing a release mode	166
	High-speed frame capture + (C15/C30)	170
	Using the self-timer (ல்)	171
ISO sensitivity		174
	About ISO sensitivity	174
	Auto ISO sensitivity control	175
White balance		178
	About white balance	178
	Fine-tuning white balance	183
	Choosing a color temperature	189
	Preset manual	193
Dictura Contro	le	200

Types of Picture Controls	200
About Picture Controls	202
Modifying Picture Controls	207
Custom Picture Controls	215
Cloud Picture Controls	220
Video recording	222
Video file types	
Tone mode	222
Video frame size and rate options	224
Bit rate	226
Video recording: Shooting mode	228
Points to note when filming videos	229
Recording HLG video	230
Recording N-Log video	233
View assist	234
Hi-Res Zoom	235
Using Hi-Res Zoom	235
Product review mode	237
Video self-timer	
Live streaming (USB streaming (UVC/UAC))	
Live streaming	239
Viewing pictures	243
Viewing pictures	243
Full-frame playback	243
Thumbnail playback	244
Photo information	246
Basic information	247
Exposure data	248
Highlight display	248
RGB histogram	249
Shooting data	252

	Overview	259
	File info	261
The $m{i}$ button	(playback mode)	262
	Photos	262
	Videos	265
	Videos (playback paused)	267
Playback zoon	n	269
	Using playback zoom	269
Protecting pic	tures from deletion	271
Rating picture	25	273
	ures for upload	
	ack	
. ,	[Filtered playback criteria]	277
Viewing slide	shows	279
9	During the show	280
Deleting pictu	ires	281
3.	Using the delete button	281
	Deleting multiple pictures	281
Retouchine	g photographs	286
	hotographs	286
• .	ng	
TOWN Processii	Processing photos shot using the [SDR] tone r	
	Processing photos shot using the [HLG] tone r	
Trim		
1163126	Resizing the current picture	
	Resizing multiple pictures	
D-Lighting	Resizing multiple pictures	
5 5		
9	***al	

Perspective c	ontrol	312
Monochrome	·	313
Overlay (add)		314
[Lighten] and	[Darken]	317
Motion blend	l	320
Editing vio	leos	323
Editing video	S	
	eos	
Saving the cu	rrent frame as a JPEG still	328
Creating stills	from a selected length of footage	329
Voice men	nos	331
Recording vo	ice memos	
Playing voice	memos	335
	Deleting voice memos	335
Connectin	g to HDMI TVs and recorders	337
Connecting to	o HDMI devices	337
TVs		338
Recorders		339
	Adjusting settings	339
	YCbCr and bit depth	342
	HDMI output and tone mode	343
	External recording control	343
	Including file names set on the camera in the	file
	names of video saved on external recorders.	344
Connectin	g to smart devices	346
The SnapBrid	ge app	
	What SnapBridge can do for you	346
Wireless conr	nections	348
	Connecting via Bluetooth (pairing)	348
	Connecting via Wi-Fi	351

Connectin	g to computers or FTP servers	362
Making the c	onnection	362
	Computers: Connecting via USB	362
	Computers: Connecting via wireless LAN	362
	FTP servers: Connecting via wireless LAN	363
Computers: C	Connecting via USB	364
	Installing NX Studio	364
	Copying pictures to a computer using NX Stud	dio364
Computers: C	Connecting via wireless LAN	
	The Wireless Transmitter Utility	369
	Connecting to computers via wireless LAN	370
	Ending the connection to the computer	
FTP servers: 0	Connecting via wireless LAN	388
	Connecting to FTP servers via wireless LAN	388
	Ending the connection to the FTP server	407
,	n do when the camera is connected to a compute	
server		408
	Uploading pictures	
	Camera control	
Troubleshoot	ting wireless LAN connection	
	Problems and solutions	
	Error codes	
Connectin	g to Nikon Imaging Cloud	420
About Nikon	Imaging Cloud	420
Connecting t	he camera to Nikon Imaging Cloud	421
Error codes		430
Connectin	g to other cameras	434
What inter-ca	amera connections can do for you	
	Camera-based remote photography (synchror	nized
	release)	434
	Clock synchronization (synchronize date and t	ime) 435

Synchronized	release	436
	Configuring and using synchronized release	436
Synchronizing	camera clocks	451
Nikon clou	d service, software, and	
application	ns	452
Cloud service.		452
	Nikon Imaging Cloud	452
Computer soft	ware	454
	NX Tether	454
	NX Studio	454
	Wireless Transmitter Utility	455
Smartphone (t	tablet) apps	456
	SnapBridge	456
	NX MobileAir	456
Flash photo	ography (the built-in flash)	457
Flash photogra	aphy with the built-in flash	457
Flash compens	sation	464
	Adjusting flash compensation	464
FV lock		465
Flash photo	ography (optional flash units)	468
Flash photogra	aphy with optional flash units	468
	Camera-mounted flash units	468
	Remote flash photography	468
Using an on-ca	amera flash	
Flash control r	mode	471
Remote fla	sh photography	472
What is remote	e flash photography?	472
Controlling rea	mote flash units	473
	Using optical AWL with the SB-500	473

Menu guide

-	_	_
/	7	7
-	/	•

Γŀ	he photo shooting menu	477
	Reset photo shooting menu	478
	Storage folder	479
	Renaming folders	479
	Select folder by number	479
	Select folder from list	481
	File naming	482
	Choose image area	483
	Tone mode	484
	Image quality	486
	Image size	487
	RAW recording	487
	ISO sensitivity settings	487
	White balance	489
	Set Picture Control	489
	Add Cloud Picture Control files	489
	Manage Picture Control	490
	Set Picture Control (HLG)	490
	Color space	490
	Active D-Lighting	491
	Long exposure NR	492
	High ISO NR	493
	Vignette control	493
	Diffraction compensation	494
	Auto distortion control	494
	Skin softening	495
	Portrait impression balance	496
	Creating portrait impression balance modes	496
	Applying saved modes	
	Photo flicker reduction	498
	High-frequency flicker reduction	500

	Metering	501
	Flash control	503
	Flash control mode (built-in)	503
	Wireless flash options	504
	Group flash options	505
	Flash mode	505
	Flash compensation	505
	Release mode	506
	Focus mode	506
	AF-area mode	506
	AF/MF subject detection options	506
	MF subject detection area	507
	Vibration reduction	507
	Auto bracketing	508
	Exposure and flash bracketing	509
	White balance bracketing	515
	ADL bracketing	519
	Multiple exposure	523
	Creating a multiple exposure	525
	HDR overlay	531
	Taking HDR photographs	532
	Interval timer shooting	536
	Interval-timer photography	540
	Time-lapse video	551
	Recording time-lapse videos	552
	Focus shift shooting	561
	Focus shift photography	563
Th	he video recording menu	571
	Reset video recording menu	572
	Storage folder	572
	File naming	573
	Video file type	573
	Frame size/frame rate	573

ISO sensitivity settings	573
White balance	574
Set Picture Control	575
Manage Picture Control	575
HLG quality	575
Active D-Lighting	576
High ISO NR	577
Vignette control	577
Diffraction compensation	577
Auto distortion control	577
Skin softening	578
Portrait impression balance	578
Video flicker reduction	578
High-frequency flicker reduction	579
Metering	580
Focus mode	580
AF-area mode	580
AF/MF subject detection options	580
Subject detection	580
AF when subject not detected	581
Product review mode	581
MF subject detection area	581
Video self-timer	581
Vibration reduction	582
Electronic VR	582
Microphone sensitivity	582
Attenuator	584
Frequency response	584
Wind noise reduction	584
Mic jack plug-in power	585
Headphone volume	585
Timecode	585
External rec. cntrl (HDMI)	587

Hi-Res Zoom	587
The Custom Settings menu	588
Reset custom settings	592
a: Focus	592
a1: AF-C priority selection	592
a2: AF-S priority selection	592
a3: Focus tracking with lock-on	593
Blocked shot AF response	593
a4: Focus points used	594
a5: Store points by orientation	594
a6: AF activation	596
a7: Focus point persistence	597
a8: Limit AF-area mode selection	598
a9: Focus point wrap-around	598
a10: Focus point display	599
Manual focus mode	599
Dynamic-area AF assist	599
AF-C in-focus display	599
3D-tracking focus point color	600
Focus point border width	
a11: Built-in AF-assist illuminator	600
a12: Focus peaking	601
Focus peaking display	601
Focus peaking sensitivity	
Focus peaking highlight color	
a13: Focus point selection speed	
a14: Manual focus ring in AF mode	602
b: Metering/exposure	602
b1: ISO sensitivity step value	
b2: EV steps for exposure cntrl	
b3: Easy exposure compensation	
b4: Matrix metering face detection	604
h5: Contor-weighted area	60/

	b6: Fine-tune optimal exposure	.604
c: T	ïmers/AE lock	605
	c1: Shutter-release button AE-L	605
	c2: Self-timer	606
	c3: Power off delay	.606
d: S	shooting/display	.607
	d1: CL mode shooting speed	.607
	d2: Maximum shots per burst	.607
	d3: Pre-Release Capture options	.608
	d4: Sync. release mode options	610
	d5: Exposure delay mode	.610
	d6: Shutter type	611
	d7: Extended shutter speeds (M)	.611
	d8: Limit selectable image area	612
	d9: File number sequence	.612
	d10: View mode (photo Lv)	.614
	d11: Starlight view (photo Lv)	.616
	d12: Warm display colors	.617
	d13: Display on during burst	.617
	d14: Release timing indicator	617
	d15: Image frame	618
	d16: Grid type	618
	d17: Virtual horizon type	.619
	Roll	620
	Pitch	.621
	d18: Half-press to cancel zoom (MF)	621
	d19: Custom monitor shooting display	.622
	d20: Custom viewfinder shooting display	.623
e: E	Bracketing/flash	624
	e1: Flash sync speed	.624
	e2: Flash shutter speed	.626
	e3: Exposure comp. for flash	.626
	e4: Auto \$ ISO sensitivity control	627

e5: Auto bracketing (mode M)	627
e6: Bracketing order	628
e7: Flash burst priority	629
f: Controls	630
f1: Customize 👪 menu	630
Split-screen display zoom	631
f2: Custom controls (shooting)	632
Command dials	647
Saving and recalling focus positions	648
f3: Custom controls (playback)	654
Command dials	658
f4: Touch Fn	661
Enable/disable touch FnFn	66
Assign touch Fn	661
Touch Fn area	
f5: Control lock	662
f6: Reverse dial rotation	663
f7: Release button to use dial	663
f8: Reverse indicators	664
f9: Reverse ring for focus	664
f10: Focus ring rotation range	665
f11: Control ring response	665
f12: Switch focus/control ring roles	666
f13: Power zoom (PZ) button options	666
f14: Full-frame playback flicks	666
Flick up/Flick down	666
Flick advance direction	667
g: Video	
g1: Customize 🚼 menu	
Multi-selector power aperture	669
Multi selector exposure comp	669
View video info	670
a2. Custom controls	670

Command dials	68´
g3: Control lock	68°
g4: Limit AF-area mode selec	tion682
g5: AF speed	683
g6: AF tracking sensitivity	684
g7: Hi-Res Zoom speed	684
g8: Power zoom (PZ) button	options685
g9: Fine ISO control (mode M	1)685
g10: Extended shutter speed	s (S/M)686
g11: View assist	686
g12: Zebra pattern	687
Pattern tone range	687
Pattern	687
Highlight threshold.	687
Mid-tone range	688
g13: Limit zebra pattern tone	e range688
g14: Grid type	689
g15: Brightness information	display689
g16: Half-press to cancel zoo	m (MF)690
g17: Custom monitor shootir	ng display690
g18: Custom viewfinder shoo	oting display69°
g19: Red REC frame indicator	r692
The playback menu	693
Delete	693
Playback folder	694
Playback display options	694
Filtered playback criteria	696
Series playback	696
Auto series playback	c696
Auto series playback	coptions696
List series as single t	humbnails697
Picture review	697
After delete	609

After burst, show		699
Record camera orie	ntation	699
Auto-rotate picture	s	700
The setup menu		701
Format memory ca	rd	702
Save user settings		703
Reset user settings		703
Language		703
Time zone and date	2	703
Monitor brightness		704
Monitor color balar	nce	704
Viewfinder brightne	ess	706
Viewfinder color ba	lance	707
Viewfinder display	size	707
Limit monitor mod	e selection	707
Auto rotate info dis	play	707
REC lamp brightnes	SS	708
AF fine-tuning opti	ons	708
Creatin	ng and saving fine-tuning values	710
Choos	ing a default fine-tuning value	710
Non-CPU lens data		711
Distance units		711
Save focus position		712
Save zoom position	(PZ lenses)	712
Image Dust Off ref	ohoto	712
Acquir	ing Image Dust Off reference data	713
Pixel mapping		715
Image comment		715
Input	comment	716
Attach	comment	716
Copyright informat	ion	716
Artist/	Copyright	716
Attach	copyright information	717

	IPTC	.718
	Creating, renaming, editing, and copying presets	.718
	Deleting presets	.718
	Embedding presets	719
	Copying presets to a memory card	.719
	Copying presets to the camera	.719
	0/ a connector function (headphone/remote cord connector	
	function)	.722
	Voice memo options	.722
	Voice memo control	
	Audio output (playback)	.723
	Camera sounds	.724
	Beep on/off	.724
	Volume	.724
	Pitch	.724
	Silent mode	.725
	Touch controls	.726
	Self-portrait mode	.726
	HDMI	.726
	USB connection priority	.726
	Conformity marking	.727
	USB power delivery	.727
	Energy saving (photo mode)	.729
	Slot empty release lock	.730
	Save/load menu settings	. 730
	Settings that can be saved and loaded	.731
	Save menu settings	.736
	Load menu settings	.736
	Reset all settings	.736
	Firmware version	.736
	Auto update	. 738
Т	he network menu	.740
	Airplane mode	741

Nikon Imag	jing Cloud	741
	Connect to Nikon Imaging Cloud	742
	Wi-Fi settings	742
	Connection options	742
	Photo upload	743
	Photo upload options	743
	View errors	744
	About Nikon Imaging Cloud	744
	Unlink Nikon Imaging Cloud	744
Connect to	smart device	745
	Pairing (Bluetooth)	746
	Select pictures for upload	746
	Wi-Fi connection (AP mode)	746
	Wi-Fi connection (STA mode)	747
	Upload while off	748
	Location data (smart device)	748
Wireless rer	mote (ML-L7) options	749
	Wireless remote connection (ML-L7)	749
	Save wireless remote controller	749
	Delete wireless remote controller	749
	Assign Fn1 button/Assign Fn2 button	749
Bluetooth r	emote cntrl options	750
	Bluetooth remote cntrl connection	750
	Save wireless remote controller	751
	Delete wireless remote controller	752
Connect to	computer	752
	Network settings	752
	Connection type	754
	Options	754
Connect to	FTP server	756
	Network settings	756
	Options	758
Connect to	other cameras	761

	Synchronized release	761
	Network settings	761
	Master/remote	763
	Group settings	763
	Group name	764
	Synchronize date and time	764
	Overwrite copyright info	764
ATOMOS A	AirGlu BT options	764
USB		767
Router free	quency band	768
MAC addre	ess	768
My Menu/Re	cent settings	769
	My Menu: Creating a custom menu	769
	Recent settings: Accessing recently-used set	
Γroublesh	ooting	776
Before contac	cting customer support	
Problems and	d solutions	778
	Battery/display	778
	Shooting	779
	Playback	784
	Bluetooth and Wi-Fi (wireless networks)	786
	Miscellaneous	788
Alerts and er	ror messages	790
	Alerts	790
	Error messages	792
Technical :	notes	795
	-	795
Compatible l	notes	795
Compatible l	notes enses and accessories	795 795
Compatible l	notes enses and accessoriesays	795 795 796

The Nikon Creative Lighting System (CLS)	811
Features available with CLS-compatible flash units	811
Notes and tips for optional flash units	828
Other compatible accessories	832
MC-DC3 Remote Cord	835
ML-L7 Remote Control	837
Caring for the camera	844
Long-term storage	844
Cleaning	844
Manual cleaning	845
Caring for the camera and battery: Cautions	848
Cautions: Using the camera	848
Cautions: Using batteries	851
Specifications	854
Nikon Z50II digital camera	854
Approved memory cards	868
Memory card capacity	869
Memory card capacity (videos)	871
Battery endurance	873
Trademarks and licenses	875
Compliance information	880
Index	891

Before you begin

When your first photo can't wait

II Getting ready

1 Insert the battery and memory card (🗆 86).





For information on charging the battery, see "Charging the battery" (\square 90).

2 Attach a lens (□94).

 


- · Align the indicator on the camera body with the indicator on the lens (\mathfrak{T}) and rotate the lens in the direction shown (\mathfrak{Z}) .
- A strap can be attached to the camera. For more information, see "Attaching the strap" (\$\square\$85\$).

3 Turn the camera on and then choose a language and set the clock (CP97).



- Take (□101) and view (□113) pictures
- 1 To focus, press the shutter-release button halfway (i.e., lightly press the shutter-release button, stopping when it is pressed halfway).



Without lifting your finger from the shutter-release button, press the button the rest of the way down to take the picture.



View the picture.



Content by Nikon to enjoy photos

About content provided by Nikon

Nikon has prepared a cloud service, computer software, smart device apps, and other content for you to further enjoy photos. By using this content, you can share camera settings related to finishing of photos you want to take, adjust and process photos you have taken, transfer photos to computers and smart devices automatically, and more.

· Cloud service (11452)



· Computer software (□454)



· Smartphone (tablet) apps (4456)



Recommended service and app

For the latest information, visit the Nikon website.

Nikon Imaging Cloud

Nikon Imaging Cloud is a cloud service that provides following services.



- Image transfer: Upload images shot with the camera to Nikon Imaging Cloud and send them to external online storage.
- Imaging recipe: Save image shooting data as a recipe. Create your own recipes or select from "public recipes."
- Providing Picture Controls: Download Picture Controls from Nikon Imaging Cloud and import them to the camera.
- Firmware update: Download firmware directly to the camera from Nikon Imaging Cloud.

To access Nikon Imaging Cloud from a computer or smart device, either scan the QR code or enter the following URL into a web browser. https://imagingcloud.nikon.com



 You can also check the access QR code and URL by [Nikon Imaging Cloud] > [About Nikon Imaging Cloud] in the camera's network menu.

SnapBridge

SnapBridge wirelessly connects your smart device (smartphone or tablet) to your camera so that you can download pictures or control the camera remotely.



 SnapBridge apps can be downloaded from the Apple App Store* or on Google Play™.





For other software and applications, see the following pages:

- * Computer software (□ 454)
- * Smartphone (tablet) apps (□456)

Package contents

Be sure all items listed here were included with your camera.

Camera



- EN-EL25a rechargeable Li-ion battery
- ☐ AN-DC29 strap (□85)
- ☐ Warranty
- User's Manual
- ☐ USB cable (featuring Type C connectors at both ends; ☐ 364)

- ☐ BF-N1 body cap
- · Memory cards are sold separately.

Lens kit lenses

For information on lenses supplied as part of a lens kit, see the lens documentation available for download from the Nikon Download Center.

The Nikon Download Center

Visit the Nikon download center to download the latest firmware for cameras and lenses, NX Studio and other Nikon software, and documentation for Nikon products including cameras, NIKKOR lenses, and flash units. https://downloadcenter.nikonimglib.com/

About this document

II Symbols

This document employs the following symbols and conventions. Use them to help locate the information you need.

V	This icon marks notes, information that should be read before using this product.
Tip	This icon marks tips, additional information you may find helpful when using this product.
	This icon marks references to other sections in this document.

Conventions

- This camera uses SD, SDHC, and SDXC memory cards, referred to throughout this document as "memory cards". SD, SDHC, and SDXC may also on occasion be referred to as "SD memory cards".
- Throughout this document, battery chargers are referred to as "battery chargers" or "chargers".
- Throughout this document, the display in camera monitor and viewfinder during shooting is referred to as the "shooting display". In most cases, the illustrations show the monitor.
- Throughout this document, smartphones and tablets are referred to as "smart devices".
- Throughout this document, "DX format" is used in reference to an angle of view equivalent to that of an APS-C camera.
- Throughout this document, the term "default settings" is used to refer to the settings in effect at shipment. The explanations in this document assume that default settings are used.

For your safety

To prevent damage to property or injury to yourself or to others, read "For your safety" in its entirety before using this product.

After reading these safety instructions, keep them readily accessible for future reference.

- ▲ **DANGER**: Failure to observe the precautions marked with this icon carries a high risk of death or severe injury.
- ▲ **WARNING**: Failure to observe the precautions marked with this icon could result in death or severe injury.
- ▲ **CAUTION**: Failure to observe the precautions marked with this icon could result in injury or property damage.

MARNING

Do not use while walking or operating a vehicle.

Failure to observe this precaution could result in accidents or other injury.

Do not disassemble or modify this product. Do not touch internal parts that become exposed as the result of a fall or other accident.

Failure to observe these precautions could result in electric shock or other injury.

Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately remove the battery or disconnect the power source.

Continued operation could result in fire, burns or other injury.

Keep dry. Do not handle with wet hands. Do not handle the plug with wet hands.

Failure to observe these precautions could result in fire or electric shock.

Do not let your skin remain in prolonged contact with this product while it is on or plugged in.

Failure to observe this precaution could result in low-temperature burns.

Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.

Failure to observe this precaution could result in explosion or fire.

Do not directly view the sun or other bright light source through the lens.

Failure to observe this precaution could result in visual impairment.

Do not aim the flash or AF-assist illuminator at the operator of a motor vehicle.

Failure to observe this precaution could result in accidents.

Keep this product out of reach of children.

Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard.

Should a child swallow any part of this product, seek immediate medical attention.

Do not entangle, wrap or twist the straps around your neck.

Failure to observe this precaution could result in accidents.

Do not use batteries, chargers, AC adapters, or USB cables not specifically designated for use with this product. When using batteries, chargers, AC adapters, and USB cables designated for use with this product, do not:

- Damage, modify, forcibly tug or bend the cords or cables, place them under heavy objects, or expose them to heat or flame.
- · Use travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters.

Failure to observe these precautions could result in fire or electric shock.

Do not handle the plug when charging the product or using the AC adapter during thunderstorms.

Failure to observe this precaution could result in electric shock.

Dust on or near the metal parts of the plug should be removed with a dry cloth.

Continued use could result in fire

Do not handle with bare hands in locations exposed to extremely high or low temperatures.

Failure to observe this precaution could result in burns or frostbite.



CAUTION

Do not leave the lens pointed at the sun or other strong light sources.

Light focused by the lens could cause fire or damage to product's internal parts. When shooting backlit subjects, keep the sun well out of the frame. Sunlight focused into the camera when the sun is close to the frame could cause fire.

Turn this product off when its use is prohibited. Disable wireless features when the use of wireless equipment is prohibited.

The radio-frequency emissions produced by this product could interfere with equipment onboard aircraft or in hospitals or other medical facilities.

Remove the battery and disconnect the AC adapter if this product will not be used for an extended period.

Failure to observe this precaution could result in fire or product malfunction

Do not fire the flash in contact with or in close proximity to the skin or obiects.

Failure to observe this precaution could result in burns or fire.

Do not leave the product where it will be exposed to extremely high temperatures for an extended period, such as in an enclosed automobile or in direct sunlight.

Failure to observe this precaution could result in fire or product malfunction.

Do not look directly at the AF-assist illuminator.

Failure to observe this precaution could have adverse effects on vision.

Do not look at the REC lamp from short distances or for long periods.

Failure to observe this precaution could have adverse effects on vision.

Do not transport cameras or lenses with tripods or similar accessories attached.

Failure to observe this precaution could result in injury or product malfunction

Keep the product at least 5 cm (2.0 in.) from pacemakers and other medical devices.

Medical devices in close proximity could be affected by the magnet or magnets in the product.



DANGER (Batteries)

Do not mishandle hatteries.

Failure to observe the following precautions could result in the batteries leaking, overheating, rupturing, or catching fire:

- · Use only rechargeable batteries approved for use in this product.
- · Do not expose batteries to flame or excessive heat.
- · Do not disassemble
- · Do not short-circuit the terminals by touching them to necklaces, hairpins, or other metal objects.
- Do not expose batteries or the products in which they are inserted to powerful physical shocks.
- Do not step on batteries, pierce them with nails, or strike them with hammers

Charge only as indicated.

Failure to observe this precaution could result in the batteries leaking, overheating, rupturing, or catching fire.

If battery liquid comes into contact with the eyes, rinse with plenty of clean water and seek immediate medical attention.

Delaying action could result in eye injuries.

Follow the instructions of airline personnel.

Batteries left unattended at high altitudes in an unpressurized environment may leak, overheat, rupture, or catch fire.



★ WARNING (Batteries)

Keep batteries out of reach of children.

Should a child swallow a battery, seek immediate medical attention.

Keep batteries out of reach of household pets and other animals.

The batteries could leak, overheat, rupture, or catch fire if bitten, chewed, or otherwise damaged by animals.

Do not immerse batteries in water or expose to rain.

Failure to observe this precaution could result in fire or product malfunction. Immediately dry the product with a towel or similar object should it become wet

Discontinue use immediately should you notice any changes in the batteries, such as discoloration or deformation. Cease charging EN-EL25a rechargeable batteries if they do not charge in the specified period of time.

Failure to observe these precautions could result in the batteries leaking, overheating, rupturing, or catching fire.

When batteries are no longer needed, insulate the terminals with tape.

Overheating, rupture, or fire may result should metal objects come into contact with the terminals.

If battery liquid comes into contact with a person's skin or clothing, immediately rinse the affected area with plenty of clean water.

Failure to observe this precaution could result in skin irritation.

WARNING for customers in the U.S.A.



This product contains a non-replaceable button cell or coin battery inside. Recycle or dispose of this product in accordance with local regulations. Never attempt to disassemble the product to remove the battery.

A WARNING

- INGESTION HAZARD: This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.



- KEEP new and used batteries OUT
 OF REACH of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: Manganese lithium rechargeable coin battery
- Nominal voltage: 3.0 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60 °C (140 °F) or incinerate.

Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Notices

- No part of the documentation included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the appearance and specifications
 of the hardware and software described in this documentation at any
 time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort has been made to ensure that the information in this documentation is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

• Notice concerning prohibition of copying or reproduction

Note that simply being in possession of material that has been digitally copied or reproduced by means of a scanner, digital camera, or other device may be punishable by law.

· Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds, or local government bonds, even if such copies or reproductions are stamped "Sample".

The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited.

Unless the prior permission of the government has been obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

· Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates,

etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards, and tickets, such as passes and meal coupons.

· Comply with copyright notices

Under copyright law, photographs or recordings of copyrighted works made with the camera cannot be used without the permission of the copyright holder. Exceptions apply to personal use, but note that even personal use may be restricted in the case of photographs or recordings of exhibits or live performances.

Nikon brand accessories

This product is designed to be used with Nikon brand accessories. Nikon is not responsible for any damage caused by accidents such as malfunctions or ignition that are clearly attributable to the use of non-Nikon accessories. In these cases, repair of Nikon products is not covered under your Nikon warranty. Please understand this in advance.

Batteries

EN-EL25a rechargeable Li-ion batteries are dedicated for use only with Nikon products. Nikon is not responsible for any malfunctions or accidents resulting from use with chargers or other products that are not compatible with the EN-EL25a.

- Beware of counterfeit batteries. Such batteries do not allow the camera to perform to its full potential and may cause the batteries to overheat, ignite, rupture or leak.
- An EN-EL25a rechargeable Li-ion battery bears a Nikon holographic seal indicating that it is a genuine Nikon product.

kon Nikon Nik onjin uonin uo.

Memory cards

- Memory cards may be hot after use. Observe due caution when removing memory cards from the camera.
- Do not perform the following operations during formatting or while data are being recorded, deleted, or copied to a computer or other device. Failure to observe these precautions could result in loss of data or in damage to the camera or card.
 - Do not remove or insert memory cards.
 - Do not turn the camera off.
 - Do not remove the battery.
 - Do not disconnect AC adapters.
- $\boldsymbol{\cdot}$ Do not touch the card terminals with your fingers or metal objects.
- Do not use excessive force when handling memory cards. Failure to observe this precaution could damage the card.
- Do not bend or drop memory cards or subject them to strong physical shocks.
- · Do not expose memory cards to water, heat, or direct sunlight.
- $\boldsymbol{\cdot}$ Do not format memory cards in a computer.

Before taking important pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

Life-long learning


As part of Nikon's "Life-long learning" commitment to ongoing product support and education, continually-updated information is available on-line at the following sites:

- · For users in the U.S.A.: https://www.nikonusa.com/
- For users in Canada: https://www.nikon.ca/
- · For users in Mexico: https://www.nikon.com.mx/
- · For users in Latin America: https://www.nikonamericalatina.com/
- · For users in Europe: https://www.nikoneurope.com
- For users in Asia, Oceania, the Middle East, and Africa: https://www.nikon-asia.com/

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently-asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. See the following URL for contact information: https://imaging.nikon.com/


Parts of the camera

Camera body

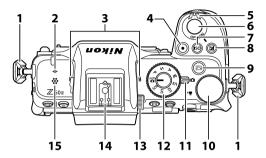

- 1 Eyelet for camera strap (□85)
- 2 Focal plane mark (→; □142)
- 3 Stereo microphone
- 4 Video-record button (□108)
- 5 Power switch
- 6 Shutter-release button (□101)
- 7 ISO sensitivity button (**ISO**;
 □174)
- 8 Exposure compensation button (☑: □164)
- 9 Picture Control button (፫♣; ☐71, ☐202)

- 10 Main command dial
- 11 Photo/video selector (□101, □108)
- 12 Mode dial (Q143)
- Diopter adjustment control (□62)
- 14 Accessory shoe (for optional flash unit; \$\sup469\$, \$\sup811\$)
- 15 Speaker

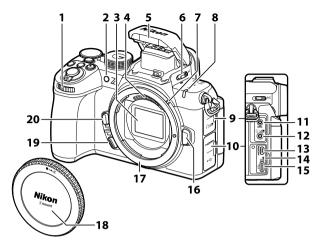


- 1 Sub-command dial
- AF-assist illuminator (□105, □600)

 Red-eye reduction lamp

(□459)

- Self-timer lamp (🕮 171, 🕮 238)
- 3 Image sensor (□845)
- 4 CPU contacts
- 5 Built-in flash (457)
- 6 Flash pop-up control (□457)
- 7 Lens mounting mark (\$\square\$94\$)
- 8 REC lamp (\$\mu\$110, \$\mu\$708)
- 9 Cover for microphone/ headphone/remote cord connectors
- 10 Cover for HDMI and USB connectors

- External microphone input connector (\$\square\$834\$)
- 12 Headphone/remote cord connector (□722, □585)
 - 3 HDMI connector (□337)
- 14 Charge lamp (\$\Pi\$90)
- 15 USB connector (\$\Pi\$364, \$\Pi\$727)
- 16 Lens release button (□95)
- 17 Lens mount (\$\Pi\$94, \$\Pi\$142)
- 18 Body cap (□194)
- 19 **Fn2** button (□70)
- 20 **Fn1** button (□70)

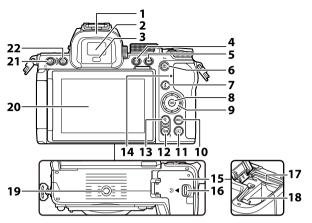

- 1 Rubber eyecup
- 2 Viewfinder (III)56)
- 3 Eye sensor (□60)
- 4 Monitor mode button (I□I; □60, □707)
- 5 DISP button (**DISP**; □ 49)
- 7 "i" button (**i**; □79, □262)
- 8 OK button (®; □73)
- 9 Multi selector (\$\pi\$73)
- 10 MENU button (MENU; □72)
- 11 Playback button (**□**; □113, □243)
- Playback zoom out/thumbnails button (२ऽ; □244, □269) Help button (?; □77)

 
- Playback zoom in button (♥; □139, □244, □269)
- Memory card access lamp (□106, □110)
- 15 Battery-chamber/memory card slot cover (□86)
- 16 Battery-chamber/memory card slot cover latch
- 17 Memory card slot (□86)
- 18 Battery latch (□86)
- 19 Tripod socket
- 20 Monitor (□64, □135)
- 21 Release mode button (□; □166)
 - Self-timer button (心; 皿171)
- 22 Delete button (📺; 🕮 115, 🕮 281)

Do not touch the image sensor

Under no circumstances should you exert pressure on the image sensor, poke it with cleaning tools, or subject it to powerful air currents from a blower. These actions could scratch or otherwise damage the sensor. For information on cleaning the image sensor, see "Manual cleaning" (□845).

Tip: Product serial number

The serial number for this product can be found by opening the monitor.




The monitor

At default settings, the following indicators appear in the monitor. For a full list of the indicators that may be displayed, see "The monitor" (\$\sup\$797) in the section on "Camera displays" in the "Technical notes" chapter.

 
Photo mode





- 1 Shooting mode (Q143)
- 2 Release mode (□166)
- 3 Focus mode (□122)
- 4 AF-area mode (□124)
- 5 Subject detection (\$\Pi\$129)
- 7 White balance (□178)

 - 8 Active D-Lighting (\$\Pi491\$)
- 9 Picture Control (□200)
- 10 Image area (□117)
- 11 Image size (□120)
- 12 Image quality (🕮118)



- Exposure indicator

 Exposure (□149)

 Exposure compensation
 (□164)
- 2 **i** menu (□79, □262)
- 3 Battery indicator (□87)
- 4 Number of exposures remaining (□88, □869)
- 5 ISO sensitivity (\$\square\$174)
- 6 ISO sensitivity indicator (□174) Auto ISO sensitivity indicator (□175)

- 7 Aperture (□146, □147)
- 8 Shutter speed (\$\Pi\$145, \$\Pi\$147)
- 9 Metering (□501)
- 10 Touch shooting (□135)
- 11 Vibration reduction (\$\square\$507)
- 12 Shutter type (□611)
- 13 Focus point (III)
- 14 View mode (photo live view; □614)


Tip: Using the monitor with the camera in "tall" orientation

In photo mode, the playback, i menu, and shooting displays rotate to match camera orientation.




Tip: Choosing a display

 Press the **DISP** button to cycle the shooting display. Choose from up to five displays, each with a customizable selection of icons and indicators. The items displayed can be selected using Custom Setting d19 [**Custom monitor shooting display**] (\square 622).



Video mode



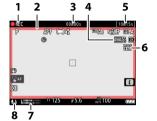

- 1 Recording indicator
 "No video" indicator (\$\Pi\$110)
- 2 Recording indicator (red border; \$\square\$692)
- 3 Length of footage recorded
- Frame size and rate (□224)

- 5 Available recording time
- 6 Video file type (□222)
 - Sound level (\$\Pi\$582)
- 8 Microphone sensitivity (\$\square\$582)


■ Using the monitor with the camera in "tall" orientation

In video mode, the playback and playback \boldsymbol{i} menu displays rotate to match camera orientation.



Angling the monitor

The orientation and angle of the monitor can be adjusted.

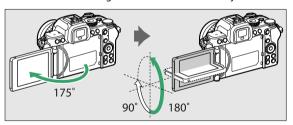

• Normal shooting

When shooting normally, use the monitor so that it is facing out and set in the camera body.



• Low angle shooting

Turn the monitor facing up to shoot with the camera at low positions.



• High angle shooting

Turn the monitor facing down to shoot with the camera at high positions.



• Self-portrait mode

When the monitor is facing the front of the camera, the camera changes to self-portrait mode (\square 53).



Cautions: Using the monitor

- When rotating the monitor, rotate slowly within the allowable range.
 Applying excessive force will result in damage to the camera body and monitor.
- When you are not using the monitor, turning it facing inward and setting it in the camera body is recommended to prevent damage and dirt.
- Do not carry the camera by holding the monitor. This could result in damage to the camera.

Shooting in self-portrait mode

If the monitor is set to the self-portrait mode position, it will switch to self-portrait mode.

The monitor will display an image as if it were reflected on a mirror (inverted image), but the actual image is saved from the perspective of the camera.








- If you tap the self-timer icon (①), you can set the shutter-release delay and the number of shots in photo mode. In video mode, you can set the video recording delay.
- If you tap the exposure compensation icon (2), you can change the image brightness.
- In video mode, if you tap the product review mode icon (③), you can set product review mode (□237). This mode is useful because it adjusts the focus to objects close to the camera when shooting

product review videos. The mode switches between [On], [On (customize focus area)], and [Off] each time you tap the icon.

 

 


Photo mode

Video mode

- Press the shutter-release button halfway to focus. Press the shutterrelease button all the way down to take a photo.
- If the self-timer is enabled, a count-down timer will be displayed in the monitor when the shutter-release button is pressed all the way down.
- · You can use touch AF and touch shutter.
- If you press the video-record button, a photo is taken in photo mode.
 In video mode, video recording starts.
- If the monitor is moved from the self-portrait mode position, selfportrait mode ends.

Self-portrait mode

In self-portrait mode, note the following:

- During self-portrait mode, controls other than the power switch, shutterrelease button, video-record button, photo/video selector, mode dial, and flash pop-up control are disabled.
- If no operations are performed for about 1 minute when Custom Setting c3 [Power off delay] > [Standby timer] is set to less than 1 minute, or for the specified time when set to 1 minute or more, the standby timer will expire.
- · The following settings are fixed.
 - [Release mode]: [Self-timer]
 - [Focus mode] in the video recording menu: [Full-time AF]
 - [Touch controls]: [Enable]
- · The viewfinder cannot be used.
- · The following functions cannot be used.
 - [Long exposure NR]
 - [Auto bracketing]
 - [HDR overlay]
 - [Exposure delay mode]
- When [Product review mode] is set to [On (customize focus area)] in self-portrait mode, the AF-area size cannot be changed.
- When [Self-portrait mode] (\$\square\$726) in the setup menu is set to [OFF], the
 monitor will not switch to self-portrait mode even if it is set to the selfportrait mode position.


The viewfinder

At default settings, the following indicators appear in the viewfinder. For a full list of the indicators that may be displayed, see "The viewfinder" (

806) in the section on "Camera displays" in the "Technical notes" chapter.


Photo mode



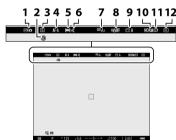

- 1 View mode (photo live view; □614)
- 2 © icon (III 100)
- 3 Release mode (□166)
- 4 Focus mode (□122)
- 5 AF-area mode (III)
- 6 Subject detection (□129)
- 7 White balance (□178)

- 8 Active D-Lighting (\$\square\$491)
- 9 Picture Control (□200)
- 10 Image quality (III)
- 11 Image size (□120)
- 12 Image area (□117)

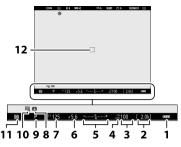

- 1 Battery indicator (□87)
- Number of exposures remaining (□88, □869)
- 3 ISO sensitivity (□174)
- 4 ISO sensitivity indicator (\$\Pi\)174)
 Auto ISO sensitivity indicator
 (\$\Pi\)175)
- 5 Exposure indicator
 Exposure (□149)
 Exposure compensation
 (□164)

- 6 Aperture (\$\Pi\$146, \$\Pi\$147)
- 7 Shutter speed (\$\Pi\$145, \$\Pi\$147)
- 8 Vibration reduction (□507)
- 9 Shooting mode (□143) 10 Shutter type (□611)
- 11 Metering (□501)
- 12 Focus point (III 134)


Tip: Using the viewfinder with the camera in "tall" orientation

In photo mode, the playback, \boldsymbol{i} menu, and shooting displays rotate to match camera orientation.




Tip: Choosing a display

 Press the **DISP** button to cycle the shooting display. Choose from up to four displays, each with a customizable selection of icons and indicators. The items displayed can be selected using Custom Setting d20 [**Custom viewfinder shooting display**] (\square 623).



Video mode



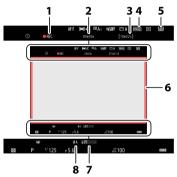

- 1 Recording indicator
 "No video" indicator (□110)
 - 2 Length of footage recorded
- 3 Available recording time
- Frame size and rate (□224)

- 5 Video file type (□222)
- 6 Recording indicator (red border; □692)
 - Sound level (\$\Pi\$582)
- 8 Microphone sensitivity (\$\square\$582)

Tip: Using the viewfinder with the camera in "tall" orientation

In video mode, the playback and playback i menu displays rotate to match camera orientation.




The monitor mode button and the eye sensor

Placing your eye to the viewfinder activates the eye sensor, switching the display from the monitor to the viewfinder. Note that the eye sensor will also respond to other objects, such as your fingers.



- $\boldsymbol{\cdot}$ The viewfinder can be used for menus and playback if desired.
- Press the | | button to cycle between viewfinder and monitor displays.

 

· Press the |□| button to cycle through the displays as follows.

[Automatic display switch]: The camera automatically switches between the viewfinder and monitor displays based on information from the eye sensor.



[Viewfinder only]: The monitor remains blank. The viewfinder is used for shooting, menus, and playback.



 In photo mode, the viewfinder turns on for a few seconds after the camera is turned on or the shutter-release button is pressed halfway regardless of whether you are placing your eye to the viewfinder.

[Monitor only]: The monitor is used for shooting, menus, and playback. The viewfinder display will remain blank even if you put your eye to the viewfinder.



[Prioritize viewfinder (1)]: Placing your eye to the viewfinder turns the viewfinder on; the monitor remains off after you take your eye away. In video mode, the displays function as per [Automatic display switch].



[Prioritize viewfinder (2)]: In photo mode, in addition to when you look through it, the viewfinder turns on for a few seconds after the camera is turned on or the shutter-release button is pressed halfway regardless of whether you are placing your eye to the viewfinder. In video mode, the displays function as per [Automatic display switch].



- The shooting display appears in the viewfinder if you put your eye to it while the monitor is used for menus or playback.

The diopter adjustment control

• The viewfinder can be focused by rotating the diopter adjustment control.



• Be careful not to put your fingers or fingernails in your eye.

Tip: Extended use

When using the viewfinder for extended periods, you can select [Adjust for ease of viewing] for Custom Setting d10 [View mode (photo Lv)] to ensure that viewfinder brightness and hue are adjusted for ease of viewing.

Tip: Limit monitor mode selection

 
You can limit the choice of monitor modes available using the [Limit monitor mode selection] item in the setup menu.

Touch controls

The touch-sensitive monitor offers a variety of controls that can be operated by touching the display with your fingers.

Focusing and releasing the shutter

· Touch the monitor to focus on the selected point (touch AF).



- In photo mode, the shutter will be released when you lift your finger from the display (touch shutter).
- Touch shutter/AF settings can be adjusted by tapping the ☐ icon (□135).



Adjusting settings

· Tap highlighted settings in the display.



- $\boldsymbol{\cdot}$ You can then choose the desired option by tapping icons or sliders.
- Tap
 or press
 or select the chosen option and return to the previous display.



Tip: Touch Fn

 
When **[ON]** is selected for Custom Setting f4 **[Touch Fn]** > **[Enable/disable touch Fn]**, you can use monitor touch controls to adjust settings while framing pictures in the viewfinder.

• Touch Fn is available only when the monitor is in storage position with the screen facing outward.



Playback

• Flick left or right to view other pictures during full-frame playback.



 In full-frame playback, touching the bottom of the display brings up a frame-advance bar. Slide your finger left or right over the bar to scroll rapidly to other pictures.






 To zoom in on a picture displayed during full-frame playback, use a stretch gesture or give the display two quick taps. You can adjust the zoom ratio using stretch gestures to zoom in and pinch gestures to zoom out.



 - · Use slide gestures to view other parts of the image during zoom.
- Giving the display two quick taps while zoom is in effect cancels zoom.
- To "zoom out" to a thumbnail view, use a pinch gesture during fullframe playback. Use pinch and stretch to choose the number of images displayed from 4, 9, and 72 frames.



Viewing videos

 Videos are indicated by a \(\mathbb{R} \) icon; to start playback, tap the on-screen guide.



• Tap **5** to exit to full-frame playback.

The i menu

• Tap the **1** icon to display the **i** menu during shooting (□79).



· Tap items to view and change options.



'You can choose the items displayed in the \boldsymbol{i} menu (\square 83).

Text entry

· When a keyboard is displayed, you can enter text by tapping the keys.

 


1 Text display area
2 Keyboard area

- 3 Keyboard selection
- To position the cursor, tap ◀ or ▶ or tap directly in the text display area.
- To cycle through the upper- and lower-case and symbol keyboards, tap the keyboard selection icon.

Navigating the menus

· Slide up or down to scroll.



· Tap a menu icon to choose a menu.



 Tap menu items to display options. You can then choose the desired option by tapping icons or sliders.



• To exit without changing settings, tap 5.



Cautions: The touch screen

 
- The touch screen responds to static electricity. It may not respond when touched with fingernails or gloved hands.
- · Do not touch the screen with sharp objects.
- · Do not use excessive force.
- The screen may not respond when covered with third-party protective films.
- The screen may not respond when touched simultaneously in multiple locations.

Tip: Enabling or disabling touch controls

- Touch controls can be enabled or disabled using the [**Touch controls**] item in the setup menu.
- Touch Fn is available when [ON] is selected for Custom Setting f4 [Touch Fn] > [Enable/disable touch Fn], even if [Disable] is selected for [Touch controls] in the setup menu.

The Fn1 and Fn2 buttons

Use the Fn1 or Fn2 button for quick access to selected settings.



- The default setting for the **Fn1** button is white balance (\square 178) and the **Fn2** button is focus mode/AF-area mode (\square 122).
- The assigned setting can be adjusted by holding the Fn1 or Fn2 button and rotating the command dials. In some cases, adjustments can be made using both the main and sub-command dials.
- The roles played by these and other controls can be chosen in the Custom Settings menu. Controls can be assigned a variety of different roles for still photography (□632), video recording (□670), and playback (□654).

(Picture Control) button

Pressing the <a> E3 (Picture Control) button displays the Picture Control (□200) setting screen.



 


 
- In photo mode, [Set Picture Control] options in the photo shooting menu are displayed (when [Tone mode] is set to [SDR] in the photo shooting menu).
- In photo mode, [Set Picture Control (HLG)] options in the photo shooting menu are displayed (when [Tone mode] is set to [HLG] in the photo shooting menu).
- In video mode, [Set Picture Control] options in the video recording menu are displayed.

Using the menus

The MENU button

Press the MENU button to view the menus.






- 2 県 [VIDEO RECORDING MENU] (皿571)
- 4 ▶ [PLAYBACK MENU] (□693)
- 5 **¥** [SETUP MENU] (□701)

- 6 (⊕ [NETWORK MENU] (□ 740)
- 7 ⇒ [MY MENU]/→ [RECENT SETTINGS]* (□769)
- 8 The ② Help icon (□77)
- 9 Current settings

^{*} You can choose the menu displayed. The default is [MY MENU].

Using the menus

 You can navigate the menus using the multi selector and $\ensuremath{\mathemath{\otimes}}$ button.



- 1 Move cursor up
- 2 Select highlighted item
- Display sub-menu, select highlighted item, or move cursor right
- 4 Move cursor down
- 5 Cancel and return to previous menu, or move cursor left

1 Highlight the icon for the current menu.

Press 1 to place the cursor in the menu-selection area.





2 Select a menu.

Press 🖲 or 🕞 to select the desired menu.



3 Position the cursor in the selected menu.

Press (to position the cursor in the selected menu.



4 Highlight a menu item.

Press or to highlight a menu item.





5 Display options.

Press () to display options for the selected menu item.



6 Highlight an option.

Press
or
to highlight an option.





7 Select the highlighted option.



- Press ® to select the highlighted option.
- To exit without making a selection, press the MENU button.
- To exit the menus and return to shooting mode, press the shutterrelease button halfway.

Grayed-out items

• Some items and menu options may be unavailable depending on camera status. Unavailable items are displayed in gray.



• In some cases, pressing ® when a grayed-out item is highlighted will display a message explaining why the item is unavailable.



 
Tip: ON/OFF only items

If the only options available for the current item are [**ON**] and [**OFF**], you can switch from [**ON**] to [**OFF**] or *vice versa* simply by pressing ®, pressing the multi selector right (③), or tapping the item in the display.



Tip: The @ (help) icon

- Where available, a description of the currently-selected item can be viewed by pressing the 9[∞] (?) button.
- · Press ⊕ or ⊕ to scroll.
- · Press ♥ (?) again to return to the menus.



Tip: Touch controls

You can also navigate the menus using touch controls (\$\square\$68).

Tip: Text entry

A keyboard is displayed when text entry is required, for example if you are called on to enter a file name or the like. Enter text as described below.

 


- 1 Text display area
- 2 Keyboard area

- 3 Keyboard selection
- Enter characters at the current cursor position by highlighting them with the multi selector arrow keys and then pressing ®.
- The cursor can be moved left or right in the text display area by rotating either of the command dials.
- To cycle through the upper- and lower-case and symbol keyboards, highlight the keyboard selection icon and press ®. The keyboard selection icon may not be available in some cases.
- If a character is entered when the text display area is full, the rightmost character will be deleted
- To delete the character under the cursor, press the fi button.
- To complete entry, press ♥.
- · To exit without completing text entry, press MENU.

The i button (i menu)

For quick access to frequently-used settings, press the i button or tap the i icon to view the i menu.



The i menu

The \boldsymbol{i} menu offers a list of the main function settings of the camera so you can change the setting details.

· Different menus are displayed in photo, video, and playback modes.



- The items displayed in the it menu in the photo or video mode can be changed by using Custom Setting f1 or g1 [Customize immenu] (□83).
- Options can be viewed by tapping items in the display or by highlighting items and pressing ®; selections can then be made using the multi selector.
- Items for which the camera displays a command dial guide can be adjusted by highlighting them in the i menu and rotating a

command dial. In some cases, adjustments can be made using both the main and sub-command dials.





Grayed-out items

Some items and menu options may be unavailable depending on camera status. Unavailable items are displayed in gray.




Tip: Using the *i* menu with the camera in "tall" orientation

When the camera is rotated to take or view pictures in "tall" (portrait) orientation, the \boldsymbol{i} menu displays rotate to match. In video mode, only the playback \boldsymbol{i} menu rotates to match camera orientation.



The still photography i menu

Pressing the i button in photo mode displays the items listed below. Highlight the desired item using the multi selector and press i to view options.

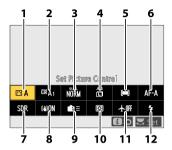


- 1 Set Picture Control (□200)
- 2 White balance (□178)
- 3 Image quality (□118)
 - 4 Image size (□120)
- 5 AF-area mode/subj. detection (□124, □129)
- 6 Focus mode (III 122)

- 7 Tone mode (□484)
- 8 Vibration reduction (\$\square\$507)
- 9 Custom controls (shooting; □632)
- 10 Metering (□501)
- 11 Airplane mode (\$\Pi741)
- 12 Flash mode (\$\Pi459)

The video i menu

Pressing the \boldsymbol{i} button in video mode displays the items listed below. Highlight the desired item using the multi selector and press $\boldsymbol{\Theta}$ to view options.

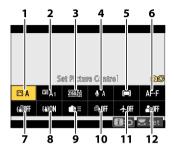

- 1 Set Picture Control (□200)
- 2 White balance (□178)
- 3 Frame size/frame rate (□224)
- 4 Microphone sensitivity (□582)
 5 AF-area mode/subi detection
- 5 AF-area mode/subj. detection (\$\Pi\$124, \$\Pi\$129)
- 6 Focus mode (□122)
- 7 Electronic VR (\$\square\$582)
- 8 Vibration reduction (□582)
- 9 Custom controls (□670)
- 10 Wind noise reduction (□584)
- 11 Airplane mode (\$\square\$741)
- 12 Product review mode (\$\Pi\$237)

The playback ¿ menu

Pressing the i button during playback displays a context-sensitive i menu of playback options.



Photos





Videos

Videos (playback paused)

Customizing the i menu

The items displayed in the *i* menu during shooting can be chosen using Custom Setting f1 or g1 [**Customize 13 menu**].

1 Highlight Custom Setting f1 or g1 [Customize ■ menu] and press ❸.



See "The MENU button" (\$\square\$72) for information on using the menus.

2 Highlight the position you want to change and press ®.



A list of the items available for the selected position will be displayed.

3 Highlight the desired item and press **⊗**.



- The item will be assigned to the selected position and the options shown in Step 2 will be displayed.
- · Repeat Steps 2 and 3 as desired.


4 Press the MENU button.

 
Changes will be saved and the Custom Settings menu will be displayed.


First steps


Attaching the strap

To attach a strap, follow the steps below.

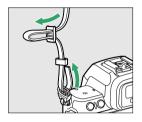




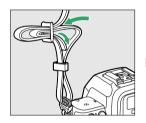

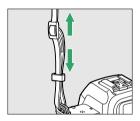

Inserting the battery and a memory card

- Turn the camera off before inserting or removing the battery and memory card.
- Using the battery to keep the orange battery latch pressed to one side, slide the battery into the battery chamber until the latch locks it in place.
- Holding the memory card in the orientation shown, slide it straight into the slot until it clicks into place.

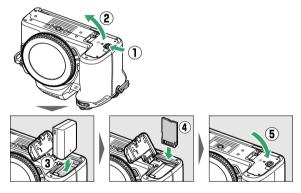

Removing the battery

To remove the battery, turn the camera off and open the battery-chamber/ memory card slot cover. Press the battery latch in the direction shown by the arrow to release the battery and then remove the battery by hand.



Removing the memory card

After confirming that the memory card access lamp is off, turn the camera off and open the battery-chamber/memory card slot cover. Press the memory card in to eject it $(\ensuremath{\mathbb{T}})$, and pull it out to remove it $(\ensuremath{\mathbb{Z}})$.



Battery level

 The battery level is shown in the shooting display while the camera is on.



Monitor

Viewfinder

- If the message [Shutter release disabled. Recharge battery.] is displayed, charge or exchange the battery.

The standby timer

The camera uses a standby timer to help reduce the drain on the battery. If no operations are performed for about 30 seconds, the standby timer will expire and the monitor and viewfinder will turn off. A few seconds prior to turning off, the displays will dim. They can be reactivated by pressing the shutter-release button halfway. The length of time before the standby timer expires automatically can be selected using Custom Setting c3 [Power off delay] > [Standby timer].

Number of exposures remaining

- When the camera is on, the shooting display shows the number of photographs that can be taken at current settings.
- Values over 1000 are rounded down to the nearest hundred. For example, values between 1500 and 1599 are shown as 1.5 k.



Tip: The write protect switch

 SD memory cards are equipped with a write-protect switch. Sliding the switch to the "lock" position write-protects the card, protecting the data it contains.



- A "---" indicator and a [Card] warning appear in the shooting display when a write-protected card is inserted.
- If you attempt to release the shutter while a write-protected card is inserted, a warning will be displayed and no picture will be recorded.
 Unlock the memory card before attempting to take or delete pictures.

 
Charging the battery

Charge the supplied EN-EL25a rechargeable Li-ion battery before use. With the battery inserted in the camera, connect the camera to the optional EH-8P AC adapter using the supplied USB cable to charge the battery.

Caution: Using batteries


Read and follow the warnings and cautions in "For your safety" ($\square 30$) and "Caring for the camera and battery: Cautions" ($\square 848$).

Insert the EN-EL25a into the camera (\square 86).



2 After confirming that the camera is off, connect it to an optional EH-8P AC adapter using the supplied USB cable (①).

Plug the AC adapter into a household power outlet. The battery charges while the camera is off. Keep the cable or plug straight during insertion and removal.

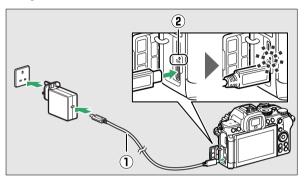

- The camera charge lamp (②) lights amber while charging is in progress. The lamp turns off when charging is complete.
- Even if the camera is on, the battery will charge after the standby timer expires.
- An exhausted battery will fully charge in about 1 hour and 40 minutes.
- The shape of the plug varies with the country or region of purchase.

Cautions: Charging

- Charging errors, caused by elevated camera temperatures for example, are indicated by the charge lamp flashing rapidly for about 30 seconds before turning off.
- After the charge lamp turns off, we recommend that you turn the camera on (or activate the standby timer) and confirm that the battery is charged.

Tip: Powering the camera

- If [ON] is selected for [USB power delivery] in the setup menu, the EH-8P
 AC adapter will power the camera when the camera is turned on. For
 more information, see ""Power delivery" versus "charging"" (□729).
- · Power will only be supplied to the camera when the battery is inserted.
- The battery will not charge while the camera is powered by an outside power source.

Tip: Charging with third-party AC adapters that are equipped with USB Type C connectors and are compliant with PD (power delivery) standards

- The camera battery can also be charged with third-party AC adapters. Use an AC adapter that complies with USB PD (power delivery) standards and is equipped with USB Type C connectors.
- Use an AC adapter that supports output of 15 W (5 V/3 A) or more.
- · Use a USB cable that is Type C on both ends to connect to the camera.
- We do not guarantee that all third-party AC adapters and USB cables are able to charge the camera battery.

Tip: Computer USB power delivery and battery charging

Computers connected via USB can supply current to power the camera or charge the battery.

- The computer supplies power only while on. Charging will be suspended while the computer is in sleep mode. It will resume when sleep mode ends.
- Do not connect the computer via a USB hub or keyboard during charging.
 Connect it directly to the camera.
- Actual charging times may be longer depending on the computer USB connector type and specifications.
- Depending on the model and product specifications, some computers will not supply current to power the camera or charge the battery.

Tip: Charging with portable chargers (third-party power banks) that are equipped with USB Type C connectors and are compliant with PD (power delivery) standards


- Third-party portable chargers can be used to power the camera or charge the camera battery. Use a portable charger that complies with USB PD (power delivery) standards and is equipped with USB Type C connectors.
- We recommend using a portable charger that supports output of 15 W (5 V/3 A) or more.
- · Use a USB cable that is Type C on both ends to connect to the camera.
- We do not guarantee that all third-party portable chargers and USB cables are able to charge the battery or power the camera.

Tip: Charging with the MH-32 battery charger (available separately)


The supplied EN-EL25a rechargeable Li-ion battery can also be charged with the optional MH-32 battery charger.

Attaching a lens

- The camera can be used with Z mount lenses. For more information on lenses, see the lens documentation available from the Nikon Download Center.
- The lens generally used in this document for illustrative purposes is a NIKKOR Z DX 16–50mm f/3.5–6.3 VR.
- Be careful to prevent dust entering the camera.
- · Confirm that the camera is off before attaching the lens.
 - Remove the camera body cap (1), 2) and rear lens cap (3, 4).

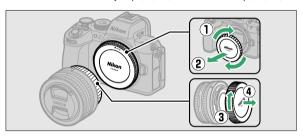

 - Align the mounting marks on the camera ((§)) and lens ((§)). Do not touch the image sensor or lens contacts.



- Rotate the lens as shown until it clicks into place (2).



 
· Remove the front lens cap before taking pictures.

F mount lenses

- Be sure to attach the FTZ II/FTZ mount adapter (available separately) before using F mount lenses (□834).
- Attempting to attach F mount lenses directly to the camera could damage the lens or image sensor.

Detaching lenses


After turning the camera off, press and hold the lens release button
 (①) while turning the lens in the direction shown (②), and then
 detach the lens.





· After removing the lens, replace the lens caps and camera body cap.

Opening the monitor

   Slowly rotate the monitor without using excessive force.









Camera setup

Turn the camera on, choose a language, and set the clock. Before using the camera for the first time, follow the steps below to choose a language and time zone and set the clock so that the correct time and date will be recorded with any pictures you take.

1 Press MENU, and in the setup menu highlight [Language] and press ①.



For information on using the menus, see "Using the menus" (\$\sup\$73).

2 Select a language.

Press $\textcircled{\bullet}$ or $\textcircled{\bullet}$ to highlight the desired language and press $\textcircled{\bullet}$ (the languages available vary with the country or region in which the camera was originally purchased).

3 Highlight [Time zone and date] and press .



4 Choose a time zone.



- · Select [Time zone] in the [Time zone and date] display.
- The display lists selected cities in the chosen zone and the difference between the time in the chosen zone and UTC.
- · Highlight a time zone in the [Time zone] display and press .

5 Turn daylight saving time on or off.



- Select [Daylight saving time] in the [Time zone and date] display.
- Select [ON] (daylight saving time on) or [OFF] (daylight saving time off).
- Selecting [ON] advances the clock one hour; to undo the effect, select [OFF].

6 Set the clock.



- · Select [Date and time] in the [Time zone and date] display.

7 Choose a date format.



- · Select [Date format] in the [Time zone and date] display.
- Highlight the desired date (year, month, and day) display order and press ®.

8 Exit the menus.



Lightly press the shutter-release button halfway to exit to shooting mode.

▼ The ⑤ icon

A flashing \odot icon in the shooting display indicates that the camera clock has been reset. The date and time recorded with new photographs will not be correct; use the [**Time zone and date**] > [**Date and time**] option in the setup menu to set the clock to the correct time and date. The camera clock is powered by an independent clock battery. The clock battery charges when the main battery is inserted in the camera. It takes about 2 days to charge. Once charged, it will power the clock for about a month.

Basic photography and playback

Taking photographs (2 auto)

🛱 (auto) mode can be used for simple, "point-and-shoot" photography.

Lenses with retractable barrels

 
Lenses with retractable barrels must be extended before use. Rotate the zoom ring as shown until the lens clicks into the extended position.



1 Select photo mode by rotating the photo/video selector to 🗅.



2 Rotate the mode dial to AUTO (智).



3 Ready the camera.

Holding the handgrip in your right hand and cradling the camera body or lens with your left, bring your elbows in against the sides of your chest.



 


Landscape (wide)

Portrait (tall) orientation

4 Frame the photograph.

Frame your subject in the shooting display.



 Human faces detected by the camera are identified by a white border indicating the focus point. If the camera detects the subject's eyes, the focus point will instead appear over one or the other of their eyes.



5 Press the shutter-release button halfway to focus.



- The focus point will be displayed in green when the camera focuses.
- The AF-assist illuminator may light to assist the focus operation if the subject is poorly lit.



· If the camera is unable to focus, the out-of-focus indicator will flash red.



• If the camera detects human faces or eyes, the focus point will light green when the subject is in focus. The focus point will flash in red when the camera does not focus.



6 Smoothly press the shutter-release button the rest of the way down to take the photograph.



The AF-assist illuminator

Do not obstruct the AF-assist illuminator while it is lit.



Cautions: Taking photographs

- You may notice the following in the shooting display. These phenomena will also be visible in any photos taken with the camera:
 - flicker or banding in scenes lit by such sources as fluorescent, mercury vapor, or sodium lamps,
 - distortion during motion (individual subjects such as trains or cars moving at high speed through the frame may be distorted, or the entire frame may appear distorted when the camera is panned horizontally),
 - jagged edges, color fringing, moiré, or bright spots, or
 - bright regions or bands in scenes lit by flashing signs and other intermittent light sources or when the subject is briefly illuminated by a strobe or other bright, momentary light source.
- Note that noise (randomly-spaced bright pixels, fog, or lines) and unexpected colors may appear if you use the [®] button to zoom in on the view through the lens.
- Avoid pointing the camera at the sun or other powerful light sources during shooting. Failure to observe this precaution could result in damage to the camera's internal circuitry.

 
▼ The memory card access lamp

The memory card access lamp will light while the photograph is being recorded. **Do not remove the memory card or battery.**



Tip: The touch shutter

You can also take a photograph by touching the monitor. Touch your subject to focus and lift your finger to release the shutter (\square 135).



Tip: Using zoom in photo mode

To zoom in on the display in photo mode (to a maximum of approximately $31\times$), press the $\mathfrak P$ button.

- The zoom ratio increases every time you press the [®] button, and decreases every time you press the [®] (?) button.
- When using zoom while shooting, a navigation window is displayed at the bottom right of the monitor to show which part of the composition is zoomed in
- Use the multi selector to scroll to areas of the frame not visible in the



Recording videos (auto)

☆ (auto) mode can also be used for simple, "point-and-shoot" video recording.

1 Select video mode by rotating the photo/video selector to 🦫.



 
Note that the built-in flash and optional flash units cannot be used when the camera is in video mode.

2 Rotate the mode dial to AUTO (智).



3 Press the video-record button to start recording.

 During recording, the REC lamp will light, a recording indicator will be displayed, and the borders of the shooting display will turn red.
 The display also shows the time remaining, or in other words the approximate amount of new footage that can be recorded to the memory card.







- 1 Recording indicator
- Video recording time (length of footage recorded)
 - Available recording time
- 4 Recording indicator (red border)
- Sound is recorded via the built-in microphone. Do not cover the microphone during recording.
- · You can also focus by tapping your subject in the monitor.

4 Press the video-record button again to end recording.

▼ The memory card access lamp

The memory card access lamp will light while the video is being recorded. **Do** not remove the memory card or battery.



The im icon

A icon indicates that videos cannot be recorded.

The REC lamp

• If there is a risk of video recording being interrupted, the REC lamp will flash as follows:

Behavior	Status	
Flashes slowly	When the remaining time that can be recorded on the memory card is short while recording videos	
Flashes twice quickly (repeats)	When the battery is low during video mode	
Flashes 4 times quickly (repeats)	When the temperature inside the camera increases during video mode	

 The brightness of the REC lamp can be changed using [REC lamp brightness] in the setup menu. To prevent the light from the REC lamp from appearing in videos, set [Video recording] to [Off].

Cautions: Recording videos

- · Video recording will end automatically if:
 - the maximum length is reached.
 - the battery is exhausted,
 - you choose a different shooting mode,

- you switch modes using the photo/video selector,
- the lens is removed, or
- the camera's internal temperature rises.
- · Sounds made by the camera may be audible in footage recorded:
 - during autofocus,
 - during vibration reduction,
 - when power aperture is used, or
 - when power zoom is used.

High-temperature warnings

During video recording, if the camera becomes hot, a high-temperature warning (a) may appear in the shooting display.

- Note that the camera body, battery, and memory card may be hot while the high-temperature warning (a) is displayed.
- Wait for the warning to clear from the display before removing the memory card from the camera. Attempting to remove the memory card immediately may cause burns or cause the card to be dropped and damaged.

Cautions: Video recording

- You may notice the following in the shooting display. These phenomena will also be visible in any footage recorded with the camera:
 - flicker or banding in scenes lit by such sources as fluorescent, mercury vapor, or sodium lamps,
 - distortion during motion (individual subjects such as trains or cars moving at high speed through the frame may be distorted, or the entire frame may appear distorted when the camera is panned horizontally),
 - jagged edges, color fringing, moiré, or bright spots,
 - bright regions or bands in scenes lit by flashing signs and other intermittent light sources or when the subject is briefly illuminated by a strobe or other bright, momentary light source, or
 - flicker when power aperture is used during video recording.
- Note that noise (randomly-spaced bright pixels, fog, or lines) and unexpected colors may appear if you use the [®] button to zoom in on the view through the lens during recording.

 When recording, avoid pointing the camera at the sun or other strong light sources. Failure to observe this precaution could result in damage to the camera's internal circuitry.

Tip: Zooming in video mode

The $\mathbb Q$ button can also be used to zoom in on the display in video mode $(\square 107)$.

 
- Press ^Q during recording to zoom in 50%, 100% (1:1), 200%, or 400%. To zoom out, press ^Q≅ (?). Note, however, that 50% zoom is not available at a frame size of 1920 × 1080.
- When viewing videos, you can zoom in on the current frame when playback is paused.

Playback

Press the **D** button to view photos and videos in the monitor or viewfinder after shooting.



 Press
 ⊕ or
 ⊕, or flick left or right on the monitor to view other images.



Videos are indicated by a \(\mathbb{\pi}\) icon at the upper left of the monitor.
 Press the \(\otin\) button, or tap the \(\otin\) icon in the monitor to play back videos.




 To end playback and return to shooting mode, press the shutterrelease button halfway.

Viewing videos

Monitor display and operation during video playback are as follows.

■ Monitor display during video playback

The following information is displayed during video playback, allowing you to confirm the video length and playback time. Your approximate position in the video can also be confirmed from the video progress bar.

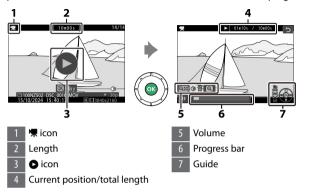

■ Video playback operations


You can perform the following during video playback.

То	Description
Pause Press → to pause playback.	
Resume	Press the ® button to resume playback when playback is paused or during rewind/advance.
Rewind/ advance	Press ① to rewind, ③ to advance. Speed increases with each press, from 2× to 4× to 8× to 16×.
Start slow- motion playback	Press 🏵 while the video is paused to start slow-motion playback.

To Description	
Jog rewind/ advance	 Press ⊕ or ⊕ while the video is paused to rewind or advance one frame at a time. Keep ⊕ or ⊕ pressed for continuous rewind or advance.
Skip 10 s	Rotate the sub-command dial one stop to skip ahead or back 10 s.
Skip 10 frames	Rotate the main command dial one stop to skip ahead or back 10 frames.
Skip to last or first frame	 Keep ⑤ or ⑥ pressed to skip respectively to the first frame or last frame. The first frame is indicated by a ▶ in the top right corner of the display, the last frame by a ▶1.
Zoom in	Press [®] to zoom in on the current frame while playback is paused.
Adjust volume	Press [®] to increase volume, [®] (?) to decrease.
Trim video	To display the video $m{i}$ menu, pause playback and press the $m{i}$ button.
Exit	Press 🕭 to exit to full-frame playback.

Deleting unwanted pictures

 Press the fi button to delete the current picture. **Note that pictures** cannot be recovered once deleted.



• Display a picture you want to delete and press the fi button to display a confirmation dialog. Press the fi button again to delete the picture and return to playback.



· To exit without deleting the picture, press ▶.

Tip: The playback menu [Delete] item

Use [Delete] in the playback menu to:

- · delete multiple pictures,
- delete all pictures currently rated **5** (candidate for deletion),
- · delete all pictures taken on selected dates, or
- · delete all pictures in selected folders.


Shooting settings

Image recording options (image area, quality, and size).

Changing image area

Use the [Choose image area] item in the photo shooting menu to change the image area. The following options are available:

Option		Description
DX	[DX (24×16)]	Pictures are recorded with an image area of 23.5×15.7 mm (DX format). To calculate the approximate focal length of the lens in 35mm format, multiply by 1.5.
1:1	[1:1 (16×16)]	Pictures are recorded with an aspect ratio of 1:1.
16:9	[16:9 (24×14)]	Pictures are recorded with an aspect ratio of 16:9.

 





Changing image quality

Use the [Image quality] item in the photo shooting menu to choose the image quality option employed when photographs are recorded.



Option	Description
[RAW + JPEG/HEIF fine]	Record two copies of each photo: an NEF (RAW) picture and either a JPEG or HEIF copy. • When [SDR] is selected for [Tone mode] in the photo
[RAW + JPEG/HEIF normal]	shooting menu, the camera will record an NEF (RAW) picture and a JPEG copy. When [HLG] is selected for [Tone mode] in the photo shooting menu, the camera will record an NEF (RAW) picture and an HEIF copy.
[RAW + JPEG/HEIF basic]	The image quality of a JPEG or HEIF copy decreases from "fine", to "normal", and to "basic". The camera displays only the JPEG or HEIF copy of dualformat pictures. Deleting the JPEG or HEIF copy on the camera will also delete the NEF (RAW) picture.
[RAW]	Record photos in NEF (RAW) format.
[JPEG/ HEIF fine]	Record photos in JPEG or HEIF format. The image quality decreases from "fine", to "normal", and to "basic".
[JPEG/ HEIF normal]	 Photos are recorded in JPEG format when [SDR] is selected for [Tone mode] in the photo shooting menu. Photos are recorded in HEIF when [HLG] is selected for [Tone mode] in the photo shooting menu.

Option	Description
	Record photos in JPEG or HEIF format. The image quality
	decreases from "fine", to "normal", and to "basic".
[JPEG/	• Photos are recorded in JPEG format when [SDR] is selected
HEIF basic]	for [Tone mode] in the photo shooting menu. Photos are
	recorded in HEIF when [HLG] is selected for [Tone mode] in
	the photo shooting menu.

Tip: NEF (RAW)

- · RAW files have the extension "*.nef".
- The process of converting RAW files to JPEG and other widely-supported formats is referred to as "RAW processing". A variety of settings can be adjusted during this process, including exposure compensation, white balance, and Picture Controls.
- RAW processing has no effect on the original RAW data, meaning that it can be repeated as often and using as many different combinations of settings as desired while maintaining image quality.
- NEF (RAW) processing can be performed using [Retouch] > [RAW processing (current picture)] or [RAW processing (multiple pictures)] in the playback i menu or on a computer using Nikon's NX Studio software. NX Studio is available free-of-charge from the Nikon Download Center

Choosing an image size

II Image size

Use [Image size] in the photo shooting menu to choose a size for new photographs. The size for photographs recorded in formats other than NEF (RAW) can be chosen from [Large], [Medium], and [Small].



· NEF (RAW) pictures are recorded at a size of [Large].

The number of pixels in the picture varies with the option selected for image area (\square 117).

Image area	Image size	Size (cm/in.) when printed at 300 dpi
	Large (5568 × 3712 pixels)	Approx. 47.1 × 31.4 cm/18.5 × 12.4 in.
[DX (24×16)]	Medium (4176 × 2784 pixels)	Approx. 35.4 × 23.6 cm/13.9 × 9.3 in.
	Small (2784 × 1856 pixels)	Approx. 23.6 × 15.7 cm/9.3 × 6.2 in.
	Large (3712 × 3712 pixels)	Approx. 31.4 × 31.4 cm/12.4 × 12.4 in.
[1:1 (16×16)]	Medium (2784 × 2784 pixels)	Approx. 23.6 × 23.6 cm/9.3 × 9.3 in.
	Small (1856 × 1856 pixels)	Approx. 15.7 × 15.7 cm/6.2 × 6.2 in.

lmage area	lmage size	Size (cm/in.) when printed at 300 dpi
	Large (5568 × 3128 pixels)	Approx. 47.1 × 26.5 cm/18.6 × 10.4 in.
[16:9 (24×14)]	Medium (4176 × 2344 pixels)	Approx. 35.4 × 19.8 cm/13.9 × 7.8 in.
	Small (2784 × 1560 pixels)	Approx. 23.6 × 13.2 cm/9.3 × 5.2 in.

Tip: Print size

Print size in inches equals image size in pixels divided by printer resolution in dots per inch (dpi; 1 inch = 2.54 cm).

Focus

Focus mode

Control how the camera focuses.

■ Choosing a focus mode

The focus mode can be selected using the [**Focus mode**] items in the i menu, photo shooting menu, or video recording menu.



Option		Description
AF-A	[AF mode auto-switch]	 The camera uses AF-S for stationary subjects, and AF-C for moving subjects. Available only in photo mode.
AF-S	[Single AF]	 Use with stationary subjects. When you press the shutter-release button halfway to focus, the focus point will turn from red to green and focus will lock. If the camera fails to focus, the focus point will flash red and the shutter release will be disabled. At default settings, the shutter can only be released if the camera is able to focus (focus priority).

Option		Description	
AF-C	[Continuous AF]	 For moving subjects. The camera adjusts focus continuously in response to changes in the distance to the subject while the shutter-release button is pressed halfway. At default settings, the shutter can be released whether or not the subject is in focus (release priority). 	
AF-F	[Full-time AF]	The camera adjusts focus continuously in response to subject movement or changes in composition. When the shutter-release button is pressed halfway, the focus point will turn from red to green and focus will lock. This option is only available in video mode.	
MF	[Manual focus]	Focus manually (III 139). The shutter can be released whether or not the subject is in focus.	

Cautions: Autofocus

- · The camera may be unable to focus if:
 - the subject contains lines parallel to the long edge of the frame,
 - the subject lacks contrast,
 - the subject in the focus point contains areas of sharply contrasting brightness,
 - the focus point includes night-time spot lighting or a neon sign or other light source that changes in brightness,
 - flicker or banding appears under fluorescent, mercury-vapor, sodiumvapor, or similar lighting,
 - a cross (star) filter or other special filter is used,
 - the subject appears smaller than the focus point, or
 - the subject is dominated by regular geometric patterns (e.g., blinds or a row of windows in a skyscraper).
- · The display may brighten or darken while the camera focuses.
- The focus point may sometimes be displayed in green when the camera is unable to focus.
- · The camera may take longer to focus when lighting is poor.
- The camera may have trouble focusing using autofocus if the focus point is at the edge of the shooting display.

Tip: Low-light AF

For improved focus when shooting under low light, select [**ON**] for Custom Setting d11 [**Starlight view (photo Lv)**]. This option takes effect only in photo mode.

AF-area mode

Choose how the camera selects the focus point for autofocus.

 In modes other than [Auto-area AF], the focus point can be positioned using the multi selector (\$\square\$134).

■ Choosing an AF-area mode

The AF-area mode can be selected using the [AF-area mode/subj. detection] item in the i menu or the [AF-area mode] items in the photo shooting and video recording menus.



Option		Description
Ę≘3	[Pinpoint AF]	 With a focus point smaller than that employed for single-point AF, pinpoint AF is used for pinpoint focus on a selected spot in the frame. Focusing may be slower than with single-point AF. Recommended for shots involving static subjects, such as buildings, in-studio product photography, or close-ups. This option is only available when photo mode is selected and [Single AF] is chosen for focus mode.
[11]	[Single- point AF]	 The camera focuses on a point selected by the user. Use with stationary subjects.

Option		Description	
@\$	[Dynamic- area AF (S)]	The camera focuses on a point selected by the user. If the subject briefly leaves the selected point, the	
E@M	[Dynamic- area AF (M)]	camera will focus based on information from surrounding focus points. • This option is only available when photo mode is	
ØL	[Dynamic- area AF (L)]	selected and [AF mode auto-switch] or [Continuous AF] is chosen for focus mode. Use for photographs of athletes and other active subjects that are hard to frame using single-point AF. The size of the area used for focus can be selected from S (small), M (medium), and L (large). S is the smallest and L the largest. [Dynamic-area AF (S)]: Choose when there is time to compose the photograph or when photographing subjects that are moving predictably (e.g., runners or race cars on a track). [Dynamic-area AF (M)]: Choose when photographing subjects that are moving unpredictably (e.g., players at a football game). [Dynamic-area AF (L)]: Choose when photographing subjects that are moving quickly and cannot be easily framed in the selected focus point (e.g., birds).	

Option		Description	
€ 3 WIDE-S	[Wide-area AF (S)]	As for single-point AF except that the camera focuses on a wider area.	
₩ DE-L	[Wide-area AF (L)]	 Choose for snapshots, subjects that are in motion, and other subjects that are difficult to photograph using single-point AF. During video recording, wide-area AF can be used for smooth focus when making panning or tilting shots or recording moving subjects. If the selected focus point contains subjects at different distances from the camera, the camera will assign priority to the closest subject. The focus points for [Wide-area AF (L)] are larger than those for [Wide-area AF (S)]. 	
E JJ W-C1	[Wide-area AF (C1)]	 Choose the dimensions (measured in focus points) of the focus areas used for the selected AF-area. This can be used, for example, if the size and shape of the area employed for focus can be determined in advance with a fair degree of accuracy. On selecting [Wide-area AF (C1)] or [Wide-area AF (C2)] and pressing and holding the ⊕ button, you will be prompted to choose the AF-area size. Use ⊕ and ⊕ to choose the height and ⊕ and ⊕ to choose the width. Available AF-area size settings are as follows. When [DX (24×16)] is selected, the photo shooting menu offers a choice of 60 options ranging from [1×1] to [19×11] (varies depending on the image area settings). Similarly, the video recording menu offers a choice of 50 options ranging from [1×1] to [19×9]. 	
E 3 W-(2	[Wide-area AF (C2)]		

Option		Description
[30]	[3D- tracking]	 Track focus on a selected subject. Position the focus point over your subject and start tracking by pressing the shutter-release button halfway; focus will then track the selected subject as it moves through the frame. Release the button to end tracking and restore the previously-selected focus point. If the subject leaves the frame, remove your finger from the shutter-release button and recompose the photograph with the subject in the selected focus point. This option is only available when photo mode is selected and [AF mode auto-switch] or [Continuous AF] is chosen for focus mode.
- ()	• Track focus on a selected subject. • Position the focus point over your subject and statracking by pressing • Position the focus point over your subject and statracking by pressing • Position the focus point over your subject and statracking by pressing • Position the focus point over your subject and statracking and select the center focus point, prefer to the center focus point, prefer to the center focus point, prefer to the center focus point over your subject and statracking and select the center focus point, prefer to the center focus point over your subject and statracking by pressing so represents the subject as it moves through the frame. To subject as it moves the frame of	

Option		Description	
(=)	[Auto-area AF]	 The camera automatically detects the subject and selects the focus point. Use on occasions when you don't have time to select the focus point yourself, for portraits, or for snapshots and other spur-of-the-moment photos. 	

Caution: 3D-tracking and subject tracking

The camera may be unable to track subjects that:

- · are similar in color, brightness, or pattern to the background,
- · change visibly in size, color, or brightness,
- · are too large or too small,
- · are too dark or too bright,
- · move quickly, or
- · are obscured by other objects or leave the frame.

Tip: □: The center focus point

In all AF-area modes except [Auto-area AF], [3D-tracking], and [Subject-tracking AF], a dot appears in the focus point when it is in the center of the frame.

Subject detection

The class of subjects given priority during autofocus and electronic rangefinding can be chosen using the [AF/MF subject detection options] items in the photo shooting and video recording menus, which offer a choice of [Auto], [People], [Animal], [Birds], [Vehicle], [Airplanes], and [Subject detection off]. The subject detected by the

camera is indicated by a focus point. When $\frac{1}{N}$ in **SCN** mode is selected, the setting is fixed at [**Animal**].



- In the case of the video recording menu, the choice of subject is made via [AF/MF subject detection options] > [Subject detection].
 Separate subject types can be selected for photo and video modes.
- Human faces detected by the camera when [People] is selected are
 identified by a border indicating the focus point. If the camera
 detects the subject's eyes, the focus point will instead appear over
 one or the other of their eyes. If the subject looks away after their
 face is detected, the focus point will move to track their motion.



If a dog, cat, or bird is detected when [Animal] is selected, the focus
point will appear over the face of the animal in question. If the
camera detects the subject's eyes, the focus point will instead appear
over one or the other of their eyes. If the camera can detect neither
face nor eyes, it will display a focus point over the detected animal.



 Bird faces detected by the camera when [Birds] is selected are identified by a border indicating the focus point. If the camera detects the subject's eyes, the focus point will instead appear over one or the other of their eyes. If the camera can detect neither face nor eyes, it will display a focus point over the detected bird.



If a car, motorcycle, train, airplane, or bicycle is detected when
[Vehicle] is selected, the focus point will appear over the vehicle in
question. In the case of trains, the camera will detect only the front
end. With planes, the camera will detect the body, nose, or cockpit
depending on the aircraft's size.



If an aircraft is detected when [Airplanes] is selected, the focus point
will appear over the aircraft in question. The camera will detect the
body, nose, or cockpit depending on the aircraft's size.



 If [Auto] is selected, the camera will detect humans, animals, and vehicles and choose a subject for focus automatically. To disable subject detection altogether, choose [Subject detection off].

■ Using subject detection during autofocus

- Subject detection is available during autofocus when [Wide-area AF (S)], [Wide-area AF (L)], [Wide-area AF (C1)], [Wide-area AF (C2)], [3D-tracking], [Subject-tracking AF], or [Auto-area AF] is selected for [AF-area mode].
- If more than one subject of the selected type is detected, a gray focus point will appear over each of the subjects detected. If [Auto-area AF] is selected for [AF-area mode], ◀ and ▶ icons will appear on the focus point selected by the camera. The focus point can be positioned over the other subjects by pressing ④ or ⑥.

■ Using subject detection with manual focus

To enable subject detection during manual focus (\square 139), select an option other than [**MF subject detection off**] for [**MF subject detection area**] in the photo shooting or video recording menu.



- Select [AII] to enable subject detection in all areas of the frame. If
 more than one subject of the selected type is detected, a gray focus
 point will appear over each of the subjects detected and the initial
 subject selected by the camera will be indicated with ◀ and ▶ icons.
 The focus point can be positioned over the other subjects by
 pressing ⑤ or ⑥.
- Select [Wide (L)] or [Wide (S)] to limit subject detection to the current focus area.

Caution: Subject detection using [People]

Subject detection may not perform as expected if:

- the subject's face is too large or small relative to the frame,
- · the subject's face is too brightly or dimly lit,
- the subject is wearing glasses or sunglasses,
- · the subject's face or eyes are obscured by hair or other objects, or
- · the subject moves excessively during shooting.

☑ Cautions: Subject detection using [Animal]

- · Subject detection may not perform as expected if:
 - the subject's face is too large or small relative to the frame,
 - the subject's face is too brightly or dimly lit,
 - the subject's face or eyes are obscured by fur or the like,
 - the subject's face and eyes are of similar colors, or
 - the subject moves excessively during shooting.
- The camera may display a border around subjects that are not dogs, cats, or birds but which resemble these animals.
- The light from the AF-assist illuminator may adversely affect the eyes of some animals; when using autofocus, select [OFF] for Custom Setting a11 [Built-in AF-assist illuminator].

Cautions: Subject detection using [Birds]

- · Subject detection may not perform as expected if:
 - the subject's face is too large or small relative to the frame,
 - the subject's face is too brightly or dimly lit,
 - the subject's face or eyes are obscured by feathers or the like,
 - the subject's face and eyes are of similar colors, or
 - the subject moves excessively during shooting.
- The camera may display a border around subjects that are not birds, but which resemble them. If you notice that subjects other than birds are detected, changing to finer settings in AF-area mode may improve focus performance.
- The effects of flicker from such light sources as fluorescent or mercuryvapor lamps may appear in the shooting display.

- You can reduce the effects of flicker by setting [**Photo flicker reduction**] to [**ON**] in the photo shooting menu.
- It is recommended to set [**Photo flicker reduction**] to [**OFF**] in the photo shooting menu if photo flicker is not occurring.
- The light from the AF-assist illuminator may adversely affect the eyes of birds; select [OFF] for Custom Setting a11 [Built-in AF-assist illuminator].

▼ Cautions: Subject detection using [Vehicle] and [Airplanes]

- · Subject detection may not perform as expected with subjects that are:
 - too large or small relative to the frame,
 - too bright or too dark,
 - partially hidden,
 - similar in color to surrounding objects, or
 - moving excessively.
- The camera may fail to detect vehicles of some shapes and colors.
 Alternatively, it may display a border around subjects that are not of the selected type.

Subject detection

The performance of subject-detection may drop:

- during high-speed frame capture +,
- if [HLG] is selected for [Tone mode] in the photo shooting menu, or
- if either [HLG] or [N-Log] is selected as the tone mode for [Video file type] > [H.265 10-bit (MOV)] in the video recording menu.

Focus-point selection

Except when [**Auto-area AF**] is selected for AF-area mode, the focus point can be selected manually, allowing photographs to be composed with the subject positioned almost anywhere in the frame.

- Use the multi selector to select the focus point while the standby timer is on.
- Pressing ® selects the center focus point.

Tip: Quick focus-point selection

For quicker focus-point selection, choose [Alternating points] for Custom Setting a4 [Focus points used] to use only a quarter of the available focus points. Selecting [Alternating points] does not affect the number of points available for [Pinpoint AF].

Tip: Focus-point lock

Focus-point selection can be locked by choosing [ON] for Custom Setting f5 or g3 [Control lock] > [Focus-point lock].

The touch shutter

Touch the display to focus on the selected point. The shutter will be released when you lift your finger from the display.



Tap the icon shown in the illustration to choose the operation performed by tapping the display.



Option		Description	
Ä	[Touch shutter/ touch AF]	Touch the display to focus on the selected point and lift your finger to release the shutter. When choosing an eye using touch controls, note that the camera may not focus on the eye on the side you intend. Use the multi selector to choose the desired eye. If [Auto-area AF] is selected for AF-area mode, the camera will focus on the chosen point, release the shutter, and track the selected subject. Press ⊛ to end subject tracking.	
OFF	[Off]	Touch shutter disabled.	
. 1	[Move focus point]	 Touch the display to position the focus point. The camera will not focus and lifting your finger from the display will not release the shutter. If [Subject-tracking AF] or [Auto-area AF] is selected for AF-area mode, focus will track the subject at the chosen point. Press ® to end subject tracking. 	
[] AF	[Touch AF]	 Touch the display to focus on the selected point. Lifting your finger from the display does not release the shutter. If [Subject-tracking AF] or [Auto-area AF] is selected for AF-area mode, the camera will focus on and track the subject at the chosen point. Press ® to end subject tracking. 	

Cautions: Taking pictures using touch shooting options

- · Touch controls cannot be used for manual focus.
- The shutter-release button can be used to take pictures when the icon is displayed.
- During burst photography, touch controls can be used only to take one
 picture at a time. Use the shutter-release button for burst photography.
- In self-timer mode, focus locks on the selected subject when you touch
 the monitor and the shutter is released about 10 seconds after you lift
 your finger from the display. If the number of shots selected is greater
 than 1, the remaining shots will be taken in a single burst.

Focus lock

Use focus lock in cases in which the camera has trouble focusing with autofocus.

- Use focus lock to lock focus on the current subject when AF-C is selected for focus mode.
- When using focus lock, choose an AF-area mode other than [Auto-area AF].
- 1 Position the subject in the selected focus point and press the shutter-release button halfway.

2 Press the 熉 (O₁) button.



 
- · Exposure will also lock.
- · An **AE-L** icon will be displayed in the shooting display.



3 Keeping the 群 (♠n) button pressed, recompose the photograph and shoot.



Do not change the distance between the camera and the subject. If the distance to the subject changes, release the lock and focus again at the new distance



Locking focus when AF-S is selected for focus mode or when AF-A is selected and you are shooting in AF-S

Focus locks while the shutter-release button is pressed halfway. You can also lock focus by pressing the 髯 (**On**) button.

 
▼ Taking multiple shots at the same focus distance

- · If you locked focus by pressing the 群 (On) button, focus will remain locked between shots if you keep the 群 (On) button pressed.
- Focus will also remain locked if you keep the shutter-release button pressed halfway between shots.

Manual focus


Manual focus is available in manual focus mode. Use manual focus when, for example, autofocus does not produce the desired results.

 Position the focus point over your subject and rotate the focus or control ring until the subject is in focus.



 - For greater precision, press the \P button to zoom in on the view through the lens.





1 Focus distance indicator/ distance between the camera and the focus position 2 Focus indicator

Focus indicator	Description
(steady)	The subject is in focus.
(steady)	The focus point is in front of the subject.
◀ (steady)	The focus point is behind the subject.
► ◀ (flashes)	The camera is unable to focus.

 
- When using manual focus with subjects not suited to autofocus, note
 that the in-focus indicator (
) may be displayed when the subject is
 not in focus. Zoom in on the view through the lens and check focus.
 Use of a tripod is recommended when the camera is having trouble
 focusing.
- The electronic rangefinder may flicker if the focus point is at the edge of the shooting display.

Lenses with focus-mode selection

Manual focus mode can be chosen using focus-mode selection controls on the lens (where available).

The focal plane mark and flange-back distance

Focus distance is measured from the focal plane mark (---) on the camera body, which shows the position of the focal plane inside the camera $(\overline{\mathbb{Q}})$. Use this mark when measuring the distance to your subject for manual focus or macro photography. The distance between the focal plane and the lens mounting flange is known as the "flange-back distance" $(\overline{\mathbb{Q}})$. On this camera, the flange-back distance is 16 mm (0.63 in.).



Tip: Focus peaking

If [ON] is selected for Custom Setting a12 [Focus peaking] > [Focus peaking display], objects that are in focus will be indicated by colored outlines that appear when focus is adjusted manually (focus peaking).

 


 Note that the focus peaking display may not appear if the camera is unable to detect outlines. Check focus in the shooting display.

Exposure

Choosing a shooting mode

Use the mode dial to choose a shooting mode. The shooting mode is shown in the shooting display.



	Mode	Description
AUTO	Auto (🕮 101, 🕮 108)	A simple "point-and-shoot" mode that leaves the camera in charge of settings. In addition to the shutter speed and aperture, the camera also automatically controls white balance and other items.
P	Programmed auto (□144)	Use for snapshots and in other situations in which there is little time to adjust camera settings. The camera chooses both shutter speed and aperture automatically.
s	Shutter-priority auto (□145)	Use to freeze or blur motion. You choose the shutter speed; the camera adjusts aperture automatically.
A	Aperture-priority auto (□146)	Use to blur backgrounds or bring both foreground and background into focus. You choose the aperture; the camera adjusts shutter speed automatically.

Mode		Description
М	Manual (□147)	You control both shutter speed and aperture. Set shutter speed to "bulb" or "time" for long time-exposures.
U1 U2 U3	User setting mode (□150)	Assign frequently-used settings to these positions. The settings can be recalled simply by rotating the mode dial.
SCN (SCN)	Scene mode (□152)	The camera offers a choice of "scene" modes. Choosing a scene mode automatically optimizes settings to suit the selected scene, making creative photography as simple as selecting a mode, framing a picture, and shooting.

🌇 (auto)

In addition to the shutter speed and aperture, the camera also automatically controls white balance and other items. Of the functions that can be configured by the menu, those controlled by the camera automatically are grayed out and unavailable. To change the settings of grayed-out menu functions, change the shooting mode to **P**, **S**, **A**, or **M**.

P (programmed auto)

In this mode, the camera automatically adjusts shutter speed and aperture according to a built-in program to ensure optimal exposure in most situations.

Tip: Flexible program

Different combinations of shutter speed and aperture that produce the same exposure can be selected by rotating the main command dial ("flexible program") in mode **P**.



- While flexible program is in effect, a flexible program indicator (*) is displayed.
- To restore default shutter speed and aperture settings, rotate the main command dial until the indicator is no longer displayed. Flexible program also ends when the mode dial is rotated to another setting or the camera is turned off

S (shutter-priority auto)

In shutter-priority auto, you choose the shutter speed while the camera automatically adjusts aperture for optimal exposure. Choose fast shutter speeds to "freeze" motion, slow shutter speeds to suggest motion by blurring moving objects.



Fast shutter speed (1/1600 s)



Slow shutter speed (1 s)

· Rotate the main command dial to set the shutter speed.



- Shutter speed can be set to values between 1/4000 s and 30 s.
- When [Electronic front-curtain shutter] is selected for Custom Setting d6 [Shutter type], shutter speed is limited to 1/2000 s, even when it is set faster.
- Shutter speed can be locked at the selected value (\$\square\$662, \$\square\$681).

A (aperture-priority auto)

In aperture-priority auto, you choose the aperture while the camera automatically adjusts shutter speed for optimal exposure. This mode is suitable when you want to blur the background and bring out the details in the main subject or bring out details in the background and foreground.





Large aperture (f/5.6)

Small aperture (f/22)

· Aperture can be adjusted by rotating the sub-command dial.



- · The minimum and maximum values for aperture vary with the lens.
- Aperture can be locked at the selected value (\square 662, \square 681).

M (manual)

You control both shutter speed and aperture. Choose this mode for long time-exposures of such subjects as fireworks or the night sky ("Bulb" or "Time" photography, 160).

- Shutter speed and aperture can be adjusted with reference to the exposure indicators by rotating the command dials.
- Rotate the main command dial to choose the shutter speed. Shutter speed can be set to values between 1/4000 s and 30 s, to "Bulb", or to "Time"



 When [Electronic front-curtain shutter] is selected for Custom Setting d6 [Shutter type], shutter speed is limited to 1/2000 s, even when it is set faster. · Aperture can be adjusted by rotating the sub-command dial.



- The minimum and maximum values for aperture vary with the lens.
- Shutter speed and aperture can be locked at the selected values (\square 662, \square 681).

Exposure indicators

The exposure indicators in the monitor and viewfinder show whether the photograph would be under- or over-exposed at current settings. The exposure indicators can be read as follows (the display varies with the option selected for Custom Setting b2 [EV steps for exposure cntrl]):

Dienlay	[1/3 EV steps (comp. 1/3 EV)] selected for [EV steps for exposure cntrl]			
Display	Optimal exposure	Underexposed by 1/ ₃ EV	Overexposed by over 3 1/3 EV	
Monitor	+	+ 	▲+ 	
Viewfinder	+	+	Piiliiliil‡	

The orientation of the exposure indicators can be reversed using Custom Setting f8 [Reverse indicators].

Exposure warning

The displays will flash if the selected settings exceed the limits of the exposure metering system.

Tip: Extended shutter speeds

For shutter speeds as slow as 900 s (15 minutes) in mode **M**, select **[ON]** for Custom Setting d7 **[Extended shutter speeds (M)**].

Tip: Long exposures

At speeds slower than 1 s, the shutter speed displayed by the camera may differ from the actual exposure time. The actual exposure times at shutter speeds of 15 and 30 seconds, for example, are respectively 16 and 32 seconds. The exposure time will again match the selected shutter speed at speeds of 60 seconds and slower.

Tip: Auto ISO sensitivity control (mode M)

If auto ISO sensitivity control (\square 175) is enabled, ISO sensitivity will automatically be adjusted for optimal exposure at the selected shutter speed and aperture.

U1, U2, and U3 (user setting mode)

Frequently-used settings can be assigned to user setting positions **U1** through **U3** and later recalled simply by rotating the mode dial.

■ Save user settings

1 Adjust settings.

The settings that can be saved include:

- \cdot photo shooting menu options,
- · video recording menu options,
- Custom Settings, and
- · shooting mode, shutter speed (modes **S** and **M**), aperture (modes **A** and **M**), flexible program (mode **P**), and exposure compensation.

2 Highlight [Save user settings] in the setup menu.

Highlight [Save user settings] in the setup menu and press .



3 Select a position.

Highlight [Save to U1], [Save to U2], or [Save to U3] and press ③.

4 Save user settings.

Highlight [**Save settings**] using \$ or \$ and press \$ to assign current settings to the selected position.

5 Take pictures using the saved settings.

Rotating the mode dial to **U1**, **U2**, or **U3** recalls the settings last saved to that position.



Items that cannot be assigned to U1, U2, and U3

The following cannot be saved to U1, U2, or U3.

- PHOTO SHOOTING MENU
 - [Storage folder]
 - [Manage Picture Control]
 - [Multiple exposure]
 - [Interval timer shooting]
 - [Time-lapse video]
 - [Focus shift shooting]
- · VIDEO RECORDING MENU
 - [Storage folder]
 - [Manage Picture Control]

■ Resetting user settings

Highlight [Reset user settings] in the setup menu.

Highlight [Reset user settings] in the setup menu and press .



2 Select a position.

Highlight [Reset U1], [Reset U2], or [Reset U3] and press ③.

3 Reset user settings.

Highlight [Reset] and press \otimes to restore default settings for the selected position (the camera will function in mode P).

SCN (scene modes)

The camera offers a choice of "scene" modes. Choosing a scene mode automatically optimizes settings to suit the selected scene, making

creative photography as simple as selecting a mode, framing a picture, and shooting.

■ Choosing a scene mode

To choose a scene mode, rotate the mode dial to SCN, and then rotate the main command dial until the desired scene appears in the monitor.







· The following scenes are available.

₹ Portrait	Beach/snow
■ Landscape	ä Sunset
& Child	≟ Dusk/dawn
₹ Sports	₩ Pet portrait
♥ Close up	2 Candlelight
☑ Night portrait	Blossom
■ Night landscape	Autumn colors
▼ Party/indoor	†1 Food

■ Characteristics of each scene mode

● **%** Portrait



Use for portraits with soft, natural-looking skin tones.

 If the subject is far from the background, background details will be softened to lend the composition a sense of depth.

• 🖪 Landscape



Use for vivid landscape shots in daylight.

▼ Note

- · The built-in flash does not fire.
- · The AF-assist illuminator will not light.

• 各 Child



Use for snapshots of children. Clothing and background details are vividly rendered, while skin tones remain soft and natural.

♣ Sports



Fast shutter speeds freeze motion for dynamic sports shots in which the main subject stands out clearly.

Note

- · The built-in flash does not fire.
- · The AF-assist illuminator will not light.

• 🗸 Close up



Use for close-up shots of flowers, insects, and other small objects.

• 🖪 Night portrait



Use for a natural balance between the main subject and the background in portraits taken under low light.

Night landscape



Reduce noise and unnatural colors when photographing night landscapes, including street lighting and neon signs.

▼ Note

- The built-in flash does not fire.
- · The AF-assist illuminator will not light.

■ Party/indoor



Capture the effects of indoor background lighting. Use for parties and other indoor scenes.

Beach/snow



Capture the brightness of sunlit expanses of water, snow, or sand.

Note

- · The built-in flash does not fire.
- · The AF-assist illuminator will not light.

Sunset



Preserves the deep hues seen in sunsets and sunrises.

▼ Note

- · The built-in flash does not fire.
- · The AF-assist illuminator will not light.

• 🛎 Dusk/dawn



Preserves the colors seen in the weak natural light before dawn or after sunset.

Note

- · The built-in flash does not fire.
- · The AF-assist illuminator will not light.

₩ Pet portrait



Use for portraits of active pets.

☑ Note

The AF-assist illuminator will not light.

• Candlelight



For photographs taken by candlelight.

Note

The built-in flash does not fire.

• P Blossom



Use for fields of flowers, orchards in bloom, and other landscapes featuring expanses of blossoms.

Note

The built-in flash does not fire.

Autumn colors



Captures the brilliant reds and yellows in autumn leaves.

Note

The built-in flash does not fire.

• ¶Food



Use for vivid photographs of food.

Note

If raised, the built-in flash will fire with every shot.

Tip: Using a tripod

Use a tripod to prevent blur caused by camera shake at slow shutter speeds.

Tip: Scene modes

Some settings—for example, Picture Controls, white balance, tone mode, or Custom Settings—cannot be changed depending on the mode selected.

Long time-exposures (mode M only)

The camera offers two options for long time-exposures: "Bulb" and "Time". Long time-exposures can be used for pictures of fireworks, night scenery, the stars, or moving lights.




A 35-second exposure shot at a shutter speed of "Bulb" and an aperture of f/25

Shutter speed	Description	
Bulb	The shutter remains open while the shutter-release button is held down.	
Time	The exposure starts when the shutter-release button is pressed and ends when the button is pressed a second time.	

- 1 Keep the camera steady, for example by using a tripod.
- 2 Rotate the mode dial to M.



 3 Rotate the main command dial to choose a shutter speed of Bulb ("Bulb") or Time ("Time").



Note that the exposure indicators are not displayed at a shutter speed of **Bulb** or **Time**.

4 Focus and start the exposure.

- "Bulb": Press the shutter-release button all the way down to start the exposure. Keep the shutter-release button pressed during the exposure.
- "Time": Press the shutter-release button all the way down to start the exposure.

5 End the exposure.

- "Bulb": Lift your finger from the shutter-release button.
- "Time": Press the shutter-release button all the way down a second time.

 
Long time-exposures

- Note that "noise" (bright spots, randomly-spaced bright pixels or fog) may be present in long exposures.
- Bright spots and fog can be reduced by choosing [ON] for [Long exposure NR] in the photo shooting menu.
- We recommend using one of the following power sources to prevent loss of power during long exposures:
 - A fully-charged battery
 - An optional EH-8P AC adapter connected using the supplied USB cable (featuring Type C connectors at both ends)
 - Portable chargers (power banks)
- To prevent blur, use of a tripod or a device such as an optional remote cord is recommended.
- Note that optional ML-L7 remote controls function in "Time" mode even when a shutter speed of **Bulb** is selected.


Autoexposure (AE) lock

Use autoexposure lock to lock exposure, preventing the camera adjusting exposure automatically.

• To set the autoexposure lock, press the 駐 (**On**) button.



  Keeping the 紅 (On) button pressed locks exposure, preventing it changing in response to changes in composition or subject brightness. · An **AE-L** icon will be displayed in the shooting display.



- · If autofocus is enabled, press the shutter-release button halfway to focus before pressing the ﷺ (on) button. This locks both focus and exposure.
- While keeping the 紅 (**On**) button pressed, recompose the photograph and shoot.

Tip: Locking exposure with the shutter-release button

If [On (half press)] is selected for Custom Setting c1 [Shutter-release button AE-L], exposure will lock while the shutter-release button is pressed halfway.

Tip: Metered area

- With [Spot metering], exposure will be locked at the value metered in a circle centered on the current focus point.
- With [Center-weighted metering], exposure will be locked at a value weighted toward an 8-mm circle in the center of the display.

Tip: Adjusting shutter speed and aperture

The following settings can be adjusted while the ﷺ (O₁) button is pressed:

Shooting mode	Setting
P	Shutter speed and aperture (flexible program; 🕮 144)
S	Shutter speed
A	Aperture

· The new values can be confirmed in the shooting display.

 
Exposure compensation

Exposure compensation is used to alter exposure from the value suggested by the camera. It can be used to make pictures brighter or darker.




■ Adjusting exposure compensation

Hold the **☑** button and rotate a command dial.



- Choose from values between –5 EV (underexposure) and +5 EV (overexposure). Values between –3 EV and +3 EV are available in video mode.
- At default settings, changes to exposure compensation are made in increments of 1/3 EV. The size of the increments can be changed using Custom Setting b2 [EV steps for exposure cntrl].
- · Higher values make the subject brighter, lower values darker.

  The shooting display shows the ☑ icon and indicators in photo mode and the ☑ icon in video mode. The current value for exposure compensation can be confirmed by pressing the ☑ button.



Monitor Viewfinder

- Normal exposure can be restored by setting exposure compensation to ±0.0. Exposure compensation is not reset when the camera is turned off.
- In and SCN modes, exposure compensation will be reset when another shooting mode is selected or the camera is turned off.

Tip: Mode M

- In mode M, exposure compensation affects only the exposure indicator; shutter speed, aperture, and ISO sensitivity do not change. The overall brightness of the image also does not change.
- The exposure indicator and the current value for exposure compensation can be displayed by pressing the **2** button.
- When auto ISO sensitivity control (

 175) is in effect, ISO sensitivity is
 automatically adjusted according to the value selected for exposure
 compensation, and the overall brightness of the image changes.

Tip: Flash photography

When the built-in flash or an optional flash unit is used, exposure compensation affects both flash level and exposure, altering the brightness of both the main subject and the background. Custom Setting e3 [Exposure comp. for flash] can be used to restrict the effects of exposure compensation to the background only.

Release mode

Choose the operation performed when the shutter-release button is pressed all the way down.

Choosing a release mode

To choose the operation performed when the shutter-release button is pressed all the way down, hold the 및 (ⓒ) button and rotate the main command dial.





Mode		Description	
S	[Single frame]	The camera takes one photograph each time the shutter-release button is pressed.	
멜L	[Continuous L]	The camera takes photographs at a selected rate while the shutter-release button is pressed. Choose from rates of from 1 to 5 fps. To choose the frame rate, hold the (③) button and rotate the sub-command dial. If the built-in flash is used, only one picture will be taken each time the shutter-release button is pressed.	

Mode		Description	
멜ㅐ	[Continuous H]	The camera takes photographs at up to 5.6 fps (up to 9.7 fps in silent mode) while the shutter-release button is pressed. If the built-in flash is used, only one picture will be taken each time the shutter-release button is pressed.	
밀HŤ	[Continuous H (extended)]	The camera takes photographs at up to 11 fps (up to 15 fps in silent mode) while the shutter-release button is pressed. If the built-in flash is used, only one picture will be taken each time the shutter-release button is pressed.	
밀15	[C15]	The camera takes photographs at 15 or 30 fps while	
밀30	the shutter-release button is pressed (\Box 1		
৩	[Self-timer]	Take pictures with the self-timer (🗆 171).	

Frame advance rate

The maximum frame advance rates for [Continuous H] and [Continuous H (extended)] vary with camera settings.

	Shutte		r type	
Release mode	lmage quality	Mechanical shutter	Electronic front-curtain shutter	[Silent mode]: [ON]
[Continuous H]	NEF (RAW)/NEF (RAW) +	Approx. 5.4 fps	Approx. 7.9 fps	Approx. 6.7 fps
	JPEG/HEIF	Approx. 5.6 fps	Approx. 8.3 fps	Approx. 9.7 fps
[Continuous H	NEF (RAW)/NEF (RAW) +	Approx. 11 fps	Approx. 10 fps	Approx. 8.9 fps
(extended)]	JPEG	Approx. 11 fps	Approx. 10 fps	Approx. 15 fps

Cautions: Continuous H (extended)

- The camera may be unable to maintain consistent exposure across each burst at some settings. For consistent exposure across all the shots in each burst, use autoexposure lock (□162).
- The frame advance rate for [Continuous H (extended)] drops to that for [Continuous H] when [HLG] is selected for [Tone mode] in the photo shooting menu.

Cautions: Burst photography

 Depending on shooting conditions and memory card performance, the memory card access lamp may light for anywhere from a few tens of seconds to around a minute. Do not remove the memory card while the memory card access lamp is lit. Not only could any unrecorded images be lost, but the camera or memory card could be damaged.

- If the camera is switched off while the memory card access lamp is lit, it will not power off until all images in the buffer have been recorded.
- If the battery is exhausted while images remain in the buffer, the shutter release will be disabled and the images transferred to the memory card.

Tip: The memory buffer

 While the shutter-release button is pressed halfway, the frame-count display will show the number of pictures that can be stored in the memory buffer.



- When the buffer is full, the display will show r000 and the frame rate will drop.
- The number shown is approximate. The actual number of photos that can be stored in the memory buffer varies with camera settings and shooting conditions.

Tip: Series

Each series of shots taken during burst photography or high-speed frame capture + can be treated as a group. Use [Series playback] in the playback menu to choose how bursts are handled during playback.

High-speed frame capture + (C15/C30)

For high-speed burst photography at frame rates of 15 or 30 fps (high-speed frame capture +), hold the 및 (৩) button and rotate the main command dial to choose [C15] or [C30].







- The photos recorded may also include the final pictures from frames buffered while the shutter- release button is pressed halfway ("Pre-Release Capture"); to choose how much of the buffer is saved, use Custom Setting d3 [Pre-Release Capture options]. You can also limit the length of the burst recorded after the shutter-release button is pressed all the way down (\$\square\$608).
- The touch shutter can be used only to take one picture at a time. Use the shutter-release button for high-speed frame capture +.

High-speed frame capture +: Restrictions

- Image quality is fixed at [JPEG/HEIF normal] and pictures are recorded in JPEG format.
- · Image size is fixed at [Large].
- Shutter speed is limited to values between 1/4000 s and 1/60 s.
- Exposure compensation is restricted to values between –3 and +3 EV, although settings between –5 and +5 EV can be selected.
- The upper limit for ISO sensitivity is ISO 51200, even when higher values (Hi 0.3 through Hi 2.0) are selected.
- The option chosen for [Minimum shutter speed] will not apply if [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu.
- High-speed frame capture + cannot be combined with some camera features, including:
 - flexible program,
 - HLG tone mode,
 - photo flicker reduction,
 - flash photography,
 - bracketing,
 - multiple exposures,
 - HDR overlay,
 - interval-timer photography,
 - time-lapse video recording, and
 - focus shift.

Tip: High-speed frame capture +

Memory cards with a high write speed are recommended (□868).

Using the self-timer (ல்)

In self-timer mode, pressing the shutter-release button all the way down starts a timer, and a photo is taken when the timer expires.

1 Hold the 🖫 (ఄ) button and rotate the main command dial to select [Self-timer].





- 2 Hold the 🖳 (७) button and rotate the sub-command dial to choose the self-timer delay.
- Frame the photograph and focus.



The timer will not start if the shutter cannot be released, as may be the case, for example, if the camera is unable to focus when **AF-S** is selected for focus mode.

4 Start the timer.

• Press the shutter-release button all the way down to start the timer; the self-timer lamp will begin to flash. The lamp stops flashing two seconds before the timer expires.





• The timer duration, the number of shots taken, and the interval between shots can be selected using Custom Setting c2 [**Self-timer**].

ISO sensitivity

About ISO sensitivity

The camera's sensitivity to light (ISO sensitivity) can be adjusted according to the amount of light available. In general, choosing higher values allows faster shutter speeds at the same aperture. Choose from settings of from ISO 100 to 51200. Extended settings of about 0.3, 0.7, 1, and 2 EV (ISO 204800 equivalent) above ISO 51200 are also available.

- An [Auto] option is available in a or SCN mode.
- Manual ISO sensitivity selection is available in video mode only when [OFF] is selected for [ISO sensitivity settings] > [Auto ISO control (mode M)] in mode M. Otherwise ISO sensitivity for video recording will be set automatically by the camera. In video mode, you can choose from settings of from ISO 100 to 25600; but extended settings are not available.

■ Adjusting ISO sensitivity

- Hold the ISO button and rotate the main command dial.
- $\boldsymbol{\cdot}$ Your selection is shown in the shooting display.



 At default settings, changes to ISO sensitivity are made in increments of 1/3 EV. The size of the increments can be changed using Custom Setting b1 [ISO sensitivity step value].

High ISO sensitivities

The higher the ISO sensitivity, the less light needed to make an exposure, allowing pictures to be taken when lighting is poor and helping prevent blur when the subject is in motion. Note, however, that the higher the sensitivity, the more likely the image is to be affected by "noise" in the form of randomly-spaced bright pixels, fog, or lines.

 "Noise" can be reduced by enabling high ISO noise reduction. High ISO noise reduction can be enabled using the [High ISO NR] items in the photo shooting and video recording menus.

Tip: The photo shooting menu [ISO sensitivity settings] option ISO sensitivity can also be adjusted using the [ISO sensitivity settings] item in the photo shooting menu.



Tip: Hi 0.3-Hi 2.0

A setting of [**Hi 0.3**] corresponds to an ISO sensitivity approximately 0.3 EV higher than ISO 51200 (equivalent to ISO 64000) and [**Hi 2.0**] to an ISO sensitivity approximately 2 EV higher (equivalent to ISO 204800). Note that pictures taken at these settings are particularly prone to "noise" in the form of randomly-spaced bright pixels, fog, or lines.

Auto ISO sensitivity control

Auto ISO sensitivity control automatically adjusts ISO sensitivity if optimal exposure cannot be achieved at the value selected by the user. You can select an upper limit for auto ISO sensitivity control (200–Hi 2.0) to prevent ISO sensitivity being raised too high.

• In video mode, you can select an upper limit from ISO 200 to 25600.

■ Enabling auto ISO sensitivity control

 Hold the ISO button and rotate the sub-command dial to select from ISO AUTO (auto ISO sensitivity control enabled) and ISO (auto ISO sensitivity control disabled).



 When auto ISO sensitivity control is enabled, the shooting display will show ISO AUTO. When sensitivity is altered from the value selected by the user, the ISO sensitivity will be shown in the displays.



 Maximum sensitivity can be adjusted using the [ISO sensitivity settings] item in the photo shooting menu.

Cautions: Auto ISO sensitivity control

- If value currently selected for [ISO sensitivity settings] is higher than that chosen for [Maximum sensitivity], the value chosen for [ISO sensitivity settings] will serve as the upper limit for auto ISO sensitivity control.
- During flash photography, shutter speed is limited to the range defined by the values selected for Custom Settings e1 [Flash sync speed] and e2 [Flash shutter speed]. If the value selected for [Minimum shutter speed] is not in this range, the value selected for Custom Setting e2 [Flash shutter speed] becomes the effective minimum shutter speed.
- Except in mode M, videos are recorded using auto ISO sensitivity control.
 Auto ISO sensitivity control can be enabled for video recording in mode M by selecting [ON] for [ISO sensitivity settings] > [Auto ISO control (mode M)] in the video recording menu.

White balance

About white balance

 
White balance ensures that white objects appear white, regardless of the color of the light source. The default setting (auto white balance, or **3** is recommended with most light sources; if the desired results cannot be achieved with auto white balance, choose another option as described below.

II Adjusting white balance

 White balance can be adjusted using the [White balance] items in the it menu, photo shooting menu, or video recording menu.



 At default settings, white balance can also be selected by holding Fn1 button and rotating the main command dial. The selected option is shown by an icon in the shooting display.



Options for the selected setting, if any, can be chosen by holding the **Fn1** button and rotating the sub-command dial.

Option	Color temperature*	Description
™A [Auto]		White balance is adjusted automatically for optimal results with most light sources. When the built-in flash or an optional flash unit is used, white balance will be adjusted according to the lighting produced by the flash.
(reduce warm colors)	Approx. 3500– 8000 K	Eliminate the warm color cast produced by incandescent lighting.
[™] A1 [Keep overall atmosphere]	Approx. 3500– 8000 K	Partially preserve the warm color cast produced by incandescent lighting.
[™] A ₂ [Keep warm lighting colors]	Approx. 3500– 8000 K	Preserve the warm color cast produced by incandescent lighting.
※ A [Natural light auto]	Approx. 4500– 8000 K	When used under natural light in place of A [Auto], this option produces colors closer to those seen by the naked eye.
☀ [Direct sunlight]	Approx. 5200 K	Use with subjects lit by direct sunlight.
♣ [Cloudy]	Approx. 6000 K	Use in daylight under overcast skies.
å ⊾ [Shade]	Approx. 8000 K	Use in daylight with subjects in shade.
* [Incandescent]	Approx. 3000 K	Use under incandescent lighting.

Option	Color temperature*	Description	
※[Fluorescent]			
#CW [Cool-white fluorescent]	Approx. 4200 K	Use under fluorescent lighting;	
≋™ [Day white fluorescent]	Approx. 5000 K	choose the bulb type according to the light source.	
≋吖 [Daylight fluorescent]	Approx. 6500 K		
™\$ [Flash]	Approx. 5400 K	Use for flash photography.	
[3 [Choose color temperature]	Approx. 2500– 10000 K	Direct color-temperature selection. To choose a color temperature, hold the Fn1 button and rotate the sub-command dial.	
PRE [Preset manual]		Neasure white balance for the subject or light source or copy white balance from an existing photograph. To choose a white balance preset, hold the Fn1 button and rotate the sub-command dial. To enter direct measurement mode, press and hold the Fn1 button (□193).	

^{*} Values when fine-tuning is set to 0.

▼▲ [Natural light auto]

***A** [Natural light auto] may not produce the desired results under artificial light. Choose **A** [Auto] or an option that matches the light source.

Studio flash lighting

[™]A [Auto] may not produce the desired results with large studio flash units. Use preset manual white balance or set white balance to [™] **5** [Flash] and use fine-tuning to adjust white balance.

Tip: Auto

• The photo info [Basic shooting data] page for pictures shot with [™]A [Auto], **A [Natural light auto], or PRE [Preset manual] selected for white balance lists the color temperature in effect at the time the picture was taken (□252). You can use this as reference when choosing a value for 【I [Choose color temperature].



- To view the [Basic shooting data] page during playback, go to [Playback display options] in the playback menu and place checks () next to [Shooting data] and [Basic shooting data].
- Color temperature is not shown for pictures taken using high-speed frame capture +.

Tip: The [White balance] options

 
White balance can also be adjusted from the photo shooting and video recording menus.



Tip: Color temperature

The perceived color of a light source varies with the viewer; some may have a red cast while others appear blue. Color temperature is an objective measure of the color of a light source, expressed in Kelvins (K). The lower the color

temperature, the redder the cast (1); the higher the temperature, the bluer the cast (2).



Tip: Choosing a color temperature

In general, choose lower values if your pictures have a red cast or to intentionally make pictures bluer, higher values if your pictures are tinged blue or to intentionally make pictures redder.

Fine-tuning white balance

Each white balance option can be fine-tuned by up to six steps in either direction from the center along both the A (amber)–B (blue) and G (green)–M (magenta) axes.

■ Using buttons

Choose a white balance option by holding the Fn1 button and rotating a command dial.





2 Keeping the Fn1 button pressed, fine-tune white balance using the multi selector.

 Use the multi selector to position the cursor on the grid. The selected value is displayed to the right of the grid.



- The A (amber)–B (blue) axis corresponds to color temperature and is ruled in increments of 0.5. A change of 1 is equivalent to approximately 5 mired.
- The G (green)–M (magenta) axis has effects similar to color compensation filters and is ruled in increments of 0.25. A change of 1 is equivalent to approximately 0.05 diffuse density units.

3 Save changes.

- The selected setting takes effect when the Fn1 button is released.
- · If white balance has been fine-tuned, an asterisk ("\mathbf*") will be displayed in the white balance icon.



II Using the menus

Select [White balance] in the photo shooting or video recording menu, highlight the desired option, and press as often as necessary to display fine-tuning options.



For information on fine-tuning [**Preset manual**] white balance, see "Fine-tuning preset manual white balance" (\square 199).

2 Fine-tune white balance.

· Use the multi selector to position the cursor on the grid. The selected value is displayed to the right of the grid.



- The A (amber)–B (blue) axis corresponds to color temperature and is ruled in increments of 0.5. A change of 1 is equivalent to approximately 5 mired.
- The G (green)–M (magenta) axis has effects similar to color compensation filters and is ruled in increments of 0.25. A change of 1 is equivalent to approximately 0.05 diffuse density units.

3 Save changes.

- Press ® to save changes and exit to the menus.



Tip: The i menu

Pressing \otimes when [White balance] is highlighted in the i menu displays a list of white balance options. If an option other than \square [Choose color temperature] is highlighted, fine-tuning options can be displayed by pressing \square . Any changes to fine-tuning options can be previewed in the display.





- 6 Increase green
- B Increase blue
- A Increase amber
- M Increase magenta
- Tap the arrows in the display or use the multi selector to fine-tune white balance
- Press @ to save changes and return to the i menu.

 If white balance has been fine-tuned, an asterisk ("\(\mathbf{x}'' \)) will be displayed in the white balance icon.



Tip: The information display

To choose a white balance setting using the command dials, press the **Fn1** button while shooting information is displayed. The selected setting can be fine-tuned using the multi selector while the **Fn1** button is pressed.



Tip: White balance fine-tuning

The colors on the fine-tuning axes are relative, not absolute. Selecting more of a color on a given axis does not necessarily result in that color appearing in pictures. For example, moving the cursor to B (blue) when a "warm" setting such as * [Incandescent] is selected will make pictures slightly "colder" but will not actually make them blue.

Tip: "Mired"

Values in mired are calculated by multiplying the inverse of the color temperature by 106. Any given change in color temperature produces a greater difference in color at low color temperatures than it would at higher color temperatures. For example, a change of 1000 K produces a much greater change in color at 3000 K than at 6000 K. Mired is a measure of color temperature that takes such variation into account, and as such is the unit used in color-temperature compensation filters.

E.g.: Change in color temperature (in Kelvin): Value in mired

- · 4000 K 3000 K = 1000 K: 83 mired
- 7000 K 6000 K = 1000 K: 24 mired

Choosing a color temperature

Choose a color temperature by entering values for the A (amber)–B (blue) and G (green)–M (magenta) axes.

Using buttons

Hold the Fn1 button and rotate the main command dial to select[Choose color temperature].





2 Keeping the Fn1 button pressed, rotate the sub-command dial to choose a color temperature.





Color temperature will change in increments of 1 mired.

3 Keeping the Fn1 button pressed, fine-tune white balance using the multi selector.

· Use the multi selector to position the cursor on the grid. The selected value is displayed to the right of the grid.



- The A (amber)–B (blue) axis corresponds to color temperature and is ruled in increments of 0.5. A change of 1 is equivalent to approximately 5 mired.
- The G (green)–M (magenta) axis has effects similar to color compensation filters and is ruled in increments of 0.25. A change of 1 is equivalent to approximately 0.05 diffuse density units.

4 Save changes.

- The selected setting takes effect when the **Fn1** button is released.
- If color temperature has been fine-tuned, an asterisk ("\mathbf{#}") will appear in the white balance icon.



■ Using the menus

Select [White balance] in the photo shooting or video recording menu, then highlight [Choose color temperature] and press
.

2 Choose a color temperature.

Press **③** or **⑤** to highlight digits and press **⑤** or **⑥** to change.



3 Fine-tune white balance.

After choosing a color temperature, press the \mathbb{Q} (?) button to display fine-tuning options. Use the multi selector to position the cursor on the grid.



- The cursor can be moved up to six steps from the center along either axis. The selected value is displayed to the right of the grid.
- The A (amber)–B (blue) axis corresponds to color temperature and is ruled in increments of 0.5. A change of 1 is equivalent to approximately 5 mired.
- The G (green)–M (magenta) axis has effects similar to color compensation filters and is ruled in increments of 0.25. A change of 1 is equivalent to approximately 0.05 diffuse density units.

4 Save changes.

- Press ® to save changes and exit to the menus.
- · If color temperature has been fine-tuned, an asterisk ("\mathbf{x}") will appear in the white balance icon.



▼ Cautions: Color-temperature selection

- Do not use color-temperature selection with fluorescent light sources; instead, use the # [Fluorescent] option.
- When using color-temperature selection with other light sources, take a test shot to determine if the selected value is appropriate.

Tip: The i menu

Pressing m when [White balance] is highlighted in the \emph{i} menu displays a list of white balance options. When m [Choose color temperature] is highlighted, color temperature options can be viewed by pressing m.



- · Press ♠ or ♠ to highlight digits and press ♠ or ♠ to change.
- To fine-tune the currently-selected value, press the **Q** (**?**) button.



- Press ® to save changes and return to the *i* menu.
- If color temperature has been fine-tuned, an asterisk ("*x") will appear in the white balance icon.

Preset manual

White balance settings such as A [Auto], * [Incandescent], and A [Choose color temperature] may fail to produce the desired results under mixed lighting or lighting with a strong color cast. Should this occur, white balance can be set to a value measured under the light source used in the final photograph. Two methods are available for setting preset white balance:

Method	Description
Direct measurement	Measure white balance in a selected area of the frame (□194).

Method	Description
Copying a value from	Copy white balance from a photo on a
existing photograph	memory card (🗆 196).

■ Direct measurement

The camera can store up to six values for preset manual white balance.

1 Hold the Fn1 button and rotate the main command dial to select PRE.







2 Select a preset.

Hold the **Fn1** button and rotate the sub-command dial until the desired white balance preset (d-1 to d-6) is displayed.







3 Select direct measurement mode.



- Release the Fn1 button briefly and then press it again to enter direct measurement mode. PRE will flash in the shooting display.
- A white balance target (\Box) will appear in the center of the frame.

4 Position the white balance target (□) over a white or gray object and measure a value for preset manual white balance.



- · Position the target (□) using the multi selector.
- To measure white balance, press the shutter-release button all the way down or press

 White balance can be measured multiple times while direct measurement mode is in effect.
- You can also position the target (\Box) and measure white balance by tapping the display.
- You cannot move the target (□) when the built-in flash is enabled or an optional flash unit is attached. Frame the shot so that the white or gray reference object is in the center of the display.
- If the camera is unable to measure white balance, a message will be displayed and the camera will return to direct measurement mode. Try measuring white balance again, for example with the target (

) positioned over a different area of the subject.

5 Press the *i* button to exit direct measurement mode.

The preset manual white balance menu

The preset manual white balance menu can be accessed by selecting [White balance] > PRE [Preset manual] in the photo shooting menu. The preset manual white balance menu offers options for copying values for preset manual white balance from an existing photograph or adding comments to or protecting white balance presets.

Protected presets

White balance presets indicated by $\mathbf{O}_{\mathbf{n}}$ icons are protected and cannot be changed.

Preset manual: Selecting a preset

White balance presets can be viewed by selecting [White balance] > PRE [Preset manual] in the photo shooting menu. To recall a stored value, highlight a preset using the multi selector and press ⊗.



Direct measurement mode

Direct measurement mode will end if no operations are performed in the time selected for Custom Setting c3 [Power off delay] > [Standby timer].

Measuring white balance

Preset manual white balance cannot be measured during multiple exposures.

■ Copying white balance from a photograph

Follow the steps below to copy a value for white balance from an existing photograph to a selected preset.

Select [White balance] in the photo shooting or video recording menu, then highlight PRE [Preset manual] and press .



2 Select a destination.



- · Using the multi selector, highlight the destination preset (d-1 to d-6).
- Press

 to view the preset manual white balance menu.

3 Choose [Select picture].



Highlight [Select picture] and press $\ \mathfrak{D}$ to view the pictures on the memory card.

4 Highlight the source image.



- · Use the multi selector to highlight the desired picture.
- To view the highlighted picture full frame, press and hold the \mathfrak{P}

5 Copy white balance.

- Press ® to copy the white balance value for the highlighted photograph to the selected preset.
- If the highlighted photograph has a comment, the comment will be copied to the comment for the selected preset.

Tip: Fine-tuning preset manual white balance

The selected preset can be fine-tuned by selecting [Fine-tune] in the preset manual white balance menu.



Tip: [Edit comment]

To enter a descriptive comment of up to 36 characters for the current white-balance preset, select [**Edit comment**] in the preset manual white balance menu. Enter a comment as described in "Text entry" (\square 78).



Tip: [Protect]

To protect the current white balance preset, select [ON] for [Protect] in the preset manual white balance menu. The preset cannot be modified as long as [ON] is selected for [Protect].

 


Picture Controls

Types of Picture Controls

Nikon's unique Picture Control system makes it possible to share image processing settings, including sharpening, contrast, brightness, saturation, and hue, among compatible devices and software. The following Picture Controls are available.

- Picture Control: Picture Controls provided with the camera. Basic
 Picture Controls, including [Auto] and [Standard] modes (\$\mathbb{Q}\$23).
- **Creative Picture Control**: Picture Controls provided with the camera. These controls offer unique combinations of hue, tone, saturation, and other settings tuned for particular effects (\$\subseteq\$203).
- Picture Control (HLG): Picture Controls provided with the camera.
 They are selected via [Set Picture Control (HLG)] in the photo shooting menu when [Tone mode] in the photo shooting menu is set to [HLG] in photo mode (□205).
- Custom Picture Control: Picture Controls created with the camera or NX Studio computer software. These can be added to the camera separately based on the Picture Controls provided with the camera. To create Custom Picture Controls with the camera, use [Manage Picture Control] in the photo shooting or video recording menu (C15). If using NX Studio, create a Custom Picture Control on the software, export it as a file, copy to a memory card, and import it to the camera (C1219). For details on using NX Studio to create and export Custom Picture Controls, see the NX Studio online help.




• Cloud Picture Control: Picture Controls provided by the Nikon Imaging Cloud cloud service. They can be downloaded and imported to the camera as Picture Controls. These Picture Controls can be adjusted once added to the camera as Custom Picture Controls (220).



About Picture Controls

■ Choosing a Picture Control

 1 Press the 🕾 button.



- In photo mode, [Set Picture Control] options in the photo shooting menu are displayed (when [Tone mode] is set to [SDR] in the photo shooting menu).
- In photo mode, [Set Picture Control (HLG)] options in the photo shooting menu are displayed (when [Tone mode] is set to [HLG] in the photo shooting menu).
- In video mode, [Set Picture Control] options in the video recording menu are displayed.
- The same screen is also displayed when [Set Picture Control] or [Set Picture Control (HLG)] is selected in the i menu.

2 Press ⊕ or ⊕ to highlight a Picture Control.

3 Press **⊗** to select.

• The option currently selected is shown in the display during shooting.



• The [**Set Picture Control**] item in the video recording menu also offers a [**Same as photo settings**] option that sets the Picture Control for videos to the same as that used for photographs.

■ [Set Picture Control]

	Option	Description
ŒA	[Auto]	The camera automatically adjusts hues and tones based on the [Standard] (photo mode) or [Neutral] (video mode) Picture Control.
⊡SD	[Standard]	Standard processing for balanced results. Recommended for most situations.
⊠NL	[Neutral]	Minimal processing for natural results. Choose for photographs that will later be processed or retouched.
⊡VI	[Vivid]	Pictures are enhanced for a vivid, photoprint effect. Choose for photographs that emphasize primary colors.
⊠MC	[Monochrome]	Take monochrome photographs.

Option		Description
⊠FM	[Flat Monochrome]	Features gentle gradations from highlights to shadows, producing soft monochrome pictures.
⊡DM	[Deep Tone Monochrome]	Choose for slightly darker tones in the range from shadows to mid-tones, with brightness rapidly increasing as tones progress from mid-tones to highlights.
⊡PT	[Portrait]	Smooth complexions for natural-looking portraits.
⊡RP	[Rich Tone Portrait]	Produces more vivid results than [Portrait] while capturing details of the subject's complexion and avoiding loss of detail in highlights. Choose for pictures that will later be processed or retouched.
⊡LS	[Landscape]	Shoot vibrant landscapes and cityscapes. Choose for pictures that emphasize blues and greens.
⊠FL	[Flat]	Details are preserved over a wide tone range, from highlights to shadows. Choose for photographs that will later be extensively processed or retouched.
〒01 - 〒20	[Creative Picture Control] (Creative Picture Control)	 Creative Picture Controls offer unique combinations of hue, tone, saturation, and other settings tuned for particular effects. Choose from a total of 20 options, including [Dream] and [Morning].

	Option	Description
©- C-1- □-C-9	[Custom Picture Control] (Custom Picture Control)	Displayed if a modified Picture Control is saved as a Custom Picture Control to the camera (\$\square\$215)\$. The default name is the name of the existing Picture Control with a two-digit number appended. This can be changed as desired.
⊡1 <u>.</u> _ ⊡9 <u>.</u>	[Cloud Picture Control] (Cloud Picture Control)	Displayed if Picture Controls are downloaded from Nikon Imaging Cloud cloud service and imported to the camera (□220).

■ [Set Picture Control (HLG)]

Option		Description
羅SD	[Standard]	Standard processing for balanced results. Recommended for most situations.
EAST MC	[Monochrome]	Take monochrome photographs.
GGFL	[Flat]	Choose for photographs that will later be extensively processed or retouched.

■ Limit Picture Control selection

You can limit the choice of Picture Controls available when setting the *i* menu [**Set Picture Control**] option or when setting Picture Control by pressing the - button. You can limit the Picture Controls displayed in photo mode (when [**Tone mode**] is set to [**SDR**]) and in video mode separately.

1 Press the 🔁 button.



2 Press the ੴ (?) button.



3 Choose the Picture Controls to be displayed.



- Press the **DISP** button to put checks (☑) in all of the check boxes.
 Press the **DISP** button again to remove the checks (□) from all of the check boxes except [**Auto**].
- 4 Press the ॺ (?) button again to complete the settings.

▼ Limit Picture Control selection

- If [Same as photo settings] is selected for [Set Picture Control] in video mode, the limitation is also applied to the Picture Controls that are displayed in photo mode (when [SDR] is selected for [Tone mode] in the photo shooting menu).
- The set limitation will not be applied to the [Set Picture Control] settings in the photo shooting menu and video recording menu.
- You cannot limit the Picture Controls displayed in photo mode (when [Tone mode] is set to [HLG] in the photo shooting menu).

Tip: Setting Picture Controls in the menus

Picture Controls can also be set in the following menus.

- · [Set Picture Control] in the photo shooting menu
- · [Set Picture Control (HLG)] in the photo shooting menu
- · [Set Picture Control] in the video recording menu



Modifying Picture Controls

Picture Controls can be adapted to suit the scene or the photographer's creative intent.

1 Press the 🔁 button.



2 Press ① and ② to choose a Picture Control, and press ②.



3 Adjust settings.



- Press
 ⊕ or
 ⊕ to highlight settings and
 ⊕ or
 ⊕ to choose a value.
 Each press increments the highlighted value by 1.
- The options available vary with the Picture Control selected.
- To quickly adjust levels for balanced [Sharpening], [Mid-range sharpening], and [Clarity], highlight [Quick sharp] and press ⊕ or ⊕.
- To abandon any changes and start over from default settings, press the fin button.

Tip: The sub-command dial

To adjust the highlighted value in increments of 0.25, rotate the sub-command dial.

4 Save changes and exit.

- Press ® to return to the shooting display.
- Picture Controls that have been modified from default settings are indicated by an asterisk ("\mathbb{*}").



■ Picture Control settings

	Option	Description
[Ef	ffect level]	Displayed only when a Creative Picture Control is selected. Mute or heighten the effect of the selected Picture Control.
[Quick sharp]		Apply sharpening to areas of contrast within the picture. • Adjusting [Quick sharp] simultaneously adjusts [Sharpening], [Mid-range sharpening], and [Clarity] for well-balanced results. Choose higher values for heightened sharpness. Choose lower values for greater softness. • [Sharpening], [Mid-range sharpening], and [Clarity] each apply to different areas within the picture. These parameters can also be adjusted individually.
	[Sharpening]	Apply sharpening to small areas of contrast.
	[Mid-range sharpening]	Apply sharpening to areas of contrast larger than those affected by [Sharpening] and smaller those affected by [Clarity].

	Option	Description
	[Clarity]	Apply sharpening to large areas of contrast. • Fine outlines and the brightness and contrast of the picture as a whole are unaffected.
[C	ontrast]	Adjust overall contrast.
[H	lighlights]	Displayed only for [Set Picture Control (HLG)]. Adjust highlights. Choose higher values to make highlights brighter.
[S	hadows]	Displayed only for [Set Picture Control (HLG)]. Adjust shadows. Choose higher values to make shadows brighter.
[B	rightness]	Brighten or darken mid-tones (tones that fall in the range between highlights and shadows). The effect does not extend to highlights and shadows, ensuring that details in these areas of the image are preserved. Not available when [Auto] or Creative Picture Control is selected, or in [Set Picture Control (HLG)].
[S	aturation]	Control the vividness of colors. Not available with [Monochrome], [Flat Monochrome], [Deep Tone Monochrome], or certain Creative Picture Controls.
[H	lue]	Adjust hue. Not available with [Auto], [Monochrome], [Flat Monochrome], [Deep Tone Monochrome], or certain Creative Picture Controls.
[F	ilter effects]	Displayed only with [Monochrome], [Flat Monochrome], [Deep Tone Monochrome], and certain Creative Picture Controls. Simulate the effect of color filters on monochrome pictures.

Option	Description
[Toning]	Displayed only with [Monochrome], [Flat Monochrome], [Deep Tone Monochrome], and certain Creative Picture Controls. Choose a tint for monochrome pictures. Choose from 9 different tints, including cyanotype and old-fashioned sepia. • Pressing • when an option other than [B&W] (black-and-white) is selected displays saturation options.
[Toning] (Creative Picture Controls)	Displayed only with certain Creative Picture Controls. Choose the shade of color used.

▼ The ∆ indicator

The \triangle indicator under the value display in the Picture Control setting menu indicates the value saved in the camera.



[A] (auto)

- Selecting the [A] (auto) option available for some settings lets the camera adjust the setting automatically.
- · Results vary with exposure and the position of the subject in the frame.

[Filter effects]

Choose from the following [Filter effects]:

Option	Description
[Y] (yellow)*	These options enhance contrast and can be used to tone
[O] (orange)*	down the brightness of the sky in landscape photographs. Orange [O] produces more contrast than yellow [Y], red [R]
[R] (red)*	more contrast than orange.
[G] (green)*	Green softens skin tones. Use for portraits and the like.

The term in parentheses is the name of the corresponding third-party color filter for black-and-white photography.

☑ Using [Filter effects] with [Deep Tone Monochrome]

[Deep Tone Monochrome] features a strong built-in red filter effect that applies even when [OFF] is selected for [Filter effects]. Because [Filter effects] cannot be applied more than once, selecting an option other than [OFF] will disable the built-in red filter effect. Contrast can be reduced by enabling [Y], [O], and [R].

▼ The [Auto] Picture Control

Settings can be adjusted in the range [A-2] to [A+2].



Tip: Modifying Picture Controls in the menus

To modify Picture Controls in the following menus, highlight a Picture Control and press **3**.



- · [Set Picture Control] in the photo shooting menu
- · [Set Picture Control (HLG)] in the photo shooting menu
- · [Set Picture Control] in the video recording menu
- Press
 or
 to highlight settings. Press
 or
 or to choose a value in increments of 1, or rotate the sub-command dial to choose a value in increments of 0.25.
- · The options available vary with the Picture Control selected.
- To abandon any changes and start over from default settings, press the fibutton.
- Press ® to save changes.



 Picture Controls that have been modified from default settings are indicated by an asterisk ("\("\)").



Custom Picture Controls

Save modified Picture Controls as Custom Picture Controls.


Option	Description
[Save/edit]	Create a new Custom Picture Control based on an existing preset or Custom Picture Control, or edit existing Custom Picture Controls.
[Rename]	Rename Custom Picture Controls.
[Delete]	Delete Custom Picture Controls.
[Load/save]	Copy Custom Picture Controls to and from the memory card.

■ Creating Custom Picture Controls

Highlight [Manage Picture Control] in the photo shooting or video recording menu and press ⊕.



 2 Select [Save/edit].



Highlight [Save/edit] and press ③ to view [Choose Picture Control] options.

3 Select a Picture Control.



- Highlight an existing Picture Control and press to display edit options.
- To save a copy of the highlighted Picture Control without further modification, press

 [Save as] options will be displayed; proceed to Step 5.

4 Adjust settings.



- The settings available and the techniques for editing them are the same as for [Set Picture Control].
- Press ® to display [Save as] options when settings are complete.
- To abandon any changes and start over from default settings, press the fin button.

5 Select a destination.



Choose a destination for the Custom Picture Control (C-1 through C-9).

6 Name the Picture Control.



- Pressing ③ when a destination is highlighted in the previous step displays the text-entry dialog for renaming.
- By default, new Picture Controls are named by adding a two-digit number to the name of the existing Picture Control. The two-digit number is assigned automatically.
- Custom Picture Control names can be up to nineteen characters long.
- For information on text entry, see "Text entry" (\$\sup\$78).

7 Press the ♥ button.



- · Text entry will end.
- The new Picture Control will be added to the Picture Control list.



The original Picture Control icon

The original preset Picture Control on which the Custom Picture Control is based is indicated by an icon in the edit display.



Custom Picture Control options

The options available with Custom Picture Controls are the same as those on which the Custom Picture Control was based.

Copy Custom Picture Controls to and from a memory card

The [Load/save] item in the [Manage Picture Control] menu can be used to copy Custom Picture Controls from the camera to a memory card. You can also delete Custom Picture Controls in a memory card, or copy them to the camera.



- [Copy to camera]: Copy (import) Custom Picture Controls from the memory card to the camera. The Picture Controls are copied to Custom Picture Controls C-1 through C-9 on the camera and can be named as desired
- [Delete from card]: Delete selected Custom Picture Controls from the memory card.
- [Copy to card]: Copy (export) a Custom Picture Control from the camera to a memory card. Highlight a destination (1 through 99) for the selected Custom Picture Control and press ® to export it to a "CUSTOMPC" sub-

- folder, which will automatically be created under the "NIKON" folder on the memory card.
- Exported Custom Picture Controls can be copied to another memory card using a computer. When copying Picture Controls to a memory card for import to the camera, be sure to save them to the card's root (top) directory or to the "CUSTOMPC" folder under the "NIKON" folder.

Tip: [Flexible Color]

When adjusting Picture Controls with the NX Studio computer software, selecting [Flexible Color] for the Picture Control option allows for a wider variety of Picture Control adjustments with Color Blender and Color Grading, in addition to other adjustment parameters. You can save Picture Controls adjusted using [Flexible Color] as Custom Picture Controls and export them to a file and import it to the camera.

 Custom Picture Controls based on [Flexible Color] cannot be adjusted or renamed on the camera.

Cloud Picture Controls

If Picture Controls are transferred to the camera from Nikon Imaging Cloud, they can be downloaded and read to the camera by [Set Picture Control] > [Add Cloud Picture Control files] in the camera photo shooting or video recording menu. These Picture Controls can be adjusted once selected and added to the camera via [Manage Picture Control] in the photo shooting or video recording menu (\$\Pi\$215).



 If there are Picture Controls in Nikon Imaging Cloud that have not been imported to the camera, notification marks will appear on the photo shooting and video recording menu tabs and [Set Picture Control] item in the camera menu.



- The camera and Nikon Imaging Cloud must be connected via Wi-Fi to download and import Picture Controls. In the camera network menu, set [Nikon Imaging Cloud] > [Connect to Nikon Imaging Cloud] to [ON], and then turn on the Nikon Imaging Cloud camera sign-in setting.
- See the Nikon Imaging Cloud online help for how to transfer Picture Controls to the camera and how to turn on the camera sign-in setting in Nikon Imaging Cloud.

Video recording

Video file types

Use [**Video file type**] in the video recording menu to choose the video file type.

· You have a choice of MOV and MP4 formats.

Option	Description	YCbCr
[H.265 10-bit (MOV)]	This option assumes the footage will later undergo editing using a professional high-performance computer system of the type typically employed for editing video. You have a choice of three tone modes: [SDR], [HLG], and [N-Log]. Footage is recorded using long GOP inter-frame compression. Audio is recorded in Linear PCM format.	
[H.265 8-bit (MOV)]	3 . 3	
A widely-supported file type. Footage is recorded using long GOP inter-frame compression. Audio is recorded in AAC format.		

Tone mode

To choose the tone mode, highlight [H.265 10-bit (MOV)] and press ③.

 For videos shot using [H.265 8-bit (MOV)] and [H.264 8-bit (MP4)], or when the shooting mode is SCN, tone mode is fixed at [SDR] and tone-mode selection is not available.

Option	Description
[SDR]	This mode supports a normal range of brightnesses (dynamic range).
[HLG]	This mode supports HDR (high dynamic range; □230). It has a wider dynamic range than SDR.
[N-Log]	This mode uses Nikon's unique log curve. Choose for pictures with a wide dynamic range. 3D LUTs for use with N-Log curves can be applied post-production for pictures that display beautifully on monitors that support Rec. 709 (□233).

Color space

The color spaces for videos are as follows:

• [**SDR**]: BT.709 • [**HLG**]: BT.2100

Video frame size and rate options

Video frame size (in pixels) and frame rate can be selected using [Frame size/frame rate] in the video recording menu. The options available for frame size vary with the settings chosen for [Video file type] in the video recording menu.

Option1	Video file t	file type		
Орцоп	H.265 10-bit/8-bit	H.264 8-bit		
[3840×2160; 60p] 2, 3, 4	~	_		
[3840×2160; 50p] 2, 3, 4	~	_		
[3840×2160; 30p] ²	~	_		
[3840×2160; 25p] ²	~	_		
[3840×2160; 24p] ²	~	_		
[1920×1080; 120p] ⁴	~	_		
[1920×1080; 100p] ⁴	~	_		
[1920×1080; 60p]	~	~		
[1920×1080; 50p]	~	~		
[1920×1080; 30p]	~	~		
[1920×1080; 25p]	~	~		
[1920×1080; 24p]	~	~		
[1920×1080; 30p ×4 (slow-motion)] ⁴	_	~		
[1920×1080; 25p ×4 (slow-motion)] ⁴	_	~		
[1920×1080; 24p ×5 (slow-motion)] ⁴	_	~		

- 1 The frame rates for 120p, 100p, 60p, 50p, 30p, 25p, and 24p are respectively 119.88 fps, 100 fps, 59.94 fps, 50 fps, 29.97 fps, 25 fps, and 23.976 fps.
- 2 Videos are recorded in 4K UHD.
- 3 Videos are recorded with an angle of view equivalent to approximately 1.5 times that of a normal video (DX format).
- 4 [Electronic VR] in the video recording menu is fixed at [OFF].

■ Slow-motion videos

To record slow-motion videos, select [1920 \times 1080; 30p \times 4 (slow-motion)], [1920 \times 1080; 25p \times 4 (slow-motion)], or [1920 \times 1080; 24p \times 5 (slow-motion)] for [Frame size/frame rate] in the video recording menu.

 In the case of [1920×1080; 30p ×4 (slow-motion)], images read out at a frame rate of 120p are recorded as a 30p video. A video recorded for about 10 seconds will be played back for about 40 seconds. You can see momentary actions in slow motion, such as the impact of a ball in sports.



- Sound is not recorded.
- · Custom Setting g10 [Extended shutter speeds (S/M)] is disabled.
- The frame rates when images are read out and when videos are recorded and played back are as follows.

Frame size/frame rate	Frame rate when reading images*	recording and	
1920×1080; 30p ×4 (slow- motion)	120p	30p	

Frame size/frame rate	Frame rate when reading images*	recording and
1920×1080; 25p ×4 (slow- motion)	100p	25p
1920×1080; 24p ×5 (slow- motion)	120p	24p

 ¹²⁰p: 119.88 fps, 100p: 100 fps, 30p: 29.97 fps, 25p: 25 fps, 24p: 23.976 fps

• The maximum recording time is about three minutes.

☑ Cautions: Recording slow-motion videos

- Features that cannot be used during slow-motion video recording include:
 - video flicker reduction,
 - electronic VR.
 - time code output, and
 - Hi-Res Zoom.
- When recording via HDMI output to an external recorder, video will be recorded at original speed, not in slow motion.

Bit rate

The bit rate varies with the video file type.

Option	Video file type		
Орион	H.265 10-bit	H.265 8-bit	H.264 8-bit
[3840×2160; 60p]	Approx. 340	Approx. 300	_
[3840×2160; 50p]	Mbps	Mbps	_
[3840×2160; 30p]	Approx. 190	Approx. 150	_
[3840×2160; 25p]	Mbps	Mbps	_

Ontion	Video file type		
Option	H.265 10-bit	H.265 8-bit	H.264 8-bit
[3840×2160; 24p]	100	4 150	_
[1920×1080; 120p]	Approx. 190 Mbps	Approx. 150 Mbps	_
[1920×1080; 100p]			_
[1920×1080; 60p]	Approx. 100	Approx 80 Mbps	Approx. 50
[1920×1080; 50p]	Mbps	Approx. 80 Mbps	Mbps
[1920×1080; 30p]			
[1920×1080; 25p]	Approx. 50 Mbps	Approx. 40 Mbps	Approx. 30 Mbps
[1920×1080; 24p]			
[1920×1080; 30p ×4 (slow-motion)]	_	_	
[1920×1080; 25p ×4 (slow-motion)]	_	_	Approx. 30 Mbps
[1920×1080; 24p ×5 (slow-motion)]	_	_	

Video recording: Shooting mode

The exposure settings that can be adjusted during filming vary with the shooting mode:

Shooting mode	Aperture	Shutter speed	ISO sensitivity
AUTO (AUTO)	_	_	_
P (programmed auto)	_	_	_1
S (shutter-priority auto)	_	√ 2	—1
A (aperture-priority auto)	~	_	—1
M (manual)	~	√ 2	√ 3
SCN	_	_	_

- 1 The upper limit for ISO sensitivity can be selected using the [ISO sensitivity settings] > [Maximum sensitivity] item in the video recording menu.
- 2 Shutter speed can be set to values between 1/25 s and 1/4000 s. The slowest available shutter speed varies with the frame rate.
- 3 If [ON] is selected for [ISO sensitivity settings] > [Auto ISO control (mode M)] in the video recording menu, the upper limit for ISO sensitivity can be selected using [Maximum sensitivity].

Points to note when filming videos

Note the following points when recording videos:

- · Each video can be up to 125 minutes in length.
- Each video recorded to a card with a capacity of 32 GB or less may be saved across a maximum of 8 files. Each of these files will be a maximum of 4 GB in size. The number of files and the length of each file vary with the options selected for [Frame size/frame rate].
- Depending on memory card write speed, shooting may end before the maximum length is reached.
- A 💌 icon (🕮 110) indicates that videos cannot be recorded.
- [Spot metering] is not available during video recording.
- The built-in flash and optional flash units (□469) will not fire during video recording.

Tip: Adjusting white balance during video recording

White balance can be adjusted during video recording by holding the **Fn1** button and rotating a command dial.

Tip: Using a fixed shutter speed

In modes **S** and **M**, shutter speed can be set to values between 1/25 s and 1/4000 s (the slowest available shutter speed varies with the frame rate).

Tip: Remote cords

If [Record videos] is selected for Custom Setting g2 [Custom controls] > [Shutter-release button], the shutter-release buttons on optional remote cords can be pressed halfway to focus or pressed all the way down to start and end video recording.

Tip: Using an external microphone

You can use third-party microphones with 3.5 mm mini-jack plugs to record audio by connecting them to the external microphone input connector.

 Use [Mic jack plug-in power] in the video recording menu to choose whether the power for the external microphone is supplied by the camera (\$\square\$585\$).

Recording HLG video

Video recorded in Hybrid Log Gamma (HLG) format can be used for HDR broadcasting and the like. To record HLG video, select [H.265 10-bit (MOV)] for [Video file type] in the video recording menu and choose the [HLG] tone mode.

- · HLG video cannot be recorded when the shooting mode is SCN.
- · HLG will appear in the shooting display.
- For optimal color reproduction when viewing HLG footage, use monitors, computers, operating systems, applications, and other equipment compatible with HLG.

Cautions: HLG video

- Pictures taken with [HLG] selected for tone mode may exhibit more "noise" in the form of randomly-spaced bright pixels, fog, or lines than pictures taken using [SDR] or [N-Log].
- The lowest value available for the [ISO sensitivity settings] > [Maximum sensitivity] item in the video recording menu is ISO 800.
- The lowest value available for the [ISO sensitivity settings] > [ISO sensitivity (mode M)] item in the video recording menu is ISO 400.
- Picture Control settings cannot be adjusted using the [Set Picture Control] item in the video recording menu. You can control the appearance of HLG videos using [HLG quality] in the video recording menu.
- The [Active D-Lighting] item in the video recording menu is set to [Off] and cannot be changed.
- · The display in the monitor may flicker or appear grainy.
- The camera may have trouble focusing using autofocus but this does not indicate a malfunction.

HDR (HLG) output

Optimal color reproduction in HDR (HLG) footage output via HDMI can only be achieved if your storage device, monitor, and other equipment support HDR (HLG). If a signal is received from the connected device indicating that it supports HDR (HLG), the camera will respond with a "gamma: HLG" identifier.

Camera shooting and playback displays

When [HLG] is selected for tone mode, the shooting and playback displays in the camera monitor and viewfinder may include "noise" in the form of randomly-spaced bright pixels, fog, or lines or may fail to accurately reproduce highlights and highly-saturated colors. For accurate tone reproduction, use monitors, computers, operating systems, applications, and other equipment compatible with HLG.

☑ Viewing and editing HLG videos

HLG videos can only be viewed and edited using computer software that supports the HLG video format. Nikon's NX Studio software shows HLG videos in the thumbnail list but cannot be used to view or edit them.

Recording N-Log video

Log recording uses light levels digitized via a log function. To enable log recording using Nikon's unique "N-Log" log function, select [H.265 10-bit (MOV)] for [Video file type] in the video recording menu and choose [N-Log] as the tone mode. Choose N-Log to preserve details in highlights and shadows and avoid over-saturated colors when recording videos.

- Log recording using N-Log cannot be performed when the shooting mode is SCN.
- · NLOG will appear in the shooting display.
- The dynamic range for videos shot with ISO sensitivity set to ISO 800 is 13+ stops (1300%).
- N-Log recording is intended for footage that will be processed using color grading post-production. Color grading can be used to achieve multiple effects from a single sequence by processing it in different ways.
- · Compatible third-party software is required for color grading.
- Applying N-Log 3D LUTs during color grading produces video that displays beautifully on monitors compatible with Rec. 709.
 - N-Log 3D LUTs are available from the Nikon Download Center. https://downloadcenter.nikonimglib.com/

Cautions: N-Log video

- The lowest value available for the [ISO sensitivity settings] > [Maximum sensitivity] item in the video recording menu is ISO 1600.
- The value can be set from Lo 0.3 to 2.0 or from ISO 800 to 25600 for [ISO sensitivity settings] > [ISO sensitivity (mode M)] in the video recording menu.
- [Set Picture Control], [Active D-Lighting], [High ISO NR], [Skin softening], and [Portrait impression balance] are not available in the video recording menu.
- The display in the monitor may flicker or appear grainy.
- The camera may have trouble focusing using autofocus but this does not indicate a malfunction.

View assist

You may find that the preview in the shooting display during N-Log recording lacks contrast. Selecting [**ON**] for Custom Setting g11 [**View assist**] simplifies colors for enhanced contrast.

- · ASSET will appear in the shooting display.
- · Colors in the actual recorded footage are unaffected.
- Contrast is also enhanced when N-Log footage is viewed on the camera.

Hi-Res Zoom

Selecting [ON] for [Hi-Res Zoom] in the video recording menu lets you zoom in on your subject with no loss in resolution, even without a zoom lens.

Hi-Res Zoom is available when [1920×1080; 30p], [1920×1080;
 25p], or [1920×1080; 24p] is selected for [Frame size/frame rate] in the video recording menu.

Using Hi-Res Zoom

Select **[ON]** for **[Hi-Res Zoom]** in the video recording menu and press **①** or **②** to zoom in or out using Hi-Res Zoom.

· A 🖂 icon appears in the display when Hi-Res Zoom is enabled.



 The zoom position is shown by a bar as you zoom in or out. You can zoom in to a maximum of 2x.

Cautions: Hi-Res Zoom

- AF-area mode is fixed at [Wide-area AF (L)]. The focus point is not displayed.
- [Electronic VR] in the video recording menu is fixed at [OFF].

Tip: Custom controls for Hi-Res Zoom

The zoom position for Hi-Res Zoom can also be adjusted using controls to which [**Hi-Res Zoom** +] and [**Hi-Res Zoom** –] have been assigned via Custom Setting g2 [**Custom controls**].

- Zoom control for Hi-Res Zoom can be assigned to the camera [Fn1 button] and [Fn2 button], to the lens Fn ring via [Lens Fn ring (clockwise)] and [Lens Fn ring (counterclockwise)], and via [Lens control ring] to the lens control ring.
 - When Hi-Res Zoom is assigned to the [Fn1 button], [Fn2 button], [Lens Fn ring (clockwise)], or [Lens Fn ring (counterclockwise)], you can choose the zoom speed using Custom Setting g7 [Hi-Res Zoom speed].
 - When Hi-Res Zoom is assigned to [Lens control ring], the control ring response can be adjusted using Custom Setting f11 [Control ring response].
 - Instead of using the control ring, users of compatible lenses can employ the focus ring for Hi-Res Zoom by selecting [ON] for Custom Setting f12 [Switch focus/control ring roles].

Product review mode

Setting [Product review mode] in the video recording menu to [On] or [On (customize focus area)] will set the focus on objects close to the camera. The focus changes when a product comes in front of the camera, which is useful when shooting product review videos.

- Setting [On] will set the focus on the subject across the entire shooting display.
- Setting [On (customize focus area)] allows you to choose the dimensions (measured in focus points) of the focus areas used for the selected AF-area. To choose the AF-area size, highlight [On (customize focus area)] and press ③. Use ④ and ⑤ to choose the height and ⑥ and ⑥ to choose the width.

Product review mode

- · [Product review mode] is only enabled in video mode.
- Setting [On] or [On (customize focus area)] will make all settings suitable for shooting product review videos. Therefore, focus mode and AF-area mode settings cannot be changed.

Tip: Setting the AF-area for [On (customize focus area)] using the custom controls

When [On (customize focus area)] is set, the size of the AF-area can also be set if the multi selector is operated while using the control to which [Focus mode/AF-area mode] has been assigned with Custom Setting g2 [Custom controls].

Video self-timer

When recording using the video self-timer, video recording automatically starts when the set time expires.





- Set the self-timer to an option other than [Off] and press the videorecord button to start the timer; the video recording countdown will be displayed and the self-timer lamp will begin to flash. The selftimer lamp stops flashing and glows steadily two seconds before the timer expires.
- The video self-timer can also be set from [Video self-timer] in the video recording menu.

Video self-timer

The self-timer will not operate when videos cannot be recorded, such as when the **(SM)** (video recording disabled) icon is displayed.

Live streaming (USB streaming (UVC/UAC))

 
Video and audio from the camera can be used with live streaming software and web meeting applications by connecting the camera to a smart device or computer using the supplied USB cable.

Live streaming

You can perform live streaming by setting [**USB**] in the network menu to [**USB streaming (UVC/UAC)**] and connecting the camera to a smart device or computer using the supplied USB cable.



2 Connect the camera to a smart device or computer using the supplied USB cable.



- The camera will enter streaming stand-by mode, and a message prompting you to start streaming will be displayed along with STBY on the shooting display.
- The video mode shooting display will be displayed regardless of the photo/video selector setting. Settings for video mode, such as white balance and Picture Control, will be applied to streaming video.



3 Smart device/computer: Start streaming via a smart device or computer live streaming application.

• Streaming starts, and LIVE is displayed on the shooting display.



- · Streaming video is output as follows.
 - Frame size/frame rate: 1080/60p, 1080/30p, 720/60p, 720/30p (settings available in the software/application vary depending on the model and specifications of the smart device/computer)
 - Video format: MJPEG
 - Audio format: PCM, 16-bit, stereo

Cautions: Streaming

 
- When live streaming, be sure to check whether live streaming software or web meeting applications have been installed on your smart device or computer ahead of time.
- · Streaming will end automatically in the following situations:
 - when [USB] in the network menu is set to a setting other than [USB streaming (UVC/UAC)],
 - when the USB cable is removed and the connection is ended, or
 - when the camera is turned off.
- · Streaming cannot be combined with some camera features, including:
 - video recording,
 - zoom,
 - HDMI connection, and
 - Communication with a smart device or computer other than streaming (NX Studio software, etc.).
- Some menus can be set during streaming; however, video will be streamed in gray during menu operation.
- In addition to applications/software for streaming, connection applications or software may also be required depending on the operating system or model of your smart device or computer.
- We cannot guarantee that the camera will work with all smart devices or computers.

Viewing pictures

Viewing pictures

Full-frame playback

Press the **E** button to view the most recent picture full frame in the display.






- Press ① to return to the previous frame, ② to skip to the next frame.
- Press ②, ②, or the **DISP** button to view more information on the current picture (□246).

Thumbnail playback

To view multiple pictures, press the \Re (?) button when a picture is displayed full frame.



 

- The number of pictures displayed increases from 4 to 9 to 72 each time the ९☎ (?) button is pressed, and decreases with each press of the ♥ button.
- Highlight pictures using **(a)**, **(a)**, or **(b)**.

Touch controls

Touch controls can be used when pictures are displayed in the monitor (\square 65).

[Auto-rotate pictures]

Select [**ON**] for [**Auto-rotate pictures**] in the playback menu to automatically rotate "tall" (portrait) and "wide" (landscape) orientation pictures according to how the camera is held during playback: tall pictures will be rotated to display in tall orientation when the camera is held in wide orientation, while wide pictures will be rotated to display in wide orientation when the camera is held in tall orientation.




Picture review

When [On] is selected for [Picture review] in the playback menu, photographs are automatically displayed after shooting; there is no need for you to press the 1 button.

- If [On (monitor only)] is selected, photos will not be displayed in the viewfinder.
- In continuous release modes, display begins when shooting ends, with the first photograph in the current series displayed.
- Pictures are not rotated automatically during picture review even when [ON] is selected for [Auto-rotate pictures] in the playback menu.


Photo information

Photo information is superimposed on images displayed in full-frame playback. Press +, -, or the **DISP** button to cycle through photo information as shown below.

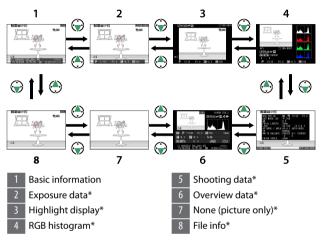

 Displayed only if the corresponding option is selected for [Playback display options] in the playback menu.

Basic information

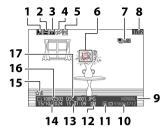


- 1 Voice memo indicator (□335)
- 2 Protect status (\$\Pi\$271)
- 3 Retouch indicator (□286)
- 4 Upload marking (\$\Pi\$275)
- 5 IPTC preset indicator (\$\pi\$718)
- 6 Focus point1 (III 134)
- 7 First picture in burst/total number of pictures in burst2 (□696)
- 8 Frame number/total number of frames
- 9 Image quality (🕮118)

- 10 Image size (□120)
- 11 Image area (**1117**)
- 12 HLG icon (□ 486)
- 13 Time of recording (\$\square\$703)
- 14 Date of recording (\$\square\$703)
- 15 Rating (**273**)
- 16 Folder name (□479)
- 17 File name (□482)


- 1 Displayed only if [Focus point] is selected for [Playback display options] in the playback menu.
- 2 Displayed on the first picture in each burst when [Mark first shot in series] is selected for [Playback display options] in the playback menu.

Exposure data

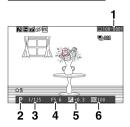


- 1 Folder number–frame number (□479)
- 2 Shooting mode (□143)
- 3 Shutter speed (□145, □147)
- 4 Aperture (1146, 1147)
- 5 Exposure compensation value
 - (□164) 6 ISO sensitivity* (□174)
- Displayed in red if the picture was taken with auto ISO sensitivity control enabled.

 Highlight display



1 Highlights (areas that may be overexposed)

 
RGB histogram



- 1 White balance (□178)
 Color temperature (□189)
 Preset manual (□193)
 White balance fine-tuning
 (□183)
- 2 Histogram (RGB channel)
- 3 Histogram (red channel)
- 4 Histogram (green channel)
- 5 Histogram (blue channel)

Playback zoom

To zoom in on the picture in the histogram display, press \mathfrak{P} . The histogram will be updated to show only the data for the portion of the image visible in the display. Use the multi selector to scroll to areas of the frame not visible in the monitor. Press $\mathfrak{P} \cong (?)$ to zoom out.

 

Histograms

Histograms show tone distribution. Pixel brightness (tone) is plotted on the horizontal axis and the number of pixels on the vertical axis.

 If the image contains objects with a wide range of brightnesses, the distribution of tones will be relatively even.



• If the image is dark, the distribution will be shifted to the left.



· If the image is bright, the distribution will be shifted to the right.



Increasing exposure compensation shifts the distribution of tones to the right, while decreasing exposure compensation shifts the distribution to the

left. Histograms can provide a rough idea of overall exposure when bright ambient lighting makes it difficult to see pictures in the monitor.


▼ The histogram display

- · RGB histograms show tone distribution.
- Camera histograms may differ from those displayed in imaging applications. Use them as a guide to actual tone distribution.

Shooting data

View the settings in effect at the time the picture was taken. The shooting data list has multiple pages, which can be viewed by pressing ② or ③. The information displayed can be selected using [Playback display options] > [Detailed shooting data] in the playback menu.

■ Basic shooting data

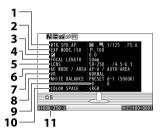

- 1 Metering (□501)
 Shutter type (□611)
 Shutter speed (□145, □147)
 Aperture (□146, □147)
 2 Shooting mode (□143)
 ISO sensitivity1 (□174)
 3 Exposure compensation value (□164)
 Optimal exposure tuning2 (□604)
 4 Focal length
- 5 Lens data
- 6 Focus mode (□122)
 - AF-area mode (□124)
 - 7 Vibration reduction (□507)
- 8 White balance³ (\$\mu\$178)
- 9 White balance fine-tuning (□183)
- 10 Color space (□ 490)
- 11 Camera name
- 1 Displayed in red if the picture was taken with auto ISO sensitivity control enabled.
- 2 Displayed if Custom Setting b6 [Fine-tune optimal exposure] has been set to a value other than zero.

Also includes the color temperature for pictures taken using <mark>聞 [Auto], ※A [Natural light auto]</mark> , or PRE [Preset manual].


II Flash data



- 1 Flash type
- 2 Remote flash control

- 3 Flash mode (□459)
- Flash control mode (□471, □503)
 Flash compensation value (□464)

■ Picture Control/HLG data

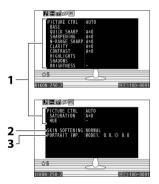

- Picture Control¹ (□200)

 HLG Picture Control¹ (□490)

 HLG quality (□575)
- Skin softening (□495)

 Portrait impression balance²
 (□496)

- 1 The items displayed vary with the Picture Control in effect when the picture was taken.
- 2 Shows the selected mode and fine-tuning value.

■ Other shooting data



- 1 High ISO noise reduction (□493)
 - Long exposure noise reduction (□492)
- 2 Active D-Lighting (□491)
- 3 HDR strength (□531)

- 4 Vignette control (□493)
- History of retouches made using [**Retouch**] option in playback *i* menu (□286). Changes are listed in the order applied.
- 6 Image comment (\$\square\$715)

■ Copyright information

Copyright information is only displayed if recorded using the [**Copyright information**] item in the setup menu at the time the picture was taken.




- 1 Photographer (C1716)
- 2 Copyright holder (□716)

Location data

Location data is only displayed for images for which the latitude, longitude, and other location data has been downloaded from smart devices.

- The items listed vary with the device supplying the location data.
- The location data displayed with videos are those reported at the start of recording.
- Note that the camera may be unable to download or display location data from smart devices depending on the version of the device operating system and/or SnapBridge app used.


III IPTC data

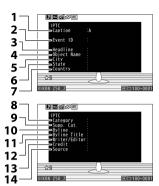

- 1 Caption
- 2 Event ID
- 3 Headline
- 4 Object Name
- 5 City
- 6 State
- 7 Country


- 8 Category
- 9 Supp. Cat. (supplemental categories)
- 10 Byline
- 11 Byline Title
- 12 Writer/Editor
- 13 Credit
- 14 Source

Overview

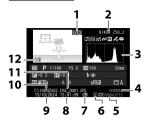

- 1 Frame number/total number of frames
- 2 Camera name
- 3 Histogram (□250)
- 4 Image quality (□118)
- 5 Image size (□120)
- 6 Image area (III)


- 7 HLG icon (□1486)
- 8 Time of recording (□703)
- 9 Date of recording (□703)
- 10 Folder name (□479)
- 11 File name (□482)
- 12 Rating (□273)

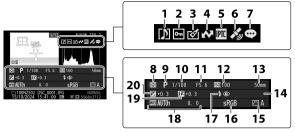

- 1 Voice memo indicator (□335)
- 2 Protect status (□271)
- 3 Retouch indicator (□286)
- 4 Upload marking (□275)
- 5 IPTC preset indicator (\$\square\$718)
- 6 Location data indicator
- 7 Image comment indicator (\$\Pi\$715)
- 8 Metering (□ 501)
- 9 Shooting mode (\$\Pi\$143)
- 10 Shutter speed (□145, □147)
- 11 Aperture (\$\Pi\$146, \$\Pi\$147)
- 12 ISO sensitivity¹ (🗆 174)

- 13 Focal length
- 14 Active D-Lighting (□491)
- 15 Picture Control (\$\Pi\$200)
- 16 Color space (□490)
- 17 Flash mode (\$\infty\$459)
- 18 White balance (□178)
 - Color temperature (□189)
 - Preset manual (□193)
 - White balance fine-tuning (□183)
- Flash compensation value (□464)
- Commander mode²
- 20 Exposure compensation value (1164)
- 1 Displayed in red if the picture was taken with auto ISO sensitivity control enabled.
- 2 Displayed only if the picture was taken with optional flash units (□468, □472).

File info

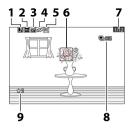


- 1 Voice memo indicator (\$\Pi\$335)
- 2 Protect status (□271)
- 3 Retouch indicator (□286)
- 4 Upload marking (□275)
- 5 IPTC preset indicator (□718)

- 6 Focus point1 (🕮134)
- 7 Frame number/total number of frames
- First picture in burst/total number of pictures in burst2 (\$\square\$696)
- 9 Rating (□273)
- 1 Displayed only if [Focus point] is selected for [Playback display options] in the playback menu.
- 2 Displayed on the first picture in each burst when [Mark first shot in series] is selected for [Playback display options] in the playback menu.

The i button (playback mode)

 Pressing the i button during playback zoom or full-frame or thumbnail playback displays the i menu for playback mode. Highlight items and press o or o to select.





Press the *i* button again to return to playback.

Photos

Option	Description
[Quick crop] ¹	Save a copy of the current image cropped to the area visible in the display. This option is not available when RGB histograms are displayed (\square 249).
[Manage series]	If [ON] is selected for [Series playback] > [List series as single thumbnails] in the playback menu, you can use this option to delete, protect, or mark for upload the current picture and all other pictures in the same burst. • Note that the pictures can be marked for upload to Nikon Imaging Cloud, a computer, or an FTP server only.
[Rating]	Rate the current picture (\square 273).
[Select for upload to The Cloud]	Select the current picture for upload (\$\subseteq\$275). The option displayed varies with the destination currently selected for upload.

Option	Description	
[Select for upload to smart device]		
[Select for upload to computer]	Select the current picture for upload (\$\Pi\$275). The option displayed varies with the destination currently selected for upload.	
[Select for upload (FTP)]	selected for aprodu.	
[Select for priority upload to computer]	Select the current picture for priority upload (□275). These options are displayed only if the camera is	
[Select for priority upload (FTP)]	connected to a computer or FTP server.	
[Select all for upload to The Cloud]	Mark for upload all pictures meeting the current filter criteria (□277). • These options are displayed only if the camera is	
[Select all for computer upload]	connected to Nikon Imaging Cloud, a computer, or an FTP server. • [Select all for upload to The Cloud]: Videos cannot	
[Select all for upload (FTP)]	be selected for upload. • [Select all for computer upload] and [Select all for upload (FTP)]: Videos over 4 GB in size cannot be selected for upload.	
[Filtered playback]	View only pictures that match selected criteria (C277).	
[Filtered playback criteria]	Choose filter criteria.	
[Record voice memo]	Add a voice memo to the current picture (□331).	
[Play voice memo]	Play the voice memo for the current picture (□335).	

Option	Description	
[Retouch]	Create a retouched copy of the current picture (\$\Pi286\$).	
[Choose folder]	Select a folder. Highlight a folder and press ® to view the pictures it contains.	
[Protect]	Add protection to or remove protection from the current picture (\$\square\$271).	
[Unprotect all] ²	Remove protection from all pictures in the folder currently selected for [Playback folder] in the playback menu.	
[IPTC]	Embed a selected IPTC preset in the current photo (\$\square\$118).	
[Side-by-side comparison]3 Compare retouched copies to the originals.		
[Slide show]	View a slide show; the current picture and all following pictures are displayed one at a time in the order recorded (□279).	

- 1 Available only during playback zoom.
- 2 Not available during playback zoom.
- 3 Available only when a retouched copy (indicated by a **1** icon) or the source picture for a retouched copy is selected.

Tip: [Side-by-side comparison]

Choose [Side-by-side comparison] to compare retouched copies with the unretouched originals.



- 1 Options used to create copy
 2 Source image
- 3 Retouched copy
- The source image is displayed on the left, the retouched copy on the right.
- The options used to create the copy listed at the top of the display.
- Press
 or
 to switch between the source image and the retouched copy.
- If the copy is an overlay created from multiple source images, press
 or
 or to view the other images.
- If the source has been copied multiple times, press
 or
 or
 to view the other copies.
- · To view the highlighted picture zoomed in, press and hold the [⊕] button.

- The source image will not be displayed if the copy was created from a photograph that is now protected.
- The source image will not be displayed if the copy was created from a photograph that has since been deleted.

Videos

Option	Description
[Rating]	Rate the current video (□273).

Option	Description	
[Select for upload to computer]	Select the current video for upload (\$\Pi\275\$). These options are displayed only if the camera is connected to a computer or FTP server.	
[Select for upload (FTP)]		
[Select for priority upload to computer]	Select the current video for priority upload (\$\Pi\275\$). These options are displayed only if the camera is connected to a	
[Select for priority upload (FTP)]	omputer or FTP server.	
[Select all for upload to The Cloud]	Mark for upload all pictures meeting the current filter criteria (□277). • These options are displayed only if the camera is connected to Nikon Imaging Cloud, a computer, or an FTP server. • [Select all for upload to The Cloud]: Videos cannot be selected for upload.	
[Select all for computer upload]		
[Select all for upload (FTP)]	• [Select all for computer upload] and [Select all for upload (FTP)]: Videos over 4 GB in size cannot be selected for upload.	
[Filtered playback]	View only pictures that match selected criteria (□277). Choose filter criteria. Adjust playback volume.	
[Filtered playback criteria]		
[Volume control]		

Option	Description	
[Trim video] Trim footage from the current video and save the copy in a new file (\$\square\$324\$).		
[Choose folder]	Select a folder. Highlight a folder and press ® to view the pictures it contains.	
[Protect]	Add protection to or remove protection from the current video (\square 271).	
[Unprotect all]	Remove protection from all pictures in the folder currently selected for [Playback folder] in the playback menu.	
[Slide show]	View a slide show; the current video and all following pictures are displayed one at a time in the order recorded (\square 279).	
[Playback speed]	The video playback speed can be selected from [Original speed], [1/2× speed], or [1/4× speed]. Selecting [1/2× speed] or [1/4× speed] will play the video slower at 1/2 or 1/4 of the original speed. If the playback speed was changed, the changed playback speed will be applied during all video playback.	

Videos (playback paused)

Option		Description
Ľľ.	[Trim video]	Trim unwanted footage (□324).
₽	[Save current frame]	Save a selected frame as a JPEG still (□328).
≙≎	[Save consecutive frames]	Save the frames in a selected length of footage as a series of individual JPEG images (□329).

Option	Description
[Volume control]	Adjust playback volume.
[Playback speed]	The video playback speed can be selected from [Original speed], [1/2× speed], or [1/4× speed]. Selecting [1/2× speed] or [1/4× speed] will play the video slower at 1/2 or 1/4 of the original speed. If the playback speed was changed, the changed playback speed will be applied during all video playback.

Playback zoom

To zoom in on a photo displayed in full-frame playback, press ♥ or ⊛ or give the display two quick taps. [DX (24×16)]-format images can be zoomed in to a maximum of approximately 21× for Large, 16× for Medium, or 10× for Small. Faces detected during zoom are indicated by white borders; rotate the sub-command dial to view other faces.



Using playback zoom

Operatio n		Description
Zoom in/ zoom out	• Press the [®] button or use stretch gestures to zoom in. • To zoom out, press [®] (?) or use pinch gestures.	A navigation window appears at the bottom right corner of the display when the zoom ratio is altered, with the area currently visible indicated by a yellow border. A bar below the navigation window shows the zoom ratio, turning green at 1:1 (100%). The navigation window clears from the display after a few seconds.

Operatio n	Description	
View other areas of image	Use the multi selector or glide gestures to view areas of image not visible in the monitor. Keep the multi selector pressed to scroll rapidly to other areas of frame.	
Crop picture	To crop the picture to the area currently visible in the monitor, press \boldsymbol{i} and select [Quick crop].	
Select faces	Faces detected during zoom are indicated by white borders in the navigation window. Rotate the sub-command dial or tap the on-screen guide to view other faces.	
View other pictures	Rotate the main command dial to view the same location in other photos without changing the zoom ratio (selecting a video cancels zoom). You can also view other photos by tapping the for icon at the bottom of the display.	
Protect pictures	Press the 黈 (On) button to toggle protection for the current picture on or off (□271).	
Exit to shootin g mode	Press the shutter-release button halfway or press the 🕒 button to exit.	
View menus	Press the MENU button to view the menus.	

Protecting pictures from deletion

Pictures can be protected to prevent their being deleted accidentally. Protected pictures will however be deleted when the memory card is formatted (\$\sup\$702).

1 Select a picture.

- · Display the picture in full-frame playback or playback zoom.
- Alternatively, you can highlight the picture in the thumbnail list using the multi selector.

2 Press the 熉 (O₁) button.





· To remove protection, display the picture or highlight it in the thumbnail list and press 駐 (On) again.

▼ Voice memos

Protecting photos also protects any voice memos recorded with the pictures. Voice memos cannot be protected separately.

Caution: Uploading protected pictures via FTP

The copies on the FTP server will not be protected even if the originals are. Markings can be added using ratings.

Tip: Removing protection from all pictures

To remove protection from all pictures in the folder or folders currently selected for [**Playback folder**] in the playback menu, press the 點 (**O**_n) and 節 buttons for about two seconds during playback.

Rating pictures

Selected pictures can be rated or marked as candidates for later deletion

1 Select the desired picture with the multi selector and press the \boldsymbol{t} button.



2 Highlight [Rating] and press .



3 Choose a rating.



Rotate the main command dial to highlight the desired rating and press \otimes to select. Choose from ratings of from zero to five stars, or select \mathbf{f} to mark the picture as a candidate for later deletion.

Tip: Ratings

Ratings can also be viewed in NX Studio.

Tip: Rating pictures using camera controls

If [Rating] has been assigned to a control using Custom Setting f3 [Custom controls (playback)], pictures can be rated by holding the control and rotating the main command dial.

Selecting pictures for upload

Follow the steps below to select the current picture for upload to a smart device, computer, or FTP server.

- [Select for upload to The Cloud], [Select for upload to smart device], [Select for upload to computer], [Select for upload (FTP)]: Pictures selected for upload will be added to the end of the upload queue if pictures marked for upload already exist in the queue.
- [Select for priority upload to computer], [Select for priority upload (FTP)]: Pictures selected for priority upload will begin uploading immediately even if pictures marked for upload already exist in the upload queue.
- The $m{i}$ menu items used to select pictures for upload vary with the type of device connected:
 - When connected to Nikon Imaging Cloud by [Nikon Imaging Cloud] (\$\sup\$741) in the network menu: [Select for upload to The Cloud]
 - When connected to a smart device by [Connect to smart device] (2745) in the network menu: [Select for upload to smart device]
 - When connected to a computer by [Connect to computer] (□752) in the network menu: [Select for upload to computer], [Select for priority upload to computer]
 - When connected to an FTP server by [Connect to FTP server]
 (\$\sup\$756) in the network menu: [Select for upload (FTP)], [Select for priority upload (FTP)]
- Videos cannot be selected for upload when the camera is connected to Nikon Imaging Cloud or to a smart device via the SnapBridge app.
- · Videos over 4 GB in size cannot be selected for upload.
- 1 Select the desired picture and press the *i* button.

2 Highlight [Select for upload to The Cloud], [Select for upload to smart device], [Select for upload to computer], [Select for upload (FTP)], [Select for priority upload to computer], or [Select for priority upload (FTP)] and press ❸.



An icon appears on the selected pictures for upload. The icon that appears differs depending on the ‡ menu item that is used.



- · When uploaded by [Select for upload to The Cloud]: ♠
- When uploaded by [Select for upload to smart device], [Select for upload to computer], or [Select for upload (FTP)]:
- · When uploaded by [Select for priority upload to computer] or [Select for priority upload (FTP)]: ❖

Removing upload marking

 
To remove upload marking, repeat Steps 1 and 2.

Filtered playback

Select [**Filtered playback**] in the i menu to view only pictures that meet the criteria chosen for [**Filtered playback criteria**] in the playback menu or playback i menu.

[Filtered playback criteria]

Highlight options and press 8 to select (1) or deselect (1). During filtered playback, only pictures that meet all criteria marked with a check (1) will be displayed.



Option	Description
[Protect]	☑: Include protected pictures.
[Picture type]	☑: Include pictures of the selected types.
[Rating]	☑: Include pictures with selected ratings.
[Select for upload to The Cloud]	Select (☑) [Uploaded pictures] to include uploaded pictures. Select (☑) [Pictures not uploaded] to include pictures that have yet to be uploaded. Select (☑) both options to include both pictures that have and pictures that have yet to be uploaded.
[Select for upload to computer]	
[Select for upload (FTP)]	
[Voice memo]	☑: Include pictures with voice memos.

Option	Description
[Retouched pictures]	☑: Include retouched pictures.

· During filtered playback, a white border appears around the display.



· To end filtered playback, select [Filtered playback] again.

Viewing slide shows

To view a slide show in which pictures are played back one at a time in the order recorded, select [**Slide show**] in the *i* menu. You can also choose how long any photos in the show are displayed.

1 Select the starting picture using the multi selector and press the ½ button.



The slide show starts with the selected picture and continues through all the pictures recorded after it.

2 Highlight [Slide show] and press ①.



To choose how long photos are displayed, highlight [Frame interval] and press ③.

3 Highlight [Start] and press ⊗.

- · The slide show will start.
- In the case of videos, the option selected for [Frame interval] is ignored; instead, the starting frame will be displayed for short time before video playback begins.
- When the show ends, a message will be displayed before normal playback resumes.

During the show

The following operations can be performed while the slide show is in progress:

Operation	Description
Skip back/skip ahead	Press ① to return to the previous frame, ② to skip to the next frame.
View additional photo info	Press 🐑, 🜎, or DISP to choose the photo info displayed. To hide photo info, select [None (picture only)].
Adjust volume	Press [®] to increase volume, [®] (?) to decrease.
Exit to playback mode	Press ® to end the slide show and return to the playback display.

 
Deleting pictures

Follow the steps below to delete pictures from memory cards. Note that pictures cannot be recovered once deleted. Pictures that are protected, however, cannot be deleted.

Using the delete button


Press the fi button to delete the current picture.

1 Select the desired picture with the multi selector and press the fibutton.



- · A confirmation dialog will be displayed.
- To exit without deleting the picture, press **.**

 2 Press the fi button again.



The picture will be deleted.

Deleting multiple pictures

Use [**Delete**] in the playback menu to delete multiple pictures at once. Note that depending on the number of images, some time may be required for deletion.

	Option	Description
	[Selected pictures]	Delete selected pictures.
Ó	[Candidates for deletion]	Delete pictures rated 5 (candidate for deletion).
DATE	[Pictures shot on selected dates]	Delete all pictures taken on selected dates.
ALL	[All pictures]	Delete all pictures in the folder currently selected for [Playback folder] in the playback menu.

■ Deleting selected pictures

1 Select pictures.

· Highlight pictures and press the \mathbb{Q} (?) button to select; selected pictures are marked with a check (\bigcirc). To remove the check (\bigcirc) and deselect the current picture, press the \mathbb{Q} (?) button again.





- · Repeat until all the desired pictures are selected.
- \cdot To view the highlighted picture zoomed in, press and hold the \P button.

2 Delete the pictures.



- Press ®; a confirmation dialog will be displayed.
- · Highlight [Yes] and press ® to delete the selected pictures.

■ Candidates for deletion

1 Select pictures.

- The camera will list all pictures rated ★ (candidate for deletion).

 Pictures you do not currently wish to delete can be deselected by highlighting them using the multi selector and pressing ♀ (?).
- \cdot To view the highlighted picture zoomed in, press and hold the \mathfrak{P} button.

2 Delete the pictures.

- · Press @; a confirmation dialog will be displayed.
- · Highlight [Yes] and press [®] to delete the selected pictures.

■ Pictures shot on selected dates

1 Select dates



- Highlight dates using the multi selector and press
 ⊕ to select; selected dates are marked with
 icons. Selected dates can be deselected by pressing
 ⊕ again.
- · Repeat until you have selected all the desired dates.

2 Delete the pictures.



- Press ®; a confirmation dialog will be displayed.
- Highlight [Yes] and press ® to delete all the pictures taken on the selected dates.

■ Deleting all pictures

After selecting [**All pictures**], a confirmation dialog will be displayed showing the name of the folder containing the photos to be deleted. Highlight [**Yes**] and press ® to delete all pictures from the folder. The

folder is that previously selected via [**Playback folder**] in the playback menu.



• Note that depending on the number of pictures, some time may be required for deletion.

Retouching photographs

Retouching photographs

Retouched copies can be created from existing pictures. Retouched copies are saved to new files, separate from the original pictures.



Option	Description
[RAW processing (current picture)]	Save a copy of the current NEF (RAW) picture in another format such as JPEG (\$\Pi\$290).
[RAW processing (multiple pictures)]	Select multiple existing NEF (RAW) pictures for conversion to JPEG or other formats (290).
[Trim]	Create a cropped copy of the current photograph (□303).
[Resize (current picture)]	Create a small copy of the current photograph (□304).
[Resize (multiple pictures)]	Create small copies from one or more existing photos (□304).
[D-Lighting]	Brighten shadows (□309).
[Straighten]	Straighten pictures (\$\Pi\$310).

Option	Description
[Distortion control]	Reduce barrel distortion in pictures taken with wide- angle lenses or pin-cushion distortion in pictures taken with telephoto lenses (CI311).
[Perspective control]	Reduce the effects of perspective (□312).
[Monochrome]	Create a monochrome copy of the current photograph (□313).
[Overlay (add)]	Overlay two pictures to create a new picture in JPEG format (CD314).
[Lighten]	Compare the pixels at each point in multiple pictures and select the brightest to create a new picture in JPEG format (□317).
[Darken]	Compare the pixels at each point in multiple pictures and select the darkest to create a new picture in JPEG format (□317).
[Motion blend]	The camera examines a selected burst of pictures to detect moving subjects and overlays them to create a single JPEG image (\$\square\$320).

1 Select the desired picture with the multi selector and press the $m{i}$ button.



You will not need to select a picture if you are using [RAW processing (multiple pictures)] or [Resize (multiple pictures)], as you will be prompted to choose the pictures later.

- 2 Highlight [Retouch] and press .
- 3 Highlight the desired option and press **①**.
- 4 Select retouch options.
 - For more information, see the section for the selected item.
 - To exit without creating a retouched copy, press . This will return you to the playback display.
- **5** Create a retouched copy.
 - · For more information, see the section for the selected item.
 - Retouched copies are indicated by a

 icon.

Cautions: Retouch

- The camera may not be able to display or retouch images that were taken or retouched using other cameras or that have been retouched on a computer.
- If no actions are performed for a brief period, the display will turn off and any unsaved changes will be lost. To increase the time the display remains on, choose a longer menu display time using Custom Setting c3 [Power off delay] > [Playback].

Cautions: Retouching copies

- Most items can be applied to copies created using other retouch options, although multiple edits may result in reduced image quality or unnatural colors.
- The effect produced may vary with the order in which edits are performed.
- Some items may be unavailable depending on the items used to create the copy.
- [Retouch] items in the *i* menu that cannot be applied to the current picture are grayed out and unavailable.

Image quality

- Copies created from NEF (RAW) pictures will be saved in JPEG or HEIF at an [Image quality] of [JPEG/HEIF fine].
- Copies created from JPEG and HEIF pictures are the same quality as the original.
- In the case of dual-format pictures recorded at image-quality settings of RAW + JPEG/HEIF, only the NEF (RAW) copy will be retouched.

Image size

Except in the case of copies created with [RAW processing (current picture)], [RAW processing (multiple pictures)], [Trim], [Resize (current picture)], and [Resize (multiple pictures)], copies are the same size as the original.

RAW processing

RAW processing is used to save NEF (RAW) pictures in other formats, such as JPEG. Depending on the tone mode selected when the picture was taken, copies can be saved in either JPEG or HEIF format.

Cautions: RAW processing

- · RAW processing is not available on this camera with following images:
 - NEF (RAW) images shot with a different camera model,
 - NEF (RAW) images shot using NX Tether and saved on a computer, or
 - Images shot in image quality settings other than RAW.
- If NEF (RAW) pictures are converted to JPEG or HEIF format via RAW processing, the hues of resulting images may differ from the JPEG or HEIF pictures shot with the camera, even if the same shooting settings were applied during RAW processing.

Processing photos shot using the [SDR] tone mode

Applying RAW processing to photos shot with [**SDR**] selected for tone mode creates JPEG copies.

■ Processing the current picture

Display an NEF (RAW) picture shot with [SDR] selected for tone mode and then press the *i* button.



2 Select [Retouch] in the *t* menu, then highlight [RAW processing (current picture)] and press **⊕**.



3 Copy the photograph.



- · Highlight [EXE] and press ® to create a JPEG copy of the selected photograph.
- · Adjust settings such as white balance and Picture Control before processing. If necessary, change from the settings that were in effect when the photographs were taken. For items that can be configured, see "Configuration items during SDR image RAW processing" (\$\square\$295).

■ Processing multiple pictures

1 Display an NEF (RAW) picture shot with [SDR] selected for tone mode and then press the *i* button.



2 Select [Retouch] in the *i* menu, then highlight [RAW processing (multiple pictures)] and press **⊕**.



3 Choose how pictures are selected.



Option	Description	
[Select picture(s)]	Create JPEG copies of selected NEF (RAW) pictures Multiple NEF (RAW) pictures can be selected.	
[Select date]	Create JPEG copies of all NEF (RAW) pictures taken on selected dates.	
[Select folder]	Create JPEG copies of all NEF (RAW) pictures in a selected folder.	

4 Select photographs.

If you chose [Select picture(s)]:



- · Highlight pictures using the multi selector.
- \cdot To view the highlighted picture zoomed in, press and hold the $\mathfrak Q$ button.
- To select the highlighted picture, press the २००० (?) button. Selected pictures are marked with a check (♥). To remove the check (♥) and deselect the current picture, press the २००० (?) button again. All pictures will be processed using the same settings.
- Press ® to proceed once selection is complete.

If you chose [Select date]:



- · Highlight dates using the multi selector and press **③** to select (**☑**) or deselect (**□**).
- All eligible images taken on dates marked with a check (☑) will be processed using the same settings.
- · Press ® to proceed once selection is complete.

If you chose [Select folder]:



Highlight a folder and press ® to select; all images in the selected folder will be processed using the same settings.

5 Copy the photographs.



- · Highlight [**EXE**] and press ® to display a confirmation dialog and then highlight [**Yes**] and press ® to create JPEG copies of the selected photos.
- To cancel the operation before all copies have been created, press the MENU button; when a confirmation dialog is displayed, highlight [Yes] and press ®.
- Adjust settings such as white balance and Picture Control before processing. If necessary, change from the settings that were in effect when the photographs were taken. For items that can be configured, see "Configuration items during SDR image RAW processing" (\$\square\$295).

■ Configuration items during SDR image RAW processing

Image settings can be changed before performing RAW processing from the settings that were in effect when the photographs were taken.



- · The items that can be configured are as follows.
 - Image quality (III 118)
 - Image size (□120)
 - Exposure compensation (□164)
 - White balance (□178)
 - Picture Control (□200)
 - Color space (\$\iii490\$)
 - Active D-Lighting (\$\square\$491)
 - High ISO NR (□ 493)
 - Vignette control (□1493)
 - Diffraction compensation (\$\square\$494)
 - Portrait impression balance (□496)
- The settings in effect when the photographs were taken will in some cases appear below the preview.
- To use the settings in effect when the photographs were taken, if applicable, select [Original] for each item.
- The effects can be previewed in the edit display. To view the unedited picture, press and hold the DISP button.

Caution: RAW processing with SDR tone mode

[Exposure compensation] can only be set to values between -2 and +2 EV.

 
Processing photos shot using the [HLG] tone mode

Applying RAW processing to photos shot with [**HLG**] selected for tone mode creates HEIF copies.

 NEF (RAW) pictures taken with [HLG] selected for tone mode can also be saved in JPEG format (\$\square\$302)\$. Note, however, that the JPEG copies may exhibit more "noise" in the form of randomly-spaced bright pixels, fog, or lines than do JPEG copies created from NEF (RAW) pictures taken with [SDR] selected for tone mode.

■ Processing the current picture

Display an NEF (RAW) picture shot with [HLG] selected for tone mode and then press the button.



Choose a picture marked with the HLG icon.

2 Select [Retouch] in the *i* menu, then highlight [RAW processing (current picture)] and press **()**.



3 Copy the photograph.



- · Highlight [**EXE** (save in **HEIF format**)] and press **®** to create an HEIF copy of the current photograph.
- Adjust settings such as white balance and Picture Control before processing. If necessary, change from the settings that were in effect when the photographs were taken. For items that can be configured, see "Configuration items during HLG image RAW processing" (©301).

■ Processing multiple pictures

1 Display an NEF (RAW) picture shot with [HLG] selected for tone mode and then press the *i* button.



Choose a picture marked with the HLG icon.

2 Select [Retouch] in the *i* menu, then highlight [RAW processing (multiple pictures)] and press **⊕**.



3 Choose how pictures are selected.



Option	Description	
[Select Create HEIF copies of selected NEF (RAW) p picture(s)] Multiple NEF (RAW) pictures can be selected		
[Select date]	Create HEIF copies of all NEF (RAW) pictures taken on selected dates.	
[Select folder]	Create HEIF copies of all NEF (RAW) pictures in a selected folder.	

4 Select photographs.

If you chose [Select picture(s)]:



- · Highlight pictures using the multi selector.
- \cdot To view the highlighted picture zoomed in, press and hold the $\mathfrak Q$ button.
- · To select the highlighted picture, press the ♀ (?) button. Selected pictures are marked with a check (\bigcirc). To remove the check (\bigcirc) and deselect the current picture, press the \bigcirc (?) button again. All pictures will be processed using the same settings.
- Press ® to proceed once selection is complete.

If you chose [Select date]:



- · Highlight dates using the multi selector and press **③** to select (**☑**) or deselect (**□**).
- All eligible images taken on dates marked with a check (☑) will be processed using the same settings.
- · Press ® to proceed once selection is complete.

If you chose [Select folder]:



Highlight a folder and press ® to select; all images in the selected folder will be processed using the same settings.

5 Copy the photographs.



- Highlight [EXE (save in HEIF format)] and press ® to create HEIF copies of the selected photos.
- To cancel the operation before all copies have been created, press the MENU button; when a confirmation dialog is displayed, highlight [Yes] and press .
- Adjust settings such as white balance and Picture Control before processing. If necessary, change from the settings that were in effect when the photographs were taken. For items that can be configured, see "Configuration items during HLG image RAW processing" (2301).

■ Configuration items during HLG image RAW processing

Image settings can be changed before performing RAW processing from the settings that were in effect when the photographs were taken.



- · The items that can be configured are as follows.
 - Image quality (III 118)
 - Image size (□120)
 - Exposure compensation (□164)
 - White balance (□178)
 - Picture Control (HLG; □ 490)
 - High ISO NR (□ 493)
 - Vignette control (□1493)
 - Diffraction compensation (□494)
 - Portrait impression balance (\$\square\$496)
 - To RAW processing (JPEG)
- The settings in effect when the photographs were taken will in some cases appear below the preview.
- To use the settings in effect when the photographs were taken, if applicable, select [Original] for each item.
- The effects can be previewed in the edit display. To view the unedited picture, press and hold the DISP button.

Cautions: RAW processing with HLG tone mode

- [Exposure compensation] can only be set to values between –2 and +2 EV.
- [Color space] is fixed at "BT.2100".
- · [Active D-Lighting] cannot be adjusted.

Tip: Creating JPEG copies from RAW photos shot using the HLG tone mode

Selecting [To RAW processing (JPEG)] in the [RAW processing (HEIF)] dialog displays the [RAW processing (JPEG)] dialog, where you can adjust settings for saving the copies in JPEG format. To save the JPEG copies, highlight [EXE (save in JPEG format)] and press .

- Exposure for JPEG copies created by applying [RAW processing (JPEG)] to RAW photos shot in HLG will be around 2 EV lower than that of JPEG copies created from RAW photos shot with [SDR] selected for tone mode. Exposure can be corrected as desired using the [Exposure compensation] option in the [RAW processing (JPEG)] dialog.
- [Set Picture Control] appears in the [RAW processing (JPEG)] display in place of [Set Picture Control (HLG)]. [Original] cannot be selected.
- You will be able to choose options for [Color space] and [Active D-Lighting]. Note, however, that choosing an option for [Active D-Lighting] may result in "noise" in the form of randomly-spaced bright pixels, fog, or lines.
- To return to the [RAW processing (HEIF)] display, select [To RAW processing (HEIF)] in the [RAW processing (JPEG)] dialog.
- The values selected in the [RAW processing (HEIF)] and [RAW processing (JPEG)] displays are stored separately and are not reset after processing or when you switch from one display to another using [To RAW processing (JPEG)] or [To RAW processing (HEIF)].

Trim

Trim images down only to the parts you need. The photograph is displayed with the selected crop shown in yellow; create a cropped copy as described below.

То	Description
Size the crop	Press [®] or [®] (?) to choose the crop size.
Change the crop aspect ratio	Rotate the main command dial to choose the crop aspect ratio.
Position the crop	Use the multi selector to position the crop.
Save the crop	Press to save the current crop as a separate file.

Cautions: Cropped pictures

- Depending on the size of the cropped copy, playback zoom may not be available when cropped copies are displayed.
- The crop size appears at upper left in the crop display. The size of the copy varies with crop size and aspect ratio.



Resize

Create a small copy of images. Use [Resize (current picture)] to resize the current picture, or [Resize (multiple pictures)] to resize multiple pictures.

Caution: Resize

Depending on the copy size, playback zoom may not be available when resized copies are displayed.

Resizing copped pictures

Pictures cropped to aspect ratios of 4:3,5:4,4:5, or 3:4 cannot be resized.

Resizing the current picture

1 Select [Retouch] in the *i* menu, then highlight [Resize (current picture)] and press .



2 Highlight the desired size and press **®**.



A copy will be saved at the selected size.

Resizing multiple pictures

Select [Retouch] in the i menu, then highlight [Resize (multiple pictures)] and press .



2 Choose a size.



- · Highlight [Choose size] and press .
- · Highlight the desired size (length in pixels) using and and press -.



3 Choose how pictures are selected.



Option	Description	
[Select picture(s)]	Resize selected pictures. Multiple pictures can be selected.	
[Select date]	Resize all pictures taken on selected dates.	
[Select folder]	Resize all pictures in a selected folder.	

4 Choose pictures.

If you chose [Select picture(s)]:



- · Highlight pictures using the multi selector.
- \cdot To view the highlighted picture zoomed in, press and hold the $\mathfrak Q$ button.
- To select the highlighted picture, press the ℚ≅ (?) button. Selected pictures are marked with a check (♥). To remove the check (♥) and deselect the current picture, press the ℚ≅ (?) button again. The selected pictures will all be copied at the size selected in Step 2.
- Press ® to proceed once selection is complete.

If you chose [Select date]:



- Highlight dates using the multi selector and press
 ⊕ to select (
 □)
 or deselect (
 □).
- · All pictures taken on dates marked with a check (☑) will be copied at the size selected in Step 2.
- $\boldsymbol{\cdot}$ Press $\boldsymbol{\otimes}$ to proceed once selection is complete.

If you chose [Select folder]:

Highlight a folder and press ⊗ to select; all pictures in the selected folder will be copied at the size selected in Step 2.

5 Save the resized copies.



- A confirmation dialog will be displayed; highlight [Yes] and press

 to save the resized copies.
- To cancel the operation before all copies have been created, press the MENU button; when a confirmation dialog is displayed, highlight [Yes] and press ®.

D-Lighting

D-Lighting brightens shadows. It is ideal for dark or backlit photographs.





Before

After

The effect can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.



• Press ® to save the retouched copy.

Straighten

Rotate pictures by up to $\pm 5^{\circ}$ in increments of approximately 0.25°.



- The effect can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.
- The greater the rotation, the more will be trimmed from the edges.
- Press 🖲 or 🕞 to choose the amount of straightening performed.
- · Press ® to save the retouched copy.

Distortion control

Create copies with reduced peripheral distortion, reducing barrel distortion in pictures taken with wide-angle lenses or pincushion distortion in pictures taken with telephoto lenses.



- If the camera detects distortion, it will offer a choice of [Auto] and [Manual]. Select [Auto] to let the camera correct distortion automatically.
- If the camera is unable to detect distortion, the only option available will be [Manual]. Select [Manual] to reduce distortion manually.
- Note that [Manual] must be used with copies created using the [Auto] option and with photos taken using the [Auto distortion control] option in the photo shooting menu.
- When [Manual] is selected, the effect can be previewed in the display. To view the unedited picture, press and hold the DISP button.
- Press to reduce pincushion distortion, to reduce barrel distortion. Press to save changes and return to the previous display.
- Press

 to save the retouched copy.

Caution: Distortion control

Note that greater amounts of distortion control result in more of the edges being cropped out.

Perspective control

Create copies that reduce the horizontal and vertical effects of perspective in photos taken looking up from the base of a tall object.



- The effect can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.
- Note that greater amounts of perspective control result in more of the edges being cropped out.
- For horizontal correction, highlight

 and press

 • Press

 to stretch the left edge,

 to stretch the right. Press

 to save changes and return to the previous display.
- For vertical correction, highlight ⊕ and press ⊕. Press ⊕ to stretch
 the top edge, ⊕ to stretch the bottom. Press ⊛ to save changes and
 return to the previous display.
- Highlight 🖺 and press 🚳 to save the retouched copy.



Monochrome

Copy photographs in a selected monochrome tint.

Option	Description	
[Black-and-white]	Copy photographs in black-and-white.	
[Sepia]	Copy photographs in sepia.	
[Cyanotype]	Copy photographs in blue-and-white monochrome.	

 The effect can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.



- Highlighting [Sepia] or [Cyanotype] and pressing () displays saturation options for the selected monochrome tint; choose from [High], [Normal], and [Low]. Press () to save changes and return to the tint menu.
- · Press ® to save the retouched copy.

Overlay (add)

Combine two existing photographs to create a single picture that is saved separately from the originals.



Select [Retouch] in the ₺ menu, then highlight [Overlay (add)] and press .



2 Select the pictures.



- · Highlight pictures using the multi selector.
- To view the highlighted picture zoomed in, press and hold the \mathfrak{P} button.
- · To select the highlighted picture, press the \mathbb{Q} (?) button. Selected pictures are marked with a check (\bigcirc). To remove the check (\bigcirc) and deselect the current picture, press the \mathbb{Q} (?) button again.
- · Pictures with different image areas cannot be selected.
- Press ® to proceed once the second picture is selected.

3 Adjust balance.



The overlay can be previewed in the display. Press - or - to adjust the balance between the two pictures. Press - to make the first picture more visible and the second less, - for the opposite effect.

4 Save the overlay.



Press ® to save the overlay.

Cautions: [Overlay (add)]

- · Colors and brightness in the preview may differ from the final image.
- Only pictures created with this camera can be selected. Pictures created with other models cannot be selected.
- The overlay will be the same size as the smallest of the two component pictures.
- The overlay has the same photo info (including date of recording, metering, shutter speed, aperture, shooting mode, exposure compensation, focal length, and picture orientation) and values for white balance and Picture Control as the first of the two pictures selected.
 Copyright information, however, is not copied to the new picture. The comment is similarly not copied; instead, the comment currently active on the camera, if any, is appended.

[Lighten] and [Darken]

The camera compares multiple selected pictures and selects only the brightest or darkest pixels at each point in the picture to create a single new JPEG copy.

Select [Retouch] in the i menu, then highlight [Lighten] or [Darken] and press ().

• [Lighten]: The camera compares the pixels in each picture and uses only the brightest.



• [Darken]: The camera compares the pixels in each picture and uses only the darkest.



2 Choose how pictures are selected.

Option	Description
[Select individual pictures]	Select pictures for the overlay one-by-one.
[Select consecutive pictures]	Select two pictures; the overlay will include the two pictures and all images between them.
[Select folder]	The overlay will include all pictures in the selected folder.

3 Select pictures.

If you chose [Select individual pictures]:

- · Highlight pictures using the multi selector.
- To view the highlighted picture zoomed in, press and hold the $\mathfrak Q$ button.
- To select the highlighted picture, press the २००० (?) button. Selected pictures are marked with a check (♥). To remove the check (♥) and deselect the current picture, press the २००० (?) button again. The selected pictures will be combined using the option selected in Step 1.
- · Press ® to proceed once selection is complete.

If you chose [Select consecutive pictures]:

- All pictures in a range chosen using the multi selector will be combined using the option selected in Step 1.
 - Use **QS** (**?**) to select the first and last pictures in the desired range.
 - The first and last pictures are indicated by

 icons and the pictures between them by

 icons.
 - You can alter your selection by using the multi selector to highlight different pictures to serve as the first or last frame. Press the (On) button to choose the current picture as the new start or end point.
- To view the highlighted picture zoomed in, press and hold the @
- $\boldsymbol{\cdot}$ Press $\boldsymbol{\Theta}$ to proceed once selection is complete.

If you chose [Select folder]:

Highlight the desired folder and press \otimes to overlay all pictures in the folder using the option selected in Step 1.

4 Save the overlay.

- A confirmation dialog will be displayed; highlight [Yes] and press

 ® to save the overlay and display the resulting picture.
- To interrupt the process and display a confirmation dialog before the operation is complete, press the MENU button; to save the current overlay "as is" without adding the remaining pictures, highlight [Save and exit] and press . To exit without creating an overlay, highlight [Discard and exit] and press .

Cautions: [Lighten] and [Darken]

- The overlay will include only pictures created with this camera. Pictures created with other cameras cannot be selected.
- The overlay will include only pictures created with the same options selected for [Choose image area] in the photo shooting menu.
- The image quality setting for the completed overlay is that of the highest quality picture it contains.
- Overlays that include NEF (RAW) pictures will be saved at an image quality of [JPEG/HEIF fine].
- · All JPEG pictures in the overlay must be the same size.
- "Noise" (in the form of randomly-spaced bright pixels, fog, or lines) increases with the number of pictures in the overlay.
 - Noise will be less noticeable if the pictures for the overlay were shot with 0 or a negative value selected for the [Sharpening] Picture Control parameter.
 - Noise becomes noticeable in overlays that include around 50 pictures or more.

Motion blend

The camera examines a selected burst of pictures to detect moving subjects and overlays them to create a single JPEG image.

Select [Retouch] in the t menu, then highlight [Motion blend] and press .



2 Select the pictures.



- · Highlight pictures using the multi selector.
- \cdot To view the highlighted picture zoomed in, press and hold the \P button.
- To select the highlighted picture, press the \mathbb{Q} (?) button. Selected pictures are marked with a check (\bigcirc). To remove the check (\bigcirc) and deselect the current picture, press the \mathbb{Q} (?) button again.
- · Motion blends can contain between 5 and 20 pictures.
- · Press ® to proceed once selection is complete.

3 Check the results.



Check the results of the overlay in the preview display.

- To return to Step 2 and choose different pictures, tap \circlearrowleft or press $\textcircled{\bullet}$.
- To proceed with the current selection, press ®; a confirmation dialog will be displayed.

4 Save the overlay.



Highlight [**Yes**] in the confirmation dialog and press **®** to save the overlay.

Cautions: [Motion blend]

- The final picture may differ from the preview both in how it looks (including color and brightness) and in how the pictures are combined.
- Only pictures created with this camera can be selected. Pictures created with other cameras cannot be selected.
- [Motion blend] is intended for bursts shot with the camera on a tripod, with a fixed background and moving subjects. The desired results may consequently not be achieved with bursts shot without a tripod.
- The overlay will include only pictures created with the same options selected for [Choose image area] in the photo shooting menu.
- The image quality setting for the completed overlay is that of the highest quality picture it contains.
- Overlays that include NEF (RAW) pictures will be saved at an image quality of [JPEG/HEIF fine].
- · All JPEG pictures in the overlay must be the same size.

Editing videos

Editing videos

Videos can be edited using the following options:

Option		Description
댸	[Trim video]	Trim unwanted footage.
	[Save current frame]	Save a selected frame as a JPEG still.
≙ \$	[Save consecutive frames]	Save the frames in a selected length of footage as a series of individual JPEG images.

These options are available only with videos recorded with [H.265 8-bit (MOV)] or [H.264 8-bit (MP4)] selected for [Video file type] in the video recording menu.

Trimming videos

Trim footage from the current video and save the edited copy in a new file.



- 1 Display a video full frame.
- 2 Pause the video on the new opening frame.
 - Press the @ button to start playback videos. Press 🖨 to pause.
 - · Your approximate position in the video can be ascertained from the video progress bar.



 
- Press 0 or 0 or rotate the command dials to locate the desired frame.
- f 3 Press the m i button, highlight [Trim video], and press $m \odot$.



4 Choose the start point.



To create a copy that begins from the current frame, highlight [**Start point**] and press **®**.



5 Confirm the new start point.



- If the desired frame is not currently displayed, press ① or ② to advance or rewind a frame at a time.
- Rotate the main command dial one stop to skip ahead or back 10 frames.
- · Rotate the sub-command dial one stop to skip ahead or back 10 s.

6 Choose the end point.



• Press the ﷺ (O¬¬) button to switch to the end-point selection tool (¬¬) and then select the closing frame (¬¬) as described in Step 5.





7 Press 🖰 to create the copy.

8 Preview the copy.



- To preview the copy, highlight [**Preview**] and press
 (to interrupt the preview and return to the save options menu, press .
- To abandon the current copy and return to Step 5, highlight [Cancel] and press ⊗.

9 Choose a save option.



Choose [Save as new file] to save the edited copy as a new file. To replace the original video with the edited copy, choose [Overwrite existing file].

10 Save the copy.

Press ® to save the copy.

Cautions: Trimming videos

- The copy will not be saved if there is insufficient space available on the memory card.
- · Videos less than two seconds long cannot be edited using [**Trim video**].
- · Copies have the same time and date of creation as the original.

Tip: Removing opening or closing footage

- To remove only the closing footage from a video, choose [End point] in Step 4, press the [®] button, and proceed to Step 7 without pressing the 凝 (On) button in Step 6.
- To remove only the opening footage, proceed to Step 7 without pressing the 獻 (On) button in Step 6.

Saving the current frame as a JPEG still

Stills can be created from individual frames of existing videos. You can create a single still from the current frame or a series of stills from a selected length of footage.

1 Pause the video on the desired frame.



- · Press 🕞 to pause playback.
- Your approximate position in the video can be ascertained from the video progress bar.
- · Press $\textcircled{\bullet}$ or $\textcircled{\bullet}$ or rotate the command dials to locate the desired frame

2 Press the *i* button and highlight [Save current frame].



Press ® to create a JPEG copy of the current frame.

[Save current frame]

- Stills are saved at the dimensions selected for [Frame size/frame rate] in the video recording menu when the video was recorded.
- · They cannot be retouched.

Creating stills from a selected length of footage

The frames in a selected length of footage can be saved as a series of individual JPEG images.

Pause the video on the desired frame.



- · Press 🕞 to pause playback.
- Your approximate position in the video can be ascertained from the video progress bar.
- · Press ② or ③ or rotate the command dials to locate the desired frame

2 Press the *i* button, highlight [Save consecutive frames] and press **③**.



3 Choose the length of footage.



Choose the length of footage that will be saved as stills.

4 Press ⊗.

The selected footage will be saved as a series of JPEG stills. The number varies with the video frame rate.

[Save consecutive frames]

- Stills are saved at the dimensions selected for [Frame size/frame rate] in the video recording menu when the video was recorded.
- Retouching cannot be performed (except for [Overlay (add)], [Lighten],
 [Darken], and [Motion blend]).

Voice memos

Recording voice memos

Voice memos up to 60 seconds long can be added to photographs.

1 Select the photograph.



Only one voice memo can be recorded per picture; additional voice memos cannot be recorded for pictures already marked with a \square icon. The existing voice memo must be deleted before another can be recorded (\square 335).

2 Select [Record voice memo] in the *i* menu.



- To start recording, press the i button, highlight [Record voice memo], and press

 .

3 Press **⊗**.

- · Recording will end.
- Pictures with voice memos are indicated by $\ \square$ icons.



Recording not available

Voice memos cannot be added to videos or Image Dust Off reference data.

Recording restrictions

Voice memos cannot be recorded if:

- the photo/video selector is rotated to \ rotated or
- · a multiple exposure is in progress.

Caution: Recording voice memos

Touch controls are disabled and other pictures cannot be displayed while recording is in progress.

Interrupting recording

Pressing the shutter-release button or operating other camera controls may end recording. During interval-timer photography, recording ends about two seconds before the next shot is taken; recording also ends when the camera is turned off

Voice memo file names

Voice memo file names have the form "DSC_nnnn.WAV". The voice memo has the same file number ("nnnn") as the picture with which it is associated. For example, the voice memo for the picture "DSC_0002.JPG" would have the file name "DSC_0002.WAV". Voice memo file names can be viewed on a computer.

- Voice memos for photos recorded with [Adobe RGB] selected for [Color space] in the photo shooting menu have names of the form
 "_DSC.nnnn.WAV".
- Voice memos for photos recorded with a prefix other than "DSC" selected for [File naming] in the photo shooting menu will be recorded with the selected prefix in place of "DSC".

Tip: Using controls to record voice memos

With the following operations, voice memos can be recorded without using the \boldsymbol{t} menu.

- Press the button to which [Voice memo] is assigned using Custom Setting f3 [Custom controls (playback)].
- Assign [Voice memo] to [Flick up] or [Flick down] in Custom Setting f14 [Full-frame playback flicks] and flick up or down on the monitor.

Playing voice memos

To play voice memos when viewing photographs marked with \square icons, press the i button, highlight [**Play voice memo**], and press \square .



Interrupting playback

Pressing the shutter-release button or operating other camera controls may end playback. Playback ends automatically when another picture is selected or the camera is turned off.

Tip: Using controls to play back voice memos

With the following operations, voice memos playback can be started or ended without using the \boldsymbol{i} menu.

- Press the button to which [Voice memo] is assigned using Custom Setting f3 [Custom controls (playback)].
- Assign [Voice memo] to [Flick up] or [Flick down] in Custom Setting f14
 [Full-frame playback flicks] and flick up or down on the monitor.

Deleting voice memos

To delete the voice memo from the current photo, press the fi button; a confirmation dialog will be displayed as shown.




- To delete both the photo and the voice memo, highlight [Picture and voice memo] and press **fi**.
- To delete only the voice memo, highlight [Voice memo only] and press in.
- To exit without deleting either the photo or the voice memo, press

Connecting to HDMI TVs and recorders

Connecting to HDMI devices

The camera can be connected to TVs, recorders, and other devices featuring HDMl connectors. Use a third-party HDMl cable (Type D). The cable must be purchased separately. Always turn the camera off before connecting or disconnecting an HDMl cable.

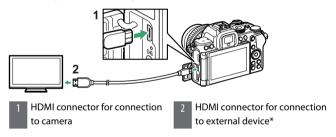

 Choose a cable with a connector that matches the connector on the HDMI device

TVs

- After tuning the TV to the HDMI input channel, turn the camera on and press the button to view pictures on the television screen.
- Audio playback volume can be adjusted using the controls on the TV.
 Camera controls cannot be used.
- If the camera is paired with a smart device running the SnapBridge app, the device can be used to control playback remotely while the camera is connected to a TV. See the SnapBridge app online help for details.

Recorders

In video mode, the camera can record directly to connected HDMI recorders.

 If a memory card is inserted in the camera when it is connected to a recorder, video will be recorded both to the recorder and the memory card. If no memory card is inserted, the footage will be recorded only to the external device.

Adjusting settings

Use the [**HDMI**] item in the setup menu to adjust settings for HDMI output.

Option	Description
[Output resolution]	The format for output to HDMI devices can be selected from [Auto], [2160p (progressive)], [1080p (progressive)], [1080i (interlaced)],* and [720p (progressive)].
[Output range]	The RGB video signal input range varies with the HDMI device. [Auto], which matches the output range to the HDMI device, is recommended in most situations. If the camera is unable to determine the correct RGB video signal output range for the HDMI device, you can choose from the following options: • [Limited range]: For devices with an RGB video signal input range of 16 to 235. Choose this option if you notice a loss of detail in shadows. • [Full range]: For devices with an RGB video signal input range of 0 to 255. Choose this option if you notice that shadows are "washed out" or too bright.

Option	Description
[Output shooting info]	Choose whether shooting information is displayed on the HDMI device. If [ON] is selected, icons and other information in the shooting display will be recorded with the footage saved to external recorders.
[Mirror camera info display]	Choose whether the display in the camera monitor remains on while an HDMI device is connected. • If [OFF] is selected, the display will remain off, reducing the drain on the camera battery. • [Mirror camera info display] will be fixed at [ON] while [OFF] is selected for [Output shooting info].

Video will not be output at 1080i when [Auto] is selected for [Output resolution] even when a recorder that supports this option is connected.
 Choose [1080i (interlaced)] for interlaced output.

■ [Output resolution]

 When [Auto] is selected for [HDMI] > [Output resolution] in the setup menu, the camera automatically detects whether the external recorder supports the frame size and rate selected on the camera. If it does not, the camera will search for a supported resolution and frame rate in the order listed below. If no supported resolution and frame rate is found, output will be suspended.

Frame size/frame rate	Output resolution/frame rate search order
[3840×2160; 60p]	1080/60p → 2160/30p → 1080/30p
[3840×2160; 50p]	1080/50p → 2160/25p → 1080/25p
[3840×2160; 30p]	2160/30p → 1080/30p

Frame size/frame rate	Output resolution/frame rate search order
[3840×2160; 25p]	2160/25p → 1080/25p
[3840×2160; 24p]	2160/24p → 1080/24p
[1920×1080; 120p] [1920×1080; 30p ×4 (slow- motion)] [1920×1080; 24p ×5 (slow- motion)]	1080/120p → 1080/60p → 1080/30p
[1920×1080; 100p] [1920×1080; 25p ×4 (slow- motion)]	1080/100p → 1080/50p → 1080/25p
[1920×1080; 60p]	1080/60p → 1080/30p
[1920×1080; 50p]	1080/50p → 1080/25p
[1920×1080; 30p]	1080/30p
[1920×1080; 25p]	1080/25p
[1920×1080; 24p]	1080/24p

- When an option other than [Auto] is selected for [HDMI] > [Output resolution] in the setup menu, the signal will be output at the selected resolution. HDMI output will be suspended if:
 - output resolution is higher than the current frame size or
 - the recorder does not support the selected output resolution.

Frame rates for [Output resolution] options other than [Auto]

Video recording rates of 120p, 100p, 60p, or 50p will be adjusted as follows if not compatible with the frame rate chosen for the external recorder.

- 120p: The frame rate will first drop to 60p. If 60p is also not supported, it will drop to 30p.
- 100p: The frame rate will first drop to 50p. If 50p is also not supported, it will drop to 25p.
- · 60p: The frame rate will drop to 30p.
- · 50p: The frame rate will drop to 25p.

Frame rates for an [Output resolution] of [1080i (interlaced)]

Footage filmed at a frame rate of 120p, 60p, 30p, or 24p is output at 60i. Footage filmed at 100p, 50p, or 25p is output at 50i.

▼ Frame rates for an [Output resolution] of [720p (progressive)]

Footage filmed at a frame rate of 120p, 60p, 30p, or 24p is output at 60p. Footage filmed at 100p, 50p, or 25p is output at 50p.

Zoom

You can zoom in the camera shooting display by pressing the $\mathfrak Q$ button whether or not a footage is being recorded; note that output to an external recorder cannot be zoomed in.

YCbCr and bit depth

The YCbCr value and bit depth for footage output to external HDMI devices varies with the options selected for [**Video file type**] and [**Frame size/frame rate**] in the video recording menu.

Video file type	Frame size/frame rate	YCbCr and bit depth
H.265 10-bit (MOV)	3840×2160 60p/50p/30p/25p/24p	4:2:2 10-bit
	1920×1080	

Video file type	Frame size/frame rate	YCbCr and bit depth
H.265 8-bit (MOV)	3840×2160 60p/50p/30p/25p/24p	4:2:2 8-bit
	1920×1080	
H.264 8-bit (MP4)	1920×1080	4:2:2 8-bit

Recording to external recorders that support a bit depth of 10 bits

The HDMI signal will be output at a bit depth of 10 bits only to HDMI recorders that support this option.

HDMI output and tone mode

The tone mode selected via [Video file type] in the video recording menu applies to video output via HDMI. Equipment that supports HDR (HLG) is required when [HLG] is selected.

External recording control

Choosing [**ON**] for [**External rec. cntrl (HDMI)**] in the video recording menu allows camera controls to be used to start and stop recording on the external recorder.

- For information on whether your recorder supports external recording control, consult the manufacturer.
- The camera display will turn off automatically when the time selected for Custom Setting c3 [Power off delay] > [Standby timer] expires, ending HDMI output. When recording videos to an external device, select [Standby timer] and choose [No limit] or a time longer than the anticipated recording time.

- recorder and recorder display to ensure that footage is being saved to the device.
- Note that selecting [ON] may disrupt the footage output to the device

Including file names set on the camera in the file names of video saved on external recorders

When recording video to both the camera's memory card and an Atomos external recorder that has been connected to the camera, the name of the file saved on the external recorder can include the name of the video file saved on the camera's memory card. Having a common string in both file names makes it easier to link the files when editing the video.

- When starting video recording with a memory card inserted in the camera and [External rec. cntrl (HDMI)] set to [ON] in the video recording menu, the file name of the video to be saved on the memory card is transmitted to the external recorder.
- · The file extension will not be transmitted to the external recorder.
- The following Atomos external recorders support the transmission of file names (as of March 2024).
 - Ninja (2023 models)
 - Ninja Ultra
 - Ninja V
 - Ninja V+
 - Shogun (2023 models)
 - Shogun Ultra
 - Shogun Connect

Compatible external recorders

- Some of these products may no longer be available. Contact Atomos to learn more about products that support file-name transmission.
- Some recorders may require an ATOMOS OS upgrade or paid activation of the recorder. Contact Atomos for details.
- Refer to the documentation provided with the external recorder for instructions to set up the external recorder and details on file names saved on it.

Connecting to smart devices

The SnapBridge app

Use the SnapBridge app for wireless connections between the camera and your smartphone or tablet ("smart device").



 SnapBridge apps can be downloaded from the Apple App Store* or on Google Play™.





- · Visit the Nikon website for the latest SnapBridge news.
- Carefully read any license agreements or the like displayed when SnapBridge is launched and only proceed if you are willing to accept them.

What SnapBridge can do for you

The tasks that can be performed using the SnapBridge app are outlined below. For details, see the SnapBridge app online help: https://nikonimglib.com/snbr/onlinehelp/en/index.html

■ Downloading pictures from the camera

Download existing pictures to your smart device. Pictures can be uploaded as they are taken.

■ Remote photography

Control the camera and take pictures from the smart device.

Can't connect?

If you have trouble connecting, try:

- turning the camera and smart device off and then on again, or
- · checking wireless settings on the smart device.

Wireless connections

Use the SnapBridge app for wireless connections between the camera and your smart device. You can connect via either Bluetooth (\square 348) or Wi-Fi (\square 351). Furthermore, a Wi-Fi connection has two modes: "Wi-Fi access point mode" and "Wi-Fi station mode." Connecting via Bluetooth or Wi-Fi station mode allows you to automatically upload pictures as they are taken.

Connecting via Bluetooth (pairing)

Before connecting via Bluetooth for the first time, you will need to pair the camera and smart device.

Before pairing

- Enable Bluetooth on the smart device. For details, see the documentation provided with the device.
- Ensure that the batteries in the camera and smart device are fully charged to prevent the devices turning off unexpectedly.
- · Check that there is space available on the camera memory card.

II Pairing

Pair the camera and smart device as described below.

 Some operations are performed using the camera, others on the smart device.



· Additional instructions are available via SnapBridge online help.

1 Camera: Select [Connect to smart device] > [Pairing (Bluetooth)] in the network menu, then highlight [Start pairing] and press .



The camera name will be displayed in the monitor.



- 2 Smart device: Launch the SnapBridge app and tap [Connect to camera] in the 1 tab.
 - If this is the first time you have launched the app, you should instead tap [Connect to camera] in the welcome display.
- 3 Smart device: Follow the on-screen instructions.
 - When prompted, tap the category for your camera and then tap the "pairing" option when prompted to choose the connection type.
 - · Tap the camera name when prompted.

- 4 Camera/smart device: After confirming that the camera and smart device display the same authentication code, follow the on-screen instructions on both devices to complete pairing.
 - Tap the pairing button on the smart device and press the ® button on the camera.
 - The camera and smart device will each display a message when pairing is complete. The camera will then automatically exit to the menus.



The camera and smart device are now paired.
For information on using the SnapBridge app, see online help.

Pairing error

If you wait too long between pressing the button on the camera and tapping the button on the smart device in Step 4, the device will display an error message and pairing will fail.

- · If you are using an Android device, tap [OK] and return to Step 1.
- If you are using an iOS device, dismiss the SnapBridge app and check that
 it is not running in the background, then request iOS to "forget" the
 camera before returning to Step 1. The request to "forget" the camera is
 made via the iOS "Settings" app.



Disabling Bluetooth

To disable Bluetooth, select [OFF] for [Connect to smart device] > [Pairing (Bluetooth)] > [Bluetooth connection] in the camera network menu.

■ Connecting to a previously-paired smart device

Once the smart device has been paired with the camera, you will be able to connect simply by enabling Bluetooth on both the smart device and camera and launching the SnapBridge app.

Connecting via Wi-Fi

There are two ways to connect the camera and a smart device via Wi-Fi with the SnapBridge app: "Wi-Fi access point mode" to connect the camera and smart device directly via Wi-Fi and "Wi-Fi station mode" to connect to the smart device via a wireless router on an existing network (including home networks).

 Some operations are performed using the camera, others on the smart device.



· Additional instructions are available via SnapBridge online help.

Before connecting via Wi-Fi

- Enable Wi-Fi on the smart device. For details, see the documentation provided with the device.
- Ensure that the batteries in the camera and smart device are fully charged to prevent the devices turning off unexpectedly.
- · Check that there is space available on the camera memory card.

■ Direct wireless connection to a smart device (Wi-Fi access point mode)

Connect the camera and a smart device directly via Wi-Fi. The camera acts as a wireless LAN access point, allowing you to connect when working outdoors and in other situations in which the smart device is not already connected to a wireless network and eliminating the need for complicated adjustments to settings. The smart device cannot connect to the Internet while connected to the camera.

1 Smart device: Launch the SnapBridge app, open the ● tab, tap ☑, and select [Wi-Fi AP Mode Connection].

If this is the first time you have launched the app, you should instead tap [Connect to camera] in the welcome display. When prompted, tap the category for your camera and then tap the "Wi-Fi" option when prompted to choose the connection type.

- **2** Camera/smart device: Turn the camera on when prompted. Do not use any of the controls in the app at this point.
- 3 Camera: Select [Connect to smart device] > [Wi-Fi connection (AP mode)] in the network menu, then highlight [Establish Wi-Fi connection] and press 8.



The camera SSID and password will be displayed.



- 4 Smart device: Follow the on-screen instructions to establish a Wi-Fi connection.
 - On iOS devices, the "Settings" app will launch. Tap [< Settings] to open [Settings], then scroll up and tap [Wi-Fi] (which you'll find near the top of the settings list) to display Wi-Fi settings.





 In the Wi-Fi settings display, select the camera SSID and enter the password displayed by the camera in Step 3.

5 Smart device: After adjusting device settings as described in Step 4, return to the SnapBridge app.

- After establishing a Wi-Fi connection to the camera, the smart device will display Wi-Fi access point mode options.
- The camera will display a message stating that the connection is complete.



The camera and smart device are now connected via Wi-Fi. For information on using the SnapBridge app, see online help.

Connecting to an existing network (Wi-Fi station mode)

The camera connects to a smart device on an existing network (including home networks) via a wireless LAN access point. The smart device can still connect to the Internet while connected to the camera.

Wi-Fi station mode

Connection to smart devices beyond the local area network is not supported. You can connect only to smart devices on the same network.

1 Camera: Select [Connect to smart device] > [Wi-Fi connection (STA mode)] in the network menu, then highlight [Create profile] and press ⊗.



2 Camera: Name the new profile.



- To proceed to the next step without changing the default name, press \mathfrak{P} .
- · Whatever name you choose will appear in the network menu
 [Connect to smart device] > [Wi-Fi connection (STA mode)] list.
- To rename the profile, press ⊗. For information on text entry, see "Text entry" (□78). Press ♥ to proceed after entering a name.

3 Camera: Highlight [Search for Wi-Fi network] and press ⊗.



The camera will search for networks currently active in the vicinity and list them by name (SSID).

[Easy Connect]

To connect without entering an SSID or encryption key, press \mathfrak{P} in Step 3. Next, highlight one of the following options and press \mathfrak{P} . After connecting, proceed to Step 6.

Option	Description
[Push- button WPS]	For routers that support push-button WPS. Press the WPS button on the router and then press the camera ® button to connect.
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.

4 Camera: Choose a network.



- · Highlight a network SSID and press @.
- The SSIDs containing characters that cannot be entered on the camera will not be displayed.
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a icon. If the selected network is encrypted (i), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 6.
- · If the desired network is not displayed, press ♥ to search again.

Hidden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.



- To connect to a network with a hidden SSID, highlight a blank entry and press . Next, press ; the camera will prompt you to provide an SSID.
- Enter the network name and press \(\mathbb{Q}, \) Press \(\mathbb{Q} \) again; the camera will now prompt you to enter the encryption key.

5 Camera: Enter the encryption key.



- Press ® and enter the encryption key for the wireless router.
- For more information, see the documentation for the wireless router.



- · Press ♥ when entry is complete.
- Press @ again to initiate the connection. A message will be displayed for a few seconds when the connection is established.



6 Camera: Obtain or select an IP address.



Highlight one of the following options and press ®.

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	Enter the IP address and sub-net mask manually. • Press ⊗; you will be prompted to enter the IP address. • Rotate the main command dial to highlight segments. • Press ⊕ or ⊕ to change the highlighted segment and press ⊗ to save changes. • Next, press ♥; a "configuration complete" message will be displayed. Press ♥ again to display the sub-net mask. • Press ⊕ or ⊕ to edit the sub-net mask and press ⊗; a "configuration complete" message will be displayed.

7 Camera: Press

to proceed when the "configuration complete" message is displayed.

8 Camera: Start a Wi-Fi connection with the smart device.



When prompted, launch the SnapBridge app on the smart device.

- - Make sure your smart device is connected to the same SSID network to which the camera is connected.
 - Follow the on-screen instructions to operate the SnapBridge app. If this is the first time you have launched the app, you should instead tap [Connect to camera] in the welcome display.
- 10 Smart device: Select the camera.

Select the name displayed by the camera in Step 8.

11 Camera/smart device: Establish a Wi-Fi connection.



- When the camera displays a message stating that pairing is complete, press ®.
- After establishing a Wi-Fi connection to the camera, the smart device will display Wi-Fi station mode options.
- The camera will display a message stating that the connection is complete.



The camera and smart device are now connected via Wi-Fi.
For information on using the SnapBridge app, see online help.

■ Terminating Wi-Fi access point/Wi-Fi station mode

To end the Wi-Fi connection, tap in the SnapBridge tab. After the icon changes to , tap , and select [Exit Wi-Fi AP mode] or [Exit Wi-Fi STA mode].

 
Connecting to computers or FTP servers

Making the connection

The camera can be connected to a computer or FTP server using any of the methods below.

Computers: Connecting via USB

Connect the camera using a USB cable.



• The connection can be used to transfer pictures to a computer using Nikon's NX Studio software (\$\subset\$364) or to control the camera remotely from computers using NX Tether software (\$\superstandard{413}\$).

Computers: Connecting via wireless LAN

Connect to computers using the camera's built-in wireless LAN (\$\square\$369).



))))



• The connection can be used to upload pictures (\$\sum408\$) or to control the camera remotely from computers on the network running NX Tether software (\$\sum413\$).

FTP servers: Connecting via wireless LAN

 
Connect to FTP servers using the camera's built-in wireless LAN (\$\square\$388).



• The connection can be used to upload pictures via FTP (\$\square\$408).

Computers: Connecting via USB

Connect the camera using the supplied USB cable. You can then use Nikon NX Studio software to copy pictures to the computer for viewing and editing.



Installing NX Studio

You will need an Internet connection when installing NX Studio. Visit the Nikon website for system requirements and other information.

 
- Download the latest NX Studio installer from the website below and follow the on-screen instructions to complete installation. https://downloadcenter.nikonimglib.com/
- Note that you may be unable to download pictures from the camera using earlier versions of NX Studio.

Copying pictures to a computer using NX Studio

See online help for detailed instructions.

1 Connect the camera to the computer.

After turning the camera off and ensuring that a memory card is inserted, connect the supplied USB cable as shown.



2 Turn the camera on.

- The Nikon Transfer 2 component of NX Studio will start. Nikon Transfer 2 is image transfer software that is installed when you install NX Studio.
- · If a message is displayed prompting you to choose a program, select Nikon Transfer 2.
- If Nikon Transfer 2 does not start automatically, launch NX Studio and click the "Import" icon.

3 Click [Start Transfer].



Pictures on the memory card will be copied to the computer.

4 Turn the camera off.

Disconnect the USB cable when transfer is complete.

Windows

Some computers may be configured to display an AutoPlay prompt when the camera is connected.



Click the dialog and then click [Nikon Transfer 2] to select Nikon Transfer 2.



™ macOS

If Nikon Transfer 2 does not start automatically, confirm that the camera is connected and then launch Image Capture (an application that comes with macOS) and select Nikon Transfer 2 as the application that opens when the camera is detected.

Caution: Transferring videos

Do not attempt to transfer videos from the memory card while it is inserted in a camera of a different make or model. Doing so could result in the videos being deleted without being transferred.

Cautions: Connecting to computers

- Do not turn the camera off or disconnect the USB cable while transfer is in progress.
- Do not use force or attempt to insert the connectors at an angle. Be sure also to keep the connectors straight when disconnecting the cable.

- · Always turn the camera off before connecting or disconnecting a cable.
- To ensure that data transfer is not interrupted, be sure the camera battery is fully charged.

USB hubs

Connect the camera directly to the computer; do not connect the cable via a USB hub or keyboard. Connect the camera to a pre-installed USB port.

Tip: Using a card reader

Pictures can also be copied from a memory card inserted in a third-party card reader. You should however check that the card is compatible with the card reader.

Computers: Connecting via wireless LAN

The camera can connect to computers via Wi-Fi (built-in wireless LAN).

Connecting to multiple devices

The camera can connect to only one type of device (computer, FTP server, or smart device) at a time. End the current connection before attempting to connect to a device of a different type.

Can't connect?

If you have trouble connecting, try:

- · turning the camera off and then on again,
- · checking wireless settings on the computer, or
- · restarting the computer.

Tip: Wireless LAN errors

For information on wireless-related errors, see "Troubleshooting wireless LAN connection" (12416).

The Wireless Transmitter Utility

Before you will be able to connect to a wireless LAN, you will need to pair the camera with the computer using Nikon's Wireless Transmitter Utility software.

- Once the devices are paired, you will be able to connect to the computer from the camera.
- The Wireless Transmitter Utility is available for download from the Nikon Download Center. Be sure to download the latest version after reading the release notes and system requirements. https://downloadcenter.nikonimglib.com/

Connecting to computers via wireless LAN

The camera can connect to computers either by direct wireless link (Wi-Fi access point mode) or via a wireless router on an existing network, including home networks (Wi-Fi station mode).

■ Direct wireless connection to a computer (Wi-Fi access point mode)

The camera and computer connect via direct wireless link. The camera acts as a wireless LAN access point, letting you connect when working outdoors and in other situations in which the computer is not already connected to a wireless network and eliminating the need for complicated adjustments to settings. The computer cannot connect to the Internet while connected to the camera.



 




- * Before proceeding, check that the Wireless Transmitter Utility (□369) is installed on the computer.
- 1 Select [Connect to computer] in the camera network menu, then highlight [Network settings] and press ⊕.



2 Highlight [Create profile] and press ®.



3 Name the new profile.



- · To proceed to the next step without changing the default name, press \P .
- Whatever name you choose will appear in the network menu [Connect to computer] > [Network settings] list.

4 Highlight [Direct connection to computer] and press 88.



The camera SSID and encryption key will be displayed.



5 Establish a connection to the camera.

Windows:



- · Click the wireless LAN icon in the taskbar.
- · Select the SSID displayed by the camera in Step 4.
- When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 4. The computer will initiate a connection to the camera.

macOS:



- · Click the wireless LAN icon in the menu bar.
- · Select the SSID displayed by the camera in Step 4.

• When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 4. The computer will initiate a connection to the camera.

6 Start pairing.



When prompted, launch the Wireless Transmitter Utility on the computer.

7 Select the camera in the Wireless Transmitter Utility.



Select the name displayed by the camera in Step 6 and click [Next].

8 In the Wireless Transmitter Utility, enter the authentication code displayed by the camera.



- · The camera will display an authentication code.
- Enter the authentication code in the dialog displayed by the Wireless Transmitter Utility and click [**Next**].



9 Complete the pairing process.



- · When the camera displays a message stating that pairing is complete, press ®.
- In the Wireless Transmitter Utility, click [Next]; you will be prompted to choose a destination folder. For more information, see online help for the Wireless Transmitter Utility.



• A wireless connection will be established between the camera and computer when pairing is complete.

10 Check the connection.



When a connection is established, the profile name will be displayed in green in the camera [Connect to computer] menu.

• If the profile name is not displayed in green, connect to the camera via the wireless network list on your computer.

A wireless connection has now been established between the camera and the computer.

Pictures taken with the camera can be uploaded to the computer as described under "Uploading pictures" (

(

408) in the chapter titled "What you can do when the camera is connected to a computer or FTP server".

For information on controlling the camera from a computer using NX Tether, see the section on "Camera control" (11413) in the chapter titled "What you can do when the camera is connected to a computer or FTP server".

Tip: Firewall settings

TCP port 15740 and UDP port 5353 are used for connections to computers. File transfer may be blocked if the server firewall is not configured to allow access to these ports.

■ Connecting to an existing network (Wi-Fi station mode)

The camera connects to a computer on an existing network (including home networks) via a wireless router. The computer can still connect to the Internet while connected to the camera.



 Before proceeding, check that the Wireless Transmitter Utility (□369) is installed on the computer.

 
Wi-Fi station mode

Connection to computers beyond the local area network is not supported. You can connect only to computers on the same network.

Select [Connect to computer] in the camera network menu, then highlight [Network settings] and press .



2 Highlight [Create profile] and press ⊗.



3 Name the new profile.



- · To proceed to the next step without changing the default name, press \P .
- Whatever name you choose will appear in the network menu [Connect to computer] > [Network settings] list.
- To rename the profile, press @. For information on text entry, see "Text entry" (\$\square\$78). Press \$\emptyset\$ to proceed after entering a name.

4 Highlight [Search for Wi-Fi network] and press ®.



The camera will search for networks currently active in the vicinity and list them by name (SSID).

[Easy Connect]

To connect without entering an SSID or encryption key, press \mathfrak{P} in Step 4. Next, highlight one of the following options and press \mathfrak{P} . After connecting, proceed to Step 7.



Option	Description
[Push- button WPS]	For routers that support push-button WPS. Press the WPS button on the router and then press the camera ® button to connect.
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.

5 Choose a network.



- · Highlight a network SSID and press @.
- The SSIDs containing characters that cannot be entered on the camera will not be displayed.
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a icon. If the selected network is encrypted (), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 7.
- If the desired network is not displayed, press \mathfrak{P} to search again.

Hidden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.



- To connect to a network with a hidden SSID, highlight a blank entry and press . Next, press : the camera will prompt you to provide an SSID.
- Enter the network name and press \(\mathbb{Q}, \) Press \(\mathbb{Q} \) again; the camera will now prompt you to enter the encryption key.

6 Enter the encryption key.



- Press ® and enter the encryption key for the wireless router.
- For more information, see the documentation for the wireless router.



- · Press ♥ when entry is complete.
- Press ♥ again to initiate the connection. A message will be displayed for a few seconds when the connection is established.



7 Obtain or select an IP address.



· Highlight one of the following options and press ®.

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	Enter the IP address and sub-net mask manually. Press ; you will be prompted to enter the IP address. Rotate the main command dial to highlight segments. Press ; or ; to change the highlighted segment and press ; to save changes. Next, press ; a "configuration complete" message will be displayed. Press ; again to display the sub-net mask. Press ; or ; to edit the sub-net mask and press ; a "configuration complete" message will be displayed.

8 Press ® to proceed when the "configuration complete" message is displayed.

9 Start pairing.



When prompted, launch the Wireless Transmitter Utility on the computer.

10 Select the camera in the Wireless Transmitter Utility.



Select the name displayed by the camera in Step 9 and click [Next].

11 In the Wireless Transmitter Utility, enter the authentication code displayed by the camera.



- · The camera will display an authentication code.
- Enter the authentication code in the dialog displayed by the Wireless Transmitter Utility and click [**Next**].



12 Complete the pairing process.



- When the camera displays a message stating that pairing is complete, press ®.
- In the Wireless Transmitter Utility, click [Next]; you will be prompted to choose a destination folder. For more information, see online help for the Wireless Transmitter Utility.



 A wireless connection will be established between the camera and computer when pairing is complete.

13 Check the connection.



When a connection is established, the profile name will be displayed in green in the camera [Connect to computer] menu.

A wireless connection has now been established between the camera and the computer.

Pictures taken with the camera can be uploaded to the computer as described under "Uploading pictures" (

408) in the chapter titled "What you can do when the camera is connected to a computer or FTP server".

For information on controlling the camera from a computer using NX Tether, see the section on "Camera control" (II413) in the chapter titled "What you can do when the camera is connected to a computer or FTP server".

Ending the connection to the computer

You can end the connection by:

- · turning the camera off, or
- selecting [End current connection] for [Connect to computer] > [Network settings] in the network menu.

Wi-Fi access-point mode

An error will occur if the computer's wireless connection is disabled before the camera's. Disable camera's connection first.

FTP servers: Connecting via wireless LAN

The camera can connect to FTP servers via Wi-Fi (built-in wireless LAN).

Connecting to multiple devices

The camera can connect to only one type of device (computer, FTP server, or smart device) at a time. End the current connection before attempting to connect to a device of a different type.

Can't connect?

If you have trouble connecting, try:

- · turning the camera off and then on again,
- · checking wireless settings on the FTP server, or
- · restarting the FTP server.

Tip: Wireless LAN errors

For information on wireless-related errors, see "Troubleshooting wireless LAN connection" (12416).

Connecting to FTP servers via wireless LAN

The camera can connect to FTP servers either by direct wireless link (Wi-Fi access point mode) or via a wireless router on an existing network, including home networks (Wi-Fi station mode).

FTP servers

- Servers can be configured using standard FTP services—including IIS (Internet Information Services)—available with Windows 11 and Windows 10.
- Internet FTP connections and connection to FTP servers running thirdparty software are not supported.

FTPS servers

- Before connecting to a server via FTPS, you will need to load a root certificate onto the camera. This can be done using [Connect to FTP server] > [Options] > [Manage root certificate] > [Import root certificate] in the network menu.
- Contact the network administrator for the FTPS server in question for information on acquiring root certificates.

Direct wireless connection (Wi-Fi access point mode)

The camera and FTP server connect via direct wireless link. The camera acts as a wireless LAN access point, letting you connect when working outdoors and in other situations in which the FTP server is not already connected to a wireless network and eliminating the need for complicated adjustments to settings.





FTI

Select [Connect to FTP server] in the network menu, then highlight [Network settings] and press .



2 Highlight [Create profile] and press ⊗.



3 Highlight [Connection wizard] and press .



The connection wizard will launch.

Manual configuration

Choose [Configure manually] to configure settings manually.



4 Name the new profile.



- · To proceed to the next step without changing the default name, press \P .
- · Whatever name you choose will appear in the network menu [Connect to FTP server] > [Network settings] list.
- · To rename the profile, press ⊗. For information on text entry, see "Text entry" (□78). Press ♥ to proceed after entering a name.

5 Highlight [Direct connection to computer] and press .



The camera SSID and encryption key will be displayed.




6 Establish a connection to the camera.

Windows:



- · Click the wireless LAN icon in the taskbar.
- · Select the SSID displayed by the camera in Step 5.
- When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 5. The computer will initiate a connection to the camera.

macOS:

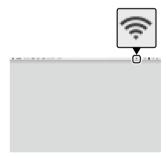

- · Click the wireless LAN icon in the menu bar.
- · Select the SSID displayed by the camera in Step 5.

• When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 5. The computer will initiate a connection to the camera.

7 Choose the server type.



Highlight [FTP], [SFTP] (SSH FTP), or [FTPS] (FTP-SSL) and press ⊗ to display a dialog where you can enter the FTP server port number.

8 Enter the FTP server port number.



· Press

to save changes.

Tip: Firewall settings

• The ports used for FTP vary with the server type. The port numbers are listed below.

[FTP]: TCP ports 21 and 32768 through 61000 [SFTP]: TCP ports 22 and 32768 through 61000

[FTPS]: TCP ports 21 and 32768 through 61000

• File transfer may be blocked if the server firewall is not configured to allow access to the appropriate ports.

9 Log in.



Highlight one of the following options and press ®.

Option	Description
[Anonymous login]	Select this option if the server does not require a user ID or password. This option can only be used with servers that are configured for anonymous login. If login is successful, the camera will prompt you to choose a destination.
[Enter user ID]	Enter a user ID and password. Press ® to log in when entry is complete. If login is successful, the camera will prompt you to choose a destination.

10 Choose a destination folder.



Highlight one of the following options and press [®].

Option	Description
[Home folder]	Select this option to select the server's home folder as the destination for pictures uploaded from the camera. A "setup complete" dialog will be displayed if the operation is successful.
[Enter folder name]	Enter the destination folder name manually. The folder must already exist on the server. Enter the folder name and path when prompted and press ® to display the "setup complete" dialog.

11 Check the connection.



When a connection is established, the profile name will be displayed in green in the camera [Connect to FTP server] menu.

• If the profile name is not displayed in green, connect to the camera via the wireless network list on the FTP server.

A wireless connection has now been established between the camera and the FTP server.



Pictures taken with the camera can be uploaded to the FTP server as described under "Uploading pictures" (

"What you can do when the camera is connected to a computer or FTP server."

Connecting to an existing network (Wi-Fi station mode)

The camera and FTP server connect on an existing network (including home networks) via a wireless router.



Tip: Wi-Fi station mode

Wi-Fi station mode supports connection to FTP servers on different networks.

Select [Connect to FTP server] in the network menu, then highlight [Network settings] and press .



2 Highlight [Create profile] and press ⊗.



3 Highlight [Connection wizard] and press .



The connection wizard will launch.

Manual configuration

Choose [Configure manually] to configure settings manually.



4 Name the new profile.



- · To proceed to the next step without changing the default name, press \P .
- Whatever name you choose will appear in the network menu [Connect to FTP server] > [Network settings] list.
- To rename the profile, press @. For information on text entry, see "Text entry" (\$\square\$78). Press \quad to proceed after entering a name.

5 Highlight [Search for Wi-Fi network] and press 🛭



The camera will search for networks currently active in the vicinity and list them by name (SSID).

[Easy Connect]

To connect without entering an SSID or encryption key, press \mathfrak{P} in Step 5. Next, highlight one of the following options and press \mathfrak{P} . After connecting, proceed to Step 8.



Option	Description	
[Push- button WPS]	For routers that support push-button WPS. Press the WPS button on the router and then press the camera ® button to connect.	
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.	

6 Choose a network.



- · Highlight a network SSID and press @.
- The SSIDs containing characters that cannot be entered on the camera will not be displayed.
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a icon. If the selected network is encrypted (), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 8.
- If the desired network is not displayed, press Θ to search again.

Hidden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.



- To connect to a network with a hidden SSID, highlight a blank entry and press . Next, press ; the camera will prompt you to provide an SSID.
- Enter the network name and press \(\mathbb{Q}, \) Press \(\mathbb{Q} \) again; the camera will now prompt you to enter the encryption key.

7 Enter the encryption key.



- Press ® and enter the encryption key for the wireless router.
- For more information, see the documentation for the wireless router.



- · Press ♥ when entry is complete.
- Press ♥ again to initiate the connection. A message will be displayed for a few seconds when the connection is established.



8 Obtain or select an IP address.



Highlight one of the following options and press ®.

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	Enter the IP address and sub-net mask manually. • Press ⊕; you will be prompted to enter the IP address. • Rotate the main command dial to highlight segments. • Press ⊕ or ⊕ to change the highlighted segment and press ⊕ to save changes. • Next, press ⊕; a "configuration complete" message will be displayed. Press ⊕ again to display the sub-net mask. • Press ⊕ or ⊕ to edit the sub-net mask and press ⊕; a "configuration complete" message will be displayed.

⁹ Press **®** to proceed when the "configuration complete" message is displayed.

10 Choose the server type.



Highlight [FTP], [SFTP] (SSH FTP), or [FTPS] (FTP-SSL) and press ⊗ to display a dialog where you can enter the server address.

11 Enter the server address.

• Press ® to enter the server URL or IP address.



· Press ♥ when entry is complete.



Press
 ^Q again to connect to the FTP server. A dialog will be
 displayed where you can enter the FTP server port number if the
 connection is successful.



12 Enter the FTP server port number.

· Press or to highlight digits, and press or or to change the numerical values.



· Press

to save changes.

Tip: Firewall settings

• The ports used for FTP vary with the server type. The port numbers are listed below.

[FTP]: TCP ports 21 and 32768 through 61000

[SFTP]: TCP ports 22 and 32768 through 61000

[FTPS]: TCP ports 21 and 32768 through 61000

• File transfer may be blocked if the server firewall is not configured to allow access to the appropriate ports.

13 Log in.



Highlight one of the following options and press ®.

Option Description	
[Anonymous login]	Select this option if the server does not require a user ID or password. This option can only be used with servers that are configured for anonymous login. If login is successful, the camera will prompt you to choose a destination.
[Enter user ID]	Enter a user ID and password. Press ® to log in when entry is complete. If login is successful, the camera will prompt you to choose a destination.

14 Choose a destination folder.



Highlight one of the following options and press [®].

Option	Description
[Home folder]	Select this option to select the server's home folder as the destination for pictures uploaded from the camera. A "setup complete" dialog will be displayed if the operation is successful.
[Enter folder name]	Enter the destination folder name manually. The folder must already exist on the server. Enter the folder name and path when prompted and press ® to display the "setup complete" dialog.

 
15 Check the connection.



When a connection is established, the profile name will be displayed in green in the camera [Connect to FTP server] menu.

A wireless connection has now been established between the camera and the FTP server.

• "FTP" will appear in the camera shooting display once a connection is established. If a connection error occurs, this indicator will be displayed in red together with a ① icon.



Pictures taken with the camera can be uploaded to the FTP server as described under "Uploading pictures" (

"What you can do when the camera is connected to a computer or FTP server."

Ending the connection to the FTP server

You can end the connection by:

- turning the camera off, or
- selecting [End current connection] for [Connect to FTP server] > [Network settings] in the network menu.

Wi-Fi access-point mode

An error will occur if the FTP server's wireless connection is disabled before the camera's. Disable camera's connection first.

What you can do when the camera is connected to a computer or FTP server

Wireless LAN connections can be used to upload pictures or control the camera remotely.

Uploading pictures

Pictures can be selected for upload during playback. They can also be uploaded automatically as they are taken.

 Before uploading pictures, connect the camera to the destination via wireless LAN (\$\square\$369, \$\square\$388). After creating a profile, confirm that the profile name is listed in green in the [Connect to computer] or [Connect to FTP server] display.



 To upload pictures to a computer, select [Picture transfer] for [Connect to computer] > [Connection type] in the network menu.



Caution: Wi-Fi access point mode

Select a host profile and enable camera Wi-Fi before connecting.

Destination folders for upload to a computer

- · By default, images are uploaded to the following folders:
 - Windows: \Users\(user name)\Pictures\Wireless Transmitter Utility
 - macOS: /Users/(user name)/Pictures/Wireless Transmitter Utility
- The destination folder can be selected using the Wireless Transmitter Utility. For more information, see online help for the Wireless Transmitter Utility.

■ Selecting pictures for upload

- Press the button on the camera and select full-frame or thumbnail playback.
- 2 Select a picture and press the *i* button.



The \boldsymbol{i} menu items used to select pictures for upload vary with the type of device connected.

Highlight [Select for upload to computer] or [Select for upload (FTP)] and press .



- A white "priority upload" icon will appear on the picture. If the camera is currently connected to a network, upload will begin immediately and the icon will turn green.
- · Otherwise, upload will begin when a connection is established.
- · Repeat Steps 2-3 to upload additional pictures.

Removing upload marking

- · Repeat Steps 2–3 to remove transfer marking from selected images.
- To remove upload marking from all pictures, select [Connect to computer] or [Connect to FTP server] in the network menu and choose [Options] > [Deselect all?].

Tip: Filtering pictures for upload

The [Filtered playback] item in the playback i menu can be used to display only pictures that meet chosen criteria (\square 277). The pictures can then all be selected for upload by highlighting [Select all for computer upload] or [Select all for upload (FTP)] in the i menu and pressing \otimes .

■ Uploading photos as they are taken

To upload new photos as they are taken, select [Connect to computer] or [Connect to FTP server] in the network menu and choose [ON] for [Options] > [Auto upload].



- Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera.
- Videos are not uploaded automatically. They must instead be uploaded manually from the playback display.

II The upload icon

Upload status is indicated by the upload icon.



The picture has been manually selected for upload. Pictures marked with this icon will be uploaded before pictures marked ("upload").

(white): Upload


The picture has been selected for upload but upload has not yet begun.

t Green): Uploading Upload in progress.

∠ (blue): Uploaded
Upload complete.

■ The [Connect to computer]/[Connect to FTP server] upload status display

The [Connect to computer] and [Connect to FTP server] displays show the following:

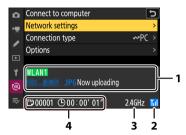

- 1 Status: The status of the connection to the host. The profile name is displayed in green when a connection is established. While files are being transferred, the status display shows "Now uploading" preceded by the name of the file being sent. Errors are also displayed here.
 - The display for [Connect to FTP server] also includes error codes (\$\sum417\$).
- **Signal strength:** Wireless signal strength.

- Band: When connecting wirelessly in Wi-Fi station mode, the radio frequency band of the connected SSID network is displayed. In Wi-Fi access point mode, the radio frequency band that the camera is outputting is displayed.
- 4 Pictures/time remaining: The number of pictures remaining and the time needed to send them. The time remaining is an estimate only.

Loss of signal

Wireless transmission may be interrupted if the signal is lost. Upload of pictures with "send" marking can be resumed by turning the camera off and then on again once the signal has been re-established.

Caution: During upload

Do not remove the memory card during upload.

Voice memos

Voice memos will be included when the associated pictures are transmitted. They cannot, however, be uploaded separately.

Turning the camera off

The camera saves transfer marking when turned off and resumes upload when next turned on.

Caution: Uploading protected pictures via FTP

The copies on the FTP server will not be protected even if the originals are. Markings can be added using ratings (\square 273).

Camera control

The camera can be controlled from a computer running NX Tether software. Photos can be saved directly to the computer instead of to the memory card and can consequently be taken even when no memory card is inserted in the camera.

- · You will still need to insert a memory card when filming videos.
- Note that the camera standby timer does not expire in camera control mode

• Before using NX Tether, connect the camera and computer via wireless LAN (\$\mathrm{\mothrm{\mathrm{\mathrm{\mathrm{\mathrm{\mathrm{\mathrm{\mothrm{\mathrm{\mothrm{\mirro}\mathrm{\mothrm{\mirro}\m{\mothrm{\mirro}\moderx{\mothrm{\mirro}\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\moderx{\m




Select [Camera control] for [Connect to computer] > [Connection type] in the network menu.



- 2 Launch the copy of NX Tether installed on the host computer.
- **3** Control the camera using NX Tether.
 For information on taking pictures using NX Tether, see NX Tether online help.

■ The [Connect to computer] camera control display

The [Connect to computer] display shows the following:

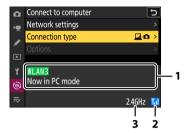

- 1 Status: The status of the connection to the host. The profile name is displayed in green when a connection is established. Errors are also displayed here (□416).
- 2 **Signal strength:** Wireless signal strength.
- wirelessly in Wi-Fi station mode, the radio frequency band of the connected SSID network is displayed. In Wi-Fi access point mode, the radio frequency band that the camera is outputting is displayed.

Loss of signal

Loss of signal while the camera is connected to a wireless network may disrupt the connection to the computer. Select [End current connection] for [Connect to computer] > [Network settings] in the network menu before connecting to the network again. When the signal is re-established, the camera will reconnect to the computer and resume upload of any pictures that have yet to be transferred. Note that upload cannot be resumed if you turn the camera off before transfer is complete.

Troubleshooting wireless LAN connection

Refer to this section for information on errors involving wireless LAN connection.

 For information on the Wireless Transmitter Utility, see the utility's online help.

Problems and solutions

Solutions to some common issues are listed below.

Problem	Solution
 The camera displays a wireless error. The camera displays a TCP/IP error. The camera displays an FTP error. 	Connection settings require adjustment. Check settings for the wireless router, FTP server, or host computer and adjust camera settings appropriately (\$\square\$369, \$\square\$388). Check the error code, if any. For more information, see "Error codes" (\$\square\$417).
"Connecting to computer" does not clear from the camera display.	Check firewall settings (□377, □393).
The camera displays a "no memory card" error.	Memory card not inserted or inserted incorrectly. Confirm that the memory card is correctly inserted (□86).
Upload is interrupted and fails to resume.	Upload will resume if the camera is turned off and then on again (\$\square\$413).

Problem	Solution
The connection is unreliable	If the camera is connected in Wi-Fi station mode, check that the router is set to a channel between 1 and 8 (\$\mu752\$, \$\mu756\$).

Error codes

The following messages and error codes may be displayed if an error occurs while the camera is connected to an FTP server.

• [Wireless error.]

Error code	Solution
Err.11	Confirm that the device to which you are attempting to connect is on.
	Check the SSID (□756).
Err.12	Confirm that you are using the correct password for the selected SSID.
	Confirm that you are using the correct authentication method (\square 756).
Err.13	Confirm that the device to which you are attempting to connect is on.
	Turn the camera off and then on again.
Err.1F	Turn the camera off and then on again.

• [TCP/IP error.]

Solution
heck that the TCP/IP address and sub-net mask are correct

Error code	Solution
Err.22	Duplicate TCP/IP address. Choose a different address (□756).

• [PTP/IP error.]

Error code	Solution
Err.41	Turn the camera off and then on again.

• [FTP error.]

Error code	Solution
Err.31	Check that the FTP server address is correct (□756).
Err.32	Check that the login name and password are correct (□756).
Err.34	Check that the destination folder name is correct (□756).
Err.35	Confirm that the destination folder is not write-protected.
Err.36	Check the DNS (C1756).
Err.37	Check firewall settings (□393).
	Check PASV mode settings (□756).
Err.3F	Turn the camera off and then on again.

• [Error authenticating FTP server credentials.]

Error code	Solution
Err.61	Check that the FTP server supports TLS 1.2 or later.
Err.62	Check that you are using the correct root certificate (□389,
Err.63	□760).

Error code	Solution
Err.64	The camera cannot connect because the FTP server has requested a client certificate. Check FTP server settings.
Err.65	Turn the camera off and then on again.

Connecting to Nikon Imaging Cloud

About Nikon Imaging Cloud

Nikon Imaging Cloud is Nikon's cloud service that can be used in a web browser of the computer or smart device (\$\sigma\$452). Connect your camera with Nikon Imaging Cloud to access a variety of services.

- If you connect your camera, you can use Nikon Imaging Cloud via the Internet even if there are no smart devices or computers nearby.
- See the Nikon Imaging Cloud online help for detailed instructions.

Cautions: Lending and disposing of cameras connected with Nikon Imaging Cloud

- Before lending the camera to another person, you should turn off automatic connection to the camera in the Nikon Imaging Cloud home screen or initialize the camera using the [Reset all settings] item in the camera setup menu.
- If you are discarding the camera or transferring ownership to another
 person, you should delete the camera information in the Nikon Imaging
 Cloud home screen and initialize the camera using the [Reset all
 settings] item in the camera setup menu.

Connecting the camera to Nikon Imaging Cloud

Use the camera and computer/smart device to establish a Wi-Fi connection between the camera and Nikon Imaging Cloud to access services.

☑ Before connecting Nikon Imaging Cloud

- You must create a Nikon ID and register with Nikon Imaging Cloud to use the service. Complete registration and sign in on the computer or smart device before connecting to the camera. See the Nikon Imaging Cloud online help for detailed instructions.
- · A web browser is required to use Nikon Imaging Cloud.
- A Wi-Fi environment is required to connect the camera and Nikon Imaging Cloud. Connect the camera to an existing network (including home networks) via a wireless router.
- 1 Camera: Highlight [Nikon Imaging Cloud] in the network menu and press ().



A QR code and URL to access Nikon Imaging Cloud on a computer or smart device will appear.

2 Camera: When a dialog is displayed as shown, press ⊗ to proceed.



3 Camera: Select [ON] for [Connect to Nikon Imaging Cloud].



4 Camera: Highlight [Search for Wi-Fi network] and press ⊗.



The camera will search for networks currently active in the vicinity and list them by name (SSID).

[Easy Connect]

To connect without entering an SSID or encryption key, press \mathfrak{P} in Step 4. Next, highlight one of the following options and press \mathfrak{P} . After connecting, proceed to Step 7.



Option	Description
[Push- button WPS]	For routers that support push-button WPS. Press the WPS button on the router and then press the camera ® button to connect.
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.

5 Camera: Choose a network.



- · Highlight a network SSID and press @.
- The SSIDs containing characters that cannot be entered on the camera will not be displayed.
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a icon. If the selected network is encrypted (i), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 8.
- If the desired network is not displayed, press Θ to search again.

Hidden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.



- To connect to a network with a hidden SSID, highlight a blank entry and press . Next, press : the camera will prompt you to provide an SSID.
- Enter the network name and press \(\mathbb{Q}, \) Press \(\mathbb{Q} \) again; the camera will now prompt you to enter the encryption key.

6 Camera: Enter the encryption key.



- Press ® and enter the encryption key for the wireless router.
- For more information, see the documentation for the wireless router.



- · Press ♥ when entry is complete.
- Press @ again to initiate the connection. A message will be displayed for a few seconds when the connection is established.



7 Camera: Obtain or select an IP address.



Highlight one of the following options and press ®.

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	Enter the IP address, sub-net mask, gateway address, and Domain Name Server (DNS) address in that order manually. The items can be entered as follows. IP address/gateway address/Domain Name Server (DNS) address: Press ®; you will be prompted to enter the address. Rotate the main command dial to highlight segments. Press ® or ® to change the highlighted segment and press ® to enter changes. When all digits have been entered, press ® to save changes. Press ® again to proceed. Subnet mask: To change the highlighted digit, press ® or ®. Press ® to save changes and proceed.

8 Camera: Press to proceed when the "configuration complete" message is displayed.



The camera accesses Nikon Imaging Cloud and prepares for connection. If preparation is complete, a QR code and URL to access Nikon Imaging Cloud on a computer or smart device will appear.



9 Computer/smart device: Click or tap the connect camera button in the Nikon Imaging Cloud home screen.

An access code to connect Nikon Imaging Cloud and the camera appears.

10 Camera: Enter the access code displayed on the computer/smart device in Step 9.

• Press (R) to enter the access code.



- · Press ♥ when entry is complete.



- 11 Computer/smart device: Scan the QR code displayed on the camera screen or enter the URL also displayed on the camera into a web browser.
 - · A connection confirmation screen appears.
 - If a user-code entry screen appears on the computer/smart device, enter the user code displayed on the camera screen.
- 12 Computer/smart device: Click or tap the [Connect] button.

 Nikon Imaging Cloud and the camera are now connected via Wi-Fi.

 If connection completion screens appear on both the computer/

smart device and the camera, the camera can be used with Nikon Imaging Cloud.



For information on using Nikon Imaging Cloud, see online help.

Error codes

The errors displayed on the camera and their solutions are listed below.

• [Network not found.]

Error code	Solution
Err.11	Confirm that the device to which you are attempting to connect is on.
	Confirm the network SSID in the camera wireless network profile.

• [Wireless error.]

Error code	Solution
Err.12	Confirm that you are using the correct password for the selected SSID.
	Confirm that you are using the correct authentication and encryption method in the camera wireless network profile.
Err.13	Confirm that the device to which you are attempting to connect is on.
	Turn the camera off and then on again.
Err.1F	Turn the camera off and then on again.

• [TCP/IP error.]

Error code	Solution
Err.21	Check that the TCP/IP address and the sub-net mask are correct in the camera wireless network profile.
Err.22	Duplicate IP address. Choose a different address in the camera wireless network profile.

• [Could not connect to Nikon Imaging Cloud.]

Error code	Solution
Err.90	Try connecting to Nikon Imaging Cloud for the first time again from the beginning.
Err.91	The terms of use may have been updated. See the Nikon Imaging Cloud home screen for details.
Err.94	Token error. Turn the camera off and then on again and reconnect.
Err.96	Cannot use Nikon Imaging Cloud. Please check the Nikon Imaging Cloud website.
Err.A0	Couldn't find your Nikon ID. If you do not have a Nikon ID, create one and reconnect the camera.

• [Nikon Imaging Cloud registration failed.]

Error code	Solution
Err.92	Authentication error. Reconnect to Nikon Imaging Cloud using one of the following methods. Computer: Enter the URL displayed on the camera into a web browser. Smart device: Enter the URL displayed on the camera into a web browser or scan the QR code displayed on the camera.
Err.95	Camera identification error. Consult a Nikon-authorized service representative.

• [The system is undergoing maintenance. Cannot connect.]

Error code	Solution
Frr.93	Nikon Imaging Cloud is undergoing maintenance. Please reconnect later.

• [Could not get version update information.]

Error code	Solution
Err.97	Failed to receive firmware update notifications. Please try again later. If this issue occurs frequently, contact a Nikon-authorized service representative.

• [Could not upload pictures to Nikon Imaging Cloud.]

Error code	Solution
Frr 98	Access to Nikon Imaging Cloud is restricted. Please check the Nikon Imaging Cloud website.

• [Could not log in to Nikon Imaging Cloud.]

Error code	Solution
⊢rr Δ1 ∣	The camera sign-in setting is set to off. Turn on the camera sign-
	in setting on the Nikon Imaging Cloud home screen.

• [An HTTPS error occurred.]

Error code	Solution
Err.1400	Turn the camera off and then on again.
Err.1404	Check the DNS in the camera wireless network profile.
Err.1502	Please try again later.


Error code	Solution
Err.1503	Please try again later.
Err.1504	Please try again later.

Connecting to other cameras

What inter-camera connections can do for you


Camera-based remote photography (synchronized release)

 A master camera can be used to release the shutters on up to sixteen remote cameras in the same group $(\square 436)$.



Clock synchronization (synchronize date and time)

 Synchronize the clocks on multiple cameras via a network (451).



Synchronized release

Configuring and using synchronized release

Follow the steps below to create host profiles for synchronized release. Each camera saves the pictures it takes to its own memory card. Repeat the process to create identical profiles for each camera.

Select [Connect to other cameras] in the network menu, then highlight [Network settings] and press ⊕.



2 Highlight [Create profile] and press ®.



3 Name the new profile.



- · To proceed to the next step without changing the default name, press \P .
- Whatever name you choose will appear in the network menu [Connect to other cameras] > [Network settings] list.
- · To rename the profile, press ⊗. For information on text entry, see "Text entry" (□78). Press ♥ to proceed after entering a name.

4 Highlight [Search for Wi-Fi network] and press ®.



The camera will search for networks currently active in the vicinity and list them by name (SSID).

[Easy Connect]

To connect without entering an SSID or encryption key, press \mathfrak{P} in Step 4. Next, highlight one of the following options and press \mathfrak{P} . After connecting, proceed to Step 7.



Option	Description
[Push- button WPS]	For routers that support push-button WPS. Press the WPS button on the router and then press the camera ® button to connect.
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.

5 Choose a network.



- · Highlight a network SSID and press @.
- The SSIDs containing characters that cannot be entered on the camera will not be displayed.
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a icon. If the selected network is encrypted (), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 7.
- · If the desired network is not displayed, press ♥ to search again.

Hidden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.



- To connect to a network with a hidden SSID, highlight a blank entry and press . Next, press ; the camera will prompt you to provide an SSID.
- Enter the network name and press \(\mathbb{Q}, \) Press \(\mathbb{Q} \) again; the camera will now prompt you to enter the encryption key.

6 Enter the encryption key.



- Press ® and enter the encryption key for the wireless router.
- For more information, see the documentation for the wireless router.



- · Press ♥ when entry is complete.
- Press @ again to initiate the connection. A message will be displayed for a few seconds when the connection is established.



7 Obtain or select an IP address.



Highlight one of the following options and press ®.

Option	Description					
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned. • It is recommended that you note the remote camera IP address, as you will need it in subsequent steps.					
[Enter manually]	Enter the IP address and sub-net mask manually. • Press ®; you will be prompted to enter the IP address. • Rotate the main command dial to highlight segments. • Press ③ or ③ to change the highlighted segment and press ⑧ to save changes. • Next, press ③; a "configuration complete" message will be displayed. Press ④ again to display the sub-net mask. • Press ④ or ⑥ to edit the sub-net mask and press ⑨; a "configuration complete" message will be displayed.					

8 Press ® to proceed when the "configuration complete" message is displayed.

The profile name is displayed when a connection is established.

9 Highlight [Master/remote] and press .



Choose a role for each camera from "master" and "remote".

- [Master camera]: Pressing the shutter-release button on the master camera releases the shutters on the remote cameras. Each group can have only one master. If the group has multiple master cameras, only the first to connect to the network will actually serve in that capacity.
- [Remote camera]: The shutters on the remote cameras are synchronized with the shutter on the master camera.
- 10 Repeat Steps 1 through 9 for the remaining cameras
 When configuring remote cameras, be sure to select [Remote camera] in Step 9.
- 11 On the master camera, highlight [Group settings] and press ①.



12 Highlight [New] and press 🕸.



13 Enter a group display name.



- Set a display name for the group that the remote cameras will be added to. Display names can be up to 32 characters long.
- · Press ♥ to save changes.

14 Highlight [Group name], press ①, and enter a group name.



Enter a group name for the synchronized cameras. Group names can be up to 8 characters long.

Assigning remote cameras a [Group name]

The group name selected on the remote cameras must match that chosen for the master camera. Choose the name using [Connect to other cameras] > [Group name] in the network menu.

 


15 Select [Remote camera list] and press ①



Add the remote cameras to be used in the group settings. The master camera can store information for up to 16 remote cameras in slots [01] through [16].

16 Highlight the desired slot and press **①**.



Remote camera options will be displayed.

17 Highlight [Address] and press **3**.



You will be prompted to enter an IP address.

18 Enter the remote camera IP address.



Enter the remote camera IP address you noted in Step 7.

- · Rotate the main command dial to highlight segments.
- Press 0 or 0 to change the highlighted segment and press 0 to save changes.
- Press \mathfrak{P} to add the remote camera to the master camera remote camera list and establish a connection.

Tip: Viewing remote camera IP addresses

To view a remote camera's IP address, select [Connect to other cameras]

> [Network settings] in the camera's network menu, highlight a synchronized release host profile, press (), and select [TCP/IP].

 


19 Add the remaining remote cameras.


- When connecting to wireless networks, the cameras will display the band used by the selected SSID.
- The display name (1) of the group set in step 13 and the number of connected and unconnected remote cameras (2) are displayed on the master camera.



20 Take pictures.



 • Pressing the shutter-release button on the master camera releases the shutters on the remote cameras.



Connection errors

 
In the event of remote camera connection errors, the remote camera count in the master camera shooting display will turn red and instead show the number of remote cameras that failed to connect.

Tip: Suspending synchronized release

To temporarily disable synchronized release without ending the camera's connection to the network, select [OFF] for [Connect to other cameras] > [Synchronized release] in the network menu.

Tip: Viewing remote camera status

To view remote camera status, select [Connect to other cameras] > [Group settings] > [(group name)] > [Remote camera list] in the master camera's network menu, and press ③.



- · Remote cameras are identified by IP address.
- · Remote camera status is displayed as follows:
 - [Connected]: Normal connection.
 - [Busy]: The camera is being controlled from another master camera.
 - $[\boldsymbol{Error}]$: One of the following errors has been detected:

The remote camera standby timer has expired.

The remote camera is off.

The remote camera is not in the same group as the master camera.

- [OFF]: Either
 no remote camera has been assigned to the slot, or

 [OFF] is selected for [Connect to remote camera] on the camera in question.
- Highlighting a remote camera with the [Connected] label and pressing (3) displays the number of pictures awaiting upload from the camera via FTP, FTP connection status, the battery level, and the number of exposures remaining.
- The entries for the remote cameras previously used for synchronized release will show the time of the most recent shot

 To edit remote camera settings from the master camera, highlight the camera in the remote camera list and press .



- To temporarily suspend the connection to the selected camera, select [OFF] for [Connect to remote camera].
- To temporarily suspend synchronized release on the selected camera, select [OFF] for [Synchronized release].
- If desired, you can then edit the camera's IP address by highlighting [Address] and pressing ①. To reconnect, select [ON] for [Connect to remote camera]. No connection will be established if no remote camera exists at the specified address.

Tip: Saving group settings to a memory card

Highlight [Connect to other cameras] > [Group settings] > [Load/save] > [Copy to card] in the network menu and press (3), then highlight the group settings you want to copy to the memory card and press (3). Highlight a destination (1 to 99) and press (3) to copy the highlighted group settings to the memory card. Saved group settings can be added using [Copy profile from card].

Synchronizing camera clocks

When the cameras are connected to the network using [Connect to other cameras] in the network menu, the clocks on all cameras in the current group connected can be set to the time and date reported by the master camera.

- Connect the cameras to the network using [Connect to other cameras] > [Network settings] in the network menu.

 For more information, see "Synchronized release" (\$\square\$436).
- 2 On the master camera, select [Connect to other cameras], then highlight [Synchronize date and time] and press .



- · Master camera clock settings will be displayed.
- [Synchronize date and time] is not available on the remote cameras.
- [Synchronize date and time] will not be available if no camera is connected to the network.

3 Press ⊗.

- The clocks on the remote cameras will be set to the date and time reported by the master camera.
- $\boldsymbol{\cdot}$ A message will be displayed when the process is complete.
- \cdot Press @ again to return to the [Connect to other cameras] display.

Nikon cloud service, software, and applications

Cloud service

This introduces Nikon's cloud service. For the latest information, visit the Nikon website.

Nikon Imaging Cloud

Nikon Imaging Cloud is Nikon's cloud service that can be used in a web browser of the computer or smart device. Nikon Imaging Cloud provides following services.



- Image transfer: Upload images shot with the camera to Nikon Imaging Cloud and send them to external online storage.
- Imaging recipe: Save image shooting data as a recipe. Create your own recipes or select from "public recipes."
- Providing Picture Controls: Download Picture Controls from Nikon Imaging Cloud and import them to the camera.
- Firmware update: Download firmware directly to the camera from Nikon Imaging Cloud.

To access Nikon Imaging Cloud from a computer or smart device, either scan the QR code or enter the following URL into a web browser. We recommend bookmarking the site.

https://imagingcloud.nikon.com



- You can also check the access QR code and URL by [Nikon Imaging Cloud] > [About Nikon Imaging Cloud] in the camera's network menu.
- Read all license agreements, etc. displayed when you use the service for the first time and only proceed if you are willing to accept them.
- For the latest information on Nikon Imaging Cloud, visit the Nikon website

Computer software

This introduces Nikon's main computer software applications. For the latest information, visit the Nikon website.

 Nikon computer software is available from the Nikon Download Center. Check the version and system requirements and be sure to download the latest version.

https://downloadcenter.nikonimglib.com/

NX Tether

Use for tethered photography when the camera is connected to a computer. Exposure, white balance, and other camera settings can be adjusted remotely using controls in the computer display.



NX Studio

View and edit photos and videos shot with Nikon digital cameras.



- Use NX Studio's Nikon Transfer 2 component to transfer pictures to a computer.
- You can use NX Studio to convert Nikon's unique NEF/NRW (RAW) pictures to another image format (NEF/RAW processing).
- You can use NX Studio to adjust the brightness and contrast of pictures taken with Nikon digital cameras.
- You can use NX Studio to adjust and manage Custom Picture Controls.

- You can adjust [Flexible Color] Picture Controls. [Flexible Color] allows for a wider variety of Picture Control adjustments with Color Blender and Color Grading. You can save the Picture Controls adjusted using [Flexible Color] as Custom Picture Controls and export them to a file and import it to the camera (\$\sup\$220).
- Be sure to download the latest version, as earlier versions may be unable to download pictures from the camera or open NEF (RAW) pictures.

Wireless Transmitter Utility

The Wireless Transmitter Utility is required if the camera is to be connected to a network. Pair the camera with the computer and download pictures over a wireless network.



Smartphone (tablet) apps

This introduces Nikon's smart device apps. For the latest information, visit the Nikon website.

 Smartphone (tablet) apps are available from the Apple App Store® and Google Play™.





SnapBridge

SnapBridge is an app that connects a smart device and camera wirelessly to enable features such as downloading pictures to the smart device and remote shooting.



NX MobileAir

If you connect the camera to your smart device via a USB cable or Wi-Fi, pictures will be imported from the camera to the smart device. Then, the imported pictures can be uploaded wirelessly from the smart device to an FTP server.



- · Additional functions can be used after in-app purchases.
- Supported features and operating systems vary by country and region.

Flash photography (the builtin flash)

Flash photography with the built-in flash

You'll find that the built-in flash enhances the photographic experience in a variety of situations, including when lighting is poor or when you need to fill in shadows and backlit subjects. Before using the built-in flash, raise it by sliding the flash pop-up control.

· When using a flash, select [OFF] for [Silent mode] in the setup menu.

1 Slide the flash pop-up control to raise the built-in flash.



2 Choose a flash mode.



Select [**Flash mode**] in the i or photo shooting menu and choose a flash mode.

3	Take a picture after pressing the shutter-release button halfway to focus.

Flash modes

The flash mode can be selected via the [**Flash mode**] item in the \boldsymbol{i} menu or in the photo shooting menu. The options available vary with the shooting mode.

	Option	Description	Available in
\$	[Fill flash] (front-curtain sync)	This mode is recommended in most situations. In modes P and A , shutter speed will automatically be set to values between 1/200 s (or 1/4000 s with auto FP high-speed sync) and 1/60 s.	P, S, A, M, †1
\$ ⊚	[Red-eye reduction]	Use for portraits. The flash will fire or the camera red-eye reduction lamp will light before the photograph is taken, reducing "red-eye". • The desired results may not be achieved if the subject or camera moves before the shutter is released (this setting is not recommended with moving subjects or in other situations requiring a quick shutter response).	P, S, A, M
♣ srow	[Slow sync] (slow sync)	As for "fill flash", except that shutter speed slows automatically to capture background lighting at night or under low light. Note that photos may be prone to blurring due to camera shake at slow shutter speeds. Use of a tripod is recommended.	Р, А

Option		Description	Available in
‡⊗ 2TOM	[Slow sync + red-eye] (red-eye reduction with slow sync)	Use to include background lighting in portraits. Red-eye reduction is combined with slow shutter speeds to capture background lighting at night or under low light. Note that photos may be prone to blurring due to camera shake at slow shutter speeds. Use of a tripod is recommended.	Р, А
** REAR	[Rear-curtain sync]	The flash fires just before the shutter closes, creating the effect of a stream of light behind moving light sources. • Selecting P or A after choosing this option sets the flash mode to slow sync. • Note that photos may be prone to blurring due to camera shake at slow shutter speeds. • Use of a tripod is recommended.	P, S, A, M
\$ аито	[Auto]	The flash fires automatically as required when lighting is poor or the subject is backlit.	MO, Z, 全, L , ※, 学
‡ ⊛ашто	[Auto + red- eye reduction]	As for "red-eye reduction", except that the flash fires only as required.	智, 芝 , 冬 , 郡 , 溪, ∀
\$ SLOW	[Auto slow sync]	As for "slow sync", except that the flash fires only as required.	B
\$⊕\$low OTUQ	[Auto slow sync + red- eye]	As for "slow-sync + red-eye", except that the flash fires only as required.	图

	Option	Description	Available in
•	[Flash off]		晋, P, S, A, M, <i>注</i> , 冬, 心 , 国, 溪, 梁

Lowering the built-in flash

To save power when the flash is not in use, press it gently downward until the latch clicks into place.



Cautions: Built-in flash

- · Remove lens hoods to prevent shadows.
- If the built-in flash is used with [Continuous L], [Continuous H], or [Continuous H (extended)] selected for release mode, only one picture will be taken each time the shutter-release button is pressed.
- The shutter release may be briefly disabled to protect the flash after it has been used for several consecutive shots. The flash can be used again after a short pause.

▼ Shutter speeds available with the built-in flash

Shutter speed can be set as follows when the built-in-flash unit is used:

Shooting mode	Shutter speed				
auto, 🕏, 🞝, 💥, 🤪, 🍴	Set automatically by camera (1/200 s-1/60 s)				
Ĩ	Set automatically by camera (1/200 s-1/30 s)				
Ei	Set automatically by camera (1/200 s-2 s)				
Р, А	Set automatically by camera (1/200 s1-1/60 s)2				
S	1/200 s1-30 s				
М	1/200 s1–30 s, Bulb , Time				

1 When [1/250 s (Auto FP)] is selected for Custom Setting e1 [Flash sync speed] and the built-in flash is used, flash sync speed is set to 1/250 s.

2 Shutter speed may be set as slow as 30 s if slow sync, rear-curtain sync, or slow sync with red-eye reduction is selected for flash mode.

Tip: Aperture, sensitivity, and flash range

Flash range varies with sensitivity (ISO equivalency) and aperture.

Aperture at ISO equivalent of									Approximate range	
100	200	400	800	1600	3200	6400	12800	25600	51200	Approximate range
1.4	2	2.8	4	5.6	8	11	16	22	32	0.7 m-5.0 m (2 ft 4 in16 ft 5 in.)
2	2.8	4	5.6	8	11	16	22	32	_	0.6 m–3.5 m (2 ft–11 ft 6 in.)
2.8	4	5.6	8	11	16	22	32	_	_	0.6 m-2.5 m (2 ft-8 ft 3 in.)
4	5.6	8	11	16	22	32	_	_		0.6 m-1.8 m (2 ft-5 ft 11 in.)
5.6	8	11	16	22	32	_	_	_		0.6 m-1.3 m (2 ft-4 ft 3 in.)
8	11	16	22	32		_	_	_	_	0.6 m-0.9 m (2 ft-3 ft)

 $[\]cdot\,$ The flash has a minimum range of about 0.6 m (2 ft).

Tip: Flash mode in 🖀 and SCN modes when using optional flash units

When the shooting mode is and SCN, the available flash modes differ between the built-in flash and optional flash units. The following flash modes are available when using optional flash units.

- 🛣 and SCN (except for 🖪, †\): [Fill flash], [Red-eye reduction]
- · ☑: [Slow sync], [Slow sync + red-eye]
- · 背: [Fill flash]

Flash compensation

Flash compensation is used to deliberately alter flash output, for example in order to change the brightness of the subject relative to the background. Flash output can be increased to make the main subject appear brighter, reduced to prevent glare, or otherwise fine-tuned to produce the desired result.

Adjusting flash compensation

Flash output can be adjusted using the [Flash compensation] item in the photo shooting menu.



- Choose from values of from -3 to +1 EV.
- At default settings, changes to flash output are made in increments of 1/3 EV. The size of the increment can be selected using Custom Setting b2 [EV steps for exposure cntrl].
- In general, choose positive values for brighter lighting, negative values to ensure that the subject is not too brightly lit.
- Normal flash output can be restored by setting flash compensation to ±0.0. Flash compensation is not reset when the camera is turned off.

Tip: Auto flash compensation

Flash compensation is performed automatically along with exposure compensation when [Entire frame] is selected for Custom Setting e3 [Exposure comp. for flash].

FV lock

This feature is used to lock flash output, letting you take multiple photos or recompose shots without changing the flash level. Your subject need not be in the center of the frame, giving you more freedom when composing shots.

- Flash output is adjusted automatically for any changes in ISO sensitivity and aperture.
- EV lock is not available in modes [™] and SCN.
- 1 Assign [FV lock] to a control using Custom Setting f2 [Custom controls (shooting)].



2 Raise the built-in flash.

Slide the flash pop-up control to raise the built-in flash.

3 Focus.

Position the subject in the center of the frame and press the shutterrelease button halfway to focus.





4 Lock flash level.

- After confirming that the flash-ready indicator (\$) appears in the shooting display, press the [FV lock] control; the flash unit will emit a monitor pre-flash to determine the appropriate flash level.
- Flash output will lock and an FV lock icon () will appear in the shooting display.



5 Recompose the shot.



6 Press the shutter-release button the rest of the way down to shoot.

If desired, additional pictures can be taken without releasing FV lock. Repeat Steps 5 to 6 to take additional shots.

7 Release FV lock.

Press the [FV lock] control to release FV lock and confirm that the FV lock icon ([1]) is no longer displayed in the shooting display.

Tip: Optional flash units

- If you are using an SB-500, SB-400, or SB-300 mounted on the camera accessory shoe, choose [TTL] for [Flash control] > [Flash control mode (external)] in the photo shooting menu.
- For information on other flash units, see the documentation provided with the unit.

Flash photography (optional flash units)

Flash photography with optional flash units

You can take pictures using an optional flash unit mounted on the camera accessory shoe or one or more remote flash units.

· When using a flash, select [OFF] for [Silent mode] in the setup menu.

Camera-mounted flash units

Take pictures using a flash unit mounted on the camera. See the following pages for more information.



Remote flash photography

Take pictures with one or more remote flash units using wireless flash control (Advanced Wireless Lighting, or AWL). For more information, see "Remote flash photography" (\$\square\$472).



Using an on-camera flash

1 Mount a flash unit on the camera accessory shoe.



See the documentation provided with the unit for details.

- **2** Turn on the camera and flash unit.

 The flash will begin charging; the flash-ready indicator (\$) will appear in the shooting display when charging is complete.
- 3 Choose the flash control mode (\square 471) and flash mode (\square 459).
- 4 Adjust shutter speed and aperture.
- **5** Take pictures.

Caution: Third-party flash units

The camera cannot be used with flash units that would apply voltages over 250 V to the camera's X contacts or short-circuit contacts on the accessory shoe. Use of such flash units could not only interfere with normal operation of the camera but also damage the flash sync circuits of the camera and/or flash.

i-TTL flash control

When an optional flash unit that supports the Nikon Creative Lighting System is attached and set to TTL, the camera uses monitor pre-flashes for balanced or standard "i-TTL fill-flash" flash control. i-TTL flash control is not available with flash units that do not support the Nikon Creative Lighting System. The camera supports the following types of i-TTL flash control:

Flash control	Description
i-TTL balanced fill- flash	The camera uses "i-TTL balanced fill-flash" flash control for a natural balance between the main subject and ambient background lighting. After the shutter-release button is pressed and immediately before the main flash, the flash unit emits a series of monitor pre-flashes which the camera uses to optimize flash output for a balance between the main subject and ambient background lighting.
Standard i- TTL fill-flash	Flash output is adjusted to bring lighting in the frame to a standard level; the brightness of the background is not taken into account. Recommended for shots in which the main subject is emphasized at the expense of background details, or when exposure compensation is used.

Standard i-TTL fill-flash is activated automatically when [Spot metering] is selected.

Studio strobe lighting

Rear-curtain sync cannot be used with studio flash systems, as the correct synchronization cannot be obtained.

Flash control mode

If you mount an optional SB-500, SB-400, or SB-300 flash unit on the camera accessory shoe, [Flash control] > [Flash control mode (built-in)] in the photo shooting menu will switch to [Flash control mode (external)]. Choose a flash control mode and flash level and adjust other settings for flash units mounted on the camera accessory shoe.



 Settings for flash units other than the SB-500, SB-400, and SB-300 can only be adjusted using flash unit controls.

Option	Description
[TTL]	 Flash output is adjusted automatically in response to shooting conditions. Flash compensation can be adjusted using [Flash compensation] in the photo shooting menu.
[Manual]	 Choose the flash level manually. Flash output is selected using [Manual output amount].

Remote flash photography

What is remote flash photography?

Take pictures with one or more remote flash units using wireless flash control (Advanced Wireless Lighting, or AWL). For information on using a flash unit mounted on the camera accessory shoe, see "Flash photography (optional flash units)" (\$\square\$468).

Throughout this chapter, operations involving the camera and accessories connected to the camera are indicated by , operations involving remote flash units by . For more information on using remote flash units (,), see the documentation provided with the flash unit.

Controlling remote flash units

Remote flash units can be controlled via optical signals from an optional flash unit mounted on the camera accessory shoe and functioning as a master flash (optical AWL). For information on compatible flash units, see "Features available with CLS-compatible flash units" (\$\square\$11).



- If the flash unit in question is an SB-500, settings can be adjusted from the camera. For more information, see "Using optical AWL with the SB-500" (\$\subseteq\$473\$). See the documentation provided with the flash units for more information.
- Settings for other flash units must be adjusted using flash unit controls. For more information, see the documentation provided with the flash unit in question.
- · The built-in flash cannot be used as a master flash.

Using optical AWL with the SB-500

When an optional flash unit SB-500 is mounted on the accessory shoe of the camera, [Wireless flash options] is displayed in [Flash control] in the photo shooting menu. Group flash can be performed by selecting [Optical AWL] in [Wireless flash options].



1 : Highlight [Group flash options] in the [Flash control] display and press .



2 : Adjust flash output and choose the channel and flash control mode.



- Choose the flash control mode and flash level for the master flash and the remote flash units in each group.
- · The following options are available:

Option	Description
TTL	i-TTL flash control.
⊗A	Auto aperture. Available only with compatible flash units.
М	Choose the flash level manually.
 (off)	The remote units do not fire. [Comp.] cannot be adjusted.

· Select [3] for [Channel].



3 T: Set the channel of the remote flash units to [3].

4 : Group the remote flash units.

- · Choose a group (A or B).
- There is no limit on the number of remote flash units that may be used. The practical maximum, however, is three per group, as the light emitted by the remote flash units will interfere with performance if more flash units are used.

5 🗖: Compose the shot and arrange the flash units.

- See the documentation provided with the flash units for more information.
- Test-fire the units and confirm that they are functioning normally. To test-fire the units, press the test button on the master flash.

6 Take the photograph after confirming that the flash-ready lights for all flash units are lit.

Cautions: Remote flash photography

- Position the sensor windows on the remote flash units to pick up the light from the master flash. Particular care is required if the master flash is mounted on a hand-held camera.
- Even if [—] is selected for [Master flash] > [Mode], the master flash may emit low-intensity timing flashes. These flashes may appear in photographs taken at short range. This can be prevented by choosing low ISO sensitivities or small apertures (high f-numbers).
- After positioning the remote flash units, take a test shot and view the results in the camera display.

Menu guide

The photo shooting menu

To view the photo shooting menu, select the **tab** in the camera menus.



The photo shooting menu contains the following items:

Item	B	Item	Œ
[Reset photo shooting menu]	478	[Manage Picture Control]	490
[Storage folder]	479	[Set Picture Control (HLG)]	490
[File naming]	482	[Color space]	490
[Choose image area]	483	[Active D-Lighting]	491
[Tone mode]	484	[Long exposure NR]	492
[Image quality]	486	[High ISO NR]	493
[Image size]	487	[Vignette control]	493
[RAW recording]	487	[Diffraction compensation]	494
[ISO sensitivity settings]	487	[Auto distortion control]	494
[White balance]	489	[Skin softening]	495
[Set Picture Control]	489	[Portrait impression balance]	496

ltem	Ш	Item	ш
[Photo flicker reduction]	498	[AF/MF subject detection options]	506
[High-frequency flicker	500	options _j	
reduction]		[MF subject detection area]	507
[Metering]	501	[Vibration reduction]	507
[Flash control]	503	[Auto bracketing]	508
[Flash mode]		[Multiple exposure]	523
[Flash compensation]	505	[HDR overlay]	531
[Release mode]	506	[Interval timer shooting]	536
[Focus mode]	506	[Time-lapse video]	551
[AF-area mode]	506	[Focus shift shooting]	561
			•

Reset photo shooting menu

MENU button ⇒ ♠ photo shooting menu

Restore photo shooting menu options to their default values.

 Photo shooting menu reset is not available while a multiple exposure is in progress.

Storage folder

MENU button → ♠ photo shooting menu

Choose the folder in which subsequent pictures will be stored.







[Storage folder]

Changes to [Storage folder] in the photo shooting menu apply in the video recording menu and *vice versa*.

Renaming folders

The default folder name, which appears after the folder number, is "NZ502". To choose a different five-character folder name for new folders, select [Rename].

- · Existing folders cannot be renamed.
- If desired, the default name can be restored for subsequent folders by pressing and holding the first button while the keyboard is displayed.

Select folder by number

The folder in which subsequent pictures will be stored can be selected by number. If a folder with the specified number does not already exist, a new folder will be created.

1 Choose [Select folder by number].



· Highlight [Select folder by number] and press ③ to display the [Select folder by number] dialog.

2 Choose a folder number.

- · Press ① or ③ to highlight digits.
- · To change the highlighted digit, press ⊕ or ⊕.

3 Save changes and exit.

- If a folder with the selected number already exists, a □, □, □, or ≡ icon will be displayed to the left of the folder number. Press ⊗ to complete the operation and return to the main menu; if you chose a folder marked □ or □ it will be selected as the folder for new pictures.
- · If you chose a folder number that does not already exist, a new folder will be created with that number when you press ®.
- · In either case, subsequent pictures will be stored in the chosen folder.
- To exit without changing the storage folder, press the MENU button.

Folder icons

Folders in the [**Select folder by number**] dialog are shown by □ if empty, by if full (containing either 5000 pictures or a picture numbered 9999), or by if partially full. A is icon indicates that no further pictures can be stored in the folder.

Select folder from list

To choose from a list of existing folders:

1 Choose [Select folder from list].



Highlight [Select folder from list] and press 🏵 to display the [Select folder from list] dialog.

2 Highlight a folder.

Press 🖲 or 🕤 to highlight a folder.

- 3 Select the highlighted folder.
 - Press

 ® to select the highlighted folder and return to the main menu.
 - · Subsequent photographs will be stored in the selected folder.

Cautions: Folder and file numbers

- Once the folder number has reached 999, the camera will stop creating new folders automatically and disable the shutter release if:
 - the current folder contains 5000 pictures (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in the folder containing over 5000 files), or
 - the current folder contains a picture numbered 9999 (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in a file numbered over 9999).
- If there is space on the memory card, you will nevertheless be able to continue shooting by:
 - creating a folder with a number less than 999 and selecting it as the storage folder, or
 - changing the options selected for [Frame size/frame rate] or [Video file type] before recording videos.

Startup time

Additional time may be required for camera startup if the memory card contains a very large number of files or folders.

File naming

MENU button → ♠ photo shooting menu

Pictures are saved using file names consisting of "DSC_" followed by a four-digit number and a three-letter extension. [File naming] is used to select three letters to replace the "DSC" portion of the file name. For information on text entry, see "Text entry" (\$\square\$178\$).

File names

- File names take the form "DSC_nnnn.xxx", where nnnn is a number from 0001 to 9999 and xxx is one of the following extensions, assigned according to the options selected for image quality and file type:
 - NEF: NEF (RAW) format, used when RAW is selected for image quality
 - JPG: JPEG format, used if an image quality other than RAW is chosen with SDR selected for tone mode
 - HIF: HEIF, used if an image quality other than RAW is chosen with HLG selected for tone mode
 - MOV: MOV videos
 - MP4: MP4 videos
 - NDF: Dust off reference data
- Images created with [Adobe RGB] selected for [Color space] have file names of the form "_DSCnnnn.xxx".
- The NEF (RAW) and JPEG photographs in each pair of pictures recorded at image-quality settings of RAW + JPEG/HEIF have the same file names but different extensions (".NEF" for the NEF (RAW) photo and ".JPG" for the JPEG copy).
- The NEF (RAW) and HEIF photographs in each pair of pictures recorded at image-quality settings of RAW + JPEG/HEIF have the same file names but different extensions (".NEF" for the NEF (RAW) photo and ".HIF" for the HEIF copy).

Choose image area

MENU button ⇒ ♠ photo shooting menu

Adjust image area settings. For more information, see "Changing image area" (\square 117), part of the section on "Image recording options (image area, quality, and size)." in the "Shooting settings" chapter.

Tone mode

MENU button ⇒ ♠ photo shooting menu

The camera offers a choice of two tone modes: [SDR] and [HLG].

• In **SCN** mode, the setting is fixed at [**SDR**].

Option	Description			
[SDR]	This mode supports a normal range of brightnesses (dynamic range). Pictures taken while this option is selected are stored in JPE0 format (extension "*JPG").			
[HLG]	This mode supports HDR (high dynamic range). Pictures taken while this option is selected are stored in HEIF format (extension "*.HIF"). It has a wider dynamic range than SDR. • "HLG" appears in the shooting display when this option is selected. • For optimal tone reproduction when viewing HLG pictures, use monitors, computers, operating systems, applications, and other equipment compatible with HLG. For more information, visit the following website: https://onlinemanual.nikonimglib.com/notice/ hlg_setting_guide/en/			

Taking photos in HLG

- Pictures taken with [HLG] selected for tone mode exhibit more "noise" (in the form of randomly-spaced bright pixels, fog, and lines) than do pictures taken using [SDR].
- The lowest value available for the [ISO sensitivity settings] > [Maximum sensitivity] item in the photo shooting menu is ISO 800.
- · ISO sensitivities of Hi 0.3 through Hi 2.0 are not available.
- · The video file type for time-lapse videos is fixed at [H.265 10-bit (MOV)].
- · [Color space] in the photo shooting menu is fixed at "BT.2100".
- [Active D-Lighting], [Multiple exposure], and [HDR overlay] are not available in the photo shooting menu.
- [C15] and [C30] cannot be selected for release mode and Custom Setting d3 [Pre-Release Capture options] is not available.

Caution: HLG photos

Pictures shot with [**HLG**] selected for tone mode are subject to the following restrictions:

- Image overlay is not available with HLG photos. HLG photos will not be displayed in the picture selection dialogs for the various image overlay options available via [Retouch] in the playback it menu.
- You can download HLG photos using the SnapBridge app but may not be able to view them in some versions of the app or operating system.

Camera shooting and playback displays

When [HLG] is selected for tone mode, the shooting and playback displays in the camera monitor and viewfinder may include "noise" in the form of randomly-spaced bright pixels, fog, or lines or may fail to accurately reproduce highlights and highly-saturated colors. In addition, abrupt tone discontinuities may be visible in the camera monitor or viewfinder when photos are displayed full-frame, although the photos themselves are unaffected. For accurate tone reproduction, use monitors, computers, operating systems, applications, and other equipment compatible with HLG.

Tip: HLG

Hybrid Log-Gamma (HLG) technology was developed for television broadcasting and other high-definition applications.

- Compared with Standard Dynamic Range (SDR), it increases the amount of detail that can be expressed in the upper half of the tone range for greater rendering potential.
- It matches SDR in the level of detail that can be expressed in the lower portion of the tone range to ensure compatibility with non-HDR displays.

Tip: Picture Controls

- Photos shot with [SDR] selected for tone mode can be processed using the [Set Picture Control] and [Manage Picture Control] items in the photo shooting menu.
- Photos shot with [HLG] selected for tone mode can be processed using the [Set Picture Control (HLG)] item in the photo shooting menu.

Tip: Viewing and editing HLG photos

HLG (HEIF) photos can be viewed and edited using Nikon's NX Studio software.

- NX Studio can be downloaded free of charge from the Nikon Download Center.
- Some of the options available for editing HLG photos are more limited than is the case with photos shot with [SDR] selected for tone mode.

Image quality

MENU button ⇒ ♠ photo shooting menu

Choose a file format for photographs. For more information, see "Changing image quality" (\square 118), part of the section on "Image recording options (image area, quality, and size)." in the "Shooting settings" chapter.

Image size

MENU button ⇒ ♠ photo shooting menu

Choose the size, in pixels, of pictures recorded with the camera. For more information, see "Choosing an image size" (\square 120), part of the section on "Image recording options (image area, quality, and size)." in the "Shooting settings" chapter.

RAW recording

MENU button → ♠ photo shooting menu

Choose a compression type for NEF (RAW) photographs. In descending order by the size of the files produced, the options are: [Lossless compression], [High efficiency**], and [High efficiency].

 [High efficiency*] produces pictures that compare favorably in quality to those produced by [Lossless compression] and are higher in quality than those produced by [High efficiency].

ISO sensitivity settings

MENU button → ♠ photo shooting menu

Adjust ISO sensitivity settings for photographs.

Option	Description
[ISO sensitivity]	Choose values from ISO 100 to 51200. Extended settings of about 0.3, 0.7, 1, or 2 EV above ISO 51200 (equivalent to ISO 204800) are also available. An [Auto] option is also available in the $\frac{1}{100}$ and SCN shooting modes.

Option	Description
[Auto ISO sensitivity control]	Select [ON] to enable auto ISO sensitivity control. If [OFF] is selected, [ISO sensitivity] will remain fixed at the value selected by the user. [Maximum sensitivity], [Maximum sensitivity with \$\frac{4}{2}\$], and [Minimum shutter speed] options are available when [ON] is selected.
[Maximum sensitivity]	Choose the upper limit for auto ISO sensitivity control to prevent it being raised too high.
[Maximum sensitivity with 4]	Choose the upper ISO sensitivity limit for photos taken using an optional flash unit.
[Minimum shutter speed]	Choose the shutter speed below which auto ISO sensitivity control will kick in to prevent underexposure in modes P and A; options range from 1/2000 to 30 s. If [Auto] is selected, the camera will choose the minimum shutter speed based on lens focal length. For example, the camera will automatically choose faster minimum shutter speeds to prevent blur caused by camera shake when a long lens is attached. • To view auto shutter-speed selection options, highlight [Auto] and press . Auto shutter-speed selection can be fine-tuned by choosing faster or slower minimums. Faster settings can be used to reduce blur when photographing fast-moving subjects. • Shutter speeds may drop below the selected minimum if optimal exposure cannot be achieved at the ISO sensitivity chosen for [Maximum sensitivity].

White balance

MENU button → ♠ photo shooting menu

Adjust white balance to match the color of the light source. For more information, see "White balance" ($\square 178$) in the "Shooting settings" chapter.

Set Picture Control

MENU button ⇒ ♠ photo shooting menu

Choose image processing ("Picture Control") options for new photos according to the scene or your creative intent. For more information, see "Picture Controls" (\$\subseteq\$200) in the "Shooting settings" chapter.

Add Cloud Picture Control files

If Picture Controls are transferred to the camera from Nikon Imaging Cloud, they can be downloaded and read to the camera by [Add Cloud Picture Control files]. These Picture Controls can be adjusted once selected and added to the camera via [Manage Picture Control] in the photo shooting or video recording menu (\$\square\$215).

- The camera and Nikon Imaging Cloud must be connected wirelessly to download and import Picture Controls. In the camera network menu, set [Nikon Imaging Cloud] > [Connect to Nikon Imaging Cloud] to [ON], and then turn on the Nikon Imaging Cloud camera sign-in setting.
- See the Nikon Imaging Cloud online help for how to send Picture Controls to the camera and how to turn on the camera sign-in setting in Nikon Imaging Cloud.

Manage Picture Control

MENU button → ♠ photo shooting menu

Save modified Picture Controls as Custom Picture Controls. For more information, see "Custom Picture Controls" (\square 215) in the "Picture Controls" section of the "Shooting settings" chapter.

Set Picture Control (HLG)

MENU button → ♠ photo shooting menu

Choose image processing ("Picture Control") options for photos taken with [**HLG**] selected for tone mode. For more information, see "Picture Controls" (\$\square\$200\$) in the "Shooting settings" chapter.

Color space

MENU button ⇒ ♠ photo shooting menu

The color space determines the gamut of colors available for color reproduction. [sRGB] is recommended for general-purpose printing and display. With a broader gamut of colors than [sRGB], [Adobe RGB] is a better choice for professional publication and commercial printing.

Caution: Color space

Third-party image viewing or editing software may substitute other color spaces for the color space selected on the camera. The color space selected on the camera can be used when pictures are opened in NX Studio.

Adobe RGB

For accurate color reproduction, Adobe RGB images require applications, displays, and printers that support color management.

Active D-Lighting

MENU button → ♠ photo shooting menu

Preserve details in highlights and shadows, creating pictures with natural contrast. Use for high-contrast scenes, for example when photographing brightly-lit outdoor scenery through a door or window or taking pictures of shaded subjects on a sunny day. Active D-Lighting is most effective when used with matrix metering.





[Off]

[**啮** A Auto]

	Option	Description	
Fi A	[Auto]	The camera automatically adjusts Active D-Lighting in response to shooting conditions.	
₽₫ H *	[Extra high]	Choose the amount of Active D-Lighting performed from [Extra high], [High], [Normal], and [Low].	
醋H	[High]		
et N	[Normal]		
et L	[Low]		
₽ Ġ OFF	[Off]	Active D-Lighting off.	

The option currently selected is shown by an icon in the display during shooting.



Cautions: Active D-Lighting

- "Noise" in the form of randomly-spaced bright pixels, fog, or lines may appear in photos taken with Active D-Lighting.
- · In mode M, [職 A Auto] is equivalent to [職 N Normal].
- · Uneven shading may be visible with some subjects.
- This function does not apply at high ISO sensitivities (Hi 0.3–Hi 2.0), including high sensitivities selected via auto ISO sensitivity control.

Long exposure NR

MENU button **⇒ △** photo shooting menu

Select [**ON**] to reduce "noise" (bright spots or fog) in photographs taken at shutter speeds slower than 1 s.

Long-exposure noise reduction is performed after the photo is taken.
 During processing, [Performing noise reduction] will appear in the shooting display. Pictures cannot be taken until the message has cleared from the display. The time required to process photos after shooting roughly doubles.



☑ Caution: Long-exposure noise reduction

If the camera is turned off before processing is complete, the picture will be saved but noise reduction will not be performed.

High ISO NR

MENU button ⇒ ♠ photo shooting menu

Photographs taken at high ISO sensitivities can be processed to reduce "noise" (randomly-spaced bright pixels).

Option	Description
[High]	Reduce noise in photographs taken at all ISO sensitivities. The
[Normal]	higher the sensitivity, the greater the effect. Choose the amount
[Low]	of noise reduction performed from [High], [Normal], and [Low].
[Off]	Noise reduction is performed only as required. The amount of noise reduction performed is always lower than when [Low] is selected.

Vignette control

MENU button ⇒ ♠ photo shooting menu

Vignette control reduces "vignetting"—a drop in brightness at the edges of a photograph—by an amount that varies from lens to lens. Its effects are most noticeable at maximum aperture.

Option		Description
	[High]	
	[Normal]	Choose the amount of vignette control performed from (in order from high to low) [High], [Normal], and [Low].
	[Low]	

Option	Option Description	
[Off]	Vignette control disabled.	

Caution: Vignette control

Depending on the scene, shooting conditions, and type of lens, JPEG images may exhibit "noise" (fog) or over-processing at the edge of the frame that introduces variations in peripheral brightness. In addition, Custom Picture Controls and preset Picture Controls that have been modified from default settings may not produce the desired effect. Take test shots and view the results in the monitor.

Vignette control

Changes to [Vignette control] in the photo shooting menu apply in the video recording menu and vice versa.

Diffraction compensation

MENU button ⇒ ♠ photo shooting menu

Select $\left[\textbf{ON} \right]$ to reduce diffraction at small apertures (high f-numbers).

☑ Diffraction compensation

Changes to [**Diffraction compensation**] in the photo shooting menu apply in the video recording menu and *vice versa*.

Auto distortion control

MENU button ⇒ ♠ photo shooting menu

Select [**ON**] as required to reduce barrel distortion when shooting with wide-angle lenses and to reduce pin-cushion distortion when shooting with long lenses. Note that [**ON**] may be selected automatically with some lenses, in which case this item will be grayed out and unavailable.

Auto distortion control

Changes to [Auto distortion control] in the photo shooting menu apply in the video recording menu and *vice versa*.

Skin softening

MENU button → ♠ photo shooting menu

Pictures taken when the face of a human portrait subject is detected will automatically be processed to soften the subject's complexion.

Option	Description	
[High]	Choose the amount of skin softening performed from (in order	
[Normal]	from high to low) [High], [Normal], and [Low]. • The camera can perform skin softening on up to three subjects	
[Low]	at a time. If more than one human portrait subject is detected, a gray focus point will appear over each of the subjects. If [Auto-area AF] is selected for [AF-area mode], ◀ and ▶ icons will appear on the focus point selected by the camera. The focus point can be positioned by pressing ④ or ⑤ to choose the subject to which skin softening applies.	
[Off]	Skin softening off.	

Skin softening: Restrictions

Skin softening cannot be combined with some camera features, including:

- · high-speed frame capture +,
- · multiple exposures, and
- · HDR overlay.

Portrait impression balance

MENU button → ♠ photo shooting menu

Fine-tune hue and brightness settings for human portrait subjects and save the results for application during shooting as [Mode 1], [Mode 2], or [Mode 3].

Creating portrait impression balance modes

Select [Portrait impression balance] in the photo shooting menu.

 


2 Highlight a mode from [Mode 1] through [Mode 3] and press **3**.



· Options for the selected mode will be displayed.

3 Adjust hue and brightness.



- Press 🐑 or 🕞 to adjust brightness. Brightness increases as the values go up and decreases as they go down.
- The selected values are displayed to the right of the grid.
- To restore default settings, press the fi button.

4 Save changes.

- Press ® to save changes and exit to the menus.
- Modes that have been altered from default values are indicated by asterisks ("\mathbf{\pi}").
- · Repeat Steps 1 through 4 to create additional modes.

Applying saved modes

To enable portrait impression balance during shooting, select the desired mode ([Mode 1] through [Mode 3]) for [Portrait impression balance] in the photo shooting menu.

[Portrait impression balance]

[Portrait impression balance] will not be available if:

- [Monochrome], [Flat Monochrome], [Deep Tone Monochrome], or
 [Creative Picture Control] is selected for [Set Picture Control] or
- [Monochrome] is selected for [Set Picture Control (HLG)].

Caution: Using portrait impression balance

Portrait impression balance may affect areas of the image that are similar in color to the skin of portrait subjects.

Tip: Previewing the results

If [Portrait impression balance] has been assigned a place in the \boldsymbol{i} menu using Custom Setting f1 [Customize \boldsymbol{i} menu], you can select this option, rotate the main command dial to choose a mode, and then adjust hue and brightness using the multi selector while previewing their effects on the subject framed in the display.

Photo flicker reduction

MENU button ⇒ ♠ photo shooting menu

Selecting **[ON]** reduces the effects of flicker from such light sources as fluorescent or mercury-vapor lamps.

- Flicker can cause uneven exposure or (in photographs taken in continuous release modes) inconsistent exposure or coloration.
- If flicker reduction does not produce the desired results, turn the camera off and aim it at the subject or light source before turning it on again.
- If [ON] is selected and flicker is detected when the shutter is released, a green
 will appear next to the FLICKER icon in the shooting display.
- During burst photography, the camera will behave as described below.

- Continuous high-speed (extended) mode: Priority is given to frame rate. The display will briefly go dark with the first shot in each burst but not with the subsequent shots.
- Continuous high-speed and continuous low-speed modes:
 Priority is given to flicker reduction. The display will briefly go dark each time the shutter is released and the frame rate may drop or become erratic.

[Photo flicker reduction]

- · Flicker reduction may slightly delay shutter response.
- Flicker reduction can detect flicker at 100 and 120 Hz (associated respectively with AC power supplies of 50 and 60 Hz). The desired results may not be achieved if the frequency of the power supply changes during burst photography.
- Flicker may not be detected or the desired results may not be achieved depending on the light source and shooting conditions, for example with scenes that are brightly lit or feature dark backgrounds.
- The desired results may also not be achieved with decorative lighting displays and other non-standard lighting.
- The actual effects of photo flicker reduction may differ from those visible in the display.

✓ Caution: Continuous high-speed (extended)

Flicker reduction may not produce the desired results during long bursts.

[Photo flicker reduction]: Restrictions

[Photo flicker reduction] does not take effect under some conditions, including:

 
- · during HDR overlay,
- · during high-speed frame capture +, and
- in silent mode.

High-frequency flicker reduction

MENU button ⇒ ♠ photo shooting menu

Selecting [On (shutter speed fine-tuning)] allows shutter speeds at specific values to be adjusted in smaller increments in modes S and M, letting speeds that keep flicker to a minimum be found by viewing the preview in the shooting display.

- Shutter speeds at which the high-frequency flicker reduction feature takes effect depend on the setting of Custom Setting d6 [Shutter type].
 - [Auto] or [Mechanical shutter]: 1/4000 s 1/30 s
 - [Electronic front-curtain shutter]: 1/2000 s 1/30 s
- Flicker may cause banding in pictures taken under high-frequency LED lighting or in shots that include monitors with high-frequency LED displays. Reducing the size of the increments used for shutterspeed selection helps in identifying speeds that keep flicker to a minimum.



After choosing a shutter speed suited to your subject, enable high-frequency flicker reduction and fine-tune shutter speed while viewing your subject in the shooting display until you find a value that minimizes flicker and banding. The effect can be more readily ascertained by zooming in on your subject using display zoom.

 When high-frequency flicker reduction is enabled, the shutter speed display shows only the denominator, with a digit added after the decimal point.



- The precise shutter speed is shown. For example, the shutter speed when 1/500 s is selected is precisely 1/512 s, which the display shows as "512.0", the denominator.
- Turning high-frequency flicker reduction off returns shutter speed to the nearest of the values normally displayed.

Caution: High-frequency flicker reduction

The effects of flicker in the shooting display may differ from those seen in photographs. We recommend that you take test shots to identify the shutter speed that minimizes flicker and banding.

Metering MENU button → ♠ photo shooting menu

Metering determines how the camera sets exposure.

Option		Description
Ø	[Matrix metering]	The camera meters a wide area of the frame and sets exposure according to tone distribution, color, composition, and distance for results close to those seen by the naked eye.

Option		Description
0	[Center- weighted metering]	The camera assigns the greatest weight to the center of the frame. It can be used with subjects that dominate the composition, for example. Center-weighted metering is also recommended when using filters with an exposure factor (filter factor) over 1x. The size of the area assigned the greatest weight can be selected using Custom Setting b5 [Centerweighted area]. The metered area can be displayed or hidden using Custom Settings d19 [Custom monitor shooting display] and d20 [Custom viewfinder shooting display].
•	[Spot metering]	The camera meters a circle with a diameter of 3.5 mm/ 0.14 in. (equivalent to approximately 2.5% of the frame). This ensures that the subject will be correctly exposed even when the background is much brighter or darker. The metered area is centered on the current focus point. If [Auto-area AF] is selected for AF-area mode (□124), the camera will instead meter the center focus point.
•*	[Highlight- weighted metering]	The camera assigns the greatest weight to highlights. Use this option to reduce loss of detail in highlights, for example when photographing spotlit performers on stage.

Flash control

MENU button → ♠ photo shooting menu

Adjust flash settings for the built-in flash, optional flash units, and wireless flash photography.



- For information on adjusting settings for wireless remote flash units, see "Remote flash photography" (□472).

Flash control mode (built-in)

Choose the flash control mode for the built-in flash.



Option	Description	
[TTL]	Flash output is adjusted automatically in response to shooting conditions.	
[Manual]	Choose the flash level manually.	

Tip: Flash control mode (external)

When an optional flash unit is attached and turned on, the [Flash control mode (built-in)] option is replaced by [Flash control mode (external)].

Tip: The built-in flash: Metering and flash control

The camera uses i-TTL balanced fill-flash flash control with matrix, center-weighted, and highlight-weighted metering, standard i-TTL fill-flash flash control with spot metering. In i-TTL modes, flash output is adjusted based on monitor preflashes emitted by the built-in flash when the shutter-release button is pressed.

Option	Description
i-TTL balanced fill-flash	The camera uses "i-TTL balanced fill-flash" flash control for a natural balance between the main subject and ambient background lighting.
Standard i-TTL fill-flash	Flash output is adjusted to bring lighting in the frame to a standard level; the brightness of the background is not taken into account. Recommended for shots in which the main subject is emphasized at the expense of background details, or when exposure compensation is used.

Wireless flash options

Adjust settings for simultaneous wireless control of multiple remote flash units. This option is available only when an SB-500 flash unit is mounted on the camera.



Option		Description
		The remote flash units are controlled using low-
~		intensity flashes emitted by the master flash (□473).
[Off]		Remote flash photography disabled.

Group flash options

Set flash options for each group when shooting with remote flash photography using an optional flash unit (\square 472). This option is available only when an SB-500 flash unit is mounted on the camera.



Flash mode

MENU button → ♠ photo shooting menu

Choose the flash mode for the built-in flash or optional flash units mounted on the camera accessory shoe. For more information, see "Flash modes" (459).

Flash compensation

MENU button → ♠ photo shooting menu

Adjust flash output for the built-in flash or optional flash units mounted on the camera accessory shoe to control the brightness of the main subject relative to the background. Flash output can be increased to

make the main subject appear brighter, reduced to prevent glare, or otherwise fine-tuned to produce the desired result (\square 464).

Release mode

MENU button ⇒ ♠ photo shooting menu

Choose the operation performed when the shutter-release button is pressed all the way down. For more information, see "Release mode" (1166) in the "Shooting settings" chapter.

Focus mode

MENU button **→ △** photo shooting menu

Focus mode controls how the camera focuses. For more information, see "Focus mode" (□122), part of the section on "Focus" in the "Shooting settings" chapter.

AF-area mode

MENU button ⇒ ♠ photo shooting menu

Choose how the camera selects the focus point for autofocus. For more information, see "AF-area mode" (2124), part of the section on "Focus" in the "Shooting settings" chapter.

AF/MF subject detection options

MENU button ⇒ ♠ photo shooting menu

Choose the type of subject to which the camera gives priority when focusing. For more information, see "Subject detection" (\square 129), part of the section on "Focus" in the "Shooting settings" chapter.

MF subject detection area

MENU button → ♠ photo shooting menu

Choose the manual focus subject detection area. For more information, see "Using subject detection with manual focus" (\$\square\$132) in the "Subject detection" portion of the "Focus" section.

Vibration reduction

MENU button ⇒ ♠ photo shooting menu

When using a lens equipped with a vibration reduction function, you can choose whether to enable vibration reduction. The options available vary with the lens.

Option		Description
(Normal) Choose for enhanced vibration reduction when photographing static subjects.		
(4))SPT	[Sport]	Choose when photographing athletes and other subjects that are moving rapidly and unpredictably.
[Off]		Vibration reduction is disabled.

Cautions: Using vibration reduction

- [Vibration reduction] may be unavailable with some lenses.
- We recommend that you wait for the image in the display to stabilize before shooting.
- When [Normal] is selected for lenses that support vibration reduction, the
 image in the shooting display may jiggle before the shutter is released,
 but this is a natural consequence of how vibration reduction is performed
 and does not indicate a malfunction. [Sport] or [Off] can be used should
 you find the motion distracting.
- [Sport] is recommended for panning shots. In [Normal] or [Sport] mode, vibration reduction applies only to motion that is not part of the pan. If the camera is panned horizontally, for example, vibration reduction will be applied only to vertical shake.
- If an F mount lens with a vibration reduction switch is attached via an optional FTZ II/FTZ mount adapter, set vibration reduction on the lens.

Auto bracketing

MENU button ⇒ ♠ photo shooting menu

Vary exposure, flash level, Active D-Lighting (ADL), or white balance slightly with each shot, "bracketing" the current value. Bracketing can be used in situations in which getting the right settings is difficult and there is not time to check results and adjust settings with each shot, or to experiment with different settings for the same subject.

Option	Description
[Auto bracketing on/ off]	Select [ON] to enable bracketing.

Option	Description	
[Auto bracketing set]	Choose the setting or settings bracketed when auto bracketing is in effect. • [AE & flash bracketing]: Perform both exposure and flash-level bracketing. • [AE bracketing]: Bracket only exposure. • [Flash bracketing]: Perform only flash-level bracketing. • [WB bracketing]: Perform white-balance bracketing. • [ADL bracketing]: Perform bracketing using Active D-	
[Number of shots]	Lighting. Choose the number of shots in the bracketing sequence.	
[Increment]	Choose the amount the selected settings vary with each shot when an option other than [ADL bracketing] is selected for [Auto bracketing set].	
[Amount]	Choose how Active D-Lighting varies with each shot when [ADL bracketing] is selected for [Auto bracketing set].	

Exposure and flash bracketing





ΕV



No exposure compensation

Exposure modified by: -1 Exposure modified by: +1 EV

Highlight [Auto bracketing] in the photo shooting menu and press .



2 Select [AE & flash bracketing], [AE bracketing], or [Flash bracketing] for [Auto bracketing set].

[Number of shots] and [Increment] options will be displayed.



- **3** Choose the number of shots in the bracketing sequence.
 - Highlight [Number of shots] and press ① or ② to choose the number of shots.



4 Select an exposure increment.

· Highlight [Increment] and press ① or ② to choose the bracketing increment.



- When [1/3 EV steps (comp. 1/3 EV)] is selected for Custom Setting b2 [EV steps for exposure cntrl], the size of the increment can be chosen from 0.3 (1/3), 0.7 (2/3), 1.0, 1.3 (1+1/3), 1.7 (1+2/3), 2.0, 2.3 (2+1/3), 2.7 (2+2/3), and 3.0 EV. Bracketing programs with an increment of 2.0 EV or larger offer a maximum of 5 shots. If a value of 7 or 9 was selected in Step 3, the number of shots will automatically be set to 5.
- The bracketing programs with an increment of 0.3 EV are listed below.

[Number of shots]	Exposure and flash bracketing indicator	No. of shots	Bracketing order (EVs)
3 F	-1+	3	0/-0.3/+0.3
5F	+	5	0/-0.7/-0.3/+0.3/+0.7
7F	+	7	0/-1.0/-0.7/-0.3/+0.3/+0.7/+1.0
9F	+	9	0/-1.3/-1.0/-0.7/-0.3/+0.3/+0.7/ +1.0/+1.3

5 Select [ON] for [Auto bracketing on/off].



Selecting **[ON]** enables bracketing, and an icon will appear in the shooting display.



6 Take pictures.



- · Take the number of pictures in the bracketing program.
- The modified values for shutter speed and aperture are shown in the display.
- While bracketing is in effect, the display shows a bracketing icon, a bracketing progress indicator, and the number of shots remaining in the bracketing sequence. After each shot, a segment will disappear from the indicator and the number of shots remaining will be reduced by one.



No. shots: 3 Increment: 0.7

Display after first shot

• Exposure changes due to bracketing are added to those made with exposure compensation.

Tip: Bracketing options

- In self-timer mode, the number of copies selected for [Auto bracketing] >
 [Number of shots] will be created each time the shutter is released,
 regardless of the option selected for Custom Setting c2 [Self-timer] >
 [Number of shots].

Tip: Exposure and flash bracketing

- In continuous release modes, shooting will pause after the number of shots specified in the bracketing program has been taken. Shooting will resume the next time the shutter-release button is pressed.
- If the camera is turned off before all shots in the sequence have been taken, bracketing will resume from the first shot in the sequence when the camera is turned on.

Tip: Exposure bracketing

The settings (shutter speed and/or aperture) altered during exposure bracketing vary with the shooting mode.

Shooting mode	Setting	
P	Shutter speed and aperture ¹	
S	Aperture 1	
A	Shutter speed1	
М	Shutter speed ^{2, 3, 4}	

1 If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu, the camera will automatically vary ISO sensitivity for optimum exposure when the limits of the camera exposure system are exceeded.

- 2 If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu, the camera will first use auto ISO sensitivity control to bring exposure as close as possible to the optimum and then bracket this exposure by varying shutter speed.
- 3 If [OFF] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu, use Custom Setting e5 [Auto bracketing (mode M)] to choose whether the camera varies shutter speed, aperture, or both shutter speed and aperture.
- 4 Shutter speed will not be adjusted if [ON] is chosen for Custom Setting d7 [Extended shutter speeds (M)] and a shutter speed slower than 30 s is selected.

■ Cancelling bracketing

To cancel bracketing, select [OFF] for [Auto bracketing] > [Auto bracketing on/off] in the photo shooting menu. If you select [ON] after selecting [OFF], bracketing will resume from the first shot in the sequence.

White balance bracketing

1 Highlight [Auto bracketing] in the photo shooting menu and press ().



2 Select [WB bracketing] for [Auto bracketing set].



[Number of shots] and [Increment] options will be displayed.

- **3** Choose the number of shots in the bracketing sequence.
 - · Highlight [Number of shots] and press or to choose the number of shots.



4 Select a white balance increment.

· Highlight [Increment] and press ① or ② to choose the bracketing increment.



- The size of the increment can be chosen from 1 (1 step), 2 (2 steps), or 3 (3 steps).
- Each step is equivalent to 5 mired. Higher "A" values correspond to increased amounts of amber. Higher "B" values correspond to increased amounts of blue.
- The bracketing programs with an increment of 1 are listed below.

[Number of shots]	White balance bracketing indicator	No. of shots	White balance increment	Bracketing order
3F	+1+	3	1A, 1B	0/A1/B1
5F	+11;;0;;;11+	5	1A, 1B	0/A2/A1/B1/B2
7F	+1+	7	1A, 1B	0/A3/A2/A1/B1/ B2/B3
9F	++	9	1A, 1B	0/A4/A3/A2/A1/ B1/B2/B3/B4

5 Select [ON] for [Auto bracketing on/off].



Selecting **[ON]** enables bracketing, and an icon will appear in the shooting display.



6 Take pictures.



- Each shot will be processed to create the number of copies specified in the bracketing program, and each copy will have a different white balance.
- Modifications to white balance are added to the white balance adjustment made with white balance fine-tuning.
- If the number of shots in the bracketing program is greater than the number of exposures remaining, the shutter release will be disabled. Shooting can begin when a new memory card is inserted.

White balance bracketing restrictions

White balance bracketing is not available at image quality settings of NEF (RAW) or NEF (RAW) +JPEG/HEIF.

Tip: White balance bracketing

- White balance bracketing affects only color temperature (the amber-blue axis in the white balance fine-tuning display). No adjustments are made on the green-magenta axis.
- If the camera is turned off while shooting, the camera will power off only after all photographs have been taken.
- In self-timer mode, the number of copies specified in the white balance bracketing program will be created each time the shutter is released, regardless of the option selected for Custom Setting c2 [Self-timer] > [Number of shots].

■ Cancelling bracketing

 
To cancel bracketing, select [**OFF**] for [**Auto bracketing**] > [**Auto bracketing on/off**] in the photo shooting menu.

ADL bracketing

1 Highlight [Auto bracketing] in the photo shooting menu and press .



2 Select [ADL bracketing] for [Auto bracketing set].



[Number of shots] and [Amount] options will be displayed.

$oldsymbol{3}$ Choose the number of shots in the bracketing sequence.

· Highlight [Number of shots] and press ① or ③ to choose the number of shots.



• The number of shots determines the bracketing sequence:

No. of shots	Bracketing sequence	
2	Off]→Value selected in Step 4	
3	[Off]→[Low]→[Normal]	
4	$[Off] \rightarrow [Low] \rightarrow [Normal] \rightarrow [High]$	
5	$[Off] \rightarrow [Low] \rightarrow [Normal] \rightarrow [High] \rightarrow [Extra high]$	

[·] If you chose more than two shots, proceed to Step 5.


4 Choose the Active D-Lighting amount.




- When the number of shots is 2, the Active D-Lighting setting for the second shot can be selected by highlighting [**Amount**] and pressing ① or ②.
- · The following options are available.

[Amount]	Bracketing sequence
OFF L	$[Off] \to [Low]$
OFF N	[Off] → [Normal]
OFF H	$[Off] \rightarrow [High]$
OFF H+	[Off] → [Extra high]
OFF AUTO	[Off] → [Auto]

 5 Select [ON] for [Auto bracketing on/off].



 Selecting [**ON**] enables bracketing, and an icon will appear in the shooting display.



6 Take pictures.



- · Take the number of pictures in the bracketing program.
- While bracketing is in effect, the display shows an ADL bracketing icon and the number of shots remaining in the bracketing sequence. After each shot, the number of shots remaining will be reduced by one.

ADL bracketing

- In continuous release modes, shooting will pause after the number of shots specified in the bracketing program has been taken. Shooting will resume the next time the shutter-release button is pressed.
- If the camera is turned off before all shots in the sequence have been taken, bracketing will resume from the first shot in the sequence when the camera is turned on
- In self-timer mode, the number of copies selected for [Auto bracketing] >
 [Number of shots] will be created each time the shutter is released,
 regardless of the option selected for Custom Setting c2 [Self-timer] >
 [Number of shots].

■ Cancelling ADL bracketing

To cancel bracketing, select [**OFF**] for [**Auto bracketing**] > [**Auto bracketing on/off**] in the photo shooting menu.

Multiple exposure

MENU button → ♠ photo shooting menu

Record two to ten RAW exposures as a single photograph.

Option	Description	
[Multiple exposure mode]	 [On (series)]: Take a series of multiple exposures. To end multiple exposure photography, select [Multiple exposure mode] again and choose [Off]. [On (single photo)]: End multiple exposure photography after creating a single multiple exposure. [Off]: End multiple exposure photography. 	
[Number of shots]	Choose the number of exposures that will be combined to form a single photograph.	

Option	Description	
[Overlay mode]	• [Add]: The exposures are overlaid without modification; gain is not adjusted. • [Average]: Gain is adjusted before the exposures are overlaid. The gain for each exposure is equal to 1 divided by the total number of exposures taken. For example, in a photo made by combining two exposures, the gain for each exposure will be set to 1/2, while in a photo combining three exposures, gain will be set to 1/3. • [Lighten]: The camera compares the pixels in each picture and uses only the brightest. • [Darken]: The camera compares the pixels in each picture and uses only the darkest.	
[Save individual make it up; the pictures are saved in NEF (RAW) for multiple exposure and the short make it up; the pictures are saved in NEF (RAW) for multiple exposure.		
[Overlay shooting]	If [ON] is selected, earlier exposures will be superimposed on the view through the lens. The earlier exposures aid composition of the next shot.	
[Select first exposure (RAW)]	Choose the first exposure from the NEF (RAW) pictures on the memory card.	

Creating a multiple exposure

Highlight [Multiple exposure] in the photo shooting menu and press .



2 Choose an option for [Multiple exposure mode].



- · Highlight [Multiple exposure mode] and press .
- · Highlight [On (series)] or [On (single photo)] using ♠ or ♠ and press ֎.
- · An icon will appear in the shooting display.



3 Choose a value for [Number of shots] (number of exposures).



- · Highlight [Number of shots] and press ③.
- · Choose the number of exposures using $\textcircled{\bullet}$ or $\textcircled{\bullet}$ and press $\textcircled{\otimes}$.

4 Choose an option for [Overlay mode].



- · Highlight [Overlay mode] and press .
- · Highlight an option using ♠ or ♠ and press ֎.

5 Choose a setting for [Save individual pictures (RAW)].



To save both the multiple exposure and the shots that make it up, select **[ON]**; the individual shots are saved in NEF (RAW) format. To save only the multiple exposure, select **[OFF]**.

6 Choose an option for [Overlay shooting].



Select **[ON]** to superimpose earlier exposures on the view through the lens. You can use the earlier exposures as a guide when composing subsequent shots.

7 Choose an option for [Select first exposure (RAW)].



- To choose the first exposure from existing NEF (RAW) pictures, highlight [Select first exposure (RAW)] and press ③.
- · Use the multi selector to highlight the desired picture.
- \cdot To view the highlighted picture zoomed in, press and hold the $\mathfrak Q$ button.
- · After highlighting the desired picture, press .

8 Start shooting.



- Take the selected number of shots. If you used [Select first exposure (RAW)] to select an existing NEF (RAW) picture as the first exposure in Step 7, shooting will start from the second exposure.
- Once you have taken the selected number of shots, the pictures will be overlaid to create a multiple exposure. Multiple exposures are recorded in JPEG format regardless of the option selected for image quality.
- If [On (series)] is selected for [Multiple exposure mode], you can continue to take additional multiple exposures until [Off] is selected.
- If [On (single photo)] is selected, the camera will exit multiple exposure mode once the number of shots selected in Step 3 has been taken.



III The i. menu

Pictures can be viewed by pressing the **!** button while a multiple exposure is in progress. The most recent shot in the current multiple

exposure is indicated by a \blacksquare icon; pressing the i button when this icon is present displays the multiple exposure i menu.





- · Highlight items and press ® to select.
- · You can also have the option of using touch controls after pressing the \boldsymbol{i} button.

Option	Description	
[View progress]	View a preview created from the exposures recorded to the current point.	
[Retake last exposure] Retake the most recent exposure.		
[Save and exit]	Create a multiple exposure from the exposures taken to current point.	
[Discard and exit]	Exit without recording a multiple exposure. • If [ON] is selected for [Save individual pictures (RAW)], the individual exposures will be saved separately.	

Cautions: Multiple exposure

- If you use the menus or view pictures in the display while shooting a
 multiple exposure, remember that shooting will end and the multiple
 exposure will be recorded if no operations are performed for about 40
 seconds (or in the case of menus, about 90 seconds). The time available to
 record the next exposure can be extended by choosing longer times for
 Custom Setting c3 [Power off delay] > [Playback] or [Menus].
- Multiple exposures may be affected by "noise" in the form of randomlyspaced bright pixels, fog, or lines.
- In continuous shooting modes, the camera records all exposures in a single burst. If [On (single photo)] is selected, multiple exposure shooting will end after the first multiple exposure is recorded. If [On (series)] is selected, an additional multiple exposure will be recorded each time the shutter-release button is pressed.
- In self-timer mode, the interval between each shot in the exposure is selected using Custom Setting c2 [Self-timer] > [Interval between shots]. Regardless of the value selected for the c2 [Number of shots] option, shooting will however end after the number of shots selected for the multiple exposure.
- Multiple exposures may end if settings are changed while shooting is in progress.
- Shooting settings and photo info for multiple exposure photographs are those for the first exposure.
- Do not remove or replace the memory card while a multiple exposure is in progress.
- Memory cards cannot be formatted while a multiple exposure is in progress. Some menu items will be grayed out and unavailable.

☑ Multiple exposure: Restrictions

Multiple exposure cannot be combined with some camera features, including:

- shooting modes (auto) and SCN.
- · video recording,
- · high-speed frame capture +,

- · bracketing,
- · HDR overlay,
- · interval-timer photography,
- · time-lapse video recording, and
- · focus shift.

■ Ending multiple exposures

To end a multiple exposure before the specified number of exposures have been taken, select [Off] for multiple exposure mode. A multiple exposure will be created from the exposures that have been recorded to that point (if [Average] is selected for [Overlay mode], gain will be adjusted to reflect the number of exposures actually recorded).



The multiple exposure will also end if:

- $\boldsymbol{\cdot}$ the standby timer expires after the first exposure has been taken, or
- you press the button followed by the button and select either
 [Save and exit] or [Discard and exit].

HDR overlayMENU button **→ ♠** photo shooting menu

Used with high contrast subjects, High Dynamic Range (HDR) preserves details in highlights and shadows by combining two shots taken at

different exposures. Use with high-contrast scenes and other subjects to preserve a wide range of details, from highlights to shadows.



Option	Description
[HDR mode]	 [On (series)]: Take a series of HDR photographs. To end HDR photography, select [HDR mode] again and choose [Off]. [On (single photo)]: End HDR photography after recording a single HDR photograph. [Off]: End HDR photography.
[HDR strength]	Adjust HDR strength. If [Auto] is selected, the camera will automatically adjust HDR strength to suit the scene.
[Save individual pictures (RAW)]	Choose [ON] to save each of the individual shots used to create the HDR picture; the shots are saved in NEF (RAW) format.

Taking HDR photographs

We recommend that you use the matrix metering option when shooting with HDR.

Highlight [HDR overlay] in the photo shooting menu and press .



2 Select an [HDR mode].



- · Highlight [HDR mode] and press .
- Highlight [On (series)] or [On (single photo)] using ⊕ or ⊕ and press ⊕.
- · An icon will appear in the shooting display.





3 Choose an [HDR strength].



- · Highlight [HDR strength] and press .
- · Highlight an option using or and press -.



 If [Auto] is selected, the camera will automatically adjust HDR strength to suit the scene.

4 Choose a setting for [Save individual pictures (RAW)].



Choose [ON] to save each of the individual shots used to create the HDR picture; the shots are saved in NEF (RAW) format.

5 Frame the photograph, focus, and shoot.

- The camera takes two exposures when the shutter-release button is pressed all the way down.
- · If [On (series)] is selected for [HDR mode], you can continue to take HDR photographs until [Off] is selected.
- If [On (single photo)] is selected for [HDR mode], HDR will turn off automatically after a single shot.
- HDR photographs are recorded in JPEG format regardless of the option selected for image quality.

Cautions: HDR photography

- · The edges of the image will be cropped out.
- The desired results may not be achieved if the camera or subject moves during shooting. Use of a tripod is recommended.
- Depending on the scene, you may notice shadows around bright objects or halos around dark objects. In other cases, the effect produced by HDR may not be particularly noticeable.
- · Uneven shading may be visible with some subjects.
- When spot or center-weighted metering is selected, an [HDR strength] setting of [Auto] is equivalent to [Normal].
- The built-in flash and optional flash units will not fire.
- In continuous release modes, only one photograph will be taken each time the shutter-release button is pressed all the way down.
- · Shutter speeds of "Bulb" and "Time" are not available.

HDR restrictions

HDR cannot be combined with some camera features, including:

- · shooting modes (auto) and SCN,
- · photo flicker reduction,
- · high-speed frame capture +,
- · bracketing,
- · multiple exposures,
- interval-timer photography,
- time-lapse video recording, and
- · focus shift.

Interval timer shooting

MENU button ⇒ ♠ photo shooting menu

Take photographs at the selected interval until the specified number of shots has been recorded. When using the interval timer, select a release mode other than self-timer or high-speed frame capture +.

Option	Description
[Start]	Start interval timer shooting. Shooting will begin either after 3 s ([Now] selected for [Choose start day/time]) or at a selected date and time ([Choose day/time]). Shooting will continue at the selected interval until all shots have been taken.
[Choose start day/ time]	Choose a start option. Select [Now] to start shooting immediately, [Choose day/time] to start shooting at a chosen date and time.
[Interval]	Specify the interval between shots in hours, minutes, and seconds.
[Intervals×shots/interval]	Choose the number of intervals and the number of shots per interval.
[Exposure smoothing]	Selecting [ON] allows the camera to adjust exposure to match the previous shot. Large changes in subject brightness during shooting may result in apparent variations in exposure. This can be addressed by shortening the interval between shots. Exposure smoothing will not take effect in mode M if [OFF] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu.
[Electronic shutter options]	Choose whether to use the electronic shutter. · When [ON] is selected for [Electronic shutter], the electronic shutter will be used regardless of the option selected for Custom Setting d6 [Shutter type]. · The volume of the sound made when the electronic shutter is released can be chosen using [Volume].

Option	Description
[Interval priority]	• [ON]: Enable interval priority to ensure that frames shot in modes P and A are taken at the chosen interval. - Flash photography is disabled. - Release priority is enabled regardless of the options selected for Custom Settings a1 [AF-C priority selection] and a2 [AF-S priority selection]. - If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] and the time chosen for [Minimum shutter speed] is longer than the interval, the time selected for the interval will take priority over the selected shutter speed. - [OFF]: Disable interval priority to ensure that photos are correctly exposed.
[Focus before each shot]	If [ON] is selected, the camera will focus between shots. Select [OFF] to focus at a fixed distance.

Option	Description
[Options]	Combine interval-timer photography with other options. • [AE bracketing]: Perform exposure bracketing during interval-timer photography. • [Time-lapse video]: Use the photos taken during interval-timer photography to create a time-lapse video with an aspect ratio of 16:9. • The camera saves both the photos and the time-lapse video. • Selecting [1:1 (16×16)] for [Choose image area] in the photo shooting menu disables the shutter release. • Videos created using [Time-lapse video] are recorded in the [sRGB] color space, regardless of the option selected for [Color space] in the photo shooting menu. • [Off]: Do not perform additional operations during interval-timer photography.
[Starting storage folder]	Highlight options and press ⊗ or ⊛ to select (☑) or deselect (□). • [New folder]: A new folder is created for each new sequence. • [Reset file numbering]: File numbering is reset to 0001 whenever a new folder is created.

Interval-timer photography

Before shooting

- · Take a test shot at current settings.
- Before proceeding, select [**Time zone and date**] in the setup menu and make sure that the camera clock is set to the correct time and date.
- We recommend using one of the following power sources to prevent loss of power while shooting is in progress:
 - A fully-charged battery
 - An optional EH-8P AC adapter connected using the supplied USB cable (featuring Type C connectors at both ends)
 - Portable chargers (power banks)
- Highlight [Interval timer shooting] in the photo shooting menu and press ⊕.



2 Adjust interval timer settings.

· Choose the start day and time.





Highlight [Choose start day/time] and press ③.

Highlight an option and press **®**.

- To start shooting immediately, select [Now].
- To start shooting at a chosen date and time, select [**Choose day/ time**]. Choose the date and time and press **®**.
- · Choose the interval between shots.



Highlight [**Interval**] and press **()**.



Choose an interval (in hours, minutes, and seconds) and press .

· Choose the number of intervals and number of shots per interval.



Highlight
[Intervals×shots/
interval] and press ③.



Choose the number of intervals and the number of shots per interval and press .

 
- In single frame release mode, if the number of shots per interval is set to two or more, the photographs for each interval will be taken at the rate for continuous high-speed release mode.
- · Enable or disable exposure smoothing.



Highlight [Exposure smoothing] and press (b) to select [ON] or [OFF].

- Selecting [**ON**] allows the camera to adjust exposure to match the previous shot.

· Choose whether to use the electronic shutter.







Highlight [Electronic shutter] and press (*) to select [ON] or [OFF].

- The volume of the sound made when the electronic shutter is released can be chosen using [**Volume**].
- · Choose an interval priority option.



Highlight [Interval priority] and press (*) to select [ON] or [OFF].

· Choose whether the camera focuses between shots.



Highlight [Focus before each shot] and press (3) to select [ON] or [OFF].

 If [ON] is selected for [Focus before each shot], the camera will focus before each shot according to the option currently selected for focus mode.

Interval timer shooting

· Choose additional options.





Highlight [**Options**] and press **③**.

Highlight [AE bracketing] or [Time-lapse video] and press ⊗.

- If you selected [AE bracketing], choose values for [Number of shots] and [Increment]; if you selected [Time-lapse video], choose settings for [Video file type] and [Frame size/frame rate].
- · Choose starting folder options.



Highlight [**Starting** storage folder] and press **③**.



After highlighting the desired options and pressing

to turn them on (☑) or off (□), press €.

3 Highlight [Start] and press ⊗.



- If [Now] was selected for [Choose start day/time] in Step 2, shooting will start after three seconds.
- Otherwise shooting will start at the time selected for [Choose start day/time] > [Choose day/time].
- · The display turns off during shooting.
- Shooting will continue at the selected interval until all shots have been taken.

During shooting

 During interval timer photography, the memory card access lamp will flash.



 If the display is turned on by pressing the shutter-release button halfway, the message [Interval timer shooting] will be displayed and the ticon will flash. If [Time-lapse video] is selected for [Options], a ticon will also be displayed.



■ Pausing interval-timer photography

Interval-timer photography can be paused between intervals by pressing m or by selecting [Interval timer shooting] in the photo shooting menu, highlighting [Pause], and pressing m. Note that the menus may not be displayed when the MENU button is pressed if the time selected for [Interval] is very short.

If [Time-lapse video] is selected for [Options], pressing
 ⊗ between intervals will end interval-timer photography.

■ Resuming interval timer shooting

Interval timer shooting can be resumed as described below.

· To resume shooting immediately:



Highlight [**Restart**] and press **®**.

- · To resume shooting at a specified time:
 - Highlight [Restart option] and press ③, then highlight [Choose day/time] and press ④.



- Choose a starting date and time and press .



- Highlight [Restart] and press @.



■ Ending interval timer shooting

To end interval-timer photography before all the photos are taken, select [Interval timer shooting] in the photo shooting menu, highlight [Off], and press . Note that the menus may not be displayed when the MENU button is pressed if the time selected for [Interval] is very short. In this case you will need to press . to pause interval-timer photography and then select [Interval timer shooting] in the photo shooting menu, highlight [Off], and press .

Cautions: Interval-timer photography

- Choose an interval longer than the time needed to take the selected number of shots at the predicted shutter speed. Note that during actual interval-timer photography, the camera must not only take shots at the selected interval but must also have sufficient time to complete the exposures and perform such tasks as processing the photographs. If the interval is too short to take the selected number of photos, the camera may skip to the next interval without shooting.
- If the interval is too short, the total number of shots taken may be less than that selected for [Intervalsxshots/interval].
- If you are using the built-in flash or a flash unit, choose an interval longer than the time needed for the flash to charge. If the interval is too short, the flash may fire at less than the power needed for full exposure.
- If shooting cannot proceed at current settings—for example, if shutter speed is set to "Bulb" or "Time", the [Interval] is [00:00'00"], or the start time is in less than a minute—a warning will be displayed in the monitor.
- If [ON] is selected for [Electronic shutter options] > [Electronic shutter],
 the shutter will sound with every shot unless [Volume] is set to [0] (note
 that this applies even when [ON] is selected for [Silent mode] in the setup
 menu).
- If [Time-lapse video] is selected for [Options], the standby timer will not expire during interval-timer photography, regardless of the option selected for Custom Setting c3 [Power off delay] > [Standby timer].
- Selecting [HLG] for [Tone mode] in the photo shooting menu fixes
 [Options] > [Time-lapse video] > [Video file type] at [H.265 10-bit (MOV)].
- If the memory card is full, the interval timer will remain active but no pictures will be taken. Insert another memory card and resume shooting (\$\square\$546\$).
- Depending on memory card performance and shooting conditions, shooting may end before the selected number of shots have been taken or the selected number of intervals is complete.
- · Interval timer shooting will pause if:

- the camera is turned off and then on again (when the camera is off, batteries and memory cards can be replaced without ending intervaltimer photography), or
- self-timer or high-speed frame capture + is selected for release mode.
- Changing camera settings while the interval timer is active may cause shooting to end.

Release mode

Regardless of the release mode selected, the camera will take the specified number of shots at each interval.

Adjusting settings between shots

Pictures can be viewed and shooting and menu settings adjusted between shots. Note, however, that the monitor will turn off and shooting will resume a few seconds before the next shot is taken.

Interval-timer photography: Restrictions

Interval-timer photography cannot be combined with some camera features, including:

- · video recording,
- · long time-exposures ("Bulb" or "Time"),
- · the self-timer,
- · high-speed frame capture +,
- · bracketing,
- · multiple exposures,
- · HDR overlay, and
- · focus shift.

Interval timer settings

Turning the camera off or selecting a new release mode does not affect interval-timer photography settings.

Restoring default settings

Shooting menu settings cannot be reset while interval-timer photography is in progress.

Time-lapse video

MENU button **⇒ ♠** photo shooting menu

The camera automatically takes photos at selected intervals to create a time-lapse video.

Option	Description	
[Start]	Start time-lapse recording. Shooting starts after about 3 s and continues at the interval selected for [Interval] for the time selected for [Shooting time].	
[Interval]	Choose the interval between shots, in minutes and seconds.	
[Shooting time]	Choose how long the camera will continue to take pictures, in hours and minutes.	
[Exposure smoothing]	Selecting [ON] smooths abrupt changes in exposure. Large changes in subject brightness during shooting may result in apparent variations in exposure. This can be addressed by shortening the interval between shots. Exposure smoothing will not take effect in mode M if [OFF] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu.	
[Electronic shutter options]	Choose whether to use the electronic shutter. · When [ON] is selected for [Electronic shutter], the electronic shutter will be used regardless of the option selected for Custom Setting d6 [Shutter type]. · The volume of the sound made when the electronic shutter is released can be chosen using [Volume].	
[Video file type]	Choose the video file type for the final video.	

Option	Description
[Frame size/ frame rate]	Choose the frame size and rate for the final video. The options available vary with the setting chosen for [Video file type].
[Interval priority]	 [ON]: Enable interval priority to ensure that frames shot in modes P and A are taken at the chosen interval. Release priority is enabled regardless of the options selected for Custom Settings a1 [AF-C priority selection] and a2 [AF-S priority selection]. If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] and the time chosen for [Minimum shutter speed] is longer than the interval, the time selected for the interval will take priority over the selected shutter speed. [OFF]: Disable interval priority to ensure that photos are correctly exposed.
[Focus before each shot]	If [ON] is selected, the camera will focus between shots.

Recording time-lapse videos

Before shooting

- · Time-lapse videos are shot using the video crop.
- · Take test shots and check the results in the monitor.
- Before proceeding, select [Time zone and date] in the setup menu and make sure that the camera clock is set to the correct time and date.
- We recommend using one of the following power sources to prevent loss of power while shooting is in progress:
 - A fully-charged battery
 - An optional EH-8P AC adapter connected using the supplied USB cable (featuring Type C connectors at both ends)
 - Portable chargers (power banks)

Highlight [Time-lapse video] in the photo shooting menu and press .



2 Adjust time-lapse video settings.

· Choose the interval between shots.



Highlight [Interval] and press ③.



Choose an interval (in minutes and seconds) and press ⊛.

- Choose an interval longer than the slowest anticipated shutter speed.
- · Choose the total shooting time.



Highlight [Shooting time] and press .



Choose a shooting time (in hours and minutes) and press ⊛.

- The maximum shooting time is 23 hours and 59 minutes.

· Enable or disable exposure smoothing.



- Highlight [Exposure smoothing] and press (b) to select [ON] or [OFF].
- Selecting [ON] smooths abrupt changes in exposure.
- · Choose whether to use the electronic shutter.



Highlight [Electronic shutter options] and press ③.



Highlight [Electronic shutter] and press (3) to select [ON] or [OFF].

- The volume of the sound made when the electronic shutter is released can be chosen using [**Volume**].

· Choose a video file type.





Highlight [Video file type] and press ③.

Highlight an option and press ⊛.

· Choose the frame size and rate.



Time-lapse video
Frame size/frame rate
H.255 8-bit (MOV)
三面 3840×2166, 60p
三面 3840×2160, 50p
三面 3840×2160, 30p
三面 3840×2160, 25p
三面 3840×2160, 25p

Highlight [Frame size/ frame rate] and press ③.

Highlight an option and press **®**.

· Choose an interval priority option.



Highlight [Interval priority] and press ⊕ to select [ON] or [OFF].

· Choose whether the camera focuses between shots.



Highlight [Focus before each shot] and press (*) to select [ON] or [OFF].

 If [ON] is selected for [Focus before each shot], the camera will focus before each shot according to the option currently selected for focus mode.

 
3 Highlight [Start] and press ⊗.



- · Shooting starts after about 3 s.
- · The display turns off during shooting.
- The camera takes pictures at interval selected for [Interval] for the time selected for [Shooting time] in Step 2.

During shooting

· The memory card access lamp lights while shooting is in progress.



 If the display is turned on by pressing the shutter-release button halfway, the message [Interval timer shooting] will be displayed and the time icon will flash



II Ending shooting

To end shooting before all the photos are taken, press \mathfrak{B} or select [**Time-lapse video**] in the photo shooting menu, highlight [**Off**], and press \mathfrak{B} . Note that the menus may not be displayed when the **MENU** button is pressed if the time selected for [**Interval**] is very short.

 A video will be created from the frames shot to the point where shooting ended and normal photography will resume.

Calculating the length of the final video

- The total number of frames in the final video can be calculated by dividing the shooting time selected in Step 2 by the interval, rounding up, and adding 1.
- The length of the final video can then be calculated by dividing the number of shots by the frame rate selected for [Frame size/frame rate] (for example, a 48-frame video recorded with [1920×1080; 24p] selected for [Frame size/frame rate] will be about two seconds long).



- Frame size/frame rate
 Length recorded/maximum length
- 3 Memory card indicator

Picture review

The Diutton cannot be used to view pictures while shooting is in progress. The current frame will however be displayed for a few seconds after each shot if [On] or [On (monitor only)] is selected for [Picture review] in the playback menu. Note that other playback operations cannot be performed while the frame is displayed. The current frame may not be displayed if the interval is very short.

Cautions: Time-lapse videos

- · Sound is not recorded with time-lapse videos.
- The shutter speed and the time needed to record the image to the memory card may vary from shot to shot. As a result, the interval between a shot being recorded and the start of the next shot may vary.
- Shooting will not begin if a time-lapse video cannot be recorded at current settings, for example if:

- the value selected for [Interval] is longer than that selected for [Shooting time],
- [00:00'00"] is selected for [Shooting time] or [Interval], or
- the memory card is full.
- Time-lapse photography will not start if the recording time is shown in red in the [Time-lapse video] display. Adjust the [Interval] or [Shooting time].
- If [ON] is selected for [Electronic shutter options] > [Electronic shutter], the shutter will sound with every shot unless [Volume] is set to [0] (note that this applies even when [ON] is selected for [Silent mode] in the setup menu).
- Selecting [HLG] for [Tone mode] in the photo shooting menu fixes [Video file type] at [H.265 10-bit (MOV)].
- The button cannot be used to view pictures while time-lapse recording is in progress.
- For consistent coloration, choose a white balance setting other than [™]A
 [Auto] or **※**A [Natural light auto] when recording time-lapse videos.
- Regardless of the option selected for Custom Setting c3 [Power off delay]
 [Standby timer], the standby timer will not expire while recording is in progress.
- Shooting may end if camera controls are used, settings are changed, or an HDMI cable is connected. A video will be created from the frames shot to the point where shooting ended.
- The following end shooting without a beep sounding or a video being recorded:
 - Disconnecting the power source
 - Ejecting the memory card

Adjusting settings between shots

Shooting and menu settings can be adjusted between shots. Note, however, that the monitor will turn off and shooting will resume in about 2 seconds before the next shot is taken.

Time-lapse videos: Restrictions

Time-lapse video recording cannot be combined with some camera features, including:

- video recording,
- · long time-exposures ("Bulb" or "Time"),
- · the self-timer.
- · high-speed frame capture +,
- · bracketing,
- · multiple exposures,
- · HDR overlay,
- · interval-timer photography, and
- · focus shift.

Focus shift shooting

MENU button → ♠ photo shooting menu

Focus shift automatically varies focus over a series of shots. Use it to take photos that will later be combined using focus stacking to create a single image with increased depth of field. Before using focus shift, choose a focus mode of **AF-A**, **AF-S**, or **AF-C** and a release mode other than self-timer or high-speed frame capture +.

Option	Description
[Start]	Start shooting. The camera will take the selected number of shots, changing the focus distance by the selected amount with each shot.
[No. of shots]	Choose the number of shots (maximum 300).
[Focus step width]	Focus shift varies the focus distance over a series of photographs. Choose the amount the focus distance changes with each shot.

Option	Description
[Interval until next shot]	Choose the interval between shots, in seconds. To ensure correct exposure when using a flash, choose an interval long enough for the flash to charge.
[First-frame exposure lock]	 [ON]: The camera locks exposure for all shots at the setting for the first frame. [OFF]: The camera adjusts exposure before each shot.
[Electronic shutter options] • When [ON] is selected for [Electronic shutter will be used regardless selected for Custom Setting d6 [Shutter options] • The volume of the sound made when the	Choose whether to use the electronic shutter. · When [ON] is selected for [Electronic shutter], the electronic shutter will be used regardless of the option selected for Custom Setting d6 [Shutter type]. · The volume of the sound made when the electronic shutter is released can be chosen using [Volume].
[Focus position auto reset]	• [ON]: Focus will return to the starting position once all the shots in the current sequence have been taken. This saves you having to refocus each time when photographing subjects at the same focus distance several times in succession. • [OFF]: Focus remains fixed at the position for the final shot in the sequence. This allows you to start from the most recent focus position when photographing a single subject over multiple consecutive series.
[Starting storage folder]	Highlight options and press ⊗ or ③ to select (☑) or deselect (□). · [New folder]: A new folder is created for each new sequence. · [Reset file numbering]: File numbering is reset to 0001 whenever a new folder is created.

Focus shift photography

Before shooting

- · Take a test shot at current settings.
- We recommend using one of the following power sources to prevent loss of power while shooting is in progress:
 - A fully-charged battery
 - An optional EH-8P AC adapter connected using the supplied USB cable (featuring Type C connectors at both ends)
 - Portable chargers (power banks)

1 Focus.

- During focus shift, the camera takes a series of shots starting from a selected focus position and continuing toward infinity. Given that shooting ends when infinity is reached, the starting focus position should be slightly in front of (i.e., closer to the camera than) the closest point on the subject.
- · Do not move the camera after focusing.

 
2 Highlight [Focus shift shooting] in the photo shooting menu and press ⊕.



3 Adjust focus shift settings.

· Choose the number of shots.







Choose the number of shots and press ⊗.

- The maximum number of shots is 300.
- We recommend taking more shots than you think you'll need. You can winnow them down during focus stacking.
- More than 100 shots may be required for photographs of insects or other small objects. On the other hand, only a few may be needed to photograph a landscape from front to back with a wide-angle lens.
- · Choose the amount the focus distance changes with each shot.



 
Highlight [Focus step width] and press .



Choose a focus step width and press [™].

- Press ① to reduce the focus step width, ② to increase.
- Note that high settings increase the risk that some areas will be out of focus when the shots are stacked. A value of 5 or less is recommended.
- Try experimenting with different settings before shooting.

· Choose the interval until next shot.







Choose the interval between shots and press

...

- Choose the interval between shots, in seconds.
- To ensure correct exposure when using a flash, choose an interval long enough for the flash to charge. A setting of [**00**] is recommended when shooting without a flash.
- · Enable or disable first-frame exposure lock.



Highlight [First-frame exposure lock] and press (*) to select [ON] or [OFF].

- [OFF] is recommended if lighting and other conditions will not change during shooting, [ON] when photographing landscapes and the like under variable lighting.
- Selecting [ON] locks exposure at the value for the first shot, ensuring that all photos have the same exposure. Large changes in subject brightness during shooting may however result in

apparent variations in exposure. This can be addressed by selecting [**OFF**].

· Choose whether to use the electronic shutter.







Highlight [Electronic shutter] and press (*) to select [ON] or [OFF].

- The volume of the sound made when the electronic shutter is released can be chosen using [**Volume**].
- Choose whether the focus position returns to the starting position at the end of each sequence.



Highlight [Focus position auto reset] and press (*) to select [ON] or [OFF]

- We recommend selecting [ON] when using focus shift to photograph subjects at the same focus distance multiple times in succession.
- If [OFF] is selected, focus will remain fixed at the position for the final shot in the sequence.

· Choose starting folder options.



Highlight [Starting storage folder] and press



After highlighting the desired options and pressing ® to turn them on (☑) or off (□), press €.

 
4 Highlight [Start] and press ⊗.



- · Shooting starts after about 3 s.
- · The display turns off during shooting.
- The camera takes photographs at the selected interval, starting at the focus distance selected at the start of shooting and progressing out toward infinity by the selected focus step distance with each shot
- Shooting ends when the selected number of shots has been taken or focus reaches infinity.

During shooting

The memory card access lamp flashes while shooting is in progress.



■ Ending focus shift photography

To end shooting before all shots have been taken, either:

- select [Focus shift shooting] in the photo shooting menu, highlight [Off], and press ®, or
- press the shutter-release button halfway or press the ⊗ button between shots.

Cautions: Focus shift photography

- The shutter speed and the time needed to record the image may vary from shot to shot. As a result, the interval between a shot being recorded and the start of the next shot may vary.
- Shooting ends when focus reaches infinity, and consequently depending on the focus position at the start of shooting, shooting may end before the selected number of shots has been taken
- If [ON] is selected for [Electronic shutter options] > [Electronic shutter], the shutter will sound with every shot unless [Volume] is set to [0] (note that this applies even when [ON] is selected for [Silent mode] in the setup menu).
- Regardless of the option selected for Custom Setting c3 [Power off delay]
 [Standby timer], the standby timer will not expire while shooting is in progress.
- If you are using the built-in flash or a flash unit, choose an interval longer
 than the time needed for the flash to charge. If the interval is too short,
 the flash may fire at less than the power needed for full exposure. When
 [Interval until next shot] is set to [00], the built-in flash or flash unit will
 not fire regardless of the setting chosen for [Flash mode] in the photo
 shooting menu.
- If shooting cannot proceed at current settings, for example because shutter speed is set to "Bulb" or "Time", a warning will be displayed.
- Changing camera settings while focus shift photography is in progress may cause shooting to end.

Focus shift photography: Restrictions

Focus-shift photography cannot be combined with some camera features, including:

- · video recording,
- · long time-exposures ("Bulb" or "Time"),
- · the self-timer,
- · high-speed frame capture +,
- · bracketing,
- multiple exposures,

- · HDR overlay,
- · interval-timer photography, and
- · time-lapse video recording.

Tip: Aperture

Given that pictures shot at very small apertures (high f-numbers) may lack definition, we recommend that you choose apertures wider (f-numbers lower) than f/8–f/11.

Tip: Close-ups

Because focus depth is reduced at short focus distances, we recommend choosing smaller focus steps and increasing the number of shots when photographing subjects close to the camera.

The video recording menu

To view the video recording menu, select the \P tab in the camera menus.



The video recording menu contains the following items:

Item	ш
[Reset video recording menu]	572
[Storage folder]	572
[File naming]	573
[Video file type]	573
[Frame size/frame rate]	573
[ISO sensitivity settings]	573
[White balance]	574
[Set Picture Control]	575
[Manage Picture Control]	575
[HLG quality]	575
[Active D-Lighting]	576
[High ISO NR]	577
[Vignette control]	577

he following items:		
Item	æ	
[Diffraction compensation]	577	
[Auto distortion control]	577	
[Skin softening]	578	
[Portrait impression balance]	578	
[Video flicker reduction]	578	
[High-frequency flicker reduction]	579	
[Metering]	580	
[Focus mode]	580	
[AF-area mode]	580	
[AF/MF subject detection options]	580	
[Product review mode]	581	
[MF subject detection area]	581	

m	ltem	ш
581	[Wind noise reduction]	584
582	[Mic jack plug-in power]	585
582	[Headphone volume]	585
582	[Timecode]	585
584	[External rec. cntrl (HDMI)]	587
584	[Hi-Res Zoom]	587
	581 582 582 582 584	581 [Wind noise reduction] 582 [Mic jack plug-in power] 582 [Headphone volume] 582 [Timecode] 584 [External rec. cntrl (HDMI)]

Reset video recording menu

MENU button → ¬ video recording menu

Reset all video recording menu settings to their default values.

Storage folder

MENU button → 🔻 video recording menu

Choose the folder in which subsequent pictures will be stored. More information is available in the section devoted to the [**Storage folder**] item in the photo shooting menu (\square 479).

[Storage folder]

Changes to [Storage folder] in the photo shooting menu apply in the video recording menu and vice versa.

File naming

MENU button → ♥ video recording menu

Choose the three-letter prefix used in naming the image files in which videos are stored; the default prefix is "DSC" (2482).

Video file type

MENU button ⇒ 🖷 video recording menu

Choose the video file type. For more information, see the section on "Video file types" (\square 222) in the "Video recording" chapter.

Frame size/frame rate

MENU button ⇒ 🤻 video recording menu

Choose the video frame size (in pixels) and frame rate. For more information, see the section on "Video frame size and rate options" (\square 224) in the "Video recording" chapter.

ISO sensitivity settings

MENU button ➡ \ \ video recording menu

Adjust the ISO sensitivity settings for video mode.



Option	Description
[Maximum sensitivity]	Choose the upper limit for auto ISO sensitivity control from values between ISO 200 and 25600. • The selected value serves as the upper limit for ISO sensitivity in modes P, S, and A and when [ON] is selected for [Auto ISO control (mode M)] in mode M.
[Auto ISO control (mode M)]	[ON]: Enable auto ISO sensitivity control in mode M. [OFF]: Use the value selected for [ISO sensitivity (mode M)]. Regardless of the option selected, auto ISO sensitivity control is used in modes other than M.
[ISO sensitivity between ISO 100 and 25600. · Values between Lo 0.3 and 2.0 and ISO	Values between Lo 0.3 and 2.0 and ISO 800 and 25600 are available when [N-Log] is selected for video tone

Cautions: Auto ISO sensitivity control

- At high ISO sensitivities, "noise" (randomly-spaced bright pixels, fog, or lines) may increase.
- · At high ISO sensitivities, the camera may have difficulty focusing.
- The foregoing can be prevented by choosing a lower value for [ISO sensitivity settings] > [Maximum sensitivity].

White balance

MENU button → 🔻 video recording menu

Choose the white balance for videos. Select [Same as photo settings] to use the option currently selected for photos (\square 178).

Set Picture Control

MENU button → 🔻 video recording menu

Choose a Picture Control for videos. Select [Same as photo settings] to use the option currently selected for photos (\$\square\$200).

Manage Picture Control

MENU button → 🔻 video recording menu

Save modified Picture Controls as Custom Picture Controls (215).

HLG quality

MENU button ➡ \ \ video recording menu

Adjust HLG video image processing options for use when [**HLG**] is chosen as the tone mode for [**Video file type**] > [**H.265 10-bit (MOV)**] in the video recording menu.

Option	Description
[Quick sharp]	Apply sharpening to areas of contrast within the picture. Adjusting [Quick sharp] simultaneously adjusts [Sharpening], [Mid-range sharpening], and [Clarity] for well-balanced results. Choose higher values for heightened sharpness. Choose lower values for greater softness. [Sharpening], [Mid-range sharpening], and [Clarity] each apply to different areas within the picture. These parameters can also be adjusted individually.
[Sharpening]	Apply sharpening to small areas of contrast.

Option		Description
	[Mid-range sharpening]	Apply sharpening to areas of contrast larger than those affected by [Sharpening] and smaller those affected by [Clarity].
	[Clarity]	Apply sharpening to large areas of contrast. • Fine outlines and the brightness and contrast of the picture as a whole are unaffected.
[Contrast]		Adjust overall contrast.
[Saturation]		Control the vividness of colors.
[Hue]		Adjust hue.

Active D-Lighting

MENU button ⇒ 🖷 video recording menu

Preserve details in highlights and shadows, creating videos with natural contrast.

	Option	Description
睧H	[Extra high]	Choose the amount of Active D-Lighting performed from (in order from high to low) [Extra high], [High], [Normal], and [Low].
ed H	[High]	
et N	[Normal]	
醋L	[Low]	
[Off]		Active D-Lighting off.

High ISO NR

MENU button ⇒ 🔻 video recording menu

Reduce "noise" (randomly-spaced bright pixels) in videos recorded at high ISO sensitivities (\$\square\$493).

Vignette control

MENU button ➡ 🦷 video recording menu

Reduce vignetting in videos (\$\square\$493).

Vignette control

Changes to [Vignette control] in the photo shooting menu apply in the video recording menu and vice versa.

Diffraction compensation

MENU button → 🔻 video recording menu

Choose whether to reduce diffraction in videos (494).

Diffraction compensation

Changes to [**Diffraction compensation**] in the photo shooting menu apply in the video recording menu and *vice versa*.

Auto distortion control

MENU button ➡ 🦷 video recording menu

Choose whether to reduce barrel and pin-cushion distortion in videos (\$\mu 494\$).

Auto distortion control

Changes to [**Auto distortion control**] in the photo shooting menu apply in the video recording menu and *vice versa*.

Skin softening

MENU button → 🔻 video recording menu

Adjust skin softening settings for video recording. Select [Same as photo settings] to use the option currently selected for photos (495).

Restrictions on skin softening in video mode

Skin softening will not be performed if [N-Log] is chosen for tone mode when [H.265 10-bit (MOV)] is selected for [Video file type] in the video recording menu.

Portrait impression balance

MENU button ⇒ 🔻 video recording menu

 
Adjust portrait impression balance settings for video recording (\$\square\$496).

Video flicker reduction

MENU button → 🔻 video recording menu

This function reduces flicker and banding in the shooting display and in footage recorded under fluorescent or mercury-vapor lighting.

The frequency of the power supply can be selected from [Auto], [50 Hz], and [60 Hz] according to the region of the shooting location.



- If [Auto] fails to produce the desired results, select [50 Hz] or [60 Hz] according to the frequency of the local power supply and take test shots. Choose [50 Hz] for areas with a 50 Hz power supply, [60 Hz] for areas with a 60 Hz power supply.
- [Video flicker reduction] is also applied to the shooting display in photo mode.

Cautions: [Video flicker reduction]

- Flicker reduction may not produce the desired results if the subject is very bright. If this is the case, try choosing a smaller aperture (higher fnumber).
- If flicker reduction does not produce the desired results, select mode S or M and choose a shutter speed adapted to the frequency of the local power supply:
 - 50Hz: 1/100 s, 1/50 s, 1/25 s
 - 60Hz: 1/125 s, 1/60 s, 1/30 s

High-frequency flicker reduction

MENU button ⇒ 🖷 video recording menu

Selecting [On (shutter speed fine-tuning)] allows shutter speeds between 1/4000 and 1/30 s to be adjusted in smaller increments in modes S and M, letting speeds that keep flicker to a minimum be found by viewing the preview in the shooting display. More information is

available in the section devoted to the [High-frequency flicker reduction] item in the photo shooting menu (\$\square\$500).

Metering

MENU button → 🔻 video recording menu

Choose how the camera meters exposure in video mode. [**Spot metering**] is not available in the video recording menu (\$\square\$501)\$.

Focus mode

MENU button → 🔻 video recording menu

Choose a focus mode for video recording (\square 122).

AF-area mode

MENU button → 🔻 video recording menu

Choose an AF-area mode for video recording (124).

AF/MF subject detection options

MENU button ➡ 🦷 video recording menu

Subject detection

Choose the type of subject to which the camera gives priority when focusing in video mode $(\square 129)$.

AF when subject not detected

Choose whether the camera focuses if unable to detect a subject of the type selected for [**Subject detection**] when [**Full-time AF**] is selected for focus mode.

- If [ON] is selected, the camera will initiate autofocus whether or not a subject of the selected type is detected.
- Select [OFF] to disable autofocus when no subject of the selected type is detected.

Product review mode

MENU button ➡ 🤻 video recording menu

Set product review mode to adjust the focus to objects close to the camera. For more information, see the section on "Product review mode" (2237) in the "Video recording" chapter.

MF subject detection area

MENU button ➡ 🤻 video recording menu

Choose the manual focus subject detection area. For more information, see "Using subject detection with manual focus" (□132) in the "Subject detection" portion of the "Focus" section.

Video self-timer

MENU button → 🔻 video recording menu

Set the self-timer in video mode. For more information, see the section on "Video self-timer" (\$\subset\$238) in the "Video recording" chapter.

Vibration reduction

MENU button → 🔻 video recording menu

Adjust vibration reduction settings for video mode. Select [Same as photo settings] to use the option currently selected for photos (\$\sigma\$507).

Electronic VR

MENU button ⇒ 🔻 video recording menu

Choose whether to enable electronic vibration reduction in video mode.

Caution: Electronic vibration reduction

[Electronic VR] is fixed at [OFF] while:

- · 120p or 100p is selected for frame rate,
- $3840 \times 2160 60 \text{p}/50 \text{p}$ is selected for frame size and rate,
- \cdot 1920 \times 1080 (slow-motion) is selected for frame size and rate, or
- [ON] is selected for [Hi-Res Zoom] in the video recording menu.

Caution: Using Electronic VR

We recommend that you hold the camera firmly and wait for the image in the display to stabilize before shooting.

Microphone sensitivity

MENU button → ¬ video recording menu

Turn built-in or external microphones on or off or adjust microphone sensitivity.

Option	Description
[Auto]	Adjust microphone sensitivity automatically.

Option	Description	
[Manual]	Adjust microphone sensitivity manually. Choose from values of from [1] to [20]. The higher the value, the higher the sensitivity; the lower the value, the lower the sensitivity.	
[Microphone off]	Turn sound recording off.	

 If the sound level is displayed in red, the volume is too high. Reduce microphone sensitivity.



▼ Videos without sound

Videos recorded with [Microphone off] selected for microphone sensitivity are indicated by a $\mathbb X$ icon.



Attenuator

MENU button ⇒ \ video recording menu

Select **[ON]** to reduce microphone gain and prevent audio distortion when recording videos in loud environments.

Frequency response

MENU button ⇒ \ video recording menu

Choose the range of frequencies to which built-in and external microphones respond.

Option		Description
™WIDE [Wide range]		Record a wide range of frequencies. Choose for everything from music to the bustling hum of a city street. If you are concerned about environmental sounds such as the sound of air conditioning equipment, select [Vocal range].
WYOCE [Vocal range]		Choose for human voices. If the low or high frequency ranges are faint, select [Wide range].

Wind noise reduction

MENU button → 🔻 video recording menu

Select **[ON]** to enable the low-cut filter, reducing noise produced by wind blowing over the built-in microphone. Note that other sounds may also be affected.

Selecting **[ON]** for **[Wind noise reduction]** has no effect on optional stereo microphones. Wind-noise reduction for optional stereo

microphones that support this feature can be enabled or disabled using microphone controls.

Mic jack plug-in power

MENU button → 🔻 video recording menu

The camera does not provide power to external microphones when **[OFF]** is selected.

- To prevent noise from interference generated by the power supply, we recommend turning plug-in power [OFF] when using microphones that do not require plug-in power.
- For information on whether your microphone requires plug-in power, consult the manufacturer.

Headphone volume

MENU button ⇒ 🔻 video recording menu

Press 🕒 or 🕞 to adjust headphone volume.

Timecode

MENU button \Rightarrow $\mbox{$\!\!\!|}$ video recording menu

Choose whether to record time codes giving the hour, minute, second, and frame number for each frame when recording videos. Time codes are not included in videos shot with [H.264 8-bit (MP4)] selected for [Video file type] in the video recording menu.

Option	Description
[Record timecodes]	• [On]: Record time codes. The time code appears in the shooting display. • [On (with HDMI output)]: Time codes will be included with footage saved to external recorders connected to the camera via an HDMI cable. • [Off]: Time codes are not recorded.
[Count-up method]	[Record run]: Time codes are incremented only while recording is in progress. [Free run]: Time codes are incremented continuously. Time codes continue to be incremented while the camera is off.
[Timecode origin]	• [Reset]: Reset the time code to 00:00:00.00. • [Enter manually]: Enter the hour, minute, second, and frame number manually. • [Current time]: Set the time code to the current time as reported by the camera clock. Before proceeding, select [Time zone and date] in the setup menu and make sure that the camera clock is set to the correct time and date.
[Drop frame]	Select [ON] to compensate for discrepancies between the frame count and the actual recording time at frame rates of 30 and 60 fps.

▼ Caution: HDMI devices

Selecting [On (with HDMI output)] for [Record timecodes] may disrupt footage output to HDMI devices.

External rec. cntrl (HDMI)

MENU button ⇒ \ \ video recording menu

Selecting **[ON]** allows camera controls to be used to start and stop recording on the external recorder. For more information, see the section on "Recorders" (\$\square\$339\$) in the "Connecting to HDMI TVs and recorders" chapter.

Hi-Res Zoom

MENU button → 🔻 video recording menu


Selecting **[ON]** allows you to zoom in on your subject with no loss in resolution without using a zoom lens. For more information, see the section on "Hi-Res Zoom" (\square 235) in the "Video recording" chapter.

The Custom Settings menu

To view Custom Settings, select the / tab in the camera menus.



Custom Settings are used to customize camera settings to suit individual preferences. The Custom Settings menu is divided into two levels.

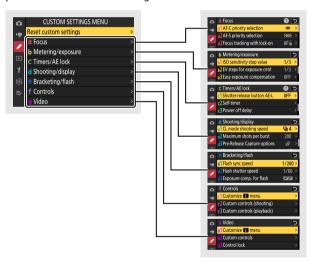

The following Custom Settings are available:

	ltem	ш		Item	ш
[Reset custom settings] 592			a14	[Manual focus ring in AF mode] 2	602
a [Fo	ocus]			letering/exposure]	
a1	[AF-C priority	592	D [W		
	selection]	392	b1	[ISO sensitivity step value]	602
a2	[AF-S priority	592			
	selection]	392	b2	[EV steps for exposure cntrl]	603
a3	[Focus tracking with	593		•	
	lock-on]	393	b3	[Easy exposure compensation]	603
a4	[Focus points used]	594		-	
	[Store points by orientation]		b4	[Matrix metering face detection]	604
a5		594			
—— аб	[AF activation]	596	b5	[Center-weighted area]	604
	[Fine-tune opti		[Fine-tune optimal	604	
a7	[Focus point persistence]	597		exposure]	001
	[Limit AF-area mode		c [Timers/AE lock]		
a8	selection	598		[Shutter-release	605
	[Focus point wrap-		CI	button AE-L]	605
a9	around]	598	c2	[Self-timer]	606
a10	[Focus point display]	599	с3	[Power off delay]	606
a11	[Built-in AF-assist	600	d [Shooting/display]		
a i i	illuminator]		-11	[CL mode shooting	607
a12	[Focus peaking]	601	d1	speed]	607
a13	[Focus point selection speed]	602	d2	[Maximum shots per burst]	607

	ltem 🕮		
d3	[Pre-Release Capture options]	608	
d4	[Sync. release mode options]	610	
d5	[Exposure delay mode]	610	
d6	[Shutter type]	611	
d7	[Extended shutter speeds (M)]	611	
d8	[Limit selectable image area]	612	
d9	[File number sequence]	612	
d10	[View mode (photo Lv)]	614	
d11	[Starlight view (photo Lv)]	616	
d12	[Warm display colors]	617	
d13	[Display on during burst]	617	
d14	[Release timing indicator]	617	
d15	[Image frame]	618	
d16	[Grid type]	618	
d17	[Virtual horizon type]	619	
d18	[Half-press to cancel zoom (MF)]	621	

	ltem	m
d19	[Custom monitor shooting display]	622
d20	[Custom viewfinder shooting display]	623
e [Bı	racketing/flash]	
e1	[Flash sync speed]	624
e2	[Flash shutter speed]	626
e3	[Exposure comp. for flash]	626
e4	[Auto \$ ISO sensitivity control]	627
e5	[Auto bracketing (mode M)]	627
е6	[Bracketing order]	628
e7	[Flash burst priority]	629
f [Controls]		
f1	[Customize menu]	630
f2	[Custom controls (shooting)]	632
f3	[Custom controls (playback)]	654
f4	[Touch Fn]	661
f5	[Control lock]	662
f6	[Reverse dial rotation]	663

	Item	Ш		Item	m
f7	[Release button to use dial]	663	g7	[Hi-Res Zoom speed]	684
f8	[Reverse indicators]	664	g8	[Power zoom (PZ) button options]	685
f9	[Reverse ring for focus]	664	g9	[Fine ISO control (mode M)]	685
f10	[Focus ring rotation range]	665		[Extended shutter speeds (S/M)]	686
f11	[Control ring response]	665		•	
	[Switch focus/control		g11	[View assist]	686
f12	ring roles]	666	g12	[Zebra pattern]	687
f13	[Power zoom (PZ) button options]	666	g13	[Limit zebra pattern tone range]	688
f14	[Full-frame playback flicks]	666	g14	[Grid type]	689
g [Video]			g15	[Brightness information display]	689
g1	[Customize 11 menu]	668	g16	[Half-press to cancel	690
g2	[Custom controls]	670		zoom (MF)]	0,0
g3	[Control lock]	681	g17	[Custom monitor shooting display]	690
g4	[Limit AF-area mode selection]	682	g18	[Custom viewfinder shooting display]	691
g5	[AF speed]	683	g19	[Red REC frame	692
g6	[AF tracking sensitivity]	684	——	indicator]	092

- 1 Items modified from default values are indicated by asterisks ("\mathbf{x}").
- 2 Available only with compatible lenses that have a focus ring.

Reset custom settings

MENU button → ✓ Custom Settings menu

Restore Custom Settings to their default values.

a: Focus

a1: AF-C priority selection

MENU button → ✓ Custom Settings menu

Choose whether photos can be taken before the camera focuses when **AF-C** is selected.

Option		Description
		Photos can be taken whenever the shutter-release button is pressed (release priority).
	[Focus + release]	Priority is normally given to release, but if the subject is dark or low contrast and the camera is in continuous-release mode, priority will be given to focus for the first shot in each series. For the remaining shots, priority will be given to release regardless of focus. This helps ensure that the first shot in each series is in focus.
[##]	[Focus]	Photos can be taken only when the camera is in focus (focus priority).

a2: AF-S priority selection

MENU button **→ /** Custom Settings menu

Choose whether photos can be taken before the camera focuses when **AF-S** is selected.

Option		Description
Photos can be taken whenever the shut pressed (release priority).		Photos can be taken whenever the shutter-release button is pressed (release priority).
[::::]	[Focus]	Photos can be taken only when the camera is in focus (focus priority).

a3: Focus tracking with lock-on

MENU button → ✓ Custom Settings menu

Choose how quickly focus responds if something passes between the subject and the camera when **AF-C** is selected for focus mode or when **AF-A** is selected and you are shooting in **AF-C**.



Blocked shot AF response

- Choose [5] ([Delayed]) to help maintain focus on your original subject.
- Choose [1] ([Quick]) to make it easier to shift focus to objects crossing your field of view.
- Regardless of the option selected, blocked shot AF response functions in mode [3] when [3D-tracking] is selected for AF-area mode.
- If [Auto-area AF] is selected for AF-area mode, blocked shot AF response will function in mode [3] when [2] or [1] is selected.

a4: Focus points used

MENU button → ✓ Custom Settings menu

Choose the number of focus points available for manual focus-point selection when an option other than [**Auto-area AF**] is selected for AF-area mode.

	Option	Description
		Every focus point available in the current AF-area mode can be selected. The number of points available varies with the AF-area mode.
:::	[Alternating points]	The number of available focus points is reduced to one quarter of the number available when [All points] is selected. Use for quick focus-point selection. The number of points available for [Pinpoint AF] is not affected.

a5: Store points by orientation

MENU button → ✓ Custom Settings menu

Choose whether separate focus points can be selected for "wide" (landscape) orientation, for "tall" (portrait) orientation with the camera rotated 90° clockwise, and for "tall" orientation with the camera rotated 90° counterclockwise.

 Select [Off] to use the same focus point regardless of camera orientation.













Camera rotated 90° counterclockwise

Landscape (wide) orientation

Camera rotated 90° clockwise

 Select [Focus point] to enable separate focus-point selection. To enable separate selection of both the focus point and AF-area mode, choose [Focus point and AF-area mode].













Camera rotated 90° counterclockwise

Landscape (wide) orientation

Camera rotated 90° clockwise

a6: AF activation

MENU button → ✓ Custom Settings menu

Choose whether the shutter-release button can be used to focus.

Option	Description
[Shutter/AF-ON]	The camera focuses when the shutter-release button is pressed halfway.
[AF-ON only]	The camera does not focus when the shutter-release button is pressed halfway.

Option	Description		
[Enable] Photos can be taken whenever the shutter-release button pressed (release priority).			
[Disable]	 Photos can be taken only when the camera is in focus (focus priority). Press the shutter-release button all the way down to shoot after focusing using a control to which AF-ON has been assigned via Custom Setting f2 [Custom controls (shooting)]. 		

Caution: [Pinpoint AF]

If [Pinpoint AF] is selected for AF-area mode with Custom Setting a6 [AF activation] set to [AF-ON only] and [Disable] chosen for [Out-of-focus release], the shutter can be released whether or not the subject is in focus.

a7: Focus point persistence

MENU button **→ /** Custom Settings menu

Choose whether the focus point selected by the camera continues in use after you change AF-area modes using a control to which one of [AF-area mode] or [AF-area mode + AF-ON] has been assigned via Custom Setting f2 [Custom controls (shooting)]. This only applies if you change AF-area modes while focusing with the shutter-release button pressed halfway.

Option	Description		
[Auto]	The focus point last chosen by the camera before you switched AF area modes remains in effect.		
[Off]	The focus point last chosen by the user is restored.		

 Focus-point persistence applies if while the control is pressed, you switch from an AF-area mode such as [Auto-area AF] in which the focus point is chosen automatically to a mode in which the focus point is selected manually.

a8: Limit AF-area mode selection

MENU button → ✓ Custom Settings menu

Choose the AF-area modes that can be selected by rotating the sub-command dial while using the control to which [Focus mode/AF-area mode] has been assigned using Custom Setting f2 [Custom controls (shooting)].



· To complete the operation, press MENU.

a9: Focus point wrap-around

MENU button → ✓ Custom Settings menu

Choose whether focus-point selection "wraps around" from one edge of the display to another. If **[ON]** is selected, focus-point selection will "wrap around" from top to bottom, bottom to top, right to left, and left to right, so that, for example, pressing ③ when a focus point at the right edge of the display is highlighted selects the corresponding point at the left edge.

a10: Focus point display

MENU button → Custom Settings menu

Choose from the focus point display options below.


Manual focus mode

Option	Description	
[ON]	The focus point is displayed at all times in manual focus mode.	
[OFF]	The focus point is displayed only during focus point selection.	

Dynamic-area AF assist

Choose whether both the selected focus point and the surrounding focus points are displayed in dynamic-area AF mode.

Option	Description	
[ON]	Display both the selected focus point and surrounding focus points.	
[OFF]	Display only the selected focus point.	

 

[ON] ([Dynamic-area AF [OFF] (M)])

AF-C in-focus display

Choose whether the focus point changes color when the subject is in focus in focus mode **AF-C**.

Option	Description		
[ON]	The focus point is displayed in green when the camera judges that the subject is in focus.		
[OFF]	The active focus point is displayed in red or yellow at all times, whether or not the camera is in focus.		

3D-tracking focus point color

The color of the focus point displayed when [**3D-tracking**] is selected for AF-area mode can be chosen from [**White**] and [**Red**].

Focus point border width

Focus point border width can be selected from 3 widths, from [1] to [3].

a11: Built-in AF-assist illuminator MENU button → Custom Settings menu

Choose whether the built-in AF-assist illuminator lights to assist the focus operation in photo mode when lighting is poor.

Option	Description			
[ON]	In photo mode, the illuminator will light as required when AF-S is selected for focus mode or when AF-A is selected and you are shooting in AF-S .			
[OFF]	The illuminator does not light to assist the focus operation. The camera may not be able to focus when lighting is poor.			

The AF-assist illuminator

- The AF-assist illuminator has a range of about 1–3 m (3 ft 4 in.–9 ft 10 in.).
- · Remove lens hoods when using the illuminator.
- · Do not obstruct the AF-assist illuminator while it is lit.



 Some lenses may block the light from the AF-assist illuminator at some or all focus distances. Information on these restrictions is available from the Nikon Download Center.

https://downloadcenter.nikonimglib.com/

a12: Focus peaking

MENU button → / Custom Settings menu

When focus peaking is enabled in manual focus mode, objects that are in focus are indicated by colored outlines in the display. You can choose the color.

Focus peaking display

Select [ON] to enable focus peaking.

Focus peaking sensitivity

Choose focus peaking sensitivity from [3 (high sensitivity)], [2 (standard)], and [1 (low sensitivity)]. The higher the value, the greater the depth that will be shown as being in focus.

Focus peaking highlight color

Choose the highlight color.

a13: Focus point selection speed

MENU button → ✓ Custom Settings menu

The speed at which the camera cycles through focus points while the multi selector is pressed can be chosen from [Low], [Normal], and [High].

a14: Manual focus ring in AF mode

MENU button → ✓ Custom Settings menu

This item is available with compatible lenses only. Choose whether the lens focus ring can be used for manual focus in autofocus mode.

Option	Description		
[ON]	Autofocus can be over-ridden by rotating the lens focus ring (autofocus with manual override). The focus ring can be used for manual focus while the shutter-release button is pressed halfway. To refocus using autofocus, lift your finger from the shutter-release button and then press it halfway again.		
[OFF]	The lens focus ring cannot be used for manual focus while autofocus mode is selected.		

b: Metering/exposure

b1: ISO sensitivity step value

MENU button **→ /** Custom Settings menu

Choose whether changes to ISO sensitivity are made in increments of 1/3 or 1 EV. If the value currently selected for ISO sensitivity is not available at the chosen setting, ISO sensitivity will be set to the nearest available value.

b2: EV steps for exposure cntrl

MENU button → ✓ Custom Settings menu

Select the increments used for adjustments to shutter speed, aperture, bracketing, and exposure and flash compensation.

 If [1 EV steps (comp. 1/3 EV)] is selected, changes to shutter speed, aperture, and bracketing will be made in increments of 1 EV and changes to exposure and flash compensation in increments of 1/3 EV.

b3: Easy exposure compensation

MENU button → ✓ Custom Settings menu

Choose whether the $\hbox{\ensuremath{\mbox{$\bowtie$}}}$ button is needed for exposure compensation in photo mode.

Option	Description	
[On (Auto reset)] Only a command dial is needed to adjust exposure compensation. The setting selected with the command dia reset when the camera turns off or the standby timer expirit		
[On]	Only a command dial is needed to adjust exposure compensation. Exposure compensation is not reset when the camera turns off or the standby timer expires.	
[Off]	Exposure compensation is set by pressing the 🗷 button and rotating a command dial.	

- Enabled in modes **P**, **S**, **A**, and **T**. Easy exposure compensation is not available in modes **M** and **SCN**.
- The command dial used varies with the shooting mode.

b4: Matrix metering face detection

MENU button → ✓ Custom Settings menu

Choose whether exposure is adjusted for the faces of human portrait subjects detected by the camera when [Matrix metering] is selected.

Option	Description			
[ON]	he camera adjusts exposure for faces.			
[OFF]	Exposure is not adjusted according to whether faces have been detected.			

b5: Center-weighted area

MENU button **→ /** Custom Settings menu

When [Center-weighted metering] is selected, the camera assigns the greatest weight to an area in the center of the shooting display when setting exposure.

Option		Description
SMALL	[Small]	The camera assigns the greatest weight to an area equivalent to a circle 6 mm in diameter.
STNDRD	[Standard]	The camera assigns the greatest weight to an area equivalent to a circle 8 mm in diameter.
AVG	[Average]	Weighting is based on the average of the entire frame.

b6: Fine-tune optimal exposure

MENU button → ✓ Custom Settings menu

Use this option to fine-tune the exposure value selected by the camera; exposure can be fine-tuned separately for each metering method.

Exposure can be adjusted up for brighter exposures or down for darker exposures in the range +1 to -1 EV in steps of 1/6 EV. The default is 0.



Fine-tuning exposure

Regardless of the option selected for Custom Setting b6 [Fine-tune optimal exposure], the exposure compensation icon (迢) will not be displayed. The only way to determine how much exposure has been altered is to view the amount in the fine-tuning menu for Custom Setting b6.

c: Timers/AE lock

c1: Shutter-release button AE-L

MENU button **→ /** Custom Settings menu

Choose whether exposure locks when the shutter-release button is pressed.

Option		Description
≛0N	[On (half press)]	Pressing the shutter-release button halfway locks exposure.
±0N	[On (burst mode)]	Exposure only locks while the shutter-release button is pressed all the way down.
[Off]		Pressing the shutter-release button does not lock exposure.

c2: Self-timer

MENU button → Custom Settings menu

Choose the length of the shutter release delay, the number of shots taken, and the interval between shots in self-timer mode.

Option	Description
[Self-timer delay]	Choose the length of the shutter-release delay.
[Number of shots]	Press 🕒 and 🌍 to choose the number of shots taken each time the shutter-release button is pressed; choose from values of from 1 to 9.
[Interval between shots]	Choose the interval between shots when [Number of shots] is more than 1.

c3: Power off delay

MENU button → ✓ Custom Settings menu

Choose how long the displays remain on, and how long the camera waits before returning from picture review to shooting mode, when no operations are performed.

· Longer power-off delays reduce battery endurance.

Option	Description
[Playback]	Choose how long the monitor or viewfinder waits to turn off after playback starts.
[Menus]	Choose how long the monitor or viewfinder waits to turn off after menus are displayed.
[Picture review]	Choose how long the camera waits to return to the shooting display after picture review starts when [On] or [On (monitor only)] is selected for [Picture review] in the playback menu.

Option	Description	
[Standby timer]	Choose how long the exposure displays in the monitor and viewfinder remain on after the shooting display is activated. The monitor and viewfinder dim a few seconds before the standby timer expires. If [10 s] is selected, the timer will be extended to 20 seconds while the <i>i</i> menu is displayed.	

d: Shooting/display

d1: CL mode shooting speed

MENU button → Custom Settings menu

Choose the frame advance rate for low-speed continuous release mode; options range from 1 to 5 fps.

d2: Maximum shots per burst

MENU button → ✓ Custom Settings menu

The maximum number of shots that can be taken in a single burst in continuous release modes can be set to any value between 1 and 200.

- No limits are placed on the number of shots that can be taken in a single burst in the following situations:
 - When the shutter speed is set to 1 s or slower in mode S or M
 - During high-speed frame capture +
 - In silent mode


The memory buffer

Custom Setting d2 [Maximum shots per burst] is used to select the number of shots that can be taken in a single burst. The number of shots that can be taken before the memory buffer fills and shooting slows varies with image quality and other settings. When the buffer is full, the camera will display "r000" and the frame advance rate will drop.

d3: Pre-Release Capture options

MENU button → ✓ Custom Settings menu

Choose the length of the burst recorded from the end of the memory buffer when the shutter-release button is pressed all the way down and the maximum length of the burst recorded while the shutter-release button is fully pressed in high-speed frame capture + mode.

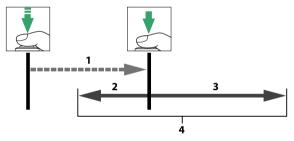

- 1 Pre-Release Capture standby (maximum 90 s)
- Portion of buffer recorded to memory card at release ([Pre-release burst])
- Pictures taken after release ([Post-release burst])
- 4 Complete high-speed burst

Option	Description
[Pre- release burst]	If an option other than [None] is selected, the camera will buffer frames while the shutter-release button is pressed halfway, but only the frames added to the buffer in the final n seconds, where n is the value selected for [Pre-release burst], will be recorded to the memory card when the shutter-release button is pressed all the way down ("Pre-Release Capture"). • If the interval between the shutter-release button being pressed halfway and its being pressed all the way down is shorter than the time selected, only the frames saved to the buffer while the button was pressed halfway will be recorded.
[Post- release burst]	Choose the maximum length of time the camera will continue to take pictures after the shutter-release button is pressed all the way down: [1 s], [2 s], [3 s], or [Max.]. • Shooting can continue until the camera's memory buffer is full when [Max.] is selected. The maximum length for bursts varies with camera settings.

A ☑ icon appears in the shooting display when an option other than [None] is selected for [Pre-release burst]. While the shutter-release button is pressed halfway, a green dot (●) will appear in the icon to show that buffering is in progress.



 Release Capture can be resumed by lifting your finger from the shutter-release button and then pressing it halfway again.

• The @ icon will start to flash 30 seconds before Pre-Release Capture is cancelled

d4: Sync. release mode options

MENU button → / Custom Settings menu

Choose whether the shutters on the remote cameras are synchronized with the shutter on the master camera when using the [Connect to other cameras] item in the network menu.

 For information on synchronized release using [Connect to other cameras] in the network menu, see the section on "Synchronized release" (\$\subset\$436\$) in the "Connecting to other cameras" chapter.

d5: Exposure delay mode

MENU button → ✓ Custom Settings menu

In situations where the slightest camera movement can blur pictures, shutter release can be delayed by from about 0.2 to 3 seconds after the shutter-release button is pressed.

• A **DN** icon appears in the shooting display when an option other than **[Off]** is selected.



d6: Shutter type

MENU button → ✓ Custom Settings menu

Choose the type of shutter used for photographs.

Option		Description
Ę	[Auto]	The camera chooses the shutter type automatically according to shutter speed. The electronic front-curtain shutter is used to reduce blur caused by camera shake at slow shutter speeds.
₩	[Mechanical shutter]	The camera uses the mechanical shutter for all photos.
显	[Electronic front- curtain shutter]	The camera uses the electronic front-curtain shutter for all photos.

[Mechanical shutter]

[Mechanical shutter] is not available with some lenses due to the camera's specifications.

[Electronic front-curtain shutter]

The fastest shutter speed available when [**Electronic front-curtain shutter**] is selected is 1/2000 s

d7: Extended shutter speeds (M)

MENU button → ✓ Custom Settings menu

Extend the range of shutter speeds available in mode **M**; the slowest shutter speed available when [**ON**] is selected is 900 s (15 minutes). Extended shutter speeds can be used for pictures of the night sky and other long exposures.

- When [ON] is selected, the time remaining in the current exposure will be displayed in the shooting display at shutter speeds slower than 30 s.
- At speeds slower than 1 s, the shutter speed displayed by the camera may differ from the actual exposure time. The actual exposure times at shutter speeds of 15 and 30 seconds, for example, are respectively 16 and 32 seconds. The exposure time will again match the selected shutter speed at speeds of 60 seconds and slower.

d8: Limit selectable image area

MENU button **→ /** Custom Settings menu

Choose the options that can be accessed by rotating a command dial in the \boldsymbol{t} menu or while pressing a control to which image area has been assigned.



· To complete the operation, press MENU.

d9: File number sequence

MENU button → ✓ Custom Settings menu

Choose a file numbering option.

Option	Description	
[On]	When a new folder is created or a new memory card is inserted in the camera, file numbering will continue from the last number used. This simplifies file management by minimizing the occurrence of duplicate file names when multiple cards are used.	
[Off]	When a new folder is created or a new memory card is inserted, file numbering restarts from 0001. If the current folder already contains images, file numbering will instead continue from the highest file number in the current folder. If you select [Off] after selecting [On], the camera will store the current file number. File numbering will resume from the previously-stored value the next time [On] is selected.	
[Reset]	Reset the file numbering for [On]. If the current folder is empty, file numbering will restart from 0001 with the next picture taken. If the current folder contains images, the next picture taken will be assigned a file number by adding one to the highest file number in the current folder.	

File number sequence

- If a picture is taken when the current folder contains a picture numbered 9999, a new folder will be created and file numbering will restart from 0001
- When the current folder number reaches 999, the camera will no longer be able to create new folders and the shutter release will be disabled if:
 - the current folder contains 5000 pictures (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in the folder containing over 5000 files), or
 - the current folder contains a picture numbered 9999 (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in a file numbered over 9999).

To resume shooting, choose [Reset] for Custom Setting d9 [File number sequence] and then either format the current memory card or insert a new memory card.

Folder numbering

- If a picture is taken when the current folder contains 5000 pictures or a picture numbered 9999, a new folder will be created and selected as the current folder.
- The new folder is assigned a number one higher than current folder number. If a folder with that number already exists, the new folder will be assigned the lowest available folder number.

d10: View mode (photo Lv)

MENU button → ✓ Custom Settings menu

Choose whether the camera adjusts the preview in the viewfinder or monitor to reflect how shooting settings will affect the hue and brightness of the final picture. Regardless of the option selected, the effects of camera settings are always visible in video mode.

Option		Description
100 0	[Show effects of settings]	The effects of white balance, Picture Controls, exposure compensation, and other settings that affect color and exposure are visible in the shooting display. Pressing when [Show effects of settings] is highlighted displays [Always] and [Only when flash is not used] options. • [Always]: The effects of settings are also visible when using the built-in flash or when a flash unit is attached and ready to fire. • This setting is recommended when the display is used for adjustments to background exposure. • The main subject may appear dark in the shooting display. • The brightness of the scene shown in the shooting display may differ from that of the actual subject if TTL is selected for flash control mode with [ON] selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu. • [Only when flash is not used]: Display brightness is adjusted for ease of viewing (with the exception of some compensation values) to be the same as [Adjust for ease of viewing] when using the built-in flash or when a flash unit is attached and ready to fire. The effects of settings on colors are visible.

Option		Description
(VEW) ♪	[Adjust for ease of viewing]	The effects of changes to settings such as white balance, Picture Controls, and exposure compensation are not visible in the shooting display. Pressing when [Adjust for ease of viewing] is highlighted displays [Auto] and [Custom] options. [Auto]: Color, brightness, and other settings are adjusted for ease of viewing, making it easier to frame pictures and perform other tasks. [Custom]: Press to make individual adjustments to [White balance], [Set Picture Control], and [Brighten shadows]. [White balance]: Choose from [Preview current setting], [Auto], and [Choose color temperature]. Select [Choose color temperature] to choose the color temperature for the shooting display. [Set Picture Control]: Choose from [Preview current setting] and [Adjust for ease of viewing]. [Brighten shadows]: Choose whether or by how much the camera brightens shadows (dark areas) in the display; the available options are [Off], [+1], [+2], and [+3]. The higher the value, the greater the effect.

d11: Starlight view (photo Lv)

MENU button → ✓ Custom Settings menu

Select **[ON]** to brighten the display for ease of viewing in dark environments (starlight view). Note that the display may become slightly jerky when starlight view is in effect.

d12: Warm display colors

MENU button **→ /** Custom Settings menu

Use warmer colors with reduced brightness in the shooting, menu, and/or playback displays. This makes the displays easier to view with vision adapted to dark environments during astronomical photography and the like.

Option	Description
[Warm display color options]	Choose from the following options. • [Mode 1]: Use warmer colors in the shooting, menu, and playback displays. • [Mode 2]: Use warmer colors in the menu display. Warmer colors are also used for the icons and other information in the shooting and playback displays, but not for the view through the lens or the content of pictures themselves. • [Off]: Warm colors are not used.
[Warm color display brightness]	Press ♠ or ♠ to adjust brightness manually. Choose higher values for increased brightness, lower values for reduced brightness.

d13: Display on during burst

MENU button **→ /** Custom Settings menu

If [OFF] is selected, the display will go blank during burst photography.

d14: Release timing indicator

MENU button → ✓ Custom Settings menu

Choose how the display responds when the shutter is released during high-speed frame capture + shooting.

Option	Description	
[Type A]	The display goes dark when the shutter is released. This makes it easier to track the subject during panning shots.	
[Type B]	Borders appear at the top, bottom, and sides of the frame when the shutter is released.	
[Type C] Borders appear at the sides of the frame when the shutter is released.		
[Off]	A release timing indicator is not displayed when the shutter is released.	

 Note that regardless of the option selected, release timing indicators are not displayed at slow shutter speeds.

d15: Image frame MENU button → Custom Settings menu

Select [**OFF**] to hide the white border around the shooting displays in the monitor and viewfinder.

d16: Grid type MENU button → Custom Settings menu

 
Choose a framing grid for the shooting display. The selected grid can be displayed by placing a check (☑) next to ⊞ in the list for Custom Setting d19 [Custom monitor shooting display] (□622) or d20 [Custom viewfinder shooting display] (□623).

d17: Virtual horizon type


MENU button **→ /** Custom Settings menu

Choose a virtual horizon for the shooting display. The selected virtual horizon can be displayed by placing a check (☑) next to ፲ in the list for Custom Setting d19 [Custom monitor shooting display] (□622) or d20 [Custom viewfinder shooting display] (□623).

• [**Type A**]: A large indicator showing roll and pitch fills the display.




 • [Type B]: A roll indicator appears at the bottom of the display and a pitch indicator at its right edge.




* The indicators are displayed in green when the camera is level.

Roll

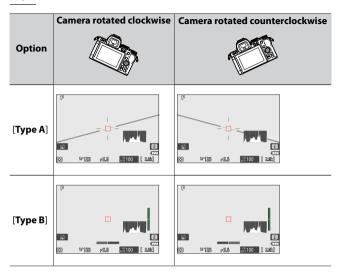

Pitch

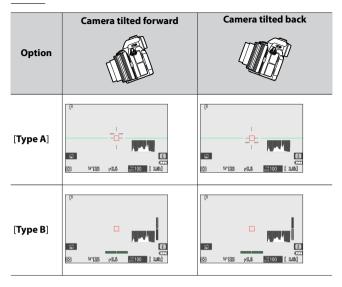

The virtual horizon display

Note that the display may not be accurate when the camera is tilted at a sharp angle forward or back. The camera will not display the virtual horizon or pitch and roll indicators when held at angles at which tilt cannot be measured.

d18: Half-press to cancel zoom (MF)

MENU button → ✓ Custom Settings menu

When set to **[ON]**, press the shutter-release button halfway to cancel zoom when zooming with the focus mode set to manual focus.

d19: Custom monitor shooting display

MENU button → ✓ Custom Settings menu

Choose the monitor displays accessible by pressing the **DISP** button during shooting.

Highlight items ([Display 2] through [Display 5]) and press
 ® to select (□) or deselect (□). Only displays marked with a check (□) can be accessed by pressing the DISP button during shooting. [Display 1] cannot be deselected (□).



To choose indicators that appear in displays [Display 1] through
[Display 4], highlight the corresponding option and press
 ⊕. You can
then highlight items and press to select (□).



Option		Description
SIMPLE	[Basic shooting info]	View the shooting mode, shutter speed, aperture, and other basic shooting info.
DETAIL	[Detailed shooting info]	View the focus mode, AF-area mode, white balance, and other detailed shooting info.
ь	[Touch controls]	View options that can be accessed via touch controls, including touch AF and the <i>t</i> menu.

Option		Description
-	[Virtual horizon]	Enable the virtual horizon. The display type can be selected using Custom Setting d17 [Virtual horizon type].
	[Histogram]	Enable the RGB histogram.
=	[Framing grid]	Enable the framing grid. The display type can be selected using Custom Setting d16 [Grid type].
•	[Center indicator]	Display crosshairs at the center of the frame.
0	[Center- weighted area]	Add a 6 or 8 mm circle to the center of the shooting display whenever [Center-weighted metering] is selected for [Metering] in the photo shooting menu. • The size of the circle varies with the option selected for Custom Setting b5 [Center-weighted area]. The circle is not displayed when [Average] is selected for Custom Setting b5 [Center-weighted area].

- [Display 5] consists solely of the information display and cannot be customized.
- · To complete the operation, press MENU.

d20: Custom viewfinder shooting display

MENU button **→ /** Custom Settings menu

Choose the viewfinder displays accessible by pressing the $\mbox{\bf DISP}$ button during shooting.

 be accessed by pressing the **DISP** button during shooting. [**Display** 1] cannot be deselected (\square).

- To choose indicators that appear in displays [**Display 1**] through [**Display 4**], highlight the corresponding option and press ③. You can then highlight items and press ③ to select (☑) or deselect (□). Apart from [**Touch controls**], the options are the same as those for Custom Setting d19 [**Custom monitor shooting display**] (□622).
- · To complete the operation, press MENU.

e: Bracketing/flash

e1: Flash sync speed

MENU button → ✓ Custom Settings menu

Choose the flash sync speed.

Option	Description		
[1/250 s (Auto FP)]	Flash sync speed is set to 1/250 or 1/200 s. With compatible flash units, auto FP high-speed sync will automatically be enabled at shutter speeds faster than 1/250 or 1/200 s. In modes P and A, auto FP high-speed sync will be activated if the actual shutter speed is faster than 1/250 or 1/200 s. If the flash supports auto FP high-speed sync, the camera can select shutter speeds as fast as 1/4000 s (or 1/2000 s if [Electronic front-curtain shutter] is selected for Custom Setting d6 [Shutter type]). In modes S and M, the user can select shutter speeds as fast as 1/4000 s when using flash units that support auto FP high-speed sync (or 1/2000 s if [Electronic front-curtain shutter] is selected for Custom Setting d6 [Shutter type]). When using the built-in flash, flash sync speed is set to 1/250 or 1/200 s and auto FP high-speed sync will not be activated. If it is set to [1/250 s (Auto FP)] and the shutter speed is faster than 1/200 s and slower than 1/250 s, the guide number will drop.		
[1/200 s]			
[1/160 s]	Flash sync speed set to selected value, which can be from 1/200		
[1/125 s]	to 1/60 s.		
[1/100 s]	The shutter speed will be set to the selected flash sync speed in the S and M modes if a faster shutter speed is selected.		
[1/80 s]	in the 2 and M modes if a faster stratter speed is selected.		
[1/60 s]			

Caution: Auto FP high-speed sync

Depending on the shutter speed, horizontal lines may appear in pictures taken using auto FP high-speed sync when [1/250 s (Auto FP)] or [1/200 s (Auto FP)] is selected. This effect can be mitigated by:

- · choosing a slower shutter speed or
- · adjusting flash output.

Tip: Auto FP high-speed sync

When using an optional flash unit that supports auto FP high-speed sync, the shutter speed for flash photography can be set as fast as 1/4000 s (or 1/2000 s if [Electronic front-curtain shutter] is selected for Custom Setting d6 [Shutter type]). When [1/250 s (Auto FP)] or [1/200 s (Auto FP)] is selected, the camera automatically enables auto FP high-speed sync at shutter speeds faster than the flash sync speed. This makes it possible to choose the maximum aperture for reduced depth of field even when the subject is backlit in bright sunlight.

e2: Flash shutter speed

MENU button **→ /** Custom Settings menu

Choose the slowest shutter speed available with a flash in mode **P** or **A**. Regardless of the setting chosen for Custom Setting e2 [**Flash shutter speed**], shutter speeds can be as slow as 30 s in modes **S** and **M** or at flash settings of slow sync, slow rear-curtain sync, or red-eye reduction with slow sync.

e3: Exposure comp. for flash

MENU button **→ /** Custom Settings menu

Choose how the camera adjusts flash level when exposure compensation is used.

Option		Description
经区	[Entire frame]	The camera adjusts both the flash level and exposure. This changes the exposure for the entire frame.
2	[Background only]	Exposure compensation is adjusted for the background only.

e4: Auto 🕏 ISO sensitivity control

MENU button → ✓ Custom Settings menu

Choose what the camera targets for exposure adjustment when auto ISO sensitivity control is enabled during flash photography.

Option		Description
<u>•</u>	[Subject and background]	The camera takes both the main subject and background lighting into account when adjusting ISO sensitivity.
•	[Subject only]	ISO sensitivity is adjusted only to ensure that the main subject is correctly exposed.

e5: Auto bracketing (mode M)

MENU button **→ /** Custom Settings menu

The settings affected when bracketing is enabled in mode **M** and **[OFF]** is selected for **[ISO sensitivity settings]** > **[Auto ISO sensitivity control]** in the photo shooting menu are determined by the options selected for **[Auto bracketing]** > **[Auto bracketing set]** in the photo shooting menu and the option chosen for Custom Setting e5 **[Auto bracketing (mode M)]**.

Custom Setting e5 [Auto bracketing (mode M)]		Photo shooting menu [Auto bracketing] > [Auto bracketing set]	
Diaci	teting (mode M)]	AE & flash bracketing	AE bracketing
\$ +(!)	[Flash/speed]	Shutter speed and flash level	Shutter speed
‡ ⊕	[Flash/speed/ aperture]	Shutter speed, aperture, and flash level	Shutter speed and aperture
\$+ ₩	[Flash/aperture]	Aperture and flash level	Aperture
IS0	[Flash/ISO sensitivity]	ISO sensitivity and flash level	ISO sensitivity
\$	[Flash only]	Flash level	_

When [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu, the camera will vary flash level and/or ISO sensitivity as per [Flash/ISO sensitivity], regardless of the option selected for Custom Setting e5 [Auto bracketing (mode M)].

Flash bracketing

Flash bracketing is performed only with i-TTL or $\otimes \mathbf{A}$ (auto aperture) flash control.

e6: Bracketing order

MENU button **⇒ /** Custom Settings menu

Choose the order in which the shots in the bracketing program are taken.

Option		Description
N	[MTR > under > over]	The unmodified shot is taken first, followed by the shot with the lowest value, followed by the shot with the highest value.
-++	[Under > MTR > over]	Shooting proceeds in order from the lowest to the highest value.

 Custom Setting e6 [Bracketing order] has no effect on the order of the shots taken when [ADL bracketing] is selected for [Auto bracketing] > [Auto bracketing set] in the photo shooting menu.

e7: Flash burst priority

MENU button → ✓ Custom Settings menu

Choose whether optional flash units emit monitor pre-flashes before each shot during burst photography in high- or low-speed continuous release mode.

Burst shooting cannot be used in conjunction with the built-in flash.
 [Flash burst priority] is disabled.

	Option	Description
<u></u>	[Prioritize frame advance rate]	The flash unit emits a monitor pre-flash before the first shot in each sequence and locks output at the metered value for the remaining shots. The frame advance rate drops less than when [Prioritize precise flash control] is selected. An FV lock icon ([318]) will appear in the shooting display during burst photography.
44	[Prioritize precise flash control]	The flash unit emits a monitor pre-flash before each shot and adjusts flash output as required. The frame advance rate may drop in some circumstances.

Tip: [Continuous H (extended)] mode

Regardless of the option selected for Custom Setting e7 [Flash burst priority], the camera will prioritize the frame advance rate when [Continuous H (extended)] is selected for release mode.

f: Controls

f1: Customize 🔀 menu

MENU button **→ /** Custom Settings menu

Choose the items listed in the ${m t}$ menu displayed when the ${m t}$ button is pressed in photo mode.

- · Highlight a position in the ${m i}$ menu, press ${m \otimes}$, and select the desired item.
- · The following items can be assigned to the \boldsymbol{i} menu.

	Item	m		Item	
DX.	[Choose image area]	483	鼠	[Set Picture Control (HLG)]	490
TONE	[Tone mode]	484	RGB	[Color space]	490
QUAL	[lmage quality]	118	醋	[Active D-Lighting]	491
SIZE	[lmage size]	120	OR	[Long exposure NR]	492
Z	[Exposure	164	ISONR	[High ISO NR]	493
	compensation]		F	[Skin softening]	495
ISO	[ISO sensitivity settings]	174	■ /	[Portrait impression	496
WB	[White balance]	178	L≛!	balance]	490
四	[Set Picture Control]	489	E.	[Metering]	501
	Control		4	[Flash mode]	459


	Item	ш	Item		Щ
92	[Flash	464	및/ 心	[Release mode]	166
	compensation]	■ ■	[Shutter type]	611	
AF/MF	[Focus mode]	122		Custom controls	
[+]/ <u>*</u>	[AF-area mode/ subj. detection]	124, 129	= =	(shooting)]	632
		129	DLY	[Exposure delay	610
(4)	[Vibration reduction]	507		mode]	
BKT	[Auto bracketing]	508	(VIEW)	[View mode (photo Lv)]	614
•	[Multiple exposure]	523	⊡ ®	[Split-screen display zoom]	631
HDR	[HDR overlay]	531	PEAK	[Focus peaking]	601
6Ъ	[Interval timer shooting]	536		[Monitor/	704,
€ a	[Time-lapse video]	551	Φ	viewfinder brightness]	706
Filcus	[Focus shift shooting]	561	RED	[Warm display colors]	617
AF LOCK-ON	[Focus tracking with lock-on]	593	+	[Airplane mode]	741
SL SL	[Silent mode]	725	8	[Wireless remote connection (ML-L7)]	749
æ	[Pre-Release Capture options]	608	8	[Bluetooth remote cntrl connection]	750

Split-screen display zoom

If [Split-screen display zoom] is assigned to the \dot{t} menu, you can select [Split-screen display zoom] to simultaneously zoom in on two areas that are aligned horizontally but are in different parts of the frame (split-

screen display zoom). The locations of the areas are indicated by the two frames (

 ) in the navigation window in the bottom right corner of the display.



- Zooming in simultaneously on two widely-separated but horizontally-aligned areas of the frame makes it easier to level pictures of buildings or other wide objects.
- · Use the ₹ and ₹ (?) buttons to zoom in and out.
- Press ⑥ or ⑥ to scroll the selected area left or right. Use the 愈 button to switch between the two areas.
- Press 🖱 or 🖨 to scroll both areas up or down simultaneously.
- To focus on the subject at the center of the selected area, press the shutter-release button halfway.
- To exit split-screen display zoom, press the \boldsymbol{i} button.

f2: Custom controls (shooting)

MENU button **→ /** Custom Settings menu

Choose the operations performed in photo mode using lens rings and camera buttons and command dials.

· Choose the roles played by the controls below. Highlight the desired control and press $\ensuremath{\mathfrak{B}}$.



Option			
	[Fn1 button]		
F12	[Fn2 button]		
DISP	[DISP button]		
量	[AE-L/AF-L button]		
1	[Playback button]		
OK	[OK button]		
ą	[Release mode button]		
	[Video record button]		
ISO	[ISO sensitivity button]		
P	[Exposure compensation button]		
B	[Picture Control button]		
Ξ	[Command dials]		
L F n	[Lens Fn button]		
Lfn2	[Lens Fn2 button]		
ιÔ	[Lens Fn ring (counterclockwise)]		
гÔ	[Lens Fn ring (clockwise)]		

Option			
W-SET	[Lens memory set button]		
01	[Lens control ring]		

- Settings can be reset on the screen for selecting the control to be assigned. Highlight the control you want to reset, press the first button, and then highlight [Yes] on the confirmation screen and press ® to reset the highlighted control to the default settings. Highlight any control and press the first button for about 3 seconds; then highlight [Yes] on the confirmation screen and press ® to reset all controls to the default settings.
- The roles that can be assigned are listed below. The roles available vary with the control.

Role		Description	
RESET	[Select center focus point]	Pressing the control selects the center focus point.	
£FOCUS	[Save focus position]	Holding the control saves the current focus position. - The saved position can be restored using a control to which [Recall focus position] has been assigned ("memory recall"). - When saving the focus position, you can choose whether it can be recalled using any of the controls to which [Recall focus position] is assigned ([Save to all]) or using only a specific control ([Save individually]). - For more information, see "Saving and recalling focus positions" (□648).	

	Role	Description
≯ FOCUS	[Recall focus position]	Pressing the control recalls a focus position saved using a control to which [Save focus position] has been assigned For more information, see "Saving and recalling focus positions" (□648).
4⊚ ▶	[Switch eyes]	Press the control to choose the eye used for focus when the camera detects the eyes of a human or animal portrait subject.
19 2	[Cycle AF-area mode]	Press the control to cycle the AF-area mode. - To choose the AF-area modes to be cycled, press ③ when [Cycle AF-area mode] is highlighted. - Highlight options and press ❸ or ⑥ to select (☑) or deselect (□). Options marked with a check ☑ can be switched when the control is pressed.
[11]	[AF-area mode]	Holding the control selects a preset AF-area mode. The AF-area mode previously in effect is restored when the control is released. - To choose the AF-area mode, press when [AF-area mode] is highlighted.
[1] [4]	[AF-area mode + AF-ON]	Holding the control selects a preset AF-area mode and initiates autofocus. The AF-area mode previously in effect is restored when the control is released. - To choose the AF-area mode, press when [AF-area mode + AF-ON] is highlighted.
AF-ON	[AF-ON]	Pressing the control initiates autofocus.

	Role	Description
Æ	[AF lock only]	Focus locks while the control is pressed.
ñ.	[AE lock (hold)]	Exposure locks when the control is pressed. Exposure lock does not end when the shutter is released. Exposure remains locked until the control is pressed a second time or the standby timer expires.
æ⊛	[AWB lock (hold)]	If [Auto] or [Natural light auto] is selected for white balance, white balance will lock when the control is pressed (white-balance lock). White-balance lock does not end when the shutter is released. The lock will however be released when the control is pressed a second time or the standby timer expires.
å⊛	[AE/AWB lock (hold)]	Exposure locks when the control is pressed. White balance will also lock provided [Auto] or [Natural light auto] is selected for white balance. Exposure and white-balance lock do not end when the shutter is released. The lock will however be released when the control is pressed a second time or the standby timer expires.
Ãe⊗	[AE lock (Reset on release)]	Exposure locks when the control is pressed. Exposure remains locked until the control is pressed a second time, the shutter is released, or the standby timer expires.
Æ	[AE lock only]	Exposure locks while the control is pressed.
A	[AE/AF lock]	Focus and exposure lock while the control is pressed.

	Role	Description
3 L	[FV lock]	Press the control to lock flash value for the built-in flash or optional flash units; press again to cancel FV lock.
(\$)/\$	[‡Disable/ enable]	If the flash is currently enabled, it will be disabled while the control is pressed. If the flash is currently off, front-curtain sync will be selected while the control is pressed.
rş.	[Set Picture Control]	Pressing the control jumps to [Set Picture Control] or [Set Picture Control (HLG)] in the <i>i</i> menu. If you selected [SDR] for [Tone mode] in the photo shooting menu, [Set Picture Control] is displayed; if you selected [HLG], [Set Picture Control (HLG)] is displayed.
FLICKER	[Photo flicker reduction]	Press the control to select [ON] for [Photo flicker reduction] in the photo shooting menu. Press again to select [OFF].
®	[Preview]	Keep the control pressed to preview photo color, exposure, and depth of field.
Ø	[Matrix metering]	Holding the control selects matrix metering. The setting previously in effect is restored when the control is released.
⊗	[Center- weighted metering]	Holding the control selects center-weighted metering. The setting previously in effect is restored when the control is released.
•	[Spot metering]	Holding the control selects spot metering. The setting previously in effect is restored when the control is released.

Role		Description
•*	[Highlight- weighted metering]	Holding the control selects highlight- weighted metering. The setting previously in effect is restored when the control is released.
⊞ FLICKER	[High-frequency flicker reduction]	Pressing the control allows shutter speed to be fine-tuned in smaller increments. Press the control a second time to restore normal shutter-speed selection.
BKT⊡ı	[Bracketing burst]	- If the control is pressed when an option other than [WB bracketing] is selected for [Auto bracketing] > [Auto bracketing set] in the photo shooting menu in continuous release mode, the camera will take all the shots in the current bracketing program and repeat the bracketing burst while the shutter-release button is pressed. In single-frame release mode, shooting will end after the first bracketing burst If [WB bracketing] is selected for [Auto bracketing set], the camera will take pictures while the shutter-release button is pressed and apply white balance bracketing to each shot.

	Role	Description	
Ω×ã	[Sync. release selection]	When [Synchronized release] is selected for [Connect to other cameras] in the network menu, the chosen control can be used to toggle between remote release and master or synchronized release. The options available depend on the setting chosen for Custom Setting d4 [Sync. release mode options]. The following options are available when [Sync] is selected for [Sync. release mode options]: - [Master release only] (△→※): Keep the control pressed to take pictures with the master camera only. - [Remote release only] (※→※): Keep the control pressed to take pictures only with the remote cameras. The following options are available when [No sync] is selected for [Sync. release mode options]: - [Synchronized release] (△→※): Keep the control pressed to synchronize the releases on the master and remote cameras.	
		- [Remote release only] (☜+3): Keep the control pressed to take pictures only with	
		the remote cameras.	

Role		Description
g _o ≠	[Override other cameras]	Press the control to remotely take over the master camera role from another camera functioning as a master camera commanding remote cameras during synchronized release. - This option takes effect when multiple cameras in the same group have been designated as masters using [Connect to other cameras] in the network menu. - It cannot be used to promote cameras functioning in the remote role to the role of master camera.
+(RAW)	[+ RAW]	- If a JPEG or HEIF option is currently selected for image quality, "RAW" will appear in the shooting display and an NEF (RAW) copy will be recorded with the next picture taken after the control is pressed. The original image quality setting will be restored when you remove your finger from the shutter-release button or press the control again, canceling [+ RAW] NEF (RAW) copies are recorded at the settings currently selected for [RAW recording] in the photo shooting menu.
SL	[Silent mode]	Press the control to enable silent mode. Press again to disable.

Role		Description
DISP	[Cycle live view info display]	Press the control to cycle the shooting display. The type and content of the displays available can be chosen using Custom Settings d19 [Custom monitor shooting display] and d20 [Custom viewfinder shooting display].
≐OFF	[Live view info display off]	Press the control to hide the icons and shooting information on the display. Icons and shooting information can be displayed by pressing the button again.
=	[Framing grid]	Press the control to display a framing grid. To hide the grid, press the control again. The display type can be selected using Custom Setting d16 [Grid type].
Q	[Zoom on/off]	Press the control to zoom the display in on the area around the current focus point (the zoom ratio is selected in advance). Press again to cancel zoom. - To choose the zoom ratio, highlight [Zoom on/off] and press .
⊞	[Virtual horizon]	Press the control to enable the virtual horizon display. Press again to hide the display. The display type can be selected using Custom Setting d17 [Virtual horizon type].
STAR	[Starlight view (photo Lv)]	Press the control to toggle starlight view on. Press again to end starlight view.

	Role	Description
(VIEW)	[View mode (photo Lv)]	Press the control to switch the option selected for Custom Setting d10 [View mode (photo Lv)] from [Show effects of settings] to [Adjust for ease of viewing] or vice versa.
PEAK	[Focus peaking display]	Press the control once to enable focus peaking when MF is selected for focus mode. Press again to end focus peaking.
₽ Fn	[Enable/disable touch Fn]	Press the control to enable or disable touch Fn.
₹	[MY MENU]	Press the control to display "MY MENU".
Ĺ≙	[Access top item in MY MENU]	Press the control to jump to the top item in "MY MENU". Select this option for quick access to a frequently-used menu item.
Þ	[Playback]	Press the control to start playback.
▶ ▼	[Filtered playback]	Press the control to view only pictures that meet the criteria selected for [Filtered playback criteria] in the playback menu.
₽ ₹⁄	[Filtered playback (select criteria)]	Press the control to jump to [Filtered playback criteria] in the playback menu.
PZŒ	[Power zoom +]	When a power zoom lens is attached, the camera zooms in while the control is pressed. This option is enabled automatically when [Power zoom –] is selected for [Fn2 button].

Role		Description
PZ₩	[Power zoom –]	When a power zoom lens is attached, the camera zooms out while the control is pressed. This option is enabled automatically when [Power zoom +] is selected for [Fn1 button].
<u> </u>	[Choose image area]	Press the control and rotate a command dial to choose the image area.
QUAL	[Image quality/ size]	Press the control and rotate the main command dial to choose an image quality option and the sub-command dial to select image size.
WB	[White balance]	To choose a white balance option, hold the control and rotate the main command dial. Some options offer sub-options that can be selected by rotating the sub-command dial.
醋	[Active D- Lighting]	Press the control and rotate a command dial to adjust Active D-Lighting.
Ħ	[Skin softening]	Press the control and rotate a command dial to adjust skin softening.
(2)	[Portrait impression balance]	Press the control and rotate a command dial to choose a portrait impression balance mode.
eq.	[Metering]	Press the control and rotate a command dial to choose a metering option.
\$/BZ	[Flash mode/ compensation]	Press the control and rotate the main command dial to choose a flash mode and the sub-command dial to adjust flash output.

Role		Description
旦/ じ	[Release mode]	Hold the control and rotate the main command dial to choose a release mode. Options for the selected mode, if any, can be chosen by holding the control and rotating the sub-command dial.
AF/[+]	[Focus mode/AF- area mode]	Hold the control and rotate the main command dial to choose the focus mode, the sub-command dial to choose the AFarea mode.
ВКТ	[Auto bracketing]	Press the control and rotate the main command dial to choose the number of shots and the sub-command dial to select the bracketing increment or Active D-Lighting amount.
•	[Multiple exposure]	Press the control and rotate the main command dial to choose the mode and the sub-command dial to choose the number of shots.
HDR	[HDR overlay]	Press the control and rotate the main command dial to choose the mode and the sub-command dial to adjust HDR strength.
DLY	[Exposure delay mode]	Press the control and rotate a command dial to select an exposure delay mode.

Role		Description
LOCK	[Control lock]	- Press the control and rotate the main command dial to lock shutter speed (modes S and M). To lock aperture (modes A and M), press the control and rotate the sub-command dial. - To lock focus-point selection, hold the control while using the multi selector to choose the focus point.
⊕⊛	[1 step spd/ aperture]	Make adjustments to shutter speed and aperture in increments of 1 EV, regardless of the option selected for Custom Setting b2 [EV steps for exposure cntrl]. - In modes S and M, shutter speed can be adjusted in increments of 1 EV by holding the control and rotating the main command dial. - In modes A and M, aperture can be adjusted in increments of 1 EV by holding the control and rotating the sub-command dial.
Non-CPU	[Choose non- CPU lens number]	Press the control and rotate a command dial to choose a lens number saved using the [Non-CPU lens data] item in the setup menu.

	Role	Description
M/A	[Focus (M/A)]	Autofocus can be over-ridden by rotating the lens control ring (autofocus with manual override). The control ring can be used for manual focus while the shutter-release button is pressed halfway. To refocus using autofocus, lift your finger from the shutter-release button and then press it halfway again.
∯	[Aperture]	Rotate the lens control ring to adjust aperture.
Z	[Exposure compensation]	Adjust exposure compensation either by holding the control and rotating a command dial or by rotating the lens control ring.
ISO	[ISO sensitivity]	Adjust ISO sensitivity either by holding the control and rotating a command dial or by rotating the lens control ring.
0	[Aperture (open)]	Rotate the lens Fn ring counterclockwise to widen the lens aperture. This option is enabled automatically when [Aperture (close)] is selected for [Lens Fn ring (clockwise)].
\$	[Aperture (close)]	Rotate the lens Fn ring clockwise to narrow the lens aperture. This option is enabled automatically when [Aperture (open)] is selected for [Lens Fn ring (counterclockwise)].

	Role	Description
₹	[Exposure compensation +]	Rotate the lens Fn ring clockwise for increased exposure compensation. This option is enabled automatically when [Exposure compensation -] is selected for [Lens Fn ring (counterclockwise)].
4	[Exposure compensation -]	Rotate the lens Fn ring counterclockwise to reduce exposure compensation. This option is enabled automatically when [Exposure compensation +] is selected for [Lens Fn ring (clockwise)].
<u>150</u> +	[ISO sensitivity (increase)]	Rotate the lens Fn ring clockwise to increase ISO sensitivity. This option is enabled automatically when [ISO sensitivity (decrease)] is selected for [Lens Fn ring (counterclockwise)].
<u>150</u> —	[ISO sensitivity (decrease)]	Rotate the lens Fn ring counterclockwise to decrease ISO sensitivity. This option is enabled automatically when [ISO sensitivity (increase)] is selected for [Lens Fn ring (clockwise)].
[None]		The control has no effect.

Command dials

The following roles can be assigned to the command dials. To view options, highlight items and press \odot .

Role Description	
[Exposure setting]	Reverse the roles of the main and sub-command dials in selected modes. Press � or � to highlight a mode and � or � to switch roles.

Role	Description
[Focus/AF-area mode selection]	Switch the roles played by rotating the main and sub- command dials while holding a control to which [Focus mode/AF-area mode] has been assigned using Custom Setting f2 [Custom controls (shooting)].
[Sub- command dial zoom role]	Choose the role played by the sub-command dial in the zoom display. • Choose [Exposure setting] to change the role played by the sub-command dial in each mode. • Choose [Zoom] to use the sub-command dial to zoom in or out.

Saving and recalling focus positions

You can save the current focus position by pressing and holding a custom control to which you have assigned [Save focus position]. The saved focus position can be instantly restored by pressing a custom control assigned [Recall focus position] ("memory recall"). You may find this useful if you frequently return to subjects at a fixed focus distance.

- [Recall focus position] can be assigned to multiple controls. Focus positions saved by selecting [Save to all] for [Save focus position] can be recalled using any of the assigned controls. Those saved by selecting [Save individually] for [Save focus position] can instead be recalled only via a specific control.
- · Focus positions can be saved in any focus mode.
- · The stored focus position is reset when the lens is detached.

Cautions: Saving and recalling focus positions

- · Focus positions cannot be saved while shooting information is displayed.
- Changes in ambient temperature may result in focus being recalled to a position different from that at which it was saved.
- Changes to zoom after a focus position is saved tend to alter the position selected when the value is recalled.

II [Save to all]

1 Assign [Recall focus position] to a control.



Repeat this step for each of the controls you intend to use for memory recall.

2 Select another control in the custom control list and, when prompted to choose a role, highlight [Save focus position] and press ⊕.

 


Save options will be displayed.

3 Highlight [Save to all] and press ⊗.




4 Focus on the desired subject in the shooting display and press and hold the control to which [Save focus position] is assigned.



A £FRUS icon will appear in the shooting display if the operation is successful

 5 Press any of the controls to which [Recall focus position] was assigned in Step 1.



- The saved focus position will be restored.
- Although [Recall focus position] can be assigned to multiple controls, the same focus position will be restored regardless of the control used.
- Holding a control to which [Recall focus position] is assigned
 activates manual focus (MF), and the camera will not refocus if the
 shutter-release button is pressed halfway while the control is
 pressed.

■ [Save individually]

1 Assign [Recall focus position] to multiple controls.



2 Select another control in the custom control list and, when prompted to choose a role, highlight [Save focus position] and press ⊕.



Save options will be displayed.

3 Highlight [Save individually] and press ®.

 


4 Focus on the desired subject in the shooting display and press and hold the control to which [Save focus position] is assigned.




A **£**FOCUS icon will flash in the shooting display.

Press the button you intend to use for recall of the focus position saved in Step 4.



- Of the controls to which [**Recall focus position**] was assigned in Step 1, press the control you intend to use for recall of the focus position saved in Step 4.
- A message will appear in the shooting display if the operation is successful.
- Repeat Steps 4 to 5 to save additional focus positions to the other controls to which [Recall focus position] is assigned.

 6 Press the control for the desired focus position.



- The focus position saved to the control in question will be restored.
- Holding a control to which [Recall focus position] is assigned
 activates manual focus (MF), and the camera will not refocus if the
 shutter-release button is pressed halfway while the control is
 pressed.

f3: Custom controls (playback)

MENU button **→ /** Custom Settings menu

Choose the operations performed during playback using camera buttons and command dials.

• Choose the roles played by the controls below. Highlight the desired control and press ®.



Option	
Fil	[Fn1 button]
Fn2	[Fn2 button]
DISP	[DISP button]
盘	[AE-L/AF-L button]
=	[Release mode button]
OK	[OK button]
	[Playback button]
2	[Video record button]
ISO	[ISO sensitivity button]
	[Exposure compensation button]
6	[Picture Control button]
=	[Sub-command dial]
Z	[Main command dial]

	Option
LFn2	[Lens Fn2 button]
.Fi	[Lens Fn button]

- Settings can be reset on the screen for selecting the control to be assigned. Highlight the control you want to reset, press the fi button, and then highlight [Yes] on the confirmation screen and press ® to reset the highlighted control to the default settings. Highlight any control and press the fi button for about 3 seconds; then highlight [Yes] on the confirmation screen and press ® to reset all controls to the default settings.
- The roles that can be assigned to these controls are as follows: The roles available vary with the control.

Role		Description
Оп	[Protect]	Press the control to protect the current picture.
Ó	[Delete]	Press the control; a confirmation dialog will be displayed. Press the control again to delete the image and return to playback.
Q	[Zoom on/off]	Press the control to zoom the display in on the area around the current focus point (the zoom ratio is selected in advance). Press again to cancel zoom. - To choose the zoom ratio, highlight [Zoom on/off] and press . - Zoom is available in both full-frame and thumbnail playback.
₽¥	[Filtered playback]	Press the control to view only pictures that meet the criteria selected for [Filtered playback criteria] in the playback menu.

Role		Description
₽ ₹⁄	[Filtered playback (select criteria)]	Press the control to jump to [Filtered playback criteria] in the playback menu.
٩	[Start series playback]	Pressing the control when a picture from a burst is displayed full frame starts automated playback (\$\subseteq\$66). The pictures will play back while the control is pressed, at a speed higher than when the multi selector is used. Playback stops when the control is released or the last picture in the burst is displayed.
•	[Voice memo]	Use the control for voice memo operations.
⊷PC	[Select for upload to computer]	Press the control to upload the current picture to a computer or FTP server with which the
₩FTP	[Select for upload (FTP)]	
8	[Thumbnail on/ off]	Press the control to toggle between full-frame and 4-, 9-, or 72-frame thumbnail playback.

Role		Description
•	[View histograms]	A histogram is displayed while the control is pressed. The histogram display is available in both full-frame and thumbnail playback.
	[Choose folder]	Press the control to display the [Choose folder] dialog, where you can then choose a folder for playback.
DISP	[Cycle info display]	Press the control to cycle the photo information display during full-frame playback. The pages available can be chosen using [Playback display options] in the playback menu.
D	[Resume shooting]	Press the control to end playback and return to shooting mode.
*	[Rating]	To rate the current picture in playback mode, press the control and rotate the main command dial. - To display rating options, highlight [Rating] and press ③. If an option other than [None] is selected, the chosen rating can be assigned to pictures simply by pressing the selected control. Pressing the control again selects a "no star" rating.
RAWI+	[RAW processing (current picture)]	
RAW 3	[RAW processing (multiple pictures)]	Pressing the control jumps to the option in $[{f Retouch}]$ in the $m{i}$ menu.
×	[Trim]	

Role		Description	
	[Resize (current picture)]		
	[Resize (multiple pictures)]		
E	[D-Lighting]		
/ =	[Straighten]		
••	[Distortion control]	Pressing the control jumps to the option in	
	[Perspective control]	[Retouch] in the $m{i}$ menu.	
	[Monochrome]		
₽ _{A00}	[Overlay (add)]		
₽ light	[Lighten]		
⊟ iµrk	[Darken]		
₽ _{MOT}	[Motion blend]		
	[None]	The control has no effect.	

Command dials

The following roles can be assigned to the command dials. To view options, highlight items and press \mathfrak{D} .

■ Frame advance

Choose the number of frames that can be skipped by rotating the command dials during full-frame playback.

Option		Description
[1 frame]		Skip forward or back 1 frame at a time.
[10 frames]		Skip forward or back 10 frames at a time.
[50 frames]		Skip forward or back 50 frames at a time.
*	[Rating]	Skip to the next or previous picture with the selected rating.
0-п	[Protect]	Skip to the next or previous protected picture.
۵	[Photos only]	Skip to the next or previous photo.
嘌	[Videos only]	Skip to the next or previous video.
밀	[Skip to first shot in series]	Select this option to skip all but the first shot in each burst displayed when scrolling through pictures with the command dials. Pictures that are not part of a burst will not be skipped.
	[Folder]	Rotate the dial to select a folder.
	[Page]	View the next or previous page of thumbnails.
[Uploaded to FTP]		Skip to the next or previous picture uploaded to FTP.
[Uploaded to computer]		Skip to the next or previous picture uploaded to a computer.

■ Video playback

Choose the roles played by the command dials during video playback.

Option	Description
[1 frame]	Advance or rewind a frame at a time.
[5 frames]	Advance or rewind 5 frames at a time.
[10 frames]	Advance or rewind 10 frames at a time.

Option	Description
[2 s]	Skip forward or back 2 s at a time.
[5 s]	Skip forward or back 5 s at a time.
[10 s]	Skip forward or back 10 s at a time.
[First/last frame]	Skip to the first or last frame.
[Playback speed]	Change the video playback speed. Select original speed, 1/2× speed, or 1/4× speed. The changed playback speed is only applied to the currently playing video.

■ Frame advance zoom position

Choose how the camera centers the display when either the main or sub-command dial is rotated to scroll through pictures during playback zoom.

Option	Description
[Keep current zoom position]	Center the display on the current zoom location.
[Prefer focus point]	Center the display on the focus point active when the photograph was taken.
[Prefer focus point (face priority)]	Center the display on the focus point active when the photograph was taken. However, this will center the display on a face when a person's face was detected.

■ Playback zoom face selection

Setting this option to **[ON]** allows you to cycle through the faces of people in the image by rotating the sub-command dial when the faces of multiple people were detected during playback zoom.

f4: Touch Fn

MENU button **→ /** Custom Settings menu

Use monitor touch controls to adjust settings while framing pictures in the viewfinder.

• Touch Fn is available only when the monitor is in storage position with the screen facing outward.



Enable/disable touch Fn

Select [ON] to enable touch Fn.

Assign touch Fn

The roles that can be assigned to touch Fn are listed below.

Role	Description
[Move focus point]	The focus point can be positioned by sliding a finger over the touch Fn area. You can set the operation for when you give two quick taps during focus point selection. Setting [Select center focus point] selects the center focus point. Setting [Set absolute focus position] selects the focus point position that was tapped.
[Switch eyes]	When the camera detects the eyes of a human or animal portrait subject, you can choose the eye used for focus by tapping the touch Fn area in the monitor.

Role	Description
[Framing grid]	Tapping the touch Fn area in the monitor displays a framing grid in the viewfinder. Tap again to hide the grid. The grid type can be selected using Custom Setting d16 or g14 [Grid type].
[Zoom on/ off]	Tap the touch Fn area in the monitor to zoom the display in the viewfinder in on the area around the current focus point. Tap again to cancel zoom. • To choose the zoom ratio, highlight [Zoom on/off] and press ③.
[Virtual horizon]	Tap the touch Fn area in the monitor to enable the virtual horizon display in the viewfinder. Tap again to hide the display. The display type can be selected using Custom Setting d17 [Virtual horizon type].

Touch Fn area

Choose the area of the monitor used for touch Fn. The areas for use when the camera is rotated to take pictures in "tall" and "wide" orientations can be selected separately.

f5: Control lock MENU button → Custom Settings menu

Lock exposure settings or focus-point selection.

Option	Description	
[Shutter speed lock]	Select [ON] to lock shutter speed at its current value in modes S and M. A I icon appears in the shooting display when shutter-speed lock is in effect.	

Option	Description	
[Aperture lock]	Select [ON] to lock aperture at its current value in modes A and M. A ■ icon appears in the shooting display when aperture lock is in effect.	
[Focus-point lock]	Select [ON] to lock focus-point selection on the currently-selected focus point. • Focus point lock does not apply when [Auto-area AF] is selected for AF-area mode. • When [3D-tracking] is selected, the focus point will track subject motion while the shutter-release button is pressed halfway.	

f6: Reverse dial rotation

MENU button **→ /** Custom Settings menu

Reverse the direction of rotation of the command dials for selected operations.

- Highlight [Exposure compensation] or [Shutter speed/aperture] and press
 ⊕ to select (
 □) or deselect (
 □).
- · Press MENU to save changes and exit.

f7: Release button to use dial

MENU button → / Custom Settings menu

Selecting **[ON]** allows adjustments that are normally made by holding a button and rotating a command dial to be made by rotating the command dial after the button is released. This ends when the button is pressed again, the shutter-release button is pressed halfway, or the standby timer expires.

• [Release button to use dial] applies to the ☑, ISO, 및 (ఄ), Fn1, and Fn2 buttons.

 [Release button to use dial] also applies to controls to which certain roles have been assigned using Custom Setting f2 [Custom controls (shooting)] or g2 [Custom controls].

f8: Reverse indicators

MENU button → ✓ Custom Settings menu

Choose whether certain horizontal indicators in the shooting and other displays are shown with negative values on the left and positive values on the right, or with positive values on the left and negative values on the right.

Option		Description
+0-	+ ₄հումիումե -	The indicator is displayed with positive values on the left and negative values on the right.
-0+	- - liiiii¦iiiiib‡	The indicator is displayed with negative values on the left and positive values on the right.

f9: Reverse ring for focus

MENU button **→ /** Custom Settings menu

Select **[ON]** to reverse the direction of rotation for the focus or control rings on Z mount lenses during manual focus.

- · This option does not support:
 - certain Z mount lenses that can only be focused manually, or
 - F mount lenses connected via an FTZ II/FTZ mount adapter.

f10: Focus ring rotation range

MENU button **→ /** Custom Settings menu

Choose how far the focus or control rings on Z mount lenses must be rotated to go all the way from the minimum focus distance to infinity.

Option	Description	
[Non- linear]	rotated rapidly and by a small amount when the ring is rotated	
[90°]– [720°]	Choose how far the ring must be rotated to go all the way from the minimum focus distance to infinity. To take focus from the minimum distance to infinity when, for example, [90°] is selected, the ring need only be rotated 90°. Larger values permit finer adjustments.	
[Max.]	Taking focus from the minimum focus distance to infinity requires rotating the ring the maximum distance permitted at current lens settings.	

If the lens does not support rotation range selection, [Focus ring rotation range] will be fixed at [Non-linear].

f11: Control ring response

MENU button **⇒ /** Custom Settings menu

Choose how responsive the lens control ring is when assigned [Aperture], [Power aperture], [Exposure compensation], [ISO sensitivity], or [Hi-Res Zoom] using Custom Setting f2 [Custom controls (shooting)] or q2 [Custom controls].

f12: Switch focus/control ring roles

MENU button → ✓ Custom Settings menu

If **[ON]** is selected, the focus ring will perform the role currently assigned to the control ring using Custom Setting f2 **[Custom controls (shooting)**] or q2 **[Custom controls**].

- When [ON] is selected, the control ring functions solely in the [Focus (M/A)] role.
- · This option applies only to compatible lenses.

f13: Power zoom (PZ) button options

MENU button **→ /** Custom Settings menu

Choose whether the \mathbb{Q} and \mathbb{Q} (?) buttons can be used for power zoom during still photography when a power zoom lens is attached.

Option	Description	
[Use ☑/☑ Selecting [ON] allows the ♥ and ♥ (?) buttons to used for power zoom.		
[Power zoom Choose the speed at which power zoom lenses can zoomed in and out using the buttons.		

f14: Full-frame playback flicks

MENU button → ✓ Custom Settings menu

Choose the role assigned to the flick up and down or flick left and right gestures during full-frame playback.

Flick up/Flick down

Choose the operation performed by flicking up or down.

Option		Description	
*	[Rating]	Assign the current picture a pre-selected rating. The rating can be chosen by pressing ③.	
⊷PC	[Select for upload to computer]	Mark the current picture for priority upload to a computer.	
≁FTP	[Select for upload (FTP)]	Mark the current picture for priority upload to an FTP server.	
Оп	[Protect]	Protect the current picture.	
Q.	[Voice memo]	Flick to start recording a voice memo. If a memo already exists for the current picture, flicking instead begins playback of the existing memo. Press ® to end recording or playback.	
[None]		Flicking up or down has no effect.	

Pictures selected by flicking up or down when [Rating], [Select for upload to computer], [Select for upload (FTP)], or [Protect] is selected are indicated by icons (□247). The marking can be removed by flicking again in the same direction.

Flick advance direction

Choose the gesture used for frame advance.

Option		Description
←	[Left←Right]	Flick left to display the next picture.
→	[Left→Right]	Flick right to view the next picture.

g1: Customize 🖪 menu

MENU button **→ /** Custom Settings menu

Choose the items listed in the \boldsymbol{i} menu displayed when the \boldsymbol{i} button is pressed in video mode.

- · Highlight a position in the i menu, press i, and select the desired item.
- The following items can be assigned to the *i* menu.

The following items can be assigned		
	Item 🕮	
塛QUAL	[Frame size and rate/Video quality]	224
Z	[Exposure compensation]	164
IS0	[ISO sensitivity settings]	174
WB	[White balance]	178
r.	[Set Picture Control]	575
HLGØ	[HLG quality]	575
醋	[Active D-Lighting]	576
Ħ	[Skin softening]	578
2 /	[Portrait impression balance]	578
2 0.	[Metering]	580

ltem 🕮		Ω.
AF/MF	[Focus mode]	122
[+]/ ₂ ×	[AF-area mode/ subj. detection]	124, 129
å e	[Product review mode]	237
(4)	[Vibration reduction]	582
(18)	[Electronic VR]	582
∮ ≣	[Microphone sensitivity]	582
ATT	[Attenuator]	584
M	[Frequency response]	584
4	[Wind noise reduction]	584

	Item	ш
Ω	[Headphone volume]	585
[m]	[Hi-Res Zoom]	235
SL	[Silent mode]	725
₽ ≡	[Custom controls]	670
PEAK	[Focus peaking]	601
	[Zebra pattern]	687
Ö.	[Monitor/ viewfinder brightness]	704, 706
\$	[Multi-selector power aperture]	669

	ltem 🕮	
Z _o	[Multi selector exposure comp.]	669
県info	[View video info]	670
(RED)	[Warm display colors]	617
+	[Airplane mode]	741
8	[Wireless remote connection (ML- L7)]	749
8	[Bluetooth remote cntrl connection]	750
৩	[Video self-timer]	238

Multi-selector power aperture

Choose whether the multi selector can be used for power aperture. When [**Enable**] is selected, holding widens the aperture. Holding narrows the aperture.

Multi selector exposure comp.

Choose whether the multi selector can be used to adjust exposure compensation. Selecting [**Enable**] allows exposure compensation to be set by pressing $\textcircled{\bullet}$ or $\textcircled{\bullet}$.

View video info

View video recording settings. This option can be used to view but not to change the option selected.



g2: Custom controls

MENU button **→ /** Custom Settings menu

Choose the operations performed in video mode using lens rings and camera buttons and command dials.

 Choose the roles played by the controls below. Highlight the desired control and press ®.



Option	
	[Fn1 button]
F12	[Fn2 button]
DISP	[DISP button]
a	[AE-L/AF-L button]
D	[Playback button]
OK	[OK button]

Option		
밀	[Release mode button]	
2	[Video record button]	
150	[ISO sensitivity button]	
Q	[Exposure compensation button]	
B	[Picture Control button]	
	[Command dials]	
•	[Shutter-release button]	
LFn2	[Lens Fn2 button]	
•	[Lens Fn button]	
බි	[Lens Fn ring (clockwise)]	
έÔ	[Lens Fn ring (counterclockwise)]	
MSET	[Lens memory set button]	
01	[Lens control ring]	

- Settings can be reset on the screen for selecting the control to be assigned. Highlight the control you want to reset, press the fi button, and then highlight [Yes] on the confirmation screen and press ® to reset the highlighted control to the default settings. Highlight any control and press the fi button for about 3 seconds; then highlight [Yes] on the confirmation screen and press ® to reset all controls to the default settings.
- The roles that can be assigned are listed below. The roles available vary with the control.

Role		Description
RESET	[Select center	Pressing the control selects the center focus
KEZEI	focus point]	point.

Role		Description
≟FOCUS	[Save focus position]	Holding the control saves the current focus position. - The saved position can be restored using a control to which [Recall focus position] has been assigned ("memory recall"). - When saving the focus position, you can choose whether it can be recalled using any of the controls to which [Recall focus position] is assigned ([Save to all]) or using only a specific control ([Save individually]). - For more information, see "Saving and recalling focus positions" (□648).
₹FOCUS	[Recall focus position]	Pressing the control recalls a focus position saved using a control to which [Save focus position] has been assigned For more information, see "Saving and recalling focus positions" (CD648).
40+	[Switch eyes]	Press the control to choose the eye used for focus when the camera detects the eyes of a human or animal portrait subject.
(P)s	[Cycle AF-area mode]	Press the control to cycle the AF-area mode. - To choose the AF-area modes to be cycled, press ③ when [Cycle AF-area mode] is highlighted. - Highlight options and press ❸ or ⑤ to select (☑) or deselect (□). Options marked with a check ☑ can be switched when the control is pressed.

	Role	Description
AF-ON	[AF-ON]	Pressing the control initiates autofocus. - When AF-C is selected for focus mode, the camera will focus at the speed selected for Custom Setting g5 [AF speed].
AF-61	[Fast AF-ON]	Pressing the control initiates autofocus. - When AF-C is selected for focus mode, the camera will focus at maximum speed, regardless of the option chosen for Custom Setting g5 [AF speed].
Æ	[AF lock only]	Focus locks while the control is pressed.
Æ®	[AE lock (hold)]	Exposure locks when the control is pressed. Exposure lock does not end when recording begins. Exposure remains locked until the control is pressed a second time or the standby timer expires.
m ⊕	[AWB lock (hold)]	If [Auto] or [Natural light auto] is selected for white balance, white balance will lock when the control is pressed (white-balance lock). White-balance lock does not end when recording begins. The lock will however be released when the control is pressed a second time or the standby timer expires.

Role		Description
å⊕	[AE/AWB lock (hold)]	Exposure locks when the control is pressed. White balance will also lock provided [Auto] or [Natural light auto] is selected for white balance. Exposure and white-balance lock do not end when recording begins. The lock will however be released when the control is pressed a second time or the standby timer expires.
Æ	[AE lock only]	Exposure locks while the control is pressed.
Æ	[AE/AF lock]	Focus and exposure lock while the control is pressed.
EQ.	[Set Picture Control]	Press the control to jump to [Set Picture Control] in the $m{i}$ menu.
(ASSIST)	[View assist]	Press the control to select [ON] for Custom Setting g11 [View assist]. Press again to select [OFF].
⊞ FLICKER	[High-frequency flicker reduction]	Pressing the control allows shutter speed to be fine-tuned in smaller increments. Press the control a second time to restore normal shutter-speed selection.
SL	[Silent mode]	Press the control to enable silent mode. Press again to disable.
DISP	[Cycle live view info display]	Press the control to cycle the shooting display. The type and content of the displays available can be chosen using Custom Settings g17 [Custom monitor shooting display] and g18 [Custom viewfinder shooting display].

Role		Description
₽Œ	[Live view info display off]	Press the control to hide the icons and shooting information on the display. Icons and shooting information can be displayed by pressing the button again.
=	[Framing grid]	Press the control to display a framing grid. To hide the grid, press the control again. The display type can be selected using Custom Setting g14 [Grid type].
લ	[Zoom on/off]	Press the control to zoom the display in on the area around the current focus point (the zoom ratio is selected in advance). Press again to cancel zoom. - To choose the zoom ratio, highlight [Zoom on/off] and press .
⊞	[Virtual horizon]	Press the control to enable the virtual horizon display. Press again to hide the display. The display type can be selected using Custom Setting d17 [Virtual horizon type].
PEAK	[Focus peaking display]	Press the control once to enable focus peaking when MF is selected for focus mode. Press again to end focus peaking.
₽ Fn	[Enable/disable touch Fn]	Press the control to enable or disable touch Fn.
₽	[MY MENU]	Press the control to display "MY MENU".
Ľ₽	[Access top item in MY MENU]	Press the control to jump to the top item in "MY MENU". Select this option for quick access to a frequently-used menu item.
Þ	[Playback]	Press the control to start playback.

Role		Description
▶₹	[Filtered playback]	Press the control to view only pictures that meet the criteria selected for [Filtered playback criteria] in the playback menu.
₽ ₹⁄	[Filtered playback (select criteria)]	Press the control to jump to [Filtered playback criteria] in the playback menu.
0	[Power aperture (open)]	- Aperture widens while the button is pressed. This option is enabled automatically when [Power aperture (close)] is selected for [Fn2 button] Rotate the lens Fn ring counterclockwise to widen the lens aperture. This option is enabled automatically when [Power aperture (close)] is selected for [Lens Fn ring (clockwise)].
₩	[Power aperture (close)]	- Aperture narrows while the button is pressed. This option is enabled automatically when [Power aperture (open)] is selected for [Fn1 button] Rotate the lens Fn ring clockwise to narrow the lens aperture. This option is enabled automatically when [Power aperture (open)] is selected for [Lens Fn ring (counterclockwise)].

Role		Description
F	[Exposure compensation +]	- Exposure compensation increases while the button is pressed. This option is enabled automatically when [Exposure compensation -] is selected for [Fn2 button]. - Rotate the lens Fn ring clockwise for increased exposure compensation. This option is enabled automatically when [Exposure compensation -] is selected for [Lens Fn ring (counterclockwise)].
⊿	[Exposure compensation -]	- Exposure compensation decreases while the button is pressed. This option is enabled automatically when [Exposure compensation +] is selected for [Fn1 button]. - Rotate the lens Fn ring counterclockwise to reduce exposure compensation. This option is enabled automatically when [Exposure compensation +] is selected for [Lens Fn ring (clockwise)].
150十	[ISO sensitivity (increase)]	Rotate the lens Fn ring clockwise to increase ISO sensitivity. This option is enabled automatically when [ISO sensitivity (decrease)] is selected for [Lens Fn ring (counterclockwise)].
[SO-	[ISO sensitivity (decrease)]	Rotate the lens Fn ring counterclockwise to decrease ISO sensitivity. This option is enabled automatically when [ISO sensitivity (increase)] is selected for [Lens Fn ring (clockwise)].

Role		Description
ΞĪ	[Hi-Res Zoom +]	- Zoom in using Hi-Res Zoom; the zoom ratio increases while the control is pressed. This option is enabled automatically when [Hi-Res Zoom —] is selected for [Fn2 button]. - Rotate the lens Fn ring clockwise to zoom in using Hi-Res Zoom. This option is enabled automatically when [Hi-Res Zoom —] is selected for [Lens Fn ring (counterclockwise)].
[m] [W]	[Hi-Res Zoom –]	- Zoom out using Hi-Res Zoom; the zoom ratio decreases while the control is pressed. This option is enabled automatically when [Hi-Res Zoom +] is selected for [Fn1 button]. - Rotate the lens Fn ring counterclockwise to zoom out using Hi-Res Zoom. This option is enabled automatically when [Hi-Res Zoom +] is selected for [Lens Fn ring (clockwise)].
PZ⊡	[Power zoom +]	When a power zoom lens is attached, the camera zooms in while the control is pressed. This option is enabled automatically when [Power zoom –] is selected for [Fn2 button].
PZW	[Power zoom –]	When a power zoom lens is attached, the camera zooms out while the control is pressed. This option is enabled automatically when [Power zoom +] is selected for [Fn1 button].

	Role	Description
Ø	[Pattern tone range]	Press the control to cycle through zebra pattern tone range options (□687).
塛	[Record videos]	Press the control to start recording. Press again to end recording.
WB	[White balance]	Hold the control and rotate the main command dial to adjust white balance for videos. Some options offer sub-options that can be selected by rotating the sub-command dial.
醋	[Active D- Lighting]	Press the control and rotate a command dial to adjust Active D-Lighting for videos.
Ħ	[Skin softening]	Press the control and rotate a command dial to adjust skin softening.
(2)	[Portrait impression balance]	Press the control and rotate a command dial to choose a portrait impression balance mode.
e ₀ .	[Metering]	Press the control and rotate a command dial to choose a video metering option.
	[Video self- timer]	Press the control and rotate a command dial to change the video self-timer settings.
AF/[+]	[Focus mode/AF- area mode]	Hold the control and rotate the main command dial to choose the focus mode, the sub-command dial to choose the AFarea mode.

Role		Description
LOCK	[Control lock]	- Press the control and rotate the main command dial to lock shutter speed (mode M). To lock aperture (modes A and M), press the control and rotate the subcommand dial. - To lock focus-point selection, hold the control while using the multi selector to choose the focus point.
∮ ≣	[Microphone sensitivity]	Press the control and rotate a command dial to adjust microphone sensitivity.
M/A	[Focus (M/A)]	The lens control ring can be used for manual focus regardless of the option selected for focus mode. To refocus using autofocus, press the shutter-release button halfway or press a control to which AF-ON has been assigned.
	[Power aperture]	Rotate the lens control ring to adjust aperture.
Z	[Exposure compensation]	Adjust exposure compensation either by holding the control and rotating a command dial or by rotating the lens control ring.
ISO	[ISO sensitivity]	Adjust ISO sensitivity either by holding the control and rotating a command dial or by rotating the lens control ring.
(m)	[Hi-Res Zoom]	Rotate the lens control ring to zoom in or out using Hi-Res Zoom.
[None]		The control has no effect.

Power aperture

- · Power aperture is available only in modes A and M.
- · The display may flicker while aperture is adjusted.

Command dials

The following roles can be assigned to the command dials. To view options, highlight items and press \odot .

Role	Description
[Exposure setting]	Reverse the roles of the main and sub-command dials in selected modes. Press ① or ② to highlight a mode and ② or ③ to switch roles.
[Focus/AF-area mode selection] Switch the roles played by rotating the main and st command dials while holding a control to which [F mode/AF-area mode] has been assigned using Cu Setting g2 [Custom controls].	
[Sub-command dial zoom role]	Choose the role played by the sub-command dial in the zoom display. Choose [Exposure setting] to change the role played by the sub-command dial in each mode. Choose [Zoom] to use the sub-command dial to zoom in or out.

g3: Control lock MENU button → Custom Settings menu


Lock exposure settings or focus-point selection.

Option	Description
[Shutter speed lock]	Select [ON] to lock shutter speed at its current value in mode M. A icon appears in the shooting display when shutter-speed lock is in effect.
[Aperture lock]	Select [ON] to lock aperture at its current value in modes A and M. · A II icon appears in the shooting display when aperture lock is in effect.
[Focus-point lock]	Select [ON] to lock focus-point selection on the currently-selected focus point. • Focus point lock does not apply when [Auto-area AF] is selected for AF-area mode. • When [Subject-tracking AF] is selected, the focus point will track subject motion.

g4: Limit AF-area mode selection

MENU button **→ /** Custom Settings menu

 Choose the AF-area modes that can be selected by rotating the sub-command dial while pressing a control to which [Focus mode/AF-area mode] has been assigned using Custom Setting q2 [Custom controls].



- Highlight options and press
 ® or
 ® to select (
 ☐) options marked with a check (
 ☐) are available for selection via the sub-command dial.
- · To complete the operation, press MENU.

g5: AF speed

MENU button → ✓ Custom Settings menu

Choose the focus speed for video mode.



Use [When to apply] to choose when the selected option applies.

Option		Description
ALWAYS	[Always]	The camera focuses at the selected speed at all times in video mode.
REC	[Only while recording]	Focus is adjusted at the selected speed only during video recording. At other times, the camera focuses as quickly as possible.

Lens sounds

The sound produced by the lens during focus operations increases with AF speed. The effect is particularly noticeable at a setting of [+5], so choose lower values if you find the noise distracting.

g6: AF tracking sensitivity

MENU button → Custom Settings menu

The AF tracking sensitivity for video mode can be set to values of from 1 to 7.



- · Choose [7] ([Low]) to help maintain focus on your original subject.
- If the subject leaves the selected focus point when [1] ([High]) is selected, the camera will respond by quickly shifting focus to a new subject in the same area.

g7: Hi-Res Zoom speed

MENU button **→ /** Custom Settings menu

Choose the zoom speed for Hi-Res Zoom. This option only takes effect when Hi-Res Zoom is assigned to a control using any of the [Fn1 button], [Fn2 button], [Lens Fn ring (clockwise)], and [Lens Fn ring (counterclockwise)] options for Custom Setting q2 [Custom controls].



g8: Power zoom (PZ) button options

MENU button → / Custom Settings menu

Choose whether the $\mathbb Q$ and $\mathbb Q$ $\mathbb Q$ (?) buttons can be used for power zoom during video recording when a power zoom lens is attached.

Option	Description
[Use 🗷/🕮 buttons]	Selecting [ON] allows the [®] and [®] (?) buttons to be used for power zoom.
[Power zoom speed]	Choose the speed at which power zoom lenses can be zoomed in and out using the buttons; if desired, you can choose one speed for use during recording and another for pre- and post-recording. Note that the sounds produced by the lens may be audible in footage recorded during zoom. The effect can be mitigated by selecting a slower zoom speed.

g9: Fine ISO control (mode M)

MENU button **→ /** Custom Settings menu

Selecting [On (1/6 EV)] allows ISO sensitivity for videos to be adjusted in increments of 1/6 EV in mode M

- This option takes effect only when ISO sensitivity is adjusted via [ISO sensitivity settings] > [ISO sensitivity (mode M)] in the video recording menu.
- Sensitivity can be set to values of from ISO 100 to 25600 in increments of 1/6 FV

g10: Extended shutter speeds (S/M)

MENU button → Custom Settings menu

Select $[\mathbf{ON}]$ for access to a range of slower shutter speeds in modes \mathbf{S} and \mathbf{M} .

- When [**OFF**] is selected, the minimum shutter speed varies with frame rate as follows.
 - 120p: 1/125 s
 - 100p: 1/100 s
 - -60p: 1/60 s
 - 50p: 1/50 s
 - 30p: 1/30 s
 - 25p: 1/25 s
 - 24p: 1/25 s
- When [ON] is selected, the minimum shutter speeds for frame rates of 60p to 24p drop to 1/4 s. Those for 120p or 100p, or slow-motion videos do not change.
- Selecting [ON] and choosing a slow shutter speed helps prevent ISO sensitivity rising too high during shots of the night sky and other dark subjects.
- Videos recorded at slow shutter speeds when [ON] is selected will include repeated multiple copies of the same frames.
- To reduce blur caused by camera shake in videos recorded at slow shutter speeds while [ON] is selected, we recommend mounting the camera on a tripod.

g11: View assist

MENU button → Custom Settings menu

Choose [**ON**] for a live preview of video footage recorded with [**N-Log**] selected for video tone mode, but note that the colors in the preview are simplified for enhanced contrast.

· Colors in the actual recorded footage are unaffected.

 Contrast is also enhanced when N-Log footage is viewed on the camera.

g12: Zebra pattern

MENU button → ✓ Custom Settings menu

 
Choose whether a zebra pattern is used to indicate selected tone ranges in video mode.

Pattern tone range

Choose the tone range shown by the zebra pattern from [Highlights] or [Mid-tones], or select [Zebra pattern off] to turn the zebra pattern off. Highlights and mid-tones can be defined using [Highlight threshold] and [Mid-tone range], respectively.

Pattern

To enable the zebra display, select [Pattern 1] or [Pattern 2].



Pattern 1

Pattern 2

Highlight threshold

Choose the brightness needed to trigger the zebra display when [**Highlights**] is selected for [**Pattern tone range**].

- Choose from values of from 120 to 255. The lower the value, the greater the range of brightnesses that will be shown as highlights.
- If 255 is selected, the display will show only areas that are potentially overexposed.

Mid-tone range

Choose the brightness needed to trigger the zebra display when [**Midtones**] is selected for [**Pattern tone range**].



- The mid-tone range is defined as a brightness [Value] and [Range] of brightnesses centered around the selected value.
- Press ① or ② to highlight items and press ② or ② to change.

Zebra pattern

If both the zebra display and focus peaking are enabled in manual focus mode, only focus peaking will take effect. To view the zebra display in manual focus mode, select [OFF] for Custom Setting a12 [Focus peaking] > [Focus peaking display].

g13: Limit zebra pattern tone range

MENU button → ✓ Custom Settings menu

Choose the tone ranges accessible via controls to which [Pattern tone range] is assigned.

Option	Description	
[Highlights]	The control can be used to cycle between [Highlights] and [Zebra pattern off].	
[Mid-tones]	The control can be used to cycle between [Mid-tones] and [Zebra pattern off].	
[No restrictions]	The control can be used to cycle through [Highlights], [Mid-tones], and [Zebra pattern off].	

g14: Grid type

MENU button → Custom Settings menu

Choose a framing grid for video mode. The selected grid can be displayed by placing a check (卤) next to 田 in the list for Custom Setting g17 [Custom monitor shooting display] or g18 [Custom viewfinder shooting display].

g15: Brightness information display

MENU button → ✓ Custom Settings menu

Choose how the camera displays brightness information in video mode. Brightness information of the selected type can be displayed by placing a check (☑) next to ☑ in the list for Custom Setting g17 [Custom monitor shooting display] or g18 [Custom viewfinder shooting display].

Option	Description		
[Histogram]	Enable the RGB histogram. (In 15) (In		
[Wave-form monitor]	The camera displays a wave-form monitor. The monitor can be displayed at either of two different sizes.		
[Wave-form monitor (large)]	P 25 COG SQ STEE BA		

g16: Half-press to cancel zoom (MF)

MENU button → ✓ Custom Settings menu

When set to **[ON]**, press the shutter-release button halfway to cancel zoom when zooming with the focus mode set to manual focus while in video mode

g17: Custom monitor shooting display

MENU button → ✓ Custom Settings menu

Choose the monitor displays accessible by pressing the **DISP** button in video mode.

Highlight items ([Display 2] through [Display 4]) and press ⊗ to select (⋈) or deselect (□). Only displays marked with a check (⋈) can be accessed by pressing the DISP button during shooting. [Display 1] cannot be deselected (□).



To choose indicators that appear in displays [Display 1] through [Display 4], highlight the corresponding option and press ③. You can then highlight items and press ⑥ to select (☑) or deselect (□).



Option		Description
SIMPLE	[Basic shooting info]	View the shooting mode, shutter speed, aperture, and other basic shooting info.
DETAIL	[Detailed shooting info]	View the focus mode, AF-area mode, white balance, and other detailed shooting info.
L	[Touch controls]	View options that can be accessed via touch controls, including touch AF and the $m{t}$ menu.
	[Virtual horizon]	Enable the virtual horizon. The display type can be selected using Custom Setting d17 [Virtual horizon type].
—	[Brightness information]	View an RGB histogram or wave-form monitor. The display type can be selected using Custom Setting g15 [Brightness information display].
=	[Framing grid]	Enable the framing grid. The display type can be selected using Custom Setting g14 [Grid type].
+	[Center indicator]	Display crosshairs at the center of the frame.

[·] To complete the operation, press MENU.

g18: Custom viewfinder shooting display

MENU button → / Custom Settings menu

Choose the viewfinder displays accessible by pressing the **DISP** button in video mode.

Highlight items ([Display 2] or [Display 3]) and press
 ® to select (
 □) or deselect (
 □). Only displays marked with a check (
 □) can be accessed by pressing the DISP button during shooting. [Display 1] cannot be deselected (
 □).

- To choose indicators that appear in displays [Display 1] through [Display 3], highlight the corresponding option and press ③. You can then highlight items and press ③ to select (☑) or deselect (□). Apart from [Touch controls], the options are the same as those for Custom Setting q17 [Custom monitor shooting display].
- · To complete the operation, press MENU.

g19: Red REC frame indicator

MENU button **→ /** Custom Settings menu

If **[ON]** is selected, a red border will appear around the shooting display while video recording is in progress. This helps prevent missed shots by alerting you when recording is in progress.

The playback menu

To display the playback menu, select the

(playback menu) tab in the camera menus.



The playback menu contains the following items:

. ,		9	
Item	m	Item	m
[Delete]	693	[Picture review]	697
[Playback folder]	694	[After delete]	698
[Playback display options]	694	[After burst, show]	699
[Filtered playback criteria]	696	[Record camera orientation]	699
[Series playback]	696	[Auto-rotate pictures]	700

Delete

MENU button **→ □** playback menu

Delete multiple images. For more information, see "Deleting multiple pictures" (\square 281).

Option		Description
	[Selected pictures]	Delete selected pictures.
Ō	[Candidates for deletion]	Delete pictures rated 5 (candidate for deletion).

Option		Description
DATE	[Pictures shot on selected dates]	Delete all pictures taken on selected dates.
ALL	[All pictures]	Delete all pictures in the folder currently selected for [Playback folder] in the playback menu.

Playback folder

MENU button **→ ▶** playback menu

Choose a folder for playback.

Option	Description	
(Folder name)	Pictures in all folders with the selected name will be visible during playback. Folders can be renamed using the [Storage folder] > [Rename] option in the photo shooting menu.	
[AII]	Pictures in all folders will be visible during playback.	
[Current]	Only pictures in the current folder will be visible during playback.	

Playback display options

MENU button **⇒ ▶** playback menu

Choose display options for full-frame playback.

- · Highlight options and press ⊕ to select (☑) or deselect (□).
- · To complete the operation, press MENU.

Option	Description	
[Focus point]	Select () this option to view the location of the focus point used when the picture was taken.	

Option	Description		
[Mark first shot in series]	When this option is selected (②), the first picture in each burst will be identified by a ② icon and a figure giving the total number of shots in the burst.		
[Exposure info]			
[Highlights]			
[RGB histogram]			
[Shooting data]	The selected (☑) information displays can be viewed using the DISP button or by pressing ⑤ or ⑥.		
[Overview]			
[None (picture only)]			
[File info]			
[Basic shooting data]			
[Flash data]			
[Picture Control/HLG data]	The selected (☑) options are included in the full-frame playback [Shooting data] display.		
[Other shooting data]			
[Copyright info]			

Option	Description	
[Location data]	The selected (🗹) options are included in the full-frame playback [Shooting data] display.	
[IPTC data]		

Filtered playback criteria

MENU button → ▶ playback menu

Choose the criteria used to choose the pictures displayed during filtered playback (\$\mu\$277).

Series playback MENU button ⇒ ▶ playback menu

Choose options for viewing bursts.



Auto series playback

If [ON] is selected, the remaining pictures will play back automatically after the first picture in the burst has been displayed full frame for a few seconds. Playback ends when the last picture in the burst is displayed.

Auto series playback options

Choose options for viewing bursts when [Auto series playback] is set to [ON].

Option	Description
[Loop playback]	Set this to [ON] to repeatedly play back the displayed burst group.
[Wait before playback]	Choose from [Long], [Normal], [Short], and [Start immediately] as the delay time before auto series playback starts from the display of the first photo in the burst group.
[Auto series playback speed]	You can set the playback speed for auto series playback. • [5 fps], [15 fps], [30 fps]: Play back at the set speed. • [At current release mode speed]: Play back at the currently set release mode speed. • If set to single frame release mode or self-timer, the playback speed will be 3 fps.

List series as single thumbnails

When [**ON**] is selected, only the first shot in each burst will appear in the thumbnail list. The first picture in each burst will be identified by a □ icon and a figure giving the total number of shots in the burst.

- All the pictures in each burst will be displayed during full-frame playback.
- Selecting [ON] for [List series as single thumbnails] allows access to [Manage series] in the playback ‡ menu (\$\Pi\$262).

Picture review MENU button → ▶ playback menu

Choose whether pictures are automatically displayed immediately after shooting.

Option	Description
[On]	Pictures are displayed in the monitor. • When [Prioritize viewfinder (2)] is selected for monitor mode, the most recent picture will be displayed in the monitor when you take your eye from the viewfinder.
[On (monitor only)]	Pictures are displayed after shooting only when the monitor is used to frame shots. Pictures are not displayed in the viewfinder when [Viewfinder only] is selected for monitor mode.
[Off]	Pictures can only be viewed by pressing the ▶ button.

After delete

MENU button **→ ▶** playback menu

Choose the picture displayed after an image is deleted.


Option	Description
[Show next]	The following picture is displayed. If the deleted picture was the last picture, the preceding picture will be displayed.
[Show previous]	The preceding picture is displayed. If the deleted picture was the first picture, the next picture will be displayed.
[Continue as before]	If you were scrolling through pictures in the order recorded, the following picture will be displayed as described for [Show next]. If you were scrolling through pictures in reverse order, the preceding picture will be displayed as described for [Show previous].

After burst, show

MENU button → ▶ playback menu

Choose whether the photo displayed immediately after a burst of shots is taken in continuous mode is the first or last shot in the burst.

 This option takes effect only when [Off] is selected for [Picture review] in the playback menu.



- 1 Most recent shots (burst)
- 2 Displayed if [First picture in burst] is selected
- 3 Displayed if [Last picture in burst] is selected

Record camera orientation

MENU button → ▶ playback menu

If [ON] is selected, information on camera orientation when the photograph was taken is recorded. During playback on the camera or on a computer, images are rotated automatically using the recorded orientation information.

Caution: Record camera orientation

Camera orientation may not be correctly recorded in photos taken with the camera pointing up or down or for panning shots.

Auto-rotate pictures

MENU button **→ ▶** playback menu

If [ON] is selected, the playback display will automatically rotate to match camera orientation, with the result that "tall" pictures will be rotated to display in "tall" orientation when the camera is held in "wide" orientation and "wide" pictures will be rotated to display in "wide" orientation when the camera is held in "tall" orientation.

Cautions: Auto-rotate pictures

- Pictures are not rotated automatically during picture review even when [ON] is selected for [Auto-rotate pictures].
- Pictures that are shot with [Record camera orientation] set to [OFF] in the playback menu are not rotated automatically. They will appear in the playback display as photos shot in the "wide" orientation.

The setup menu

To view the setup menu, select the Υ tab in the camera menus.



The setup menu contains the following items:

Item	ш
[Format memory card]	702
[Save user settings]	703
[Reset user settings]	703
[Language]	703
[Time zone and date]	703
[Monitor brightness]	704
[Monitor color balance]	704
[Viewfinder brightness]	706
[Viewfinder color balance]	707
[Viewfinder display size]	707
[Limit monitor mode selection]	707
[Auto rotate info display]	707
[REC lamp brightness]	708

ltem	m
[AF fine-tuning options]	708
[Non-CPU lens data]	711
[Distance units]	711
[Save focus position]	712
[Save zoom position (PZ lenses)]	712
[Image Dust Off ref photo]	712
[Pixel mapping]	715
[Image comment]	715
[Copyright information]	716
[IPTC]	718
[Ω/æ connector function]	722
[Voice memo options]	722
[Camera sounds]	724

Item	<u>m</u>
[Silent mode]	725
[Touch controls]	726
[Self-portrait mode]	726
[HDMI]	726
[USB connection priority]	726
[Conformity marking]	727
[USB power delivery]	727

ltem	ш
[Energy saving (photo mode)]	729
[Slot empty release lock]	730
[Save/load menu settings]	730
[Reset all settings]	736
[Firmware version]	736

Format memory card

MENU button ⇒ ♀ setup menu

Format memory cards. Memory cards that have been formatted in a computer or another camera should be reformatted using this option before use. **Note that formatting permanently deletes all pictures and other data on the card.** Before formatting, be sure to make backup copies as required.



Caution: During formatting

Do not turn the camera off or remove memory cards until the message **[Formatting memory card.]** clears from the display.

Save user settings

MENU button ⇒ Y setup menu

Frequently-used combinations of settings can be assigned to the **U1** to **U3** positions on the mode dial (\square 150).

Reset user settings

MENU button ⇒ Y setup menu

Reset user settings to default values (\$\square\$152).

Language

MENU button ⇒ Y setup menu

Choose a language for camera menus and messages. The languages available vary with the country or region in which the camera was originally purchased.

Time zone and date

MENU button ➡ 🎖 setup menu

Change time zones and set the camera clock. We recommend that the camera clock be adjusted regularly.

Option	Description
[Time zone]	Choose a time zone. [Date and time] is automatically set to the time in the new time zone.
[Date and time]	Set the camera clock to the time in the selected [Time zone].
[Date format]	Choose the order in which the day, month, and year are displayed.

Option	Description
[Daylight saving time]	Turn daylight saving time [ON] or [OFF]. Selecting [ON] automatically advances the clock one hour. The default setting is [OFF].

If the camera clock has been initialized, the $^{\textcircled{9}}$ icon is displayed in the shooting display as a warning.

Monitor brightness

MENU button → Y setup menu

Press $\textcircled{\bullet}$ or $\textcircled{\bullet}$ to adjust monitor brightness. Choose higher values for increased brightness, lower values for reduced brightness.

- [Monitor brightness] can only be adjusted when the monitor is the
 active display. It cannot be adjusted when [Viewfinder only] is
 selected for monitor mode or when your eye is to the viewfinder.
- · Higher values increase the drain on the battery.
- Changing the option selected for [Monitor brightness] in the setup menu when [HLG] is selected for [Tone mode] in the photo shooting menu or when viewing pictures taken with [HLG] selected for [Tone mode] changes the distribution of tones in the shooting and playback displays. The fidelity of reproduction in highlights in particular declines as brightness rises.

Monitor color balance


MENU button ⇒ 🕆 setup menu

Adjust monitor color balance to your taste.

[Monitor color balance] can only be adjusted when the monitor is
the active display. It cannot be adjusted when [Viewfinder only] is
selected for monitor mode or when your eye is to the viewfinder.

Color balance is adjusted using the multi selector. Press ♠, ♠, ♠, or
 ♦ to adjust color balance as shown below. Press ⊗ to save changes.



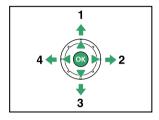

1 Increase green
2 Increase amber

- 3 Increase magenta
 4 Increase blue
- Monitor color balance applies only to menus, playback, and the shooting display; photos and videos taken with the camera are not affected.
- The reference image is either the last picture taken or, in playback mode, the picture last displayed. If the memory card contains no pictures, an empty frame will be displayed instead.
- To choose a different picture, press the ♀ ?) button. Highlight the desired picture and press ⊛ to select it as the reference image.



• To view the highlighted picture zoomed in, press and hold the @ button.

Viewfinder brightness

MENU button → Y setup menu

Adjust viewfinder brightness. [Viewfinder brightness] can only be adjusted when the viewfinder is the active display. It cannot be adjusted when the monitor is on or when [Monitor only] is selected for monitor mode.

Option	Description
[Auto]	Viewfinder brightness is adjusted automatically in response to lighting conditions.
[Manual]	Press 🕏 or 审 to adjust brightness manually. Choose higher values for increased brightness, lower values for reduced brightness.

- · Higher values increase the drain on the battery.
- If the camera becomes hot, the viewfinder display will temporarily dim when [Manual] is selected.
- Changing the option selected for [Viewfinder brightness] in the setup menu when [HLG] is selected for [Tone mode] in the photo shooting menu or when viewing pictures taken with [HLG] selected for [Tone mode] changes the distribution of tones in the shooting and playback displays. The fidelity of reproduction in highlights in particular declines as brightness rises.

Viewfinder color balance

MENU button ⇒ Y setup menu

Adjust viewfinder color balance to your taste. [Viewfinder color balance] can only be adjusted when the viewfinder is the active display. It cannot be adjusted when the monitor is on or when [Monitor only] is selected for monitor mode. Otherwise the procedure is the same as for [Monitor color balance] (\square 704).

Viewfinder display size

MENU button ⇒ Y setup menu

Choose a magnification for the viewfinder display from [**Standard**] and [**Small**]. Selecting [**Small**] makes it easier to see the entire subject.

Limit monitor mode selection

MENU button → Y setup menu

Choose the monitor modes that can be selected using the | | button.

- · To complete the operation, press MENU.

Auto rotate info display

MENU button → Y setup menu

When **[ON]** is selected, the indicators in the shooting and playback displays will automatically be rotated to match camera orientation.

REC lamp brightness

MENU button ⇒ Y setup menu

Set the REC lamp brightness while recording videos and time-lapse videos. The brightness decreases from [3], [2], and [1]. When [Off] is selected, the REC lamp does not light up or flash.

Option	Description
[Video recording]	Set the brightness when the REC lamp lights up or flashes while recording videos or in video mode. • When an option other than [Off] is selected, the REC lamp lights up while recording videos. • For information on the flashing of the REC lamp while recording videos or in video mode, see "The REC lamp" (□110).
[Time-lapse video recording]	Set the brightness when the REC lamp lights up or flashes while recording time-lapse videos. • When an option other than [Off] is selected, the REC lamp lights up while recording time-lapse videos. • If an option other than [Off] is selected and the battery is low while recording time-lapse videos, the REC lamp repeatedly flashes twice quickly. • When an option other than [Off] is selected, the REC lamp lights up or flashes even if [Time-lapse video] is selected for [Interval timer shooting] > [Options] in the photo shooting menu.

AF fine-tuning options

MENU button ⇒ ♀ setup menu

Fine-tune focus for the current lens.

· Use only as required.

• We recommend that you perform fine-tuning at a focus distance you use frequently. If you perform focus-tuning at a short focus distance, for example, you may find it less effective at longer distances.

Option	Description
[AF fine- tune]	Select [ON] to turn fine-tuning on.
[Fine-tune and save lens]	Fine-tune focus for the current lens. Press ♠ or ♠ to highlight items and press ♠ or ♠ to choose from values between +20 and -20. • The larger the fine-tuning value, the farther the focal point is from the lens; the smaller the value, the closer the focal point. • The display shows the current and previous values. • The camera can store values for up to 40 lens types. • If a value already exists for the current lens, you can choose whether to add a new value or overwrite the existing value.
[Default]	Choose the fine-tuning values for lenses for which no values have previously been saved using [Fine-tune and save lens]. Press ① or ① to choose from values between +20 and -20.
[List saved values]	List values saved using [Fine-tune and save lens]. Highlighting a lens in the list and pressing ③ displays a [Choose lens number] dialog. Choose lens number] dialog. The [Choose lens number] dialog is used to enter the lens identifier. The serial number is automatically entered for Z mount lenses and some F mount lenses.

Option	Description
[Choose value for	Choose from multiple fine-tuning values saved for lenses of
current lens]	the same type.

Deleting saved values

To delete values saved using [Fine-tune and save lens], highlight the desired lens in the [List saved values] list and press fig.

Creating and saving fine-tuning values

- 1 Attach the lens to the camera.
- 2 Select [AF fine-tuning options] in the setup menu, then highlight [Fine-tune and save lens] and press .

 An AF fine-tuning dialog will be displayed.
- 3 Press ⊕ or ⊕ to fine-tune autofocus.
 - · Choose from values between +20 and -20.
 - The current value is shown by \triangle , the previously-selected value by \triangle .
 - If a zoom lens is attached, you can choose separate fine-tuning values for maximum angle (WIDE) and maximum zoom (TELE). Use

 ③ and ⑤ to choose between the two.
 - The larger the fine-tuning value, the farther the focal point is from the lens; the smaller the value, the closer the focal point.
- 4 Press to save the new value.

Choosing a default fine-tuning value

1 Select [AF fine-tuning options] in the setup menu, then highlight [Default] and press (9).

2 Press ① or ② to fine-tune autofocus.

- · Choose from values between +20 and -20.
- The current value is shown by \triangle , the previously-selected value by \triangle .
- The larger the fine-tuning value, the farther the focal point is from the lens; the smaller the value, the closer the focal point.

3 Press to save the new value.

Non-CPU lens data

MENU button ⇒ ♀ setup menu

Record data for non-CPU lenses attached using an optional mount adapter. By registering the focal length and maximum aperture of a non-CPU lens in the camera, you can display this data as shooting data.

Option	Description
[Lens number]	Choose a lens identifier.
[Focal length (mm)]	Enter the focal length.
[Maximum aperture]	Enter the maximum aperture.
[Lens name]	Register the lens name. Names can be up to 36 characters long. The registered lens name is recorded in the Exif information of pictures taken with the lens.

Distance units

MENU button → Y setup menu

Displays the distance between the camera and the focus position when the focus is adjusted in manual focus. The distance unit can be set in meters or feet.

 The distance shown is intended as a guide only. It may vary from the actual distance, depending on the lens used.

Save focus position

MENU button ⇒ Y setup menu

When **[ON]** is selected, the camera will save the current focus position when turned off and restore it when next turned on. Note that this may increase camera startup times.

- Note that even when [ON] is selected, if the temperature, zoom
 position, or other conditions change while the camera is off, focus
 may resume from a different position when the camera is turned on.
- Similarly, note that even when [OFF] is selected, focus may resume from the previously-selected position depending on the state of the camera and lens.

Save zoom position (PZ lenses)

MENU button ➡ 🎖 setup menu

If **[ON]** is selected when a power zoom (PZ) lens is attached, the camera will save the current zoom position when turned off and restore it when next turned on

Image Dust Off ref photo

MENU button ⇒ 🕆 setup menu

Acquire reference data for the Image Dust Off option in NX Studio. Image Dust Off processes NEF (RAW) pictures to mitigate effects caused by dust adhering in front of the camera image sensor. For more information, refer to NX Studio online help.

Acquiring Image Dust Off reference data

Before acquiring Image Dust Off reference data, select photo mode by rotating the photo/video selector to .

1 Highlight [Image Dust Off ref photo] in the setup menu and press ⊕.



2 Select [Start] on the Image Dust Off ref photo dialog.



· Highlight [**Start**] and press

to display the shooting screen.



- With the lens about ten centimeters (four inches) from a well-lit, featureless white object, frame the object so that it fills the display and then press the shutter-release button halfway.
 - · In autofocus mode, focus will automatically be set to infinity.
 - · In manual focus mode, set focus to infinity manually.

4 Press the shutter-release button the rest of the way down to acquire Image Dust Off reference data.

- The monitor turns off when the shutter-release button is pressed.
- If the reference object is too bright or too dark, the camera may be unable to acquire Image Dust Off reference data and a message will be displayed and the camera will return to the display shown in Step 2. Choose another reference object and press the shutterrelease button again.



Cautions: Acquiring Image Dust Off reference data

- · A lens with a focal length of at least 50 mm is recommended.
- · When using a zoom lens, zoom all the way in.
- The same reference data can be used for photographs taken with different lenses or at different apertures.
- · Reference images cannot be viewed using computer imaging software.
- A grid pattern is displayed when reference images are viewed on the camera.



Pixel mapping

MENU button → Y setup menu

Pixel mapping checks and optimizes the camera image sensor. If you notice unexpected bright spots appearing in pictures taken with the camera, perform pixel mapping as described below.

- Pixel mapping is available only when a Z mount lens or an optional FTZ II/FTZ mount adapter is attached.
- To prevent unexpected loss of power, use one of the following power sources:
 - A fully-charged battery
 - An optional EH-8P AC adapter connected using the supplied USB cable (featuring Type C connectors at both ends)
 - Portable chargers (power banks)
- To start pixel mapping, select [Start]. A message is displayed while the operation is in progress.

Cautions: Pixel mapping

- Do not attempt to operate the camera while pixel mapping is in progress.
 Do not turn the camera off or remove or disconnect the power source.
- Pixel mapping may not be available if the camera's internal temperature is elevated.

Image comment

MENU button → Y setup menu

Add a comment to new photographs as they are taken. Comments can be viewed in NX Studio's [Info] tab.

Input comment

Input a comment of up to 36 characters. Highlight [Input comment] and press ③ to display a text-entry dialog. For information on text entry, see "Text entry" (□78).

Attach comment

Comments will be attached to pictures taken while [Attach comment] is [ON].



Photo info

- Comments can be viewed on the [Other shooting data] page in the photo information display.
- To display the [Other shooting data] page, select (M) both [Shooting data] and [Other shooting data] for [Playback display options] in the playback menu.

Copyright information

MENU button ⇒ Y setup menu

Add copyright information to new photographs as they are taken. Copyright information can be viewed in NX Studio's [Info] tab.

Artist/Copyright

Enter the names of the photographer (maximum 36 characters) and copyright holder (maximum 54 characters). Highlight [**Artist**] or

[Copyright] and press ⊕ to display a text-entry dialog. For information on text entry, see "Text entry" (□78).

Attach copyright information

Copyright information will be attached to pictures taken while [Attach copyright information] is [ON].



Cautions: Copyright information

- To prevent unauthorized use of the artist or copyright holder names, make sure that [OFF] is selected for [Attach copyright information] before lending or transferring the camera to another person. You will also need to make sure that the artist and copyright fields are blank.
- Nikon does not accept liability for any damages or disputes arising from the use of the [Copyright information] option.

Photo info

- Copyright information can be viewed on the [Copyright info] page in the photo information display.
- To display the [Copyright info] page, select (Y) both [Shooting data] and [Copyright info] for [Playback display options] in the playback menu.

IPTC

MENU button → Y setup menu

IPTC presets can be created or edited on the camera and embedded in new photographs as described below.



- · You can also load IPTC presets created on a computer.
- To create IPTC presets and save them to memory cards for later import, use IPTC Preset Manager (

 722).

Creating, renaming, editing, and copying presets

Highlight [Edit/save] and press \circledast to display the [Select preset to edit or save] list of existing presets.

- To edit or rename a preset, highlight it and press . To create a new preset, highlight "Unused" and press .
 - [Rename]: Rename the preset.
 - [Edit IPTC information]: Display the selected preset (□721). Selected fields can be edited as desired.
- To copy a preset, highlight it and press [®]. Highlight the destination, press [®], and name the copy.

Deleting presets

To delete presets, highlight [Delete] and press .

Embedding presets

Highlighting [Auto embed during shooting] and pressing ③ displays a list of presets. Highlight a preset and press ③; the selected preset will be embedded in all subsequent photographs. To disable embedding, select [Off].



Viewing IPTC data

- Embedded presets can be viewed on the [IPTC data] page in the photo information display.
- To display the [IPTC data] page, select (☑) both [Shooting data] and [IPTC data] for [Playback display options] in the playback menu.

Copying presets to a memory card

To copy IPTC presets from the camera to a memory card, highlight [Load/save] > [Copy to card] and press ③. Select the desired preset and destination (1–99) and press ③ to copy the preset to the card.

Copying presets to the camera

The camera can store up to ten presets; to copy IPTC presets from a memory card to a selected destination on the camera, highlight [Load/save] > [Copy to camera] and press .



- Highlight a destination and press ® to display a dialog where you
 can name the preset. Name the preset as desired and press ® to copy
 the preset to the camera.
- In addition to the ten presets mentioned above, the camera can store up to three XMP/IPTC presets created on a computer and saved in XMP format. XMP/IPTC presets are not displayed during playback.
 Nor can they be copied from the camera to a memory card.

Cautions: IPTC information

- The camera supports standard roman alphanumeric characters only. Other characters will not display correctly except on a computer.
- Preset names (
 —718) may be up to 18 characters long. If a preset with a
 longer name is created using a computer, all characters after the
 eighteenth will be deleted.
- The number of characters that may appear in each field is given below. Any characters over the limit will be deleted.

Field	Max. length
Caption	2000
Event ID	64
Headline	256
Object Name	256
City	256
State	256
Country	256
Category	256
Supp. Cat. (supplemental categories)	256
Byline	256
Byline Title	256
Writer/Editor	256
Credit	256
Source	256

▼ IPTC

IPTC is a standard established by the International Press Telecommunications Council (IPTC) with the intent of clarifying and simplifying the information required when photographs are shared with a variety of publications.

☑ IPTC Preset Manager

IPTC presets can be created on a computer and saved to memory cards using IPTC Preset Manager software. IPTC Preset Manager can be downloaded free of charge from the URL below.

https://downloadcenter.nikonimglib.com/

∩/@ connector function (headphone/remote cord connector function)

MENU button ⇒ Y setup menu

Set a device to be used by connecting to the headphone/remote cord (\(\Omega)\) connector.

- When set to [Auto switch], the camera automatically detects whether the connected device is headphones or the optional MC-DC3 remote cord. For the normal setting, use [Auto switch].
- If the headphones do not operate properly with the [Auto switch] option, such as when using headphones with a 4-pole plug, select [Headphone].

Voice memo options

MENU button ⇒ Y setup menu

Adjust settings for voice memos (\$\Pi331, \$\Pi335\$).

Voice memo control

Choose the behavior of controls to which [Voice memo] has been assigned via Custom Setting f3 [Custom controls (playback)].

Option		Description
⊕ ±	[Press and hold]	Voice memos up to 60 seconds long can be recorded while the control is pressed.
₽₽	[Press to start/ stop]	Recording begins when the control is pressed and ends after about 60 seconds or when the control is pressed a second time.

Audio output (playback)

Choose the device used for voice memo playback.

	Option	Description	
ধ	[Speaker/ headphones]	Voice memos are played back over headphones (if connected) or the camera's built-in speaker. Voice memo options Speaker/headphones • Press ⑤ or ⑥ to choose a volume between [1] and [15]. • Press ⑧ to save changes and exit.	
HDMI	[HDMI]	Voice memos are output to the HDMI terminal at a fixed volume.	
¥	[Off]	Voice memos cannot be played even using controls to which [Voice memo] has been assigned via Custom Setting f3 [Custom controls (playback)]. 図 icons are displayed when photographs for which memos exist are viewed in the monitor.	

Camera sounds

MENU button ⇒ Y setup menu

Beep on/off

Turn the beep speaker on or off.

- If [On] is selected for [Beep on/off], beeps sound when:
 - the self-timer counts down.
 - interval-timer photography, time-lapse video recording, or focus shift ends.
 - the camera focuses in photo mode (note that this does not apply if AF-C is selected for focus mode or when AF-A is selected and you are shooting in AF-C, or [Release] is selected for Custom Setting a2 [AF-S priority selection]), or
 - touch controls are used.
- Select [Off (touch controls only)] to disable the beep for touch controls while enabling it for other purposes.
- · Select [Off] to mute the beep speaker.

Volume

Adjust beep volume.

Pitch

Choose the pitch of the beep from [High] and [Low].

Silent mode

Selecting **[ON]** for **[Silent mode**] in the setup menu disables the beep speaker.

Caution: Camera sounds

Overlapping beeps may play as a single sound.

Silent mode

MENU button ⇒ Y setup menu

Select **[ON]** to enable the electronic shutter, eliminating the noise and vibration caused by the motion of the mechanical shutter ("shutter shock").

- Enabling silent mode also suppresses other camera sounds. It does
 not, however, completely silence the camera. Camera sounds may
 still be audible, for example during autofocus or aperture
 adjustment, in the latter case most noticeably at apertures smaller
 (i.e., at f-numbers higher) than f/5.6.
- · The built-in flash and optional flash units will not fire.
- The electronic shutter is used, regardless of the option selected for Custom Setting d6 [Shutter type].
- The beep speaker is muted regardless of the options selected for [Camera sounds] in the setup menu.
- The frame advance rate may drop in some circumstances.
- The [Long exposure NR] and [Photo flicker reduction] options in the photo shooting menu are disabled.
- You may notice the following in photographs and in the shooting display:
 - flicker or banding in scenes lit by such sources as fluorescent, mercury vapor, or sodium lamps,
 - distortion associated with motion (individual subjects moving through the frame may be distorted, or the entire frame may appear distorted if the camera is moved during shooting),
 - jagged edges, color fringing, moiré, or bright spots, or
 - bright regions or bands in scenes lit by flashing signs and other intermittent light sources or when the subject is briefly illuminated by a strobe or other bright, momentary light source.

 Silent mode mutes the beep speaker and dampens other camera sounds, but does not absolve photographers of the need to respect their subjects' privacy and image rights.

Tip: The standby timer

Even when **[ON]** is selected for **[Silent mode]**, a sound will be produced when the standby timer is activated or expires. To mute the standby timer, select **[No limit]** for Custom Setting c3 **[Power off delay]** > **[Standby timer]**.

Touch controls

MENU button ⇒ Y setup menu

Enable or disable touch controls. Select [**Playback only**] to enable touch controls in playback mode only.

Self-portrait mode

MENU button ⇒ Y setup menu

When set to [**OFF**], the monitor will not switch to self-portrait mode even if it is set to the self-portrait mode position.

HDMI

MENU button ➡ ♀ setup menu

Adjust settings for connection to HDMI devices (\$\square\$339).

USB connection priority

MENU button ⇒ Y setup menu

Choose the function assigned priority when the camera is connected to a computer via USB.

Option	Description
[Upload]	The monitor remains blank while the camera is connected to a computer. The monitor turns on when the shutter-release button is pressed halfway but upload speeds may drop.
[Shooting]	The monitor remains on while the camera is connected to a computer. Upload speeds may drop.

Conformity marking

MENU button ⇒ 🕆 setup menu

View some of the information related to standards with which the camera complies.

USB power delivery

MENU button ⇒ Y setup menu

Choose whether the camera draws power from devices connected via USB. USB power delivery allows the camera to be used while limiting the drain on the battery.

Option	Description		
[ON]	The camera draws power from connected devices while on. Connected devices will also supply power when the camera is off if Bluetooth upload is in progress or the memory card access lamp is lit.		
[OFF]	The camera does not draw power from connected devices at any time.		

- · USB power delivery is available from:
 - An optional EH-8P AC adapter connected using the supplied USB cable (featuring Type C connectors at both ends),

- Computers with built-in Type C USB ports (requires the supplied USB cable featuring Type C connectors at both ends), and
- Portable chargers (power banks).
- Power will only be supplied to the camera when the battery is inserted.
- A USB power delivery icon appears in the shooting display when the camera is powered by an external source.



Computer USB power delivery

- Before using a computer to supply power to the camera, check that the computer is equipped with a Type C USB connector. Use the USB cable supplied with the camera (featuring Type C connectors at both ends) to connect the camera to the computer.
- Depending on the model and product specifications, some computers will not supply current to power the camera.

Tip: "Power delivery" versus "charging"

The supply of power for camera operations is referred to as "power delivery", while the term "charging" is used when power is supplied only to charge the camera battery. The conditions under which the power supplied by external devices is used to power the camera or charge the battery are shown below.

Option selected for [USB power delivery]	Power switch	External power source used for
	On (standby timer active)*	Power delivery
[ON]	On (standby timer off)	Charging
	Off	Charging
	On (standby timer active)*	_
[OFF]	On (standby timer off)	Charging
	Off	Charging

Includes instances in which the power switch is in the "OFF" position but Bluetooth upload is in progress or the memory card access lamp is lit.

Energy saving (photo mode)

MENU button → Y setup menu

In photo mode, the shooting display will turn off to save power approximately 15 seconds before the standby timer expires.

Option	Description		
[ON]	Enable energy saving. The display refresh rate may drop.		
[OFF]	Disable energy saving. Note selecting [OFF] does not stop the shooting display dimming a few seconds before the standby timer expires.		

Energy saving

- · Note that even when [ON] is selected, energy saving will not function:
 - if [No limit] is selected for Custom Setting c3 [Power off delay] >
 [Standby timer] or if the delay selected is less than 30 seconds,
 - in self-portrait mode,
 - during zoom,
 - while the camera is connected to another device via HDMI,
 - while the camera is connected to and exchanging data with a computer or smart device via USB, or
 - while the camera is connected to an AC adapter.
- Selecting [OFF] increases the drain on the battery.

Slot empty release lock

MENU button ⇒ 🕆 setup menu

Choose whether the shutter can be released when no memory card is inserted in the camera.

Option Description		Description
LOCK	[Release locked]	The shutter cannot be released when no memory card is inserted.
0K	[Enable release]	The shutter can be released with no memory card inserted. No pictures will be recorded; during playback, the camera displays [Demo].

Save/load menu settings

MENU button ⇒ Y setup menu

Save current camera menu settings to a memory card. You can also load saved settings, allowing menu settings to be shared among cameras of the same model.

Settings that can be saved and loaded

• The following settings are saved:

Settings that can be saved and loaded	
	[File naming]
	[Choose image area]
	[Tone mode]
	[Image quality]
	[Image size]
	[RAW recording]
	[ISO sensitivity settings]
	[White balance]
	[Set Picture Control] (Custom Picture Controls
	are saved as [Auto])
PHOTO SHOOTING MENU	[Set Picture Control (HLG)]
	[Color space]
	[Active D-Lighting]
	[Long exposure NR]
	[High ISO NR]
	[Vignette control]
	[Diffraction compensation]
	[Auto distortion control]
	[Skin softening]
	[Portrait impression balance]

Settings that can be saved and loaded		
	[Photo flicker reduction]	
	[High-frequency flicker reduction]	
	[Metering]	
	[Flash control]	
	[Flash mode]	
	[Flash compensation]	
PHOTO SHOOTING MENU	[Focus mode]	
	[AF-area mode]	
	[AF/MF subject detection options]	
	[MF subject detection area]	
	[Vibration reduction] (the options available vary with the lens)	
	[Auto bracketing]	
	[File naming]	
	[Video file type]	
	[Frame size/frame rate]	
	[ISO sensitivity settings]	
VIDEO RECORDING MENU	[White balance]	
WIDEO NECONOSING MENO	[Set Picture Control] (Custom Picture Controls are saved as [Auto])	
	[HLG quality]	
	[Active D-Lighting]	
	[High ISO NR]	

Settings that can be saved and loaded	
	[Vignette control]
	[Diffraction compensation]
	[Auto distortion control]
	[Skin softening]
	[Portrait impression balance]
	[Video flicker reduction]
	[High-frequency flicker reduction]
	[Metering]
	[Focus mode]
	[AF-area mode]
VIDEO RECORDING MENU	[AF/MF subject detection options]
VIDEO NECONDING MENO	[Product review mode]
	[MF subject detection area]
	[Video self-timer]
	[Vibration reduction] (the options available vary with the lens)
	[Electronic VR]
	[Microphone sensitivity]
	[Attenuator]
	[Frequency response]
	[Wind noise reduction]

[Mic jack plug-in power]

Settings that can be saved and loaded		
VIDEO RECORDING MENU	[Headphone volume]	
	[Timecode] (excepting [Timecode origin])	
	[External rec. cntrl (HDMI)]	
	[Hi-Res Zoom]	
CUSTOM SETTINGS MENU	All items	
	[Playback display options]	
	[Filtered playback criteria]	
	[Series playback]	
PLAYBACK MENU	[Picture review]	
PLAYBACK MENU	[After delete]	
	[After burst, show]	
	[Record camera orientation]	
	[Auto-rotate pictures]	
	[Language]	
	[Time zone and date] (except [Date and time])	
	[Viewfinder display size]	
	[Limit monitor mode selection]	
SETUP MENU	[Auto rotate info display]	
	[REC lamp brightness]	
	[Non-CPU lens data]	
	[Distance units]	
	[Save focus position]	

Settings that can be saved and loaded	
	[Save zoom position (PZ lenses)]
	[Image comment]
	[Copyright information]
	[IPTC]
	[Ω/@ connector function]
	[Voice memo options]
	[Camera sounds]
SETUP MENU	[Silent mode]
	[Touch controls]
	[Self-portrait mode]
	[HDMI]
	[USB connection priority]
	[USB power delivery]
	[Energy saving (photo mode)]
	[Slot empty release lock]
MY MENU	The current contents of "My Menu"
IVIY MENU	[Choose tab]
RECENT SETTINGS	The current contents of the recent settings menu (up to 20 items)
	[Choose tab]

Save menu settings

Save settings to a memory card. If the card is full, an error will be displayed and settings will not be saved. Saved settings can only be used with other cameras of the same model.

Load menu settings

Load saved settings from a memory card. Note that [Load menu settings] is available only when a memory card containing saved settings is inserted.

Caution: Saved settings

Settings are saved to files named "NCSET***". "***" is an identifier that varies from camera to camera. The camera will not be able to load settings if the file name is changed.

Reset all settings

MENU button ➡ 🎖 setup menu

Reset all settings except [Language] and [Time zone and date] to their default values. Copyright information and other user-generated entries are also reset. Once reset, settings cannot be restored.

We recommend that you save settings using the [Save/load menu settings] item in the setup menu before performing a reset.

Firmware version

MENU button ⇒ Y setup menu

View the current camera firmware version. If new firmware for the camera is on a memory card, you can update the firmware.

- The camera displays firmware versions for the camera and attached accessories as follows. Only accessories currently connected to the camera are listed.
 - C: Camera firmware
 - LF/MA: Lens (LF) or mount adapter (MA) firmware
 - S: Flash firmware
 - TC: Teleconverter firmware
 - RG: Remote grip firmware

Tip: Updating the firmware

Update your camera as follows:

- Download firmware from the Nikon Download Center using a computer: Check the Nikon Download Center for new firmware. For more information, see the firmware download page.
- Download firmware via the SnapBridge app on a smart device: If the smart device has been paired with the camera using the SnapBridge app, the app will automatically notify you when updates become available, and you can then download the update to a camera memory card via the smart device. For more information, see the SnapBridge app's online help. SnapBridge may not display the notification at the same time that updates are made available on the Nikon Download Center.
- Download firmware to the camera from Nikon Imaging Cloud: If the camera receives a firmware version update notification from Nikon Imaging Cloud, [Update (from Nikon Imaging Cloud)] appears in the [Firmware version] menu. Highlight [Update (from Nikon Imaging Cloud)] > [On] and press () to download the firmware to the camera via the Internet. The update will start automatically after the download is complete.
 - If a new camera firmware is available for download from Nikon Imaging Cloud, notification marks will appear on the setup menu tab and [Firmware version] item in the camera menu.



Auto update

If you select [**On**] and specify a time, the camera automatically connects to Nikon Imaging Cloud at the set time each day and will automatically download and perform a firmware update, if available. Auto update is enabled only when all the following conditions are met:

- The camera sign-in setting is enabled in Nikon Imaging Cloud.
- The camera power switch is in the "OFF" position.
- · The camera is being supplied with power using the following:
 - An optional EH-8P AC adapter connected using the supplied USB cable (featuring Type C connectors at both ends)
 - Portable chargers (power banks)

The network menu

To view the network menu, select the @ tab in the camera menus.



Compatible services and devices

- The network menu introduces menu items for connecting to the following services and devices:
 - Nikon Imaging Cloud,
 - smart devices.
 - ML-L7 remote controls.
 - commercially available Bluetooth remote controls,
 - computers,
 - FTP servers,
 - other cameras, and
 - Atomos UltraSync BLUE AirGlu accessories.
- The camera can connect to only one type of device at a time and cannot
 connect to multiple different devices simultaneously. For example,
 attempting to connect to a smart device while connected to a computer
 displays a message to end the connection. Highlight [Yes] and press
 on the connection to the computer and make the connection to the
 smart device available.

The network menu contains the following items:

Item	ш
[Airplane mode]	741
[Nikon Imaging Cloud]	741
[Connect to smart device]	745

<u></u>	
ltem	ш
[Wireless remote (ML-L7) options]	749
[Bluetooth remote cntrl options]	750

Item	ш
[Connect to computer]	752
[Connect to FTP server]	756
[Connect to other cameras]	761
[ATOMOS AirGlu BT options]	764

Item	m
[USB]	767
[Router frequency band]	768
[MAC address]	768

Airplane mode

MENU button → ⊕ network menu

Select [**ON**] to disable the camera's built-in Bluetooth and Wi-Fi functions and connection with optional ML-L7 remote controls.

Nikon Imaging Cloud

MENU button → ⊕ network menu

Use to connect the camera and Nikon Imaging Cloud, Nikon's cloud service, via a wireless router. Highlight [Nikon Imaging Cloud] in the network menu and press ③ to display [About Nikon Imaging Cloud] automatically when no network profiles to connect with the wireless router are available in the camera (\square 744).



Connect to Nikon Imaging Cloud

Choose whether to enable a wireless connection with Nikon Imaging Cloud.

- When no network profiles to connect with the wireless router are available in the camera, you can create profiles and add them to the camera (\$\sum421\$).
- If a network profile already exists, highlight [Use existing profile] and press ③ to select a profile to use. This item can also be used to choose from existing network profiles.

Wi-Fi settings

- When no network profiles to connect with the wireless router are available in the camera, you can create profiles and add them to the camera (\$\sum421\$).
- If a network profile already exists, choose the profile and press the ⊗ button to connect.
- · To edit an existing profile, highlight it and press .

Option	Description
[Connect automatically]	Choose whether to connect automatically when the camera detects a configured Wi-Fi network.
[TCP/IP]	Adjust the TCP/IP settings. An IP address is required. If [ON] is selected for [Obtain automatically], the IP address and sub-net mask will be acquired via a DHCP server or automatic IP addressing. Select [OFF] to enter the IP address ([Address]) and sub-net mask ([Mask]) manually.

Connection options

Adjust connection and upload settings.

■ Only when powered via USB

Select [**ON**] to limit automatic Wi-Fi connections to Nikon Imaging Cloud to when powered via USB.

■ Connect to Cloud while off

Select **[ON]** to maintain Wi-Fi connections even when the camera is turned off.

II Inactive connection timeout

Select **[ON]** to end Wi-Fi connections when Wi-Fi communications are unavailable for a certain period of time.

Photo upload

Select **[ON]** to automatically send photos from the camera to Nikon Imaging Cloud when shooting images that are configured by **[Photo upload options]**.

Photo upload options

Configure image sending settings from the camera to Nikon Imaging

■ Auto select for upload

Select [ON] to mark new photos for upload as they are taken.

- · Videos cannot be uploaded to Nikon Imaging Cloud.
- Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera.

■ Upload RAW + JPEG as

When uploading RAW + JPEG pictures, choose whether to upload both the NEF (RAW) and JPEG files or only the NEF (RAW) or JPEG copy.

■■ Upload RAW + HEIF as

When uploading RAW + HEIF pictures, choose whether to upload both the NEF (RAW) and HEIF files or only the NEF (RAW) or HEIF copy.

II Upload folder

Mark all photos in a selected folder for upload. Marking will be applied to all photos, regardless of whether they have been uploaded previously.

· Videos cannot be uploaded to Nikon Imaging Cloud.

■ Deselect all?

Remove upload marking from all pictures. Upload of images with an "uploading" icon will immediately be terminated.

View errors

Error details and codes will be displayed if an error occurs during a connection or attempted connection to Nikon Imaging Cloud. Use the QR code displayed or the following URL to view the website when troubleshooting.

https://onlinemanual.nikonimglib.com/troubleshooting/en/

About Nikon Imaging Cloud

A QR code and URL will be displayed to browse Nikon Imaging Cloud from the web browser of a computer or smart device.

Unlink Nikon Imaging Cloud

Delete Nikon Imaging Cloud connection information.

- Delete connection information before discarding this product or transferring ownership to another person.
- If the connection information is deleted, images marked for upload to Nikon Imaging Cloud will no longer be sent.

 To re-connect the camera and Nikon Imaging Cloud after deleting connection information, set [Connect to Nikon Imaging Cloud] to [ON] and create a new network profile (□421).

Tip: Notifications from Nikon Imaging Cloud

In the following cases, notification marks as shown will appear on the menu tabs and menu items in the camera menu. When a menu with a notification mark is selected for display, the mark will disappear.



- When there is a difference between the Picture Controls added to the camera and the Picture Controls in Nikon Imaging Cloud.
- When new camera firmware can be downloaded from Nikon Imaging Cloud.
- · When an auto firmware update was performed.
- When there is an error notification related to connection or coordination between the camera and Nikon Imaging Cloud.

Connect to smart device

MENU button ➡ @ network menu

Connect to smartphones or tablets (smart devices) via Bluetooth or Wi-Fi.



Pairing (Bluetooth)

Pair with or connect to smart devices using Bluetooth.

Option	Description
[Start pairing]	Pair the camera with a smart device (□348).
[Paired devices]	List paired smart devices. To connect, select a device from the list.
[Bluetooth connection]	Select [ON] to enable Bluetooth.

Select pictures for upload

Select pictures for upload to a smart device. You can also opt to upload pictures as they are taken.

Option	Description
[Auto select for upload]	Select [ON] to upload pictures as they are taken.
[Manually select for upload]	Upload selected pictures. Transfer marking appears on the selected pictures.
[Deselect all]	Cancel upload of all pictures currently selected for transfer.

Wi-Fi connection (AP mode)

Connect directly to smart devices in Wi-Fi access point mode.

■ Establish Wi-Fi connection

Initiate a Wi-Fi connection to a smart device in Wi-Fi access point mode.

 The camera SSID and password will be displayed. To connect, select the camera SSID on the smart device and enter the password (□352).

- Once a connection is established, this option will change to [Close Wi-Fi connection].
- · Use [Close Wi-Fi connection] to end the connection when desired.

■ Wi-Fi connection settings

Access the following Wi-Fi settings:

Option	Description
[SSID]	Choose the camera SSID.
[Authentication/ encryption]	Choose [OPEN], [WPA2-PSK], [WPA3-SAE], or [WPA2-PSK/WPA3-SAE].
[Password]	Choose the camera password.
[Channel]	Choose a channel. Select [Auto] to have the camera choose the channel automatically. Select [Manual] to choose the channel manually.
[Current settings]	View current Wi-Fi settings.
[Reset connection settings]	Select [Yes] to reset Wi-Fi settings to default values.

Wi-Fi connection (STA mode)

Add camera network profiles. This item can also be used to choose from existing network profiles.

■ Create profile

Create new network profiles (\$\square\$354).

• If more than one profile already exists, you can press ® to choose a profile and connect to the selected network.

• To edit an existing profile, highlight it and press .

Option	Description
[General]	 • [Profile name]: Rename the profile. • [Password protection]: Select [On] to require that a password be entered before the profile can be changed. To change the password, highlight [On] and press ⊕.
[TCP/IP]	Adjust the TCP/IP settings. An IP address is required. If [ON] is selected for [Obtain automatically], the IP address and sub-net mask will be acquired via a DHCP server or automatic IP addressing. Select [OFF] to enter the IP address ([Address]) and sub-net mask ([Mask]) manually.

II End current connection

End the connection to the current network.

Upload while off

If **[ON]** is selected, upload of pictures to smart devices via wireless connections will continue even when the camera is off

Location data (smart device)

Display latitude, longitude, altitude, and UTC (Universal Coordinated Time) data downloaded from a smart device.

- For information on downloading location data from smart devices, see the online help for the SnapBridge app.
- Note that the camera may be unable to download or display location data from smart devices depending on the version of the device operating system and/or SnapBridge app used.

Wireless remote (ML-L7) options

MENU button → ⊕ network menu

Connect to optional ML-L7 remote controls via Bluetooth. You can also assign roles to the **Fn1/Fn2** buttons on the ML-L7.

 For information on connecting to remote controls and on the features they support, see "ML-L7 Remote Control" (□837) in the section on "Other compatible accessories".



Wireless remote connection (ML-L7)

Option	Description
[ON]	Connect to the ML-L7 with which the camera has most recently been paired.
[OFF]	End an existing connection to an ML-L7.

Save wireless remote controller

Pair the camera with an ML-L7 (\$\square\$841).

Delete wireless remote controller

End pairing between the camera and the remote control.

Assign Fn1 button/Assign Fn2 button

Choose the role assigned to the Fn1 or Fn2 button on the ML-L7.

Option	Description
[Playback]	Press the button to start playback. Pressing the button while playback is in progress ends playback and returns you to the shooting display.
[Launch menu]	Press the button to display the menu screen.
[Launch [] menu]	Press the button to display the $m{i}$ menu.
[None]	Pressing the button has no effect.

Bluetooth remote cntrl options

MENU button → ⊕ network menu

Use when connecting to a commercially available Bluetooth remote control.

- Before using a Bluetooth remote control for the first time, it must be paired with the camera.
- Only one Bluetooth remote control can be paired per camera. Only the last paired Bluetooth remote control is enabled.
- The following Bluetooth remote control has been tested and approved for use:
 - SmallRig SR-RG2 Wireless Shooting Grip
- Also see the documentation supplied with the Bluetooth remote control.

Bluetooth remote cntrl connection

Option	Description
[ON]	Start connecting a paired Bluetooth remote control.
[OFF]	End the connection with a Bluetooth remote control.

Save wireless remote controller

Pair with a Bluetooth remote control.

■ Connecting with a commercially available Bluetooth remote control

When using the Bluetooth remote control for the first time, you must pair it with the camera.

- Select [Bluetooth remote cntrl options] > [Save wireless remote controller] in the network menu and press

 .
 - · The camera will enter pairing mode.



- **2** Perform the pairing operation from the Bluetooth remote control.
 - $\boldsymbol{\cdot}$ The camera and Bluetooth remote control will start pairing.
 - When pairing is complete, the camera and Bluetooth remote control will be connected. a and Θ will appear in the shooting display.



Tip: Connecting to a paired Bluetooth remote control

Once a Bluetooth remote control has been paired with the camera, you can connect from the camera by simply setting [Bluetooth remote cntrl connection] to [ON].

Delete wireless remote controller

Delete a paired Bluetooth remote control.

Connect to computer MENU button → @ network menu

Connect to computers via wireless LAN.



Network settings

Add camera network profiles. This item can also be used to choose from existing network profiles.

II Create profile

Create new network profiles (\$\mu370\$, \$\mu378\$).

- If more than one profile already exists, you can press
 on choose a
 profile and connect to the selected network.
- To edit an existing profile, highlight it and press .

Option	Description
[General]	 [Profile name]: Rename the profile. [Password protection]: Select [On] to require that a password be entered before the profile can be changed. To change the password, highlight [On] and press .
[Wireless]	Display connection settings for connection to wireless networks. • Wi-Fi station mode: Adjust settings for connection to a network via a router. - [SSID]: Enter the network SSID. - [Channel]: Selected automatically. - [Authentication/encryption]: Select the type of encryption used on the wireless network. - [Password]: Enter the network password. • Wi-Fi access point mode: Adjust settings for direct wireless connection to the camera. - [SSID]: Choose the camera SSID. - [Channel]: Choose [Auto] or [Manual]. - [Authentication/encryption]: Select the type of encryption used on the wireless network. - [Password]: If an option other than [OPEN] is selected for [Authentication/encryption], this item can be used to change the camera password.
[TCP/IP]	Adjust the TCP/IP settings for the Wi-Fi station mode network profiles. An IP address is required. • If [ON] is selected for [Obtain automatically], the IP address and sub-net mask will be acquired via a DHCP server or automatic IP addressing. • Select [OFF] to enter the IP address ([Address]) and sub-net mask ([Mask]) manually.

■ Copy to/from card

Share network profiles.

Option	Description
[Copy profile from card]	Copy profiles from the root directory of the memory card to the camera profile list.
[Copy profile to card]	Copy profiles from the camera to the memory card. Highlight a profile and press ® to copy it to the memory card. • Password-protected profiles cannot be copied.

II End current connection

End the connection to the current network.

Connection type

Choose an operating mode for use when the camera is connected to a network.

Option	Description
[Picture transfer]	Upload photos to a computer as they are taken or upload existing pictures from the camera memory card.
[Camera control]	Use NX Tether software to control the camera and take pictures remotely from a computer.

Options

Adjust upload settings.

Auto upload

Select [ON] to mark new photos for upload as they are taken.

 Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera. Videos are not uploaded automatically. They must instead be uploaded from the playback display (\$\square\$275).

■ Delete after upload

Select [**ON**] to delete photographs from the camera memory card automatically once upload is complete.

- · Files marked for transfer before you selected [ON] are not deleted.
- · Deletion may be suspended during some camera operations.

■ Upload RAW + JPEG as

When uploading RAW + JPEG pictures, choose whether to upload both the NEF (RAW) and JPEG files or only the NEF (RAW) or JPEG copy.

■ Upload RAW + HEIF as

When uploading RAW + HEIF pictures, choose whether to upload both the NEF (RAW) and HEIF files or only the NEF (RAW) or HEIF copy.

■ Upload folder

Mark all photos in a selected folder for upload. Marking will be applied to all photos, regardless of whether they have been uploaded previously.

 Videos will not be marked for upload. They must instead be uploaded from the playback display.

■ Deselect all?

Remove upload marking from all pictures. Upload of pictures with an "uploading" icon will immediately be terminated.

Connect to FTP server

MENU button

→

network menu

Connect to FTP servers via wireless LAN.

Network settings

Add camera network profiles. This item can also be used to choose from existing network profiles.

II Create profile

Create new network profiles (\$\square\$388).

- If more than one profile already exists, you can press
 on choose a
 profile and connect to the selected network.
- To edit an existing profile, highlight it and press .

Option	Description
[General]	 [Profile name]: Rename the profile. [Password protection]: Select [On] to require that a password be entered before the profile can be changed. To change the password, highlight [On] and press .

Option	Description		
	Display connection settings for connection to wireless networks.		
	• Wi-Fi station mode: Adjust settings for connection to a		
	network via a router.		
	- [SSID]: Enter the network SSID.		
	- [Channel]: Selected automatically.		
	- [Authentication/encryption]: Select the type of encryption		
	used on the wireless network.		
	- [Password]: Enter the network password.		
[Wireless]	• Wi-Fi access point mode: Adjust settings for direct wireless		
	connection to the camera.		
	- [SSID]: Choose the camera SSID.		
	- [Channel]: Choose [Auto] or [Manual].		
	- [Authentication/encryption]: Select the type of encryption		
	used on the wireless network.		
	- [Password]: If an option other than [OPEN] is selected for		
	[Authentication/encryption], this item can be used to		
	change the camera password.		
	Adjust the TCP/IP settings for the Wi-Fi station mode network		
	profiles. An IP address is required.		
	• [Obtain automatically]: If [ON] is selected, the IP address and		
	sub-net mask will be acquired via a DHCP server or automatic		
[TCD/ID]	IP addressing. Select [OFF] to enter the IP address ([Address])		
[TCP/IP]	and sub-net mask ([Mask]) manually.		
	• [Gateway]: Enter the network's default gateway address, if		
	required.		
	• [Domain Name Server (DNS)]: If a DNS is present on the		
	same network as the FTP server, enter its address.		

Option	Description	
[FTP]	• [Server type]: Choose the FTP server type and enter the URL or IP address, destination folder, and port number. An IP address is required. • [PASV mode]: Select [ON] to enable PASV mode. • [Anonymous login]: Select [ON] for anonymous login. This option can only be used with servers that are configured for anonymous login. Select [OFF] to supply a user ID and password. • [Proxy server]: Enable this option as required.	

■ Copy to/from card

Share network profiles.

Option	Description
[Copy profile from card]	Copy profiles from a memory card to the camera profile list. Highlight a profile and press ® to copy it to the camera profile list.
[Copy profile to card]	Copy profiles from the camera to the memory card. Highlight a profile and press ③ to display the [Choose destination] screen. Highlight a destination and press ③ to copy the profile to the memory card. • Password-protected profiles cannot be copied.

■ End current connection

End the connection to the current network.

Options

Adjust upload settings.

II Auto upload

Select [ON] to mark new photos for upload as they are taken.

- Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera.
- Videos are not uploaded automatically. They must instead be uploaded from the playback display (\$\square\$275).

■ Delete after upload

Select **[ON]** to delete photographs from the camera memory card automatically once upload is complete.

- · Files marked for transfer before you selected [ON] are not deleted.
- · Deletion may be suspended during some camera operations.

■ Upload RAW + JPEG as

When uploading RAW + JPEG pictures, choose whether to upload both the NEF (RAW) and JPEG files or only the NEF (RAW) or JPEG copy.

■ Upload RAW + HEIF as

When uploading RAW + HEIF pictures, choose whether to upload both the NEF (RAW) and HEIF files or only the NEF (RAW) or HEIF copy.

■ Overwrite if same name

Choose [**ON**] to overwrite files with duplicate names during upload. Choose [**OFF**] to add numbers to the names of newly uploaded files as necessary to prevent existing files being overwritten.

■ Protect if marked for upload

Select **[ON]** to automatically protect files marked for upload. Protection is removed as the files are uploaded.

II Upload marking

Select **[ON]** to add a timestamp to the pictures on the camera memory card giving the time of upload.

■ Upload folder

Mark all photos in a selected folder for upload. Marking will be applied to all photos, regardless of whether they have been uploaded previously.

 Videos will not be marked for upload. They must instead be uploaded from the playback display.

■ Deselect all?

Remove upload marking from all pictures. Upload of images with an "uploading" icon will immediately be terminated.

■ Keep connection

Select [**ON**] to perform network connection processing after about 15 seconds when a wireless error, TCP/IP error, or FTP error occurs and prevents a network connection. Connection processing repeats until the camera connects to the network.

 If [ON] is selected, the standby timer will not expire regardless of the option selected for Custom Setting c3 [Power off delay] > [Standby timer]. This increases drain on the battery.

■ Manage root certificate

Load or manage root certificates used for connection to FTPS servers.

 Contact the network administrator for the FTPS server in question for information on acquiring root certificates.

Option	Description	
[Import root certificate]	Import a root certificate to the camera from a memory card. • The certificate must be in the card's root (top) directory. • The camera can import root certificate files named "ROOT.CER", "ROOT.CRT", or "ROOT.PEM". • Only one root certificate can be stored on the camera at a time. The existing certificate is overwritten when a new certificate is imported. • Connections established using self-signed root certificates may not be trustworthy.	
[Delete root certificate]	Delete the current root certificate from the camera.	
[View root certificate]	View the camera's current root certificate.	
[Connect if authentication fails]	Select [ON] to ignore certain authentication errors.	

Connect to other cameras

MENU button → ⊕ network menu

Connect to other cameras for shutter or clock synchronization.

Synchronized release

Select **[ON]** to synchronize the shutter release with those of cameras on the same network.

Network settings

Add camera network profiles. This item can also be used to choose from existing network profiles.

■ Create profile

Create new network profiles (\$\square\$436).

- If more than one profile already exists, you can press ® to choose a profile and connect to the selected network.
- To edit an existing profile, highlight it and press .

Option	Description
[General]	 • [Profile name]: Rename the profile. • [Password protection]: Select [On] to require that a password be entered before the profile can be changed. To change the password, highlight [On] and press ⊕.
[TCP/IP]	Adjust the TCP/IP settings. An IP address is required. If [ON] is selected for [Obtain automatically], the IP address and sub-net mask will be acquired via a DHCP server or automatic IP addressing. Select [OFF] to enter the IP address ([Address]) and sub-net mask ([Mask]) manually.

■ Copy to/from card

Share network profiles.

Option	Description	
[Copy profile from card]	Copy profiles from the root directory of the memory card to the camera profile list.	
[Copy profile to card]	Copy profiles from the camera to the memory card. Highlight a profile and press ® to copy it to the memory card. • Password-protected profiles cannot be copied.	

■ End current connection

End the connection to the current network.

Master/remote

Choose a role for each camera from "master" and "remote". Pressing the shutter-release button on the master camera releases the shutters on all remote cameras that are both on the same network and in the same group.

Group settings

Set a group of cameras to perform synchronized release.

- This can only be set when [Master/remote] is set to [Master camera].
- · Highlight a created group and press () to change the group settings.

Option	Description
[Display name]	Set a name to be displayed when selecting a group. Display names can be up to 32 characters long.
[Group name]	Set a group name. Group names can be up to 8 characters long.
[Remote camera list]	Check the status of remote cameras (□449).

II New

Create a group of cameras to perform synchronized release (\$\subset\$436).

■ Copy to/from card

Share groups of cameras to perform synchronized release.

Option	Description	
[Copy to camera]	Copy groups from a memory card to the camera profile list. Highlight a group and press ® to copy it to the camera profile list.	
[Copy to card]	Copy groups from the camera to the memory card. Highlight a group and press to display the [Choose destination] screen. Highlight a destination and press to copy the group to the memory card.	

Group name

Set a group name for the remote cameras. Shutter release is synchronized across the cameras on the network that are in the same group.

This can only be set when [Master/remote] is set to [Remote camera].

Synchronize date and time

Set the clocks on the remote cameras to the date and time reported by the master camera (\square 451).

Overwrite copyright info

Performing this function will overwrite the copyright information of the remote cameras in the currently connected group with the copyright information set in the master camera.

ATOMOS AirGlu BT options

MENU button → ⊕ network menu

Manage wireless Bluetooth connections between the camera and Atomos UltraSync BLUE AirGlu accessories.

 The UltraSync BLUE can be used for simultaneous wireless connections to multiple compatible cameras or audio recorders. Time codes are transmitted to the connected devices from the UltraSync BLUE, synchronizing time codes even across devices from a mix of manufacturers. For information on the maximum number of simultaneous connections, see the Atomos website.

Option	Description	
[Connect to ATOMOS AirGlu BT]	Establish a wireless Bluetooth connection to a previously-paired UltraSync BLUE.	
[Save ATOMOS AirGlu BT pairing info]	Pair the camera with the UltraSync BLUE. The camera name will be displayed in the camera monitor. Use the controls on the UltraSync BLUE to pair it with the camera. For more information, see the documentation for the UltraSync BLUE.	
[Delete ATOMOS AirGlu BT pairing info]	End the wireless connection between the camera and	
[Camera]	Choose the name under which the camera is listed on the UltraSync BLUE.	

- After establishing a wireless connection to the UltraSync BLUE, select
 [On] or [On (with HDMI output)] for [Timecode] > [Record
 timecodes] in the video recording menu to start receiving time
 codes. The time codes will appear in the camera shooting display.
- If no time code is received, the shooting display will show "--:--:--" (or "00:00:00:00" when an external device is connected via HDMI). No time codes will be recorded if filming is begun at this stage.

Cautions: Using the UltraSync BLUE

- Time codes will not be recorded if [H.264 8-bit (MP4)] is selected for [Video file type] in the video recording menu.
- The UltraSync BLUE allows users to choose the frame rate. If the value is not a match for that chosen with the camera, time codes will not be recorded or output via HDMI. Match the frame rate for the UltraSync BLUE to the video recording frame rate as follows:

Video recording frame rate	UltraSync BLUE frame rate
120p, 60p, 30p	29.97 fps, 29.97 fps DF
100p, 50p, 25p	25 fps
24p	23.98 fps

- Select 29.97 fps DF for drop-frame recording.
- See the documentation for the UltraSync BLUE for information on choosing a frame rate.
- The options selected for [Timecode] > [Count-up method], [Timecode origin], and [Drop frame] in the video recording menu cannot be changed while the camera has a wireless connection to the UltraSync BLUE.
- If the camera loses the wireless connection to the UltraSync BLUE while
 filming is in progress, it will continue to record time codes until the end of
 the current shot, although the time code shown in the shooting display
 will switch to "--:----- about 60 seconds after the connection is lost. The
 time code will reappear when the wireless connection to the UltraSync
 BLUE is re-established.
- The wireless connection to the UltraSync BLUE will end when the camera is turned off or the standby timer expires. We recommend choosing [No limit] for Custom Setting c3 [Power off delay] > [Standby timer].

USB

MENU button ⇒ ⊕ network menu

Adjust settings for connection to other devices via USB.

- Select [MTP/PTP] when connecting to computers or Android devices via USB.
- Select [iPhone] when connecting the camera and iPhone via one of the following cables to use NX MobileAir.
 - Use the USB cable supplied with the camera when using a USB cable featuring Type C connectors at both ends.
 - See the NX MobileAir online help for information on compatible cables when using a USB-C to Lightning cable.
- Select [USB streaming (UVC/UAC)] to perform streaming by connecting the camera to a computer using a USB cable.

Caution: [iPhone]

Whether or not the camera is connected to an iPhone, selecting [iPhone] will disable the features listed below. To access these features, select [MTP/PTP].

- · Built-in camera network functions
- Powering the camera or charging the battery from an optional EH-8P AC adapter or via USB

Router frequency band

MENU button → ⊕ network menu

Choose the band for the selected SSID when connecting to a wireless network in Wi-Fi station mode. Select [2.4 GHz/5 GHz] to connect to networks operating on either band.



- When the camera searches for networks active in the vicinity, it will list only those operating on the chosen band or bands.
- · The band is listed to the left of the network SSID.
- If you select [2.4 GHz/5 GHz] when connecting via wireless routers that operate on both bands, the list will include the SSIDs in the band or bands detected by the camera.

MAC address

MENU button → @ network menu

View the MAC address.

My Menu/Recent settings

To view [MY MENU], select the ⇒ tab in the camera menus.



My Menu: Creating a custom menu

My Menu can be used to create and edit a customized list of up to 20 items from the playback, photo shooting, video recording, Custom Settings, setup, network, and retouch menus. Options can be added, deleted, and reordered as described below.

■ Adding items to My Menu

1 Select [Add items] in [➡ MY MENU].



Highlight [Add items] and press ③.

2 Select a menu.



Highlight the name of the menu containing the item you wish to add and press **③**.

3 Select an item.



Highlight the desired menu item and press ®.

4 Position the new item.



Press $\textcircled{\bullet}$ or $\textcircled{\bullet}$ to position the new item and press $\textcircled{\bullet}$ to add it to My Menu.

 
5 Add more items.



- The items currently displayed in My Menu are indicated by a check mark (\checkmark).
- · Items indicated by a \(\square\) icon cannot be selected.
- · Repeat Steps 1-4 to select additional items.

■ Removing items from My Menu

- 1 Select [Remove items] in [➡ MY MENU]. Highlight [Remove items] and press ⊕.
- 2 Select items.



- · Highlight items and press → or → to select (☑) or deselect.
- $\boldsymbol{\cdot}$ Continue until all the items you wish to remove are selected ($\boldsymbol{\checkmark}$).

3 Remove the selected items.



Press m; a confirmation dialog will be displayed. Press ™ to remove the selected items

Removing items while in My Menu

Items can also be removed by highlighting them in [**⇒ MY MENU**] and pressing the **m** button; a confirmation dialog will be displayed. Press the **m** button again to remove the selected item.

■ Reordering items in My Menu

- 1 Select [Rank items] in [➡ MY MENU]. Highlight [Rank items] and press ⊕.
- 2 Select an item.



Highlight the item you wish to move and press .

 
3 Position the item.



- · Press or to move the item up or down in My Menu and press -.
- · Repeat Steps 2–3 to reposition additional items.

4 Exit to [MY MENU].

Press the MENU button to return to [**⇒ MY MENU**].





■ Displaying [RECENT SETTINGS]

1 Select [Choose tab] in [MY MENU].



Highlight [Choose tab] and press .

2 Select [₹ RECENT SETTINGS].



- · Highlight [♣ RECENT SETTINGS] in the [Choose tab] menu and press ⊛.
- The name of the menu will change from [MY MENU] to [RECENT SETTINGS] and the tab icon will change from ⇒ to ⊸.

Recent settings: Accessing recently-used settings

■ How items are added to [RECENT SETTINGS]

Menu items are added to the top of the [RECENT SETTINGS] menu as they are used. The twenty most recently-used settings are listed.



Removing items from the recent settings menu

To remove an item from the [RECENT SETTINGS] menu, highlight it and press the m button; a confirmation dialog will be displayed. Press m button again to remove the selected item.

Displaying My Menu

Selecting [RECENT SETTINGS] > [Choose tab] menu displays the items shown in Step 2 of "Displaying [RECENT SETTINGS]" (□774). Highlight [➡MY MENU] and press ⊗ to view My Menu.

Troubleshooting

Before contacting customer support

You may be able to resolve any issues with the camera by following the steps below. Check this list before consulting your retailer or Nikonauthorized service representative.

Check the list of common problems.

STEP 1

Common problems and solutions are listed in the following sections:

- * "Problems and solutions" (\$\square\$778)
- · "Alerts and error messages" (□790)



Turn the camera off and remove the battery, then wait about a minute, re-insert the battery and turn the camera on.

STEP 2

The camera may continue to write data to the memory card after shooting. Wait at least a minute before removing the battery.



Search Nikon websites.

STEP 3

- For support information and answers to frequently asked questions, visit the website for your country or region (□42).
- To download the latest firmware for your camera, visit: https://downloadcenter.nikonimglib.com/



CTED 4 Consult a Nikon-authorized service representative.

Restoring default settings

- · Depending on current settings, some menu items and other features may be unavailable. To access menu items that are grayed out or features that are otherwise unavailable, try restoring default settings using the [Reset all settings] item in the setup menu.
- · Note, however, that wireless network profiles, copyright information, and other user-generated entries will also be reset. Once reset, settings cannot be restored.

Problems and solutions

Solutions to some common issues are listed below.

Battery/display

• The camera is on but does not respond:

- · Wait for recording and other operations to end.
- · If the problem persists, turn the camera off.
- · If the camera does not turn off, remove and reinsert the battery.
- · If you are using an AC adapter, disconnect and reconnect the AC adapter.
 - Any data currently being recorded will be lost.
 - Data that have already been recorded are not affected by removing or disconnecting the power source.

The viewfinder or monitor does not turn on:

- Have you changed the monitor mode? Choose a different monitor mode using the |□| button.
- Have you limited the choice of monitor modes available using the [Limit monitor mode selection] item in the setup menu? Adjust settings as required.
- Dust, lint, or other foreign matter on the eye sensor may prevent it functioning normally. Clean the eye sensor with a blower.

The display of the viewfinder or monitor has been changed unintentionally:

Was the **DISP** button pressed? If the **DISP** button is pressed during playback or shooting, the display of the viewfinder or monitor changes (□246, □622, □623).

• The viewfinder is out of focus:

- Rotate the diopter adjustment control to adjust viewfinder focus.
- If adjusting viewfinder focus does not correct the problem, set the focus mode to AF-S and the AF-area mode to single-point AF. Next, select the center focus point, choose a high-contrast subject, and focus using

autofocus. With the camera in focus, use the diopter adjustment control to bring the subject into clear focus in the viewfinder.

The display in the viewfinder or monitor turns off without warning:

Choose longer delays for Custom Setting c3 [Power off delay].

• The viewfinder is unresponsive:

The display refresh rate may drop about 20 seconds before the standby timer turns off. The length of time before the standby timer expires automatically can be selected using Custom Setting c3 [Power off delay] > [Standby timer].

Shooting

• The camera takes time to turn on:

More time will be needed to find files if the memory card contains large numbers of files or folders.

• The shutter cannot be released:

- · Is a memory card inserted, and if so, does it have space available?
- · If you selected mode **S** after selecting a shutter speed of "**Bulb**" or "**Time**" in mode **M**, choose a different shutter speed.
- · Is [Release locked] selected for [Slot empty release lock] in the setup menu?

The camera is slow to respond to the shutter-release button: Select [Off] for Custom Setting d5 [Exposure delay mode].

• Burst shooting is unavailable:

- Burst shooting cannot be used in conjunction with HDR.
- If the built-in flash is used with [Continuous L], [Continuous H], or [Continuous H (extended)] selected for release mode, only one picture will be taken each time the shutter-release button is pressed. If highspeed frame capture + is selected for release mode, the flash is disabled and burst photography is enabled.

Photos are out of focus:

- · Is the camera in manual focus mode? To enable autofocus, select AF-A, AF-S, AF-C, or AF-F for focus mode.
- The camera may be unable to focus if:
 - the subject contains lines parallel to the long edge of the frame,
 - the subject lacks contrast,
 - the subject in the focus point contains areas of sharply contrasting brightness,
 - the focus point includes night-time spot lighting or a neon sign or other light source that changes in brightness,
 - flicker or banding appears under fluorescent, mercury-vapor, sodiumvapor, or similar lighting,
 - a cross (star) filter or other special filter is used,
 - the subject appears smaller than the focus point, or
 - the subject is dominated by regular geometric patterns (e.g., blinds or a row of windows in a skyscraper).
- In focus mode AF-C, the focus point may flash while the shutter-release button is pressed halfway, indicating that the camera is no longer able to focus. The focus operation can be resumed by releasing and then pressing the button again.

• The beep does not sound:

- If AF-C is selected for focus mode or if AF-A is selected and you are shooting in AF-C, a beep will not sound when the camera focuses.
- The beep does not sound if [ON] is selected for [Silent mode] in the setup menu.
- A beep will sound if an option other than [Off] is selected for [Camera sounds] > [Beep on/off] in the setup menu.
- · The beep does not sound in video mode.

The full range of shutter speeds is not available:

Using a flash restricts the range of shutter speeds available. Flash sync speed can be set to values of 1/200–1/60 s using Custom Setting e1 [Flash sync speed]. When using optional flash units that support auto FP high-speed sync, choose [1/250 s (Auto FP)] or [1/200 s (Auto FP)] for shutter

speeds as fast as 1/4000 s (or 1/2000 s if [Electronic front-curtain shutter] is selected for Custom Setting d6 [Shutter type]).

Focus does not lock when the shutter-release button is pressed halfway:

If **AF-C** is selected for focus mode or if **AF-A** is selected and you are shooting in **AF-C**, press the ﷺ (**O¬**) button to lock the focus.

• Focus-point selection is not available:

Focus-point selection is not available when [Auto-area AF] is selected for AF-area mode.

• The camera is slow to record photos:

Is [ON] selected for [Long exposure NR] in the photo shooting menu?

Photographs and videos do not appear to have the same exposure as the preview shown in the display:

- The effects of changes to settings that affect exposure and color are not visible in the display when [Adjust for ease of viewing] is selected for Custom Setting d10 [View mode (photo Lv)]. If Custom Setting d10 is set to [Show effects of settings] > [Only when flash is not used], display brightness is adjusted for ease of viewing (as per [Adjust for ease of viewing)) even when using the built-in flash or when a flash unit is attached and ready to fire.
- Note that changes to [Monitor brightness] and [Viewfinder brightness] have no effect on images recorded with the camera.

• Flicker or banding appears in video mode:

Select [Video flicker reduction] in the video recording menu and choose an option that matches the frequency of the local AC power supply.

• Bright regions or bands appear:

Bright regions or bands may occur if the subject is lit by a flashing sign, flash, or other light source with brief duration.

• Smudges appear in photographs:

· Are there smudges on the front or rear (mount-side) lens elements?

Is there foreign matter on the image sensor? See "Manual cleaning"
 (□845), or consult a Nikon-authorized service representative.

• Pictures are affected by noticeable ghosting or flare:

You may notice ghosting or flare in shots that include the sun or other bright light sources. These effects can be mitigated by attaching a lens hood or by composing shots with bright light sources well out of the frame. You can also try such techniques as removing lens filters or choosing a different shutter speed.

• Bokeh is irregular:

With fast shutter speeds and/or fast lenses, you may notice irregularities in how *Bokeh* is shaped. The effect can be mitigated by choosing slower shutter speeds and/or higher f-numbers.

• Shooting ends unexpectedly or does not start:

- Shooting may end automatically to prevent the camera overheating, for example if:
 - the ambient temperature is high,
 - the camera has been used for extended periods to record videos, or
 - the camera has been used in continuous release modes for extended periods.
- If photographs cannot be taken because the camera is running hot, turn the camera off and wait for it to cool before trying to take photographs again. Note that the camera may feel warm to the touch, but this does not indicate a malfunction.

• Image artifacts appear in the display during shooting:

- To reduce noise, adjust settings such as ISO sensitivity, shutter speed, or Active D-Lighting.
- At high ISO sensitivities, noise may become more noticeable in long exposures or in pictures recorded when the camera temperature is elevated.
- Randomly-spaced bright pixels, fog, or bright spots may arise as a result
 of increases in the temperature of the camera's internal circuits. Turn the
 camera off when it is not in use.

- Randomly-spaced bright pixels, fog, lines or unexpected colors may appear if you press the \P button to zoom in on the view through the lens during shooting.
- Note that the distribution of noise in the display may differ from that in the final picture.
- This issue can sometimes be addressed by checking and optimizing the image sensor. Perform pixel mapping using [Pixel mapping] in the setup menu.

The camera cannot measure a value for preset manual white balance:

The subject is too dark or too bright.

Certain pictures cannot be selected as sources for preset manual white balance:

Pictures created with cameras of other types cannot serve as sources for preset manual white balance.

• White balance (WB) bracketing is unavailable:

- White balance bracketing is not available when an NEF (RAW) or RAW + JPEG/HEIF option is selected for image quality.
- White balance bracketing cannot be used in multiple exposure and HDR overlay modes.

• The effects of [Set Picture Control] differ from image to image:

[Auto] is selected for [Set Picture Control] or as the basis for a Custom Picture Control created using [Manage Picture Control], or [A] (auto) is selected for [Quick sharp], [Contrast], or [Saturation]. For consistent results over a series of photographs, choose a setting other than [A] (auto).

• The option selected for metering cannot be changed:

The option selected for metering cannot be changed during exposure lock.

• Exposure compensation is not available:

Changes to exposure compensation in mode **M** apply only to the exposure indicator and have no effect on shutter speed or aperture.

Uneven shading may appear in long exposures:

Uneven shading may appear in long exposures shot at shutter speeds of "Bulb" or "Time". The effect can be mitigated by selecting [ON] for [Long exposure NR] in the photo shooting menu.

• The AF-assist illuminator does not light:

- · Is [OFF] selected for Custom Setting a11 [Built-in AF-assist illuminator]?
- · The illuminator does not light in video mode.
- If AF-C is selected for focus mode, if AF-A is selected and you are shooting in AF-C, or if MF is selected, the illuminator does not light.

Sound is not recorded with videos:

- · Is [Microphone off] selected for [Microphone sensitivity] in the video recording menu?
- Was the video recorded with [Manual] chosen for [Microphone sensitivity] in the video recording menu and a low sensitivity selected?

Playback

NEF (RAW) pictures are not visible during playback:

The camera displays only the JPEG or HEIF copies of pictures taken with [RAW + JPEG/HEIF fine], [RAW + JPEG/HEIF normal], or [RAW + JPEG/HEIF basic] selected for [Image quality].

Pictures taken with other cameras are not displayed:

Pictures recorded with other types of camera may not display correctly.

• Not all photos are visible during playback:

Select $[{f All}]$ for $[{f Playback\ folder}]$ in the playback menu.

"Tall" (portrait) orientation photos are displayed in "wide" (landscape) orientation:

- · Is [OFF] selected for [Auto-rotate pictures] in the playback menu?
- · The auto-rotate pictures function is not available during picture review.

· Camera orientation may not be correctly recorded in photos taken with the camera pointing up or down.

• HLG (HEIF) pictures do not display correctly:

Pictures taken with [**HLG**] selected for [**Tone mode**] may not display correctly when viewed on other devices (for example, when output to other devices directly or when opened on a computer after upload). View the pictures on an HLG-compatible computer or other device. For more information on viewing HLG pictures on a computer, visit the following website:

https://onlinemanual.nikonimglib.com/notice/hlg_setting_guide/en/

Pictures cannot be deleted:

Are the pictures protected?

• Pictures cannot be retouched:

- The pictures cannot be further edited with this camera.
- There is insufficient space on the memory card to record the retouched copy.
- The camera displays the message, [Folder contains no pictures.]:
 Select [All] for [Playback folder] in the playback menu.

• NEF (RAW) pictures cannot be printed:

- Print JPEG or HEIF copies of the pictures created using a tool such as the [RAW processing (current picture)] or [RAW processing (multiple pictures)] items accessible via [Retouch] in the playback i menu.
- Copy the pictures to a computer and print them using NX Studio or other software that supports the NEF (RAW) format.

• Pictures are not displayed on HDMI devices:

Confirm that an HDMI cable is correctly connected.

• Output to HDMI devices does not function as expected:

- · Confirm that an HDMI cable is correctly connected.
- Photos taken with [HLG] selected for [Tone mode] may not display correctly on devices that are not HLG-compatible.

- Videos may not display correctly when viewed with [ON] selected for [External rec. cntrl (HDMI)] in the video recording menu.
- Pictures may display correctly if default settings are restored using the [Reset all settings] item in the setup menu.

The effects of [Set Picture Control], [Set Picture Control (HLG)], [Active D-Lighting], or [Vignette control] are not visible:

In the case of NEF (RAW) pictures, the effects can only be viewed using Nikon software. View NEF (RAW) pictures using NX Studio.

Pictures cannot be copied to a computer:

Depending on the operating system, you may be unable to upload pictures when the camera is connected to a computer. Copy pictures from the memory card to a computer using a card reader or other device.

Bluetooth and Wi-Fi (wireless networks)

Smart devices do not display the camera SSID (network name):

- Navigate to the network menu and confirm both that [OFF] is selected for [Airplane mode] and that [ON] is selected for [Connect to smart device] > [Pairing (Bluetooth)] > [Bluetooth connection].
- · Confirm that [Connect to smart device] > [Wi-Fi connection (AP mode)] is enabled in the network menu.
- Try disabling and re-enabling wireless network features on the smart device.
- The camera SSID may not appear when the camera becomes hot. Wait for the camera to cool and try again.

The camera cannot connect to printers and other wireless devices:

The camera cannot establish wireless connections with devices other than smartphones, tablets, computers, ML-L7 remote controls, and third-party Bluetooth remote controls.

• Pictures cannot be uploaded to smart devices via auto upload:

- If [Foreground] is selected for [Auto link] > [Link mode] in the SnapBridge tab, pictures will not be uploaded to the smart device automatically while the SnapBridge app is running in the background. Pictures will only be uploaded when the SnapBridge app is displayed (running in the foreground) on the smart device.
- · Check that the camera is paired with the smart device.
- Check that the camera and smart device are configured for connection via Bluetooth.
- Using the camera for such purposes as viewing videos or retouching pictures may interrupt upload of pictures at a size of 8 megapixels via the SnapBridge app. Try again after ending the task in progress on the camera.

The camera cannot download location data from the smart device:

- The camera may be unable to download or display location data from smart devices depending on the version of the operating system and/or SnapBridge app used.
- If [Foreground] is selected for [Auto link] > [Link mode] in the SnapBridge tab, location data will not be downloaded to the camera.
 Instead, they will be embedded in photographs after they are uploaded to the smart device.

The camera cannot connect to a computer or smart device when it becomes hot:

- When the camera becomes hot, wireless transmission is interrupted. In such a case, the Wi-Fi connection indicator in the shooting display flashes rapidly.
- Wait for the camera to cool before reconnecting the camera to the computer or smart device.

Miscellaneous

• The date of recording is not correct:

Is the camera clock set correctly? The clock is less accurate than most watches and household clocks; check it regularly against more accurate timepieces and reset as necessary.

Menu items cannot be selected:

Some items are not available at certain combinations of settings.

- [Wireless remote (ML-L7) options] cannot be selected in the network menu, or the camera cannot be paired with the remote control using [Wireless remote (ML-L7) options] > [Save wireless remote controller]:
 - · Use a fully-charged battery.
 - · Confirm that [Airplane mode] in the network menu is set to [OFF].
 - · Confirm that [MTP/PTP] is selected for [USB] in the network menu.
 - The remote control cannot be used while the camera is connected to another device via USB, Bluetooth, or Wi-Fi. End the connection.
 - The camera may not connect to the remote control when it becomes hot. Wait for the camera to cool and try again.

The camera does not respond even when the ML-L7 Remote Control is used:

- The camera and ML-L7 remote control are not connected. Press the power button on the remote control to connect them. If a is not displayed on the shooting screen, pair again and connect (\$\subset\$837).
- Confirm that [ON] is selected for [Wireless remote (ML-L7) options] >
 [Wireless remote connection (ML-L7)] in the network menu.
- \cdot Confirm that [MTP/PTP] is selected for [USB] in the network menu.
- $\boldsymbol{\cdot}$ Confirm that [OFF] is selected for [Airplane mode] in the network menu.
- The remote control cannot be used while the camera is connected to another device via USB, Bluetooth, or Wi-Fi. End the connection.
- If you end the connection to the remote control by connecting to a computer or smart device, the connection can be re-established by

- selecting [ON] for [Wireless remote (ML-L7) options] > [Wireless remote connection (ML-L7)] in the network menu.
- The camera may not connect to the remote control when it becomes hot. Wait for the camera to cool and try again.

USB connections fail to function:

Confirm that the appropriate option is selected for [**USB**] in the network menu.

- When connecting to computers or Android devices via USB, select [MTP/ PTP].
- When streaming by connecting to a computer, select [USB streaming (UVC/UAC)].

The NX MobileAir app cannot be used even when a smart device is connected to the camera USB connector via a cable:

- Are the camera and the smart device connected by a USB cable that supports the NX MobileAir app? See the NX MobileAir online help for information on compatible cables.
- Confirm that the appropriate option is selected for [USB] in the network menu.
 - When connecting to Android devices, select [MTP/PTP].
 - When connecting to iPhones, select [iPhone].

Alerts and error messages

This section lists the alerts and error messages that appear in the camera display.

Alerts

The following alerts appear in the camera display:

Alert	Problem	Solution
4_■	Low battery.	Ready spare battery.
F	Lens is not correctly attached.	Ensure that the lens is correctly attached. Ensure that retractable lenses are extended. This indicator is also displayed when a non-CPU lens is attached via a mount adapter, but in this case no action need be taken.
Bulb (flashes)	"Bulb" selected in mode S.	Change shutter speed. Select mode M .
Time (flashes)	" Time " selected in mode S .	Change shutter speed. Select mode M .
Busy (flashes)	Processing in progress.	Wait until processing is complete.

Alert	Problem	Solution
(Exposure indicators and shutter speed or aperture display flash)	Subject too bright; limits of camera exposure metering system exceeded.	Lower ISO sensitivity. Shooting mode P: Use third-party ND (neutral density) filter (filter can also be used if alert is still displayed after following settings are adjusted in mode S or A). Shooting mode S: Choose faster shutter speed. Shooting mode A: Choose smaller aperture (higher f-number).
	Subject too dark; limits of camera exposure metering system exceeded.	Increase ISO sensitivity. Shooting mode P: Use the built-in flash or an optional flash unit (flash can also be used if alert is still displayed after following settings are adjusted in mode S or A). Shooting mode S: Choose slower shutter speed. Shooting mode A: Choose wider aperture (lower f-number).
\$ (flashes)	Built-in or optional flash has fired full power.	Photo may be underexposed. Check distance to subject and settings such as aperture, flash range, and ISO sensitivity.
	Subjects appear dark and underexposed.	Use built-in or optional flash.

Alert	Problem	Solution
Full (flashes)	Memory insufficient to record further photos. Camera has run out of file numbers.	Delete pictures from memory card until there is room for additional pictures to be recorded. Copy pictures you wish to keep to computer or other device before proceeding. Insert new memory card.
Err (flashes)	Camera malfunction.	Press shutter-release button again. If error persists or appears frequently, consult Nikon-authorized service representative.
Card (flashes)	The memory card is write-protected ("locked").	Slide the lock switch to the "write" position (□89).

Error messages

The following error messages may appear in the camera display:

• Shutter release disabled. Recharge battery.

Battery exhausted.

- · Replace with spare battery.
- · Charge battery.
- This battery is unable to provide data to the camera and cannot be used. For safety, choose a battery designated for use in this camera.
 - · Battery info not available.
 - Battery cannot be used. Contact Nikon-authorized service representative.
 - Battery level is extremely low; charge battery.
 - · Battery cannot supply data to camera.
 - Replace third-party batteries with genuine Nikon batteries.

No memory card.

Memory card not inserted or inserted incorrectly.

Check that card is inserted correctly.

Cannot access this memory card. Insert another card.

Error accessing memory card.

- · Check that camera supports memory card.
- · Insert new memory card.
- If error persists after card has been repeatedly ejected and reinserted, card may be damaged. Contact retailer or Nikon-authorized service representative.

Unable to create new folder.

Insert new memory card.

• Memory card is locked. Slide lock to "write" position.

The memory card is write-protected ("locked").

• Slide the lock switch to the "write" position (\$\square\$89).

This card is not formatted. Format the card.

Memory card is not correctly formatted.

- · Format memory card.
- · Replace with correctly-formatted memory card.

FTZ mount adapter firmware version not supported. Upgrade FTZ firmware.

The firmware of the mount adapter is not the latest version.

 Update the firmware of the mount adapter to the latest version. For information on firmware updates, see the Nikon website for your area.

• Recording interrupted. Please wait.

Memory card does not support required video write speed.

- Use card that supports required write speed or change option selected for [Frame size/frame rate] in video recording menu.
- The camera is too hot. It cannot be used until it cools. Please wait.
 Camera will turn itself off.
 - · Camera's internal temperature is elevated.

- Suspend shooting until camera has cooled.
- · High battery temperature.
 - Remove battery and wait for it to cool.

• Folder contains no pictures.

- · Folder contains no images.
 - Insert memory card that contains pictures.
- No pictures in folder selected for playback.
 - Use [Playback folder] item in playback menu to select folder that contains pictures.

Cannot display this file.

- File has been modified using computer application or does not conform to DCF file standard.
 - Do not overwrite images using computer applications.
- · File is corrupt.
 - Do not overwrite images using computer applications.

• Cannot select this file.

Selected picture cannot be retouched.

 Retouch options are available only with pictures taken with or previously retouched on camera.

• This video cannot be edited.

Selected video cannot be edited.

- · Videos created with other devices cannot be edited.
- $\boldsymbol{\cdot}$ Videos under two seconds long cannot be edited.

Technical notes

Compatible lenses and accessories

The camera can be used with all Z mount lenses.

NIKKOR Z DX 16-50mm f/3.5-6.3 VR

Confirm that the lens name includes "NIKKOR Z".

- Be sure to update to the latest versions of the camera and lens firmware. With earlier versions, some functions may not be available or the camera may fail to correctly detect the lens. The latest firmware is available from the Nikon Download Center.
- For more information on lenses, see the lens documentation available from the Nikon Download Center.

Tip: Compatible F mount lenses

F mount lenses can be mounted on Z mount cameras using an FTZ II/FTZ mount adapter.


• Some features may not be available depending on the lens used. Information on the F mount lenses that can be used with Z mount cameras and on any restrictions that may apply can be found in *Compatible F Mount Lenses*, available from the Nikon Download Center: https://downloadcenter.nikonimglib.com/

Camera displays

The monitor shows information on current settings. Other icons or warnings may occasionally be displayed, for example when settings are changed.


The monitor

Photo mode

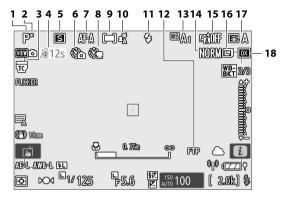

- Shooting mode (\$\Pi\$143)
- Flexible program indicator $(\Box 144)$
- Out-of-focus indicator (autoarea AF; □101)
- Temperature warning (□801)
- Release mode (Q166)
- Interval timer photography indicator (\$\pi\$536)
 - [©] icon (□100)
 - "No memory card" indicator
 - (□86, □801)
- 7 Focus mode (Q122)
- Time-lapse video indicator
 - (\$\pi551)\$


- AF-area mode (III)
- Subject detection (□129)
- Flash mode (\$\infty\$459)
- FTP connection status (\$\square\$388)
- White balance (□178)
- Image quality (1118)
- Active D-Lighting (\$\square\$491)
- Image size (\$\Pi\$120)
- Picture Control (□200)
- Image area (□117)

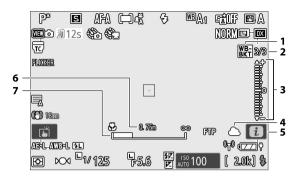

- 1 Exposure and flash bracketing indicator (□509)
 WB bracketing indicator
 - (\$\square\$515)
 - ADL bracketing indicator (□519)
 - HDR indicator (□532)
 - Multiple exposure indicator (□525)
- Number of shots in exposure and flash bracketing sequence (□509)
 - Number of shots in WB
 - bracketing sequence (\$\square\$515)


 Number of shots in ADL
 - bracketing sequence (\$\Pi\$519)
 - HDR strength (□532)
 - Number of shots in multiple
 - exposure (\$\Pi525)\$
 - Pre-Release Capture (□608)

- Exposure indicator
 - Exposure (□149)
 - Exposure compensation (
 164)
 - * Auto bracketing (□508)
- 4 Nikon Imaging Cloud connection status (□421)
 Remote camera connection status (□436)
- 5 **i** icon (□79)
- 6 Distance between the camera and the focus position (□139)
- 7 Focus distance indicator

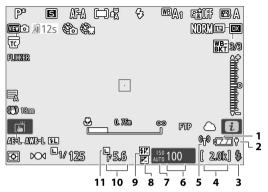

- 1 Battery indicator (□87)
- 2 USB power delivery (□727)
- 3 Flash-ready indicator (□469)
- 4 Number of exposures
 remaining (□88, □869)
 Camera control mode display
 (□413)
- 5 Wi-Fi connection indicator (□351, □370, □388) Bluetooth connection indicator (□746, □751) Airplane mode (□741)

- ISO sensitivity (174)
- ISO sensitivity indicator (□174) Auto ISO sensitivity indicator (□175)
- 8 Exposure compensation indicator (\$\Pi\$164)
- 9 Flash compensation indicator (□464)
- 10 Aperture (\$\Pi\$146, \$\Pi\$147)
- 11 Aperture lock icon (□662)

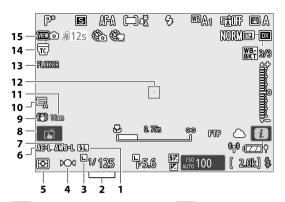

- 1 FV lock indicator (□465)
 - 2 Shutter speed (\$\Pi\$145, \$\Pi\$147)
- 3 Shutter speed lock icon (□662)
- 4 Focus indicator (□139)
- 5 Metering (□501)
 - 6 Autoexposure (AE) lock (□162)
- 7 Auto white-balance (AWB) lock (□632)
- 8 Touch shooting (□64, □135)

- 9 Vibration reduction (□507)
- 10 Shutter type (□611)
 - Silent mode (□725)
 - 11 Focal length¹
 - 12 Focus point (III) 134)
 - 3 **FLICKER** icon (□ 498)
- 14 "Lens built-in teleconverter enabled" indicator²
- 15 View mode (□614)
- 1 Displayed only in the case of zoom lenses with no focal length scale.
- 2 Display only when a NIKKOR Z lens with a built-in teleconverter is attached and the teleconverter enabled.

Temperature warnings

- If the camera temperature becomes elevated, a high-temperature warning (3) and count-down timer will be displayed. When the timer reaches zero, the shooting display will turn off.
- The timer turns red when the thirty second mark is reached. In some cases, the timer may be displayed immediately after the camera is turned on.

High-temperature warnings

Do not touch the camera body, battery, or memory card until the temperature goes down and the warning indicator disappears.

When the Wi-Fi connection indicator flashes rapidly


When the camera becomes hot while wirelessly connecting to a computer or smart device, the Wi-Fi connection indicator $(^6t^9)$ flashes rapidly and wireless transmission is interrupted.

- Wait for the camera to cool before reconnecting the camera to the computer or smart device.
- When the Wi-Fi connection indicator (^(T)) flashes rapidly, note that the camera body and battery may be hot.

No memory card inserted

If no memory card is inserted, a "no memory card" indicator and [-E-] will appear in the shooting display.

• The information display

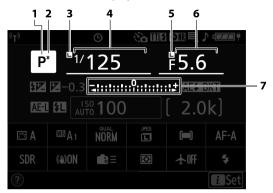

- 1 Shooting mode (\$\Pi\$143)
- 2 Flexible program indicator (CI)144)
- 3 Shutter speed lock icon (□662)
- 4 Shutter speed (\$\Pi\$145, \$\Pi\$147)


- 5 Aperture lock icon (□662)
- 6 Aperture (\$\Pi\$146, \$\Pi\$147)
 - Exposure indicator
 - Exposure (□149)
 - Exposure compensation
 (□164)
 - · Auto bracketing (\$\square\$508)



- Wi-Fi connection indicator (□351, □370, □388) Bluetooth connection indicator (□746, □751)
- 2 Exposure and flash bracketing indicator (□509)
 WB bracketing indicator
 (□515)
 ADL bracketing indicator
 (□519)
 HDR indicator (□532)
 Multiple exposure indicator
 - Number of exposures remaining (□88, □869) Camera control mode display (□413)

 $(\Box 525)$

- 4 **i** icon (□79)
- 5 ISO sensitivity (□174)
 - 6 ISO sensitivity indicator (□174) Auto ISO sensitivity indicator (□175)
 - 7 FV lock indicator (□465)
 - 8 Autoexposure (AE) lock (1162)
 - 9 Flash compensation indicator (□464)
 - 10 Exposure compensation indicator (□164)Exposure compensation value (□164)

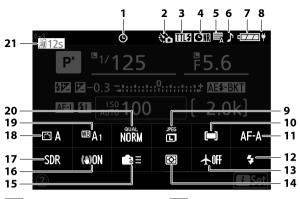


- 1 ^⁰ icon (□100)
- 2 Interval-timer photography indicator (□536)
 Time-lapse video indicator
- (□551)

 3 Flash control mode (□471,
- □503)
 4 Long-exposure noise reduction
- indicator (□492)
- 5 Shutter type (□611)
- 6 "Beep" indicator (□724)
- 7 Battery indicator (\$\square\$87\$)
- 8 USB power delivery (□727)
- 9 Image size (□120)
- AF-area mode/subj. detection (□124, □129)
- 11 Focus mode (□122)

- 12 Flash mode (□459)
- 13 Airplane mode (□741)
- 14 Metering (□501)
- 15 Custom controls (shooting;

 □632)
 - 16 Vibration reduction (□507)
- 17 Tone mode (□484)
- 18 Set Picture Control (□200)
- 19 White balance (\$\Pi\$178)
- 20 Image quality (III 118)
- 21 Temperature warning (\$\Pi\$801)

II Video mode

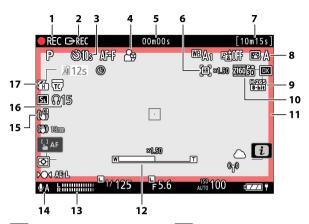


- 1 Recording indicator
 - "No video" indicator (🕮 110)
- 2 External recording control (□339)
- 3 Video self-timer (□238)
- 4 Product review mode (□237)
- 5 Length of footage recorded Timecode (\$\square\$585)
- 6 Hi-Res Zoom indicator (□235) Zoom ratio for Hi-Res Zoom (□235)
- 7 Available recording time
- 8 Picture Control (□200)
 Tone mode (□222)

- 9 Video file type (□222)
- 10 Frame size and rate (□224)
- Recording indicator (red border; □692)
- Zoom position for Hi-Res Zoom (□235)
- 13 Sound level (□582)
- 14 Microphone sensitivity (□582)
- 15 Electronic VR indicator (\$\square\$582)
- 16 Headphone volume (\$\square\$585)
- 17 Zebra pattern (□687)


The viewfinder

■ Photo mode

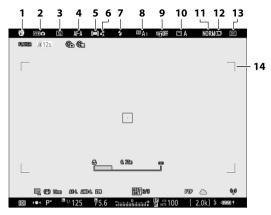

- 1 "Lens built-in teleconverter enabled" indicator
- 2 View mode (□614)
- 3 Release mode (1166)
 - Focus mode (Q122)
- 5 AF-area mode (Q124)
- 6 Subject detection (□129)
- 7 Flash mode (\$\square\$459)
 - 8 White balance (□178)

- 9 Active D-Lighting (C1491)
- 10 Picture Control (□200)
 - Image quality (🕮118)
- 12 Image size (□120)
- 3 Image area (□117)
- Out-of-focus indicator (auto
 - area AF; □101)

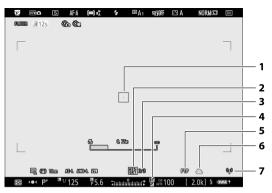

- 1 Focus point (III 134)
- 2 Exposure and flash bracketing indicator (\$\square\$509\$)

WB bracketing indicator (□515)

ADL bracketing indicator (□519)

HDR indicator (\$\Pi\$532)

Multiple exposure indicator
(\$\Pi\$525)

Number of shots in exposure and flash bracketing sequence (□509)

Number of shots in WB bracketing sequence (□515)

Number of shots in ADL

bracketing sequence (\$\square\$519)


HDR strength (□532)

Number of shots in multiple

exposure (\$\square\$525)

Pre-Release Capture (□608)


- Flash compensation indicator (□464)
- 5 FTP connection status (\$\square\$388)
- Nikon Imaging Cloud
 connection status (
 Remote camera connection
 status (
 436)
- 7 Wi-Fi connection indicator
 (□351, □370, □388)
 Bluetooth connection indicator
 (□746, □751)
 Airplane mode (□741)

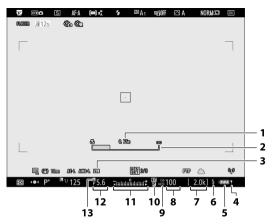

- Distance between the camera and the focus position (□139)

 Focus distance indicator
- Focus distance indicator (\$\square\$139)
- FV lock indicator (\$\square\$465)
- 4 USB power delivery (□727)
- 5 Battery indicator (\$\square\$87\$)
- 6 Flash-ready indicator (□469)
- 7 Number of exposures remaining (□88, □869)
 Camera control mode display (□413)


- ISO sensitivity (🕮 174)
- ISO sensitivity indicator (\$\sup\$174)
 Auto ISO sensitivity indicator
 (\$\sup\$175)
- 10 Exposure compensation indicator (□164)
- 11 Exposure indicator
 - Exposure (□149)
 - Exposure compensation
 (□164)
- . Auto bracketing (□508)
- 12 Aperture (□146, □147)
- 13 Aperture lock icon (□662)

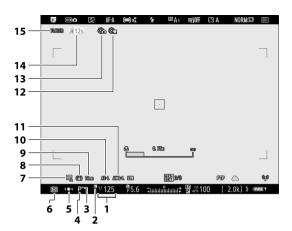

- 1 Shutter speed (\$\Pi\$145, \$\Pi\$147)
- 2 Shutter speed lock icon (□662)
- Flexible program indicator (□144)
- 4 Shooting mode (\$\square\$143)
- 5 Focus indicator (\$\Pi\$139)
- 6 Metering (□501)
- 7 Shutter type (□611) Silent mode (□725)
- 8 Vibration reduction (□507)

- 9 Focal length
- 10 Autoexposure (AE) lock (\$\square\$162)
- 11 Auto white-balance (AWB) lock (□632)
- Time-lapse video indicator (□551)
- 13 Interval timer photography indicator (□536)
 - O icon (□100)
 - "No memory card" indicator (□86, □801)
- 14 Temperature warning (□801)
- 15 **FLICKER** icon (□ 498)

II Video mode

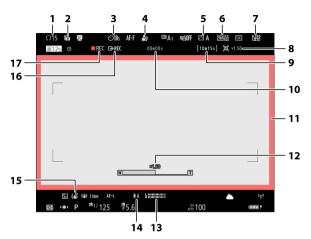

- 1 Headphone volume (□585)
 - Zebra pattern (□687)
- 3 Video self-timer (□238)
- 4 Product review mode (\$\square\$237)
- 5 Picture Control (□200)
 Tone mode (□222)
- 6 Frame size and rate (□224)
- 7 Video file type (□222)
- 8 Hi-Res Zoom indicator (\$\square\$235)
 Zoom ratio for Hi-Res Zoom
 (\$\square\$235)
- 9 Available recording time

- Length of footage recorded
 Timecode (\$\subset\$585)
- 11 Recording indicator (red border; □692)
- Zoom position for Hi-Res Zoom(□235)
- 13 Sound level (□582)
- 14 Microphone sensitivity (□582)
- 15 Electronic VR indicator (\$\square\$582)
- 16 External recording control (□339)
- Recording indicator
 "No video" indicator (□110)

Compatible flash units

The Nikon Creative Lighting System (CLS)

Nikon's advanced Creative Lighting System (CLS) supports a variety of features thanks to improved communication between the camera and compatible flash units.

Features available with CLS-compatible flash units

Flash unit	ш	Flash unit	ш
SB-5000	811	SB-R200	820
SB-910/SB-900/SB-800	813	SB-400	822
SB-700	815	SB-300	823
SB-600	817	SU-800	825
SB-500	818		

II SB-5000

	Supported features			
Sing	gle flash			
	i-TTL	i-TTL balanced fill-flash	√ 1	
		Standard i-TTL fill-flash	√ 2	
	⊗A	Auto aperture	~	
	A	Non-TTL auto	-	
	GN	Distance-priority manual	~	

		Supported features	
	М	Manual	~
	RPT	Repeating flash	~
tical Adv	anced Wi	reless Lighting	-
Master			
Re	emote flas	h control	~
	i-TTL	i-TTL	~
	[A:B]	Quick wireless flash control	~
	⊗A	Auto aperture	~
	Α	Non-TTL auto	-
	М	Manual	~
	RPT	Repeating flash	~
Remot	e		
	i-TTL	i-TTL	~
	[A:B]	Quick wireless flash control	~
	⊗A/A	Auto aperture/non-TTL auto	✓3
	М	Manual	~
	RPT	Repeating flash	~
dio-cont	rolled Adv	ranced Wireless Lighting	-
olor Information Communication (flash)			
olor Information Communication (LED light) -			
to FP hig	h-speed s	ync	~ 4

FV lock

√5

Supported features		
Red-eye reduction	~	
Camera modeling illumination		
Unified flash control		
Camera flash unit firmware update	~	

- 1 Not available with spot metering.
- 2 Can also be selected via the flash unit.
- 3 Choice of

 A and A depends on the option selected with the master flash.
- 4 Available only in i-TTL, \otimes A, A, GN and M flash control modes.
- 5 Available only in **i-TTL** flash control mode or when the flash is configured to emit monitor pre-flashes in **(SA)** or **A** flash control mode.

III SB-910/SB-900/SB-800

	Supported features			
Sing	gle flash			
	i-TTL	i-TTL balanced fill-flash	✓1	
	1-111	Standard i-TTL fill-flash	√ 2	
	⊗A	Auto aperture	√ 3	
	A	Non-TTL auto	√ 3	
	GN	Distance-priority manual	~	
	М	Manual	~	
	RPT	Repeating flash	~	
Opt	ical Advanced Wire	eless Lighting		

Master

		Supported features	
	Remote flas	h control	~
	i-TTL	i-TTL	~
	[A:B]	Quick wireless flash control	-
	⊗A	Auto aperture	~
	Α	Non-TTL auto	-
	М	Manual	~
	RPT	Repeating flash	~
Re	mote		
	i-TTL	i-TTL	~
	[A:B]	Quick wireless flash control	~
	⊗A/A	Auto aperture/non-TTL auto	✓4
	М	Manual	~
	RPT	Repeating flash	~
Radio-	ontrolled Adv	anced Wireless Lighting	-
Color Ir	nformation Co	mmunication (flash)	~
Color Ir	nformation Co	mmunication (LED light)	-
Auto Ff	high-speed s	ync	√ 5
FV lock			√ 6
Red-ey	e reduction		~
Camera	modeling illu	mination	-
Unified	flash control		-
Camera flash unit firmware update			√ 7

- 1 Not available with spot metering.
- 2 Can also be selected via the flash unit.
- 4 Choice of **⊗A** and **A** depends on the option selected with the master flash.
- 5 Available only in i-TTL, $\otimes A$, A, GN, and M flash control modes.
- 6 Available only in **i-TTL** flash control mode or when the flash is configured to emit monitor pre-flashes in **SA** or **A** flash control mode.
- 7 Firmware updates for the SB-910 and SB-900 can be performed from the camera.

■■ SB-700

	Supported features		
Sing	gle flash		
	i-TTL	i-TTL balanced fill-flash	✓ 1
	I-11L	Standard i-TTL fill-flash	~
	⊗A	Auto aperture	-
	A	Non-TTL auto	-
	GN	Distance-priority manual	~
	М	Manual	~
	RPT	Repeating flash	-
Opt	ical Advanced Wire	eless Lighting	
	Master		
	Remote flash	control	~
	i-TTL	i-TTL	~
	[A:B]	Quick wireless flash control	~
		•	

			Supported features	
		⊗A	Auto aperture	-
		A	Non-TTL auto	-
		М	Manual	~
		RPT	Repeating flash	-
	Ren	note		
		i-TTL	i-TTL	~
		[A:B]	Quick wireless flash control	~
		⊗A/A	Auto aperture/non-TTL auto	-
		М	Manual	~
		RPT	Repeating flash	~
Radio-controlled Advanced Wireless Lighting			-	
Cold	Color Information Communication (flash)			~
Colo	or Inf	ormation Con	nmunication (LED light)	-
Aut	o FP	high-speed sy	/nc	✓2
FV l	ock			✓3
Red	-eye	reduction		~
Camera modeling illumination			-	
Unit	Unified flash control			-
Can	nera	flash unit firm	ware update	~

- 1 Not available with spot metering.
- 2 Available only in **i-TTL**, **GN**, and **M** flash control modes.
- 3 Available only in **i-TTL** flash control mode.

■ SB-600

		Supported features	
Sinc	gle flash	Supported reatures	
		i-TTL balanced fill-flash	✓1
	i-TTL	Standard i-TTL fill-flash	✓2
	⊗A	Auto aperture	-
	Α	Non-TTL auto	-
	GN	Distance-priority manual	-
	М	Manual	~
	RPT	Repeating flash	-
Opt	ical Advanced Wi	reless Lighting	
	Master		
	Remote flas	h control	-
	i-TTL	i-TTL	-
	[A:B]	Quick wireless flash control	-
	⊗A	Auto aperture	-
	A	Non-TTL auto	-
	М	Manual	-
	RPT	Repeating flash	-
	Remote		
	i-TTL	i-TTL	~
	[A:B]	Quick wireless flash control	

	Supported features				
		⊗A/A	Auto aperture/non-TTL auto	-	
		М	Manual	~	
		RPT	Repeating flash	~	
Rad	Radio-controlled Advanced Wireless Lighting			-	
Colo	Color Information Communication (flash)			~	
Color Information Communication (LED light)			-		
Auto FP high-speed sync			√ 3		
FV lock			✓4		
Red	Red-eye reduction			~	
Can	Camera modeling illumination			-	
Unified flash control			-		
Can	Camera flash unit firmware update			-	
	-				

- 1 Not available with spot metering.
- 2 Can also be selected via the flash unit.
- 3 Available only in **i-TTL** and **M** flash control modes.
- 4 Available only in **i-TTL** flash control mode.

■ SB-500

	Supported features			
Sing	Single flash			
	i-TTL	i-TTL balanced fill-flash	√ 1	
	I-11L	Standard i-TTL fill-flash	~	
	⊗A	Auto aperture	-	

	Supported features	
A	Non-TTL auto	-
GN	Distance-priority manual	-
М	Manual	✓2
RPT	Repeating flash	-
ical Advanced W	ireless Lighting	1
Master		
Remote fla	sh control	✓2
i-TTL	i-TTL	√ 2
[A:B]	Quick wireless flash control	-
⊗A	Auto aperture	-
А	Non-TTL auto	-
М	Manual	√ 2
RPT	Repeating flash	-
Remote	'	-
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	~
⊗A/A	Auto aperture/non-TTL auto	_

Compatible flash units

Manual

Radio-controlled Advanced Wireless Lighting
Color Information Communication (flash)
Color Information Communication (LED light)

Repeating flash

M RPT

Supported features			
Auto FP high-speed sync	√ 3		
FV lock	√ 4		
Red-eye reduction	~		
Camera modeling illumination	-		
Unified flash control	-		
Camera flash unit firmware update	~		

- 1 Not available with spot metering.
- 2 Can be selected using the [**Flash control**] item in the camera menus.
- 3 Available only in **i-TTL** and **M** flash control modes.
- 4 Available only in i-TTL flash control mode.

■ SB-R200

	Supported features				
Sing	gle flash				
	i-TTL	i-TTL balanced fill-flash	-		
	I-I I L	Standard i-TTL fill-flash	-		
	⊗A	Auto aperture	-		
	Α	Non-TTL auto	-		
	GN	Distance-priority manual	-		
	М	Manual	-		
	RPT	Repeating flash	-		
Optical Advanced Wireless Lighting					
Master					
	,				

		Supported features		
	Remote flash	control	-	
	i-TTL	i-TTL	-	
	[A:B]	Quick wireless flash control	-	
	⊗A	Auto aperture	-	
	Α	Non-TTL auto	-	
	М	Manual	-	
	RPT	Repeating flash	-	
Rei	mote			
	i-TTL	i-TTL	~	
	[A:B]	Quick wireless flash control	~	
	⊛A/A	Auto aperture/non-TTL auto	-	
	М	Manual		
	RPT	Repeating flash	-	
Radio-c	ontrolled Adva	anced Wireless Lighting	-	
Color In	formation Cor	mmunication (flash)	-	
Color In	formation Cor	mmunication (LED light)	-	
Auto FP	high-speed sy	/nc	✓1	
FV lock			✓2	
Red-eye reduction				
Camera modeling illumination				
Unified	flash control		-	
Camera flash unit firmware update				

- 1 Available only in **i-TTL** and **M** flash control modes.
- 2 Available only in **i-TTL** flash control mode.

■ SB-400

Supported features					
ingle flas	sh				
		i-TTL balanced fill-flash	✓1		
	i-TTL	Standard i-TTL fill-flash	~		
	⊗A	Auto aperture	-		
	Α	Non-TTL auto	-		
	GN	Distance-priority manual	-		
	М	Manual	✓2		
RPT		Repeating flash	-		
ptical A	dvanced Wi	reless Lighting	-		
Mast	er				
	Remote flas	h control	-		
	i-TTL	i-TTL	-		
	[A:B]	Quick wireless flash control	-		
	⊗A	Auto aperture	-		
	Α	Non-TTL auto	-		
	М	Manual	-		
	RPT	Repeating flash	-		
Remo	ote	-	<u> </u>		
	i-TTL	i-TTL	-		

	Supported features				
		[A : B]	Quick wireless flash control	-	
		⊛A/A	Auto aperture/non-TTL auto	-	
		М	Manual	-	
		RPT	Repeating flash	-	
Rad	Radio-controlled Advanced Wireless Lighting			-	
Color Information Communication (flash)			~		
Color Information Communication (LED light)			-		
Auto FP high-speed sync			-		
FV lock			√ 3		
Red	-eye	reduction		~	
Camera modeling illumination			-		
Unified flash control				-	
Camera flash unit firmware update			-		

- 1 Not available with spot metering.
- 2 Can be selected using the [Flash control] item in the camera menus.
- 3 Available only in i-TTL flash control mode.

■ SB-300

	Supported features				
Sing	Single flash				
	i-TTL	i-TTL balanced fill-flash	v 1		
		Standard i-TTL fill-flash	~		
	⊗A	Auto aperture	-		

		Supported features	
	Α	Non-TTL auto	-
	GN	Distance-priority manual	-
	М	Manual	✓2
	RPT	Repeating flash	-
Optical	Advanced Wi	reless Lighting	
Ma	ster		
	Remote flas	h control	-
	i-TTL	i-TTL	-
	[A:B]	Quick wireless flash control	-
	⊗A	Auto aperture	-
	А	Non-TTL auto	-
	М	Manual	-
	RPT	Repeating flash	-
Rer	mote		,
	i-TTL	i-TTL	-
	[A:B]	Quick wireless flash control	-
	⊗A/A	Auto aperture/non-TTL auto	-
	М	Manual	-
	RPT	Repeating flash	-

Radio-controlled Advanced Wireless Lighting
Color Information Communication (flash)
Color Information Communication (LED light)

Supported features			
Auto FP high-speed sync	-		
FV lock	√ 3		
Red-eye reduction	-		
Camera modeling illumination	-		
Unified flash control	-		
Camera flash unit firmware update	~		

- 1 Not available with spot metering.
- 2 Can be selected using the [Flash control] item in the camera menus.
- 3 Available only in i-TTL flash control mode.

■ The SU-800 Wireless Speedlight Commander

When mounted on a CLS-compatible camera, the SU-800 can be used as a commander for SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, or SB-R200 flash units. Group flash control is supported for up to three groups. The SU-800 itself is not equipped with a flash.

	Supported features					
Sing	Single flash					
i-TTL		i-TTL balanced fill-flash	-			
	1-112	Standard i-TTL fill-flash	-			
	⊛A	Auto aperture	-			
	A	Non-TTL auto	-			
	GN	Distance-priority manual	-			
	М	Manual	_			
	RPT	Repeating flash	-			

Supported features

Optical Advanced Wireless Lighting

Ma	aster				
	Remote flas	h control	~		
	i-TTL	i-TTL	-		
	[A:B]	Quick wireless flash control	✓1		
	⊗A	Auto aperture	-		
	Α	Non-TTL auto	-		
	М	Manual	-		
	RPT	Repeating flash	-		
Re	mote		· · · · · · · · · · · · · · · · · · ·		
	i-TTL	i-TTL i-TTL			
	[A:B]	[A:B] Quick wireless flash control			
	⊗A/A	Auto aperture/non-TTL auto	-		
	М	Manual	-		
	RPT	Repeating flash	-		
Radio-	controlled Adv	vanced Wireless Lighting	-		
Color Ir	nformation Co	mmunication (flash)	-		
Color Ir	nformation Co	mmunication (LED light)	-		
Auto Fl	high-speed s	sync	✓2		
FV lock	V lock				
Red-ey	Red-eye reduction				
Camera	modeling illu	umination	-		

Supported features			
Unified flash control	-		
Camera flash unit firmware update	-		

- 1 Available during close-up photography only.
- 2 Not available when RPT is selected as the flash control mode for the remote flash unit.
- 3 Available only when i-TTL is selected as the flash control mode for the remote flash unit or when the flash is configured to emit monitor preflashes in mode
 A.

Notes and tips for optional flash units

When using an optional flash unit, be sure also to read the documentation supplied with the unit.

- If the unit supports CLS, refer to the section on CLS-compatible digital SLR cameras. This camera is not included in the "digital SLR" category in the documentation for the SB-80DX, SB-28DX, and SB-50DX.
- If the flash-ready indicator (\$) flashes for about three seconds after a photograph is taken in i-TTL or non-TTL auto mode, the flash has fired at full power and the photograph may be underexposed (CLS-compatible flash units only).
- · i-TTL flash control can be used at ISO sensitivities between 100 and 12800 equivalent.
- At ISO sensitivities over 12800, the desired results may not be achieved at some ranges or aperture settings.
- In mode P, the maximum aperture (minimum f-number) is limited according to ISO sensitivity, as shown below:

Maximum aperture (f-number) at ISO equivalent of:							
100	200	400	800	1600	3200	6400	12800
4	5	5.6	7.1	8	10	11	13

- * If the maximum aperture of the lens is smaller than given above, the maximum value for aperture will be the maximum aperture of the lens.
- The SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, and SB-400 provide red-eye reduction in red-eye reduction and slow-sync with red-eye reduction flash modes.
- "Noise" in the form of lines may appear in flash photographs taken with an SD-9 or SD-8A high-performance battery pack attached directly to the camera. Reduce ISO sensitivity or increase the distance between the camera and the battery pack.

- The camera provides AF-assist illumination as required. AF-assist illuminators on optional flash units will not light.
- When an SC-series 17, 28, or 29 sync cable is used for off-camera flash photography, correct exposure may not be achieved in i-TTL mode.
 We recommend that you select standard i-TTL fill-flash. Take a test shot and view the results in the camera display.
- In i-TTL, do not use any form of flash panel (diffusion panel) other than the flash unit's built-in flash panel or supplied bounce adapter. Using other panels may produce incorrect exposure.

Flash photography

Flash photography cannot be combined with some camera features, including:

- · silent mode,
- · video recording,
- · high-speed frame capture +, and
- · HDR overlay.

Using FV lock with optional flash units

- FV lock is available with optional flash units in TTL and (where supported) monitor pre-flash

 A and monitor pre-flash
 A flash control modes (see the documentation provided with the flash unit for more information).
- Note that when Advanced Wireless Lighting is used to control remote flash units, you will need to set the flash control mode for the master or at least one remote group to TTL,

 A, or A.

Other flash units

The following flash units can be used in non-TTL auto (A) and manual modes. The options available do not vary with the lens used.

Flash unit	Supported features
SB-80DX, SB-28DX, SB-28, SB-26, SB-25, SB-24	Non-TTL auto, Manual, Repeating flash, Rear-curtain sync1
SB-50DX, SB-23, SB-29, SB-21B, SB-29S	Manual, Rear-curtain sync ¹
SB-30, SB-272, SB-22S, SB-22, SB-20, SB-16B, SB-15	Non-TTL auto, Manual, Rear-curtain sync1

- 1 Available when the camera is used to select the flash mode.
- 2 Mounting an SB-27 on the camera automatically sets the flash mode to TTL, but setting the flash mode to TTL disables the shutter release. Set the SB-27 to A.

Metering areas for FV lock

The areas metered when FV lock is used with optional flash units are as follows:

Stand-alone flash unit

Flash control mode	Metered area
i-TTL	6-mm circle in center of frame
Auto aperture (\$A)	Area metered by flash exposure meter

· Remote flash units

Flash control mode	Metered area	
i-TTL	Entire frame	
Auto aperture (A)	- Area metered by flash exposure meter	
Non-TTL auto (A)		

Flash compensation for optional flash units

In i-TTL and auto aperture (**②A**) flash control modes, the flash compensation selected with the optional flash unit or the camera [**Flash control**] item is added to the flash compensation selected with the [**Flash compensation**] item in the photo shooting menu.

Tip: Studio strobe lighting

To adjust the color and brightness of the view through the lens so that shots are easier to frame, select [**Adjust for ease of viewing**] for Custom Setting d10 [**View mode (photo Lv)**].

Other compatible accessories

A variety of accessories are available for your Nikon camera.

Compatible accessories

- · Availability may vary with country or region.
- · See our website or brochures for the latest information.

Power sources

- EN-EL25a Rechargeable Li-ion Battery: EN-EL25a batteries can be used with Nikon Z50II digital cameras.
 - EN-EL25 batteries can also be used. Note, however, that fewer pictures can be taken on a single charge than with the EN-EL25a (□873).
- MH-32 Battery Charger: The MH-32 can be used to recharge EN-EL25a batteries.
- EH-8P AC Adapter: The EH-8P can be used to charge batteries inserted in the camera.
 - Use the USB cable supplied with the camera for charging.
 - The battery will not charge while the camera is on.
 - The EH-8P can be used to power the camera; to do so, select [ON] for [USB power delivery] in the setup menu. For more information, see "USB power delivery" (□727).

Filters

- · Neutral Color (NC) filters can be used to protect the lens.
- Filters may cause ghosting when the subject is framed against a bright light, or when a bright light source is in the frame. Filters can be removed if ghosting occurs.
- Matrix metering may not produce the desired results with filters with exposure factors (filter factors) over 1× (Y44, Y48, Y52, O56, R60, X0, X1, C-PL, ND2S, ND4, ND4S, ND8, ND8S, ND400, A2, A12, B2, B8, B12). We suggest that [Center-weighted metering] be selected instead. See the filter documentation for details.

• Filters intended for special-effects photography may interfere with autofocus or the in-focus indicator (•).

Remote cords

• MC-DC3 Remote Cord (length 1 m/3 ft 3 in.): When connected to the camera's headphone/remote cord (೧/æ) connector, the MC-DC3 can be used to release the shutter remotely.

USB cables

- **UC-E24 USB Cable**: A USB cable with a Type C connector for connection to the camera and a type A connector for connection to the USB device.
- · UC-E25 USB Cable: A USB cable with two Type C connectors.

Hot shoe adapters

AS-15 Sync Terminal Adapter: Mount the AS-15 on the camera hot shoe to connect studio strobe lights or other flash equipment via a sync terminal.

• Accessory shoe covers

BS-1 Accessory Shoe Cover: A cover protecting the accessory shoe when no flash unit is attached.

Body caps

BF-N1 Body Cap: The body cap prevents dust entering the camera when no lens is in place.

Flash units

- SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, SB-400, and SB-300 Speedlights: These units can be mounted on the camera for flash photography. Some also support wireless remote control for off-camera flash photography with multiple flash units.
 - See the documentation supplied with each Speedlight for information on mounting the unit on the camera.
 - For more information on flash photography, see "Using an oncamera flash" (□469), "What is remote flash photography?" (□472), and "Compatible flash units" (□811).

- SB-R200 Wireless Remote Speedlight: A flash unit for wireless remote flash photography.
- SU-800 Wireless Speedlight Commander: A wireless commander for use with SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, and SB-R200 flash units. Flash units can be divided into up to three groups for remote flash control. The SU-800 itself is not equipped with a flash.

Mount adapters

FTZ II/FTZ Mount Adapter: An adapter that allows NIKKOR F mount lenses to be used with digital cameras that support interchangeable Z mount lenses.

- For information on attaching, removing, maintaining, and using mount adapters, refer to the documentation supplied with the device.
- * If a warning message prompting you to update is displayed on the camera when a mount adapter is mounted on the camera, update to the latest version. For information on firmware updates, see the Nikon website for your area.

Microphones

- ME-1 Stereo Microphone: Connect the ME-1 to the camera microphone
 jack to record stereo sound. Using an external microphone also reduces the
 chance of picking up equipment noise, such as the sounds produced
 during video recording when focus is achieved using autofocus.
- ME-W1 Wireless Microphone: A wireless Bluetooth microphone. Use the ME-W1 for off-camera recording.

• Remote controls

ML-L7 Remote Control: Pair the ML-L7 with the camera for remote photography and video recording.

• Remote grips

MC-N10 Remote Grip: When connected to the camera, the MC-N10 can be used for such tasks as video recording, photography, and adjusting camera settings. It comes equipped with a rosette for attachment to third-party camera equipment. With the MC-N10 mounted on third-party camera

equipment via an ARRI-compatible rosette adapter, you can keep moving subjects in focus while panning the camera to track their motion, or use its conveniently-placed controls to adjust settings such as exposure and white balance without touching the camera.

Attaching and removing the accessory shoe cover

The optional BS-1 Accessory Shoe Cover slides into the shoe as shown. To remove the cover, hold the camera firmly, press the cover down with a thumb and slide it in the direction shown.





MC-DC3 Remote Cord

When connected to the camera's headphone/remote cord (Ω I \rightleftharpoons) connector, the MC-DC3 remote cord can be used to release the shutter remotely.


 To use the MC-DC3 remote cord, set [Ω/@ connector function] in the setup menu to [Auto switch] beforehand.

■ Connecting the MC-DC3 remote cord

- 1 Turn the camera off.
- 2 Open the cover for the camera's microphone/headphone/remote cord connectors (①).

3 Firmly insert the plug of the remote cord (③) into the headphone/remote cord connector (②).

Insert the plug straight into the jack without using excessive force.

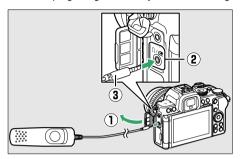

 Connect the MC-DC3 remote cord to the headphone/remote cord connector. The MC-DC3 will not function if it is connected to the similar looking external microphone input connector.

4 Turn the camera on.

Caution: Headphone/remote cord connector

When using headphones with [$\Omega/$ connector function] in the setup menu set to [Auto switch], use headphones with a 3-pole plug (plug example: ①). Using headphones or a headset with a 4-pole plug (plug example: ②) may prevent you from using them as headphones or may cause the camera to malfunction. When using headphones or a headset with a 4-pole plug, set the function to [Headphone].



ML-L7 Remote Control

 
When paired with the camera via Bluetooth, optional ML-L7 remote controls can be used to control the camera remotely during still photography, video recording, and the like.

- The ML-L7 remote control must be paired with the camera before use.
- Only one ML-L7 remote control can be paired per camera. When pairing another ML-L7 remote control, only the last paired ML-L7 remote control is enabled.
- Also see the documentation supplied with the ML-L7 Remote Control.


Cautions: Using remote controls

- · The remote control cannot be used in the following cases.
 - [ON] is selected for [Airplane mode] in the network menu,
 - [iPhone] is selected for [USB] in the network menu, or
 - while the camera is connected to and exchanging data with another device via USB.
- A connection between the camera and the remote control and a connection (Bluetooth or Wi-Fi) between the camera and another device cannot be established at the same time.


Parts of the ML-L7 Remote Control: Names and functions



	Part	Function
1	— button	Same operation as the ^Q ⊠ (?) button on the camera.
2	+ button	Same operation as the [®] button on the camera.
3	Video- record button	Press to start recording, and press again to end recording.
4	Power button	Press the button to turn the remote control on. The remote control will automatically connect to the camera with which it is currently paired, assuming it is nearby. If you keep the button pressed for over three seconds, the remote control will enter pairing mode. Pressing the power button while the remote control is on turns off the remote control, after which the status lamp will turn off.
5	Status lamp	The remote control status and shooting operation status are indicated by the color and behavior of the lamp (□841).

 

	Part	Function
6	Shutter- release button	Press the button to release the shutter. The remote control shutter-release button cannot be pressed halfway. When using autofocus, the shutter is released after focusing with autofocus. The remote control shutter-release button cannot be kept pressed for burst photography. The procedure for taking photographs at a shutter speed of "Bulb" is the same as that for "Time".
7	Multi selector	Same operation as the multi selector on the camera.

 

	Part	Function
8	® (select) button	Same operation as the $oldsymbol{\otimes}$ button on the camera.
9	Fn1 (function 1)/Fn2 (function 2) button	Perform the roles assigned via the network menu using [Wireless remote (ML-L7) options] > [Assign Fn1 button] and [Assign Fn2 button]. • At default settings, the remote control Fn1 button is used to start playback and Fn2 button to display the menus.

Tip: The remote control status lamp (Z50II)

Color	Status	Description
Green	Flashing about every second	Detecting paired camera
Green	Flashing quickly (about every 0.5 seconds)	Pairing
Green	Flashing about every 3 seconds	Connected to the camera
Orange	Flashes once	Start shooting photo
Orange Flashes twice		"Bulb" or "Time" photography ended.
Red	Flashes once	Start recording video
Red	Flashes twice	End recording video

Tip: Adjusting focus from the camera

When shooting using the remote control while maintaining the focus position adjusted on the camera, press the shutter-release button on the camera halfway to lock the focus, and then set the focus mode to manual focus.

Tip: Standby timer when using the remote control

When the standby timer of the camera expires and the monitor and viewfinder are off, turn on the remote control and then press and hold the shutter-release button or video-record button on the remote control to return to the original state.

■ Connecting for the first time: Pairing

When using the remote control for the first time, you must pair it with the camera.

1 Go to [Wireless remote (ML-L7) options] in the camera network menu, highlight [Save wireless remote controller], and press .



· The camera will standby for pairing.

2 Press and hold the power button on the remote control (3 seconds or longer).

- The camera and remote control will start pairing. In the meantime, the remote control status lamp flashes at about 0.5 second intervals.
- When pairing is complete, the camera and remote control will be connected.
- and 9 will appear in the shooting display.



· If a message indicating that pairing failed is displayed, start over from Step 1.

■ To connect with a paired remote control

1 Go to [Wireless remote (ML-L7) options] in the camera network menu and select [ON] for [Wireless remote connection (ML-L7)].



2 Press the remote control power button.

The camera and remote will connect automatically.

Caring for the camera

Long-term storage

When the camera will not be used for an extended period, remove the battery. Before removing the battery, confirm that the camera is off.

- · are poorly ventilated or subject to humidities of over 60%
- are next to equipment that produces strong electromagnetic fields, such as televisions or radios
- · are exposed to temperatures above 50 °C (122 °F) or below -10 °C (14 °F)

Cleaning

The procedure varies with the part that requires cleaning. The procedures are detailed below.

· Do not use alcohol, thinner, or other volatile chemicals.

II Camera body

Use a blower to remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off sand or salt with a cloth lightly dampened in distilled water and dry the camera thoroughly.

Important: The following are not covered under warranty:

- damage caused by the entry of dust, sand, or other foreign matter into the camera, and
- · damage caused by using an aerosol blower too close to the camera.

II Lens and viewfinder

These glass elements are easily damaged: remove dust and lint with a blower. If using an aerosol blower, keep the can vertical to prevent the discharge of liquid that could damage glass elements. To remove fingerprints and other stains, apply a small amount of lens cleaner to a soft cloth and clean with care

Monitor

Remove dust and lint with a blower. When removing fingerprints and other stains, wipe the surface lightly with a soft cloth or chamois leather. Do not apply pressure, as this could result in damage or malfunction.

Manual cleaning

Dirt or dust entering the camera when lenses are exchanged or the body cap is removed may adhere to the surface of the image sensor and affect your photographs. The sensor can be cleaned manually as described below. Note, however, that the sensor is extremely delicate and easily damaged; we recommend that manual cleaning be performed only by a Nikon-authorized service representative.

- 1 Turn the camera off and remove the lens.
- 2 Holding the camera so that light can enter, examine the image sensor for dust or lint.



If no foreign objects are present, proceed to Step 4.

3 Remove any dust and lint from the sensor with a blower.



- Do not use a blower-brush. The bristles could damage the sensor.
- Dirt that cannot be removed with a blower can only be removed by Nikon-authorized service personnel. Under no circumstances should you touch or wipe the sensor.
- 4 Replace the lens or supplied body cap.

Foreign matter on the image sensor

Foreign matter entering the camera when lenses or body caps are removed or exchanged (or in rare circumstances lubricant or fine particles from the camera itself) may adhere to the image sensor, where it may appear in photographs taken under certain conditions. To prevent entry of foreign matter when attaching the body cap or exchanging lenses, avoid dusty environments and be sure to remove all dust and other foreign matter that may be adhering to the camera mount, lens mount, or body cap. To protect the camera when no lens is in place, be sure to replace the supplied body cap. For foreign matter adhering to the image sensor, clean the image sensor as described in "Manual cleaning" (\$\subseten 845\$), or have the sensor cleaned by authorized Nikon service personnel. Photographs affected by the presence of foreign matter on the sensor can be retouched using the clean image options available in some imaging applications.

Servicing the camera and accessories

The camera is a precision device and requires regular servicing; Nikon recommends that the camera be inspected once every one to two years, and that it be serviced once every three to five years (note that fees apply to these services).

- Frequent inspection and servicing are particularly recommended if the camera is used professionally.
- Any accessories regularly used with the camera, such as lenses or optional flash units, should be included when the camera is inspected or serviced.

Caring for the camera and battery: Cautions

Cautions: Using the camera

Do not drop

Do not drop the camera or lens or subject them to blows. The product may malfunction if subjected to strong shocks or vibration.

Keep dry

Keep the camera dry. Rusting of the internal mechanism caused by water inside the camera can not only be expensive to repair but can in fact cause irreparable damage.

• Avoid sudden changes in temperature

Taking the camera from a warm to a cold environment or *vice versa* may cause damaging condensation inside and outside the camera. Place the camera in a sealed bag or plastic case before taking it across a temperature boundary. The camera can be taken from the bag or case once it has had time to adjust to the new temperature.

• Keep away from strong magnetic fields

Static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, corrupt data stored on the memory card, or affect the product's internal circuitry.

Keep credit cards and other such magnetic storage devices away from the camera and lens

Data stored on magnetic storage devices could be corrupted.

Do not leave the lens pointed at the sun

Do not leave the lens pointed at the sun or other strong light source. Intense light may damage the image sensor or cause fading or "burn in". Photographs taken with the camera may exhibit a white blur effect.

• Lasers and other bright light sources

Do not direct lasers or other extremely bright light sources toward the lens, as this could damage the camera's image sensor.

Turn the product off before removing or disconnecting the power source

Removing or disconnecting the power source while the camera is on could damage the product. Particular care should be taken not to remove or disconnect the power source while images are being recorded or deleted.

Cleaning

When cleaning the camera body, use a blower to gently remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off any sand or salt using a cloth lightly dampened in fresh water and then dry the camera thoroughly.

· Cleaning the lens and viewfinder

These glass elements are easily damaged: remove dust and lint with a blower. If using an aerosol blower, keep the can vertical to prevent the discharge of liquid that could damage glass elements. To remove fingerprints and other stains from the lens, apply a small amount of lens cleaner to a soft cloth and wipe the lens carefully.

• Do not touch the image sensor

Under no circumstances should you exert pressure on the image sensor, poke it with cleaning tools, or subject it to powerful air currents from a blower. These actions could scratch or otherwise damage the sensor.



• Cleaning the image sensor

For information on cleaning the image sensor, see "Manual cleaning" (\square 845).

The lens contacts

Keep the lens contacts clean. Avoid touching them with your fingers.

Store in a well-ventilated area

To prevent mold or mildew, store the camera in a dry, well-ventilated area. Do not store the camera with naphtha or camphor moth balls, next to equipment that produces strong electromagnetic, or where it will be exposed to extremely high temperatures, for example near a heater or in an enclosed vehicle on a hot day. Failure to observe these precautions could result in product malfunction.

Long-term storage

To prevent damage caused by, for example, leaking battery fluid, remove the battery if the product will not be used for an extended period. Store the camera in a plastic bag containing a desiccant. Do not, however, store the leather camera case in a plastic bag, as this may cause the material to deteriorate. Store the battery in a cool, dry place. Note that desiccant gradually loses its capacity to absorb moisture and should be replaced at regular intervals. To prevent mold or mildew, take the camera out of storage at least once a month, insert the battery, and release the shutter a few times.

Monitor/viewfinder

- The monitors (including viewfinder) are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction. Images recorded with the device are unaffected. Your understanding is requested.
- · Images in the monitor may be difficult to see in a bright light.
- Do not apply pressure to the monitor. The monitor could malfunction or suffer damage. Dust or lint on the monitor can be removed with a blower.
 Stains can be removed by wiping the monitor lightly with a soft cloth or chamois leather. Should the monitor break, care should be taken to avoid injury from broken glass. Be careful that liquid crystal from the monitor does not touch the skin or enter the eyes or mouth.

- Should you experience any of the following symptoms while framing shots in the viewfinder, discontinue use until your condition improves:
 - nausea, eye pain, eye fatigue,
 - dizziness, headache, stiffness in your neck or shoulders,
 - queasiness or loss of hand-eye coordination, or
 - motion sickness.
- The display may rapidly flicker on and off during burst photography.
 Watching the flickering display could cause you to feel unwell. Discontinue use until your condition improves.

• Bright lights and back-lit subjects

Noise in the form of lines may in rare cases appear in pictures that include bright lights or back-lit subjects.

Camera shooting and playback displays

When [HLG] is selected for tone mode, the shooting and playback displays in the camera monitor and viewfinder may include "noise" in the form of randomly-spaced bright pixels, fog, or lines or may fail to accurately reproduce highlights and highly-saturated colors. In addition, abrupt tone discontinuities may be visible in the camera monitor or viewfinder when photos are displayed full-frame, although the photos themselves are unaffected. For accurate tone reproduction, use monitors, computers, operating systems, applications, and other equipment compatible with HLG.

Cautions: Using batteries

Precautions for use

- If improperly handled, batteries may rupture or leak, causing the product to corrode. Observe the following precautions when handling batteries:
 - Turn the product off before replacing the battery.
 - Batteries may be hot after extended use.
 - Keep the battery terminals clean.
 - Use only batteries approved for use in this equipment.
 - Do not short or disassemble batteries or expose them to flame or excessive heat

- When the battery is not inserted in the camera, insulate the terminals. If there is a terminal cover, attach the terminal cover to the battery. If there is no terminal cover, keep the battery separate in a plastic bag or other non-conductive container.
- If the battery is hot, for example immediately after use, wait for it to cool before charging. Attempting to charge the battery while its internal temperature is elevated will impair battery performance, and the battery may not charge or charge only partially.
- If the battery will not be used for some time, remove it from the camera and store it in a cool, dry location with an ambient temperature of 15 $^{\circ}$ C to 25 $^{\circ}$ C (59 $^{\circ}$ F to 77 $^{\circ}$ F). Avoid hot or extremely cold locations.
- Batteries in long-term storage should be charged to about 50% at least once a year. Do not charge the battery to 100% before returning it to storage. A fully-exhausted battery will charge to around 50% in about half the time needed to charge it to 100%.
- Remove the battery from the camera when not in use. The camera and charger draw minute amounts of charge even when off and could draw the battery down to the point that it will no longer function.
- Do not use the battery at ambient temperatures below 0 °C (32 °F) or above 40 °C (104 °F). Failure to observe this precaution could damage the battery or impair its performance. Charge the battery indoors at ambient temperatures of 5 °C–35 °C (41 °F–95 °F). The battery will not charge if its temperature is below 0 °C (32 °F) or above 60 °C (140 °F).
- Capacity may be reduced and charging times increase at battery temperatures from 0 °C (32 °F) to 15 °C (59 °F) and from 45 °C (113 °F) to 60 °C (140 °F).
- · Batteries in general exhibit a drop in charging capacity at low ambient temperatures.
- Batteries in general exhibit a drop in available capacity at low ambient temperatures. The change in capacity with temperature is reflected in the camera battery-level display. As a result, the battery display may show a drop in capacity as the temperature drops, even if the battery is fully charged.

 Batteries may be hot after use. Observe due caution when removing batteries from the camera.

• Charge batteries before use

Charge the battery before use. The supplied battery is not fully charged at shipment.

• Ready spare batteries

Before taking photographs, ready a spare battery and keep it fully charged. Depending on your location, it may be difficult to purchase replacement batteries on short notice.

• Have fully-charged spare batteries ready on cold days

Partially-charged batteries may not function on cold days. In cold weather, charge one battery before use and keep another in a warm place, ready to be exchanged as necessary. Once warmed, a cold battery may recover some of its charge.

• Battery level

- Turning the camera on or off repeatedly when the battery is fully discharged will shorten battery life. Batteries that have been fully discharged must be charged before use.
- A marked drop in the time a fully charged battery retains its charge when used at room temperature indicates that it requires replacement. Purchase a new rechargeable battery.

• Do not attempt to charge fully-charged batteries

Continuing to charge the battery after it is fully charged can impair battery performance.

• Recycling used batteries

Recycle rechargeable batteries in accord with local regulations, being sure to first insulate the terminals with tape.

Specifications

Nikon Z50II digital camera

Туре	
Type Digital camera with support for interchangeable lenses	
Lens mount	Nikon Z mount

Lens	
Compatible lenses	Z mount NIKKOR lenses F mount NIKKOR lenses (mount adapter required; restrictions may apply)

Effective pixels	
Effective pixels	20.9 million

lmage sensor		
Type 23.5 × 15.7 mm CMOS sensor (Nikon DX format)		
Total pixels	21.51 million	
Dust- reduction system	Image Dust Off reference data (requires NX Studio)	

Storage			
· [DX (24×16)] selected for image area:			
	- 5568 × 3712 (Large: 20.7 M)		
	- 4176 × 2784 (Medium: 11.6 M)		
	- 2784 × 1856 (Small: 5.2 M)		
	· [1:1 (16×16)] selected for image area:		
Image size	- 3712 × 3712 (Large: 13.8 M)		
(pixels)	- 2784 × 2784 (Medium: 7.8 M)		
	- 1856 × 1856 (Small: 3.4 M)		
	· [16:9 (24×14)] selected for image area:		
	- 5568 × 3128 (Large: 17.4 M)		
	- 4176 × 2344 (Medium: 9.8 M)		
	- 2784 × 1560 (Small: 4.3 M)		
	• NEF (RAW): 14 bit; choose from lossless compression,		
	high efficiency★, and high efficiency options		
	· JPEG: JPEG-Baseline compliant with fine (approx. 1:4),		
	normal (approx. 1:8), or basic (approx. 1:16)		
File format	compression		
(image	• HEIF : Supports fine (approx. 1:4), normal (approx. 1:8),		
quality)	or basic (approx. 1:16) compression		
	• NEF (RAW)+JPEG: Single photograph recorded in both		
	NEF (RAW) and JPEG formats		
	• NEF (RAW)+HEIF: Single photograph recorded in both		
	NEF (RAW) and HEIF formats		

	Storage	
Picture Control System	Auto, Standard, Neutral, Vivid, Monochrome, Flat Monochrome, Deep Tone Monochrome, Portrait, Rich Tone Portrait, Landscape, Flat, Creative Picture Controls (Dream, Morning, Pop, Sunday, Somber, Dramatic, Silence, Bleached, Melancholic, Pure, Denim, Toy, Sepia, Blue, Red, Pink, Charcoal, Graphite, Binary, Carbon); selected Picture Control can be modified; storage for Custom Picture Controls * Note: Choice of Picture Controls is restricted to Standard, Monochrome, and Flat when HLG is selected for tone mode during still photography.	
Media	SD (Secure Digital) and UHS-II compliant SDHC and SDXC memory cards	
File system	DCF 2.0, Exif 2.32, MPEG-A MIAF	

Viewfinder	
Viewfinder	1.0-cm/0.39-in., approx. 2360k-dot (XGA) OLED electronic viewfinder with color balance and auto and 13-level manual brightness controls
Frame coverage	Approx. 100% horizontal and 100% vertical
Magnification	Approx. 1.02× (50 mm lens at infinity, –1.0 m ⁻¹)
Eyepoint	19.5 mm (–1.0 m ⁻¹ ; from rearmost surface of viewfinder eyepiece lens)
Diopter adjustment	−3 − +3 m−1
Eye sensor	Automatically switches between monitor and viewfinder displays

Monitor	
Monitor	8-cm/3.2-in., approx. 1040k-dot vari-angle TFT touch- sensitive LCD with 170° viewing angle, approximately 100% frame coverage, and color balance and 13-level manual brightness controls

Shutter	
Туре	Electronically-controlled vertical-travel focal-plane mechanical shutter; electronic front-curtain shutter; electronic shutter
Speed	$1/4000 - 30$ s (choose from step sizes of 1/3, 1/2, and 1 EV, extendable to 900 s in mode \mathbf{M}), bulb, time
Flash sync speed	Flash synchronizes with shutter at speeds of 1/250 or 1/200 s or slower (but note that the guide number drops at speeds of 1/200 to 1/250 s); sync speeds as fast as 1/4000 s are supported with auto FP high-speed sync

Release	
Release mode	Single frame, continuous low-speed, continuous high- speed, continuous high-speed (extended), high-speed frame capture + with Pre-Release Capture, self-timer
Approximate frame advance rate*	Continuous low-speed: Approx. 1 – 5 fps Continuous high-speed: Approx. 5.6 fps (when using silent mode and image quality settings other than NEF (RAW) and NEF (RAW) +: Approx. 9.7 fps) Continuous high-speed (extended): Approx. 11 fps (in silent mode: Approx. 15 fps) High-speed frame capture + (C15): Approx. 15 fps High-speed frame capture + (C30): Approx. 30 fps Maximum frame advance rate as measured by inhouse tests.

Release	
Self-timer	2 s, 5 s, 10 s, 20 s; 1–9 exposures at intervals of 0.5, 1, 2, or 3
Seit-timer	S

Exposure	
Metering system	TTL metering using camera image sensor
Metering mode	Matrix metering Center-weighted metering: Weight of 75% given to 8 or 6 mm circle in center of frame or weighting can be based on average of entire frame Spot metering: Meters circle with a diameter of approximately 3.5 mm centered on selected focus point Highlight-weighted metering
Range*	-4 - +17 EV * Figures are for ISO 100 equivalent and f/2.0 lens at 20 °C/68 °F
Mode	· 營: auto, P: programmed auto with flexible program, S: shutter-priority auto, A: aperture-priority auto, M: manual · Scene modes: ② portrait; ■ landscape; ④ child; ঽ sports; ❸ close up; ❷ night portrait; ■ night landscape; 溪 party/indoor; 為 beach/snow; 墨 sunset; 善 dusk/dawn; ❤ pet portrait; ② candlelight; ❖ blossom; ❖ autumn colors; † food
Exposure compensation	-5 - +5 EV (choose from step sizes of 1/3 and 1/2 EV)
Exposure lock	Luminosity locked at detected value

	Exposure	
	ISO 100–51200 (choose from step sizes of 1/3 and 1 EV);	
ISO sensitivity	can also be set to approx. 0.3, 0.7, 1, or 2 EV (ISO 204800	
(Recommende	equivalent) above ISO 51200; auto ISO sensitivity control	
d Exposure	available	
Index)	* Note: ISO sensitivity is limited to 400–51200 when HLG	
	is selected for tone mode.	
Active D- Lighting	Auto, Extra high, High, Normal, Low, and Off	
Multiple exposure	Add, average, lighten, darken	
Other options	HDR overlay, photo mode flicker reduction, high-frequency flicker reduction	

Autofocus	
Туре	Hybrid phase-detection/contrast AF with AF assist
Detection range*	-9 - +19 EV * Measured in photo mode at ISO 100 equivalent and a temperature of 20 °C/68 °F using single-servo AF (AF-S) and a lens with a maximum aperture of f/1.2
Lens servo	Autofocus: Single-servo AF (AF-S), continuous-servo AF (AF-C), AF mode auto-switch (AF-A, photo mode only), full-time AF (AF-F, video mode only), predictive focus tracking Manual focus (M): Electronic rangefinder can be used
Focus points*	209 focus points (single-point AF), 231 focus points (auto- area AF) * Number of focus points available in photo mode with DX selected for image area
·	

Autofocus	
AF-area mode	Pinpoint (available in photo mode only), single-point, dynamic-area (S, M, and L; available in photo mode only), wide-area (S, L, C1, and C2), and auto-area AF; 3D-tracking (available in photo mode only); subject-tracking AF (available in video mode only)
Focus lock	Focus can be locked by pressing shutter-release button halfway (single-servo AF/ AF-S) or by pressing the 鮭 (On) button

Flash	
Built-in flash	Manual pop-up flash raised via flash pop-up control Guide Number : Approx. 7/22, 7/22 with manual flash (m/ft, ISO 100, 20 °C/68 °F)
Charging time	Approx. 3 s
Flash control	TTL: i-TTL flash control; i-TTL balanced fill-flash is used with matrix, center-weighted, and highlight-weighted metering, standard i-TTL fill-flash with spot metering
Flash mode	Fill flash, red-eye reduction, slow sync, slow sync + red- eye, rear-curtain sync, auto, auto + red-eye reduction, auto slow sync, auto slow sync + red-eye, flash off
Flash compensation	-3 - +1 EV (choose from step sizes of 1/3 and 1/2 EV)
Flash-ready indicator	Lights when built-in flash or optional flash unit is fully charged; flashes as underexposure warning after flash is fired at full output
Accessory shoe	ISO 518 hot-shoe with sync and data contacts and safety lock

Flash	
Nikon Creative	i-TTL flash control, optical Advanced Wireless Lighting, FV
Lighting	lock, Color Information Communication, auto FP high-
System (CLS)	speed sync

White balance	
White balance	Auto (3 types), natural light auto, direct sunlight, cloudy, shade, incandescent, fluorescent (3 types), flash, choose
	color temperature (2500–10,000 K), preset manual (up to 6 values can be stored), all with fine-tuning

Bracketing	
Bracketing	Exposure and/or flash, white balance, and ADL

Other options for still photography	
Other options	Vignette control, diffraction compensation, auto distortion
for still	control, skin softening, portrait impression balance, and
photography	interval-timer, and focus-shift photography

Video	
Metering system	TTL metering using camera image sensor
Metering mode	Matrix, center-weighted, or highlight-weighted
Frame size (pixels) and frame rate	• 3840×2160 (4K UHD): 60p/50p/30p/25p/24p • 1920 × 1080: 120p/100p/60p/50p/30p/25p/24p • 1920 × 1080 slow-motion: 30p (×4)/25p (×4)/24p (×5) Note: Actual frame rates for 120p, 100p, 60p, 50p, 30p, 25p, and 24p are 119.88, 100, 59.94, 50, 29.97, 25, and 23.976 fps respectively.

Video	
File format	MOV, MP4
Video compression	H.265/HEVC (8 bit/10 bit), H.264/AVC (8 bit)
Audio recording format	Linear PCM (48 KHz, 24 bit, for videos recorded in MOV format) or AAC (48 KHz, 16 bit, for videos recorded in MP4 format)
Audio recording device	Built-in stereo or external microphone can be used; sensitivity adjustable; attenuator, frequency response, and wind noise reduction functions
Exposure compensation	-3 - +3 EV (choose from step sizes of 1/3 and 1/2 EV)
ISO sensitivity (Recommende d Exposure Index)	Mode M: Manual selection (ISO 100–25600; choose from step sizes of 1/6, 1/3 and 1 EV); auto ISO sensitivity control (ISO 100–25600) available with selectable upper limit Note: ISO sensitivity is limited to 400–25600 when HLG is selected for tone mode. Note: ISO sensitivity is limited to Lo 0.3–2.0 and 800–25600 when N-Log is selected for tone mode. Modes P, S, A: Auto ISO sensitivity control (ISO 100–25600) with selectable upper limit Modes 7, SCN: Auto ISO sensitivity control (ISO 100–25600)
Active D- Lighting	Extra high, High, Normal, Low, and Off

Video		
Other options	Time-lapse video recording, electronic vibration reduction, time codes, REC lamp, N-Log and HDR (HLG) video, waveform display, red REC frame indicator, video recording display zoom (50%, 100%, 200%, and 400%), extended shutter speeds (modes S and M), option to view video recording info available via i menu, and Hi-Res Zoom	

Playback	
Playback	Full-frame and thumbnail (up to 4, 9, or 72 pictures) playback with playback zoom, playback zoom cropping, video playback, slide shows, histogram display, highlights, photo information, location data display, auto picture rotation, picture rating, filtered playback, voice memo recording and playback, IPTC information embedding and display, skip to first shot in series, series playback, save consecutive frames, and motion blend

Interface	
USB	Type C USB connector (SuperSpeed USB); connection to built-in USB port is recommended
HDMI output	Type D HDMI connector
External audio input	Stereo mini-pin jack (3.5 mm diameter; plug-in power supported)
Audio output/ remote cord	Stereo mini-pin jack (3.5 mm diameter) MC-DC3 remote cord can be used. Auto switch between headphone and remote cord is available.

Wi-Fi/Bluetooth

· Standards:

- IEEE 802.11b/g/n/a/ac (Africa, Asia, Europe, Oceania, U.S.A., Canada, and Mexico)
- IEEE 802.11b/g/n/a (other countries in the Americas)

Operating frequency:

- Asia, Africa (excluding the countries listed below), the Middle East (excluding the countries listed below), Guam, New Caledonia, and Tahiti: 2412–2462 MHz (channel 11) and 5745–5805 MHz
- Europe, Cyprus, Israel, Turkey, Algeria, Egypt, Morocco, and the Republic of the Congo: 2412–2462 MHz
 (channel 11) and 5180–5320 MHz
- India: 2412–2472 MHz (channel 13) and 5180–5825 MHz (5180–5700 MHz and 5745–5825 MHz)
- U.S.A., Canada, Mexico, Australia, New Zealand, and the Republic of Fiji: 2412-2462 MHz (channel 11) and 5180-5825 MHz (5180-5580 MHz, 5660-5700 MHz, and 5745-5825 MHz)
- Other countries in the Americas: 2412-2462 MHz (channel 11) and 5180-5805 MHz (5180-5320 MHz and 5745-5805 MHz)

· Maximum output power (EIRP):

- 2.4 GHz band: 4.6 dBm
- 5 GHz band: 5.3 dBm
- · Authentication: Open system, WPA2-PSK, WPA3-SAE

Wi-Fi

	Wi-Fi/Bluetooth
	· Communication protocols: Bluetooth Specification
	Version 5.0
	· Operating frequency:
Bluetooth	- Bluetooth: 2402–2480 MHz
biuetootn	- Bluetooth Low Energy: 2402–2480 MHz
	· Maximum output power (EIRP):
	- Bluetooth: –0.9 dBm
	- Bluetooth Low Energy: –2.4 dBm

	Power source
Battery	One EN-EL25a rechargeable Li-ion battery* * EN-EL25 batteries can also be used. Note, however, that fewer pictures can be taken on a single charge than with the EN-EL25a.
AC adapter	EH-8P AC adapters (available separately); supplied USB cable required

	Tripod socket
Tripod socket	0.635 cm (1/4 in., ISO 1222)

	Dimensions/weight
Dimensions $(W \times H \times D)$	Approx. 127 × 96.8 × 66.5 mm/5 × 3.9 × 2.7 in.
Weight	Approx. 550 g (1 lb. 3.4 oz.) with battery and memory card but without body cap; approx. 495 g/1 lb. 1.5 oz. (camera body only)

	Operating environment
Temperature	0 °C-40 °C (+32 °F-104 °F)

Operating environment		
Humidity	85% or less (no condensation)	

- Unless otherwise stated, all measurements are performed in conformity with Camera and Imaging Products Association (CIPA) standards or guidelines.
- · All figures are for a camera with a fully-charged battery.
- Throughout this document, "DX format" is used in reference to an angle of view equivalent to that of an APS-C camera.
- The sample images displayed on the camera and the images and illustrations in this document are for expository purposes only.
- Nikon reserves the right to change the appearance and specifications of the hardware and software described in this document at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this document may contain.

■ EN-EL25a Rechargeable Li-ion Battery

Туре	Rechargeable lithium-ion battery		
Rated capacity	7.6 V, 1250 mAh		
Operating temperature	0 °C-40 °C (+32 °F-104 °F)		
Dimensions (W \times H \times D)	Approx. $34 \times 50.5 \times 18 \text{ mm} / 1.4 \times 2.0 \times 0.8 \text{ in}.$		
Weight	Approx. 54 g (2 oz)		

Cautions: Disposing of data storage devices

Please note that deleting images or formatting memory cards or other data storage devices does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Care should be taken to avoid injury when physically destroying data storage devices.

Before discarding the camera or transferring ownership to another person, you should also use the [Reset all settings] item in the camera setup menu to delete network settings and other personal information.

Approved memory cards

- The camera can be used with SD, SDHC, and SDXC memory cards.
- · UHS-I and UHS-II SD cards are supported.



- UHS Speed Class 3 or better SD memory cards with a maximum data transfer rate of at least 250 MB/s are recommended for shooting with high-speed frame capture +.
- UHS Speed Class 3 or better SD memory cards are recommended for video recording and playback. UHS Speed Class 3 or better SD memory cards with a maximum data transfer rate of at least 250 MB/s are recommended for recording and playback of videos with a high frame size or rate. Slower speeds may result in recording or playback being interrupted.
- When choosing cards for use in card readers, be sure they are compatible with the device.
- Contact the manufacturer for information on features, operation, and limitations on use.

Memory card capacity

The following table shows buffer capacity and the approximate number of pictures that can be stored on a 32 GB¹ memory card at different image qualities (□118) and sizes (□120) when [**DX (24×16)**] is selected for [**Choose image area**] and [**SDR**] is selected for [**Tone mode**]. Actual capacity varies with shooting conditions and the type of card.

Image quality	lmage size	File size	Number of exposures remaining ²	Buffer capacity ^{2, 3}	
NEF (RAW), lossless compression	_	Approx. 24.4 MB	763 frames	Over 200 frames	
NEF (RAW), high efficiency★			1,700 frames	Over 200	
NEF (RAW), high efficiency			2,400 frames	frames	
	Large	Approx. 10.0 MB	2,100 frames		
JPEG/HEIF fine	Medium	Approx. 6.8 MB	3,400 frames	Over 200 frames	
	Small	Approx. 3.7 MB	6,400 frames		
JPEG/HEIF normal	Large	Approx. 5.7 MB	4,200 frames	Over 200	
	Medium	Approx. 3.5 MB	6,700 frames	frames	

Image quality	lmage size	File size	Number of exposures remaining ²	Buffer capacity ^{2, 3}
JPEG/HEIF normal	Small	Approx. 2.0 MB	12,200 frames	Over 200 frames
JPEG/HEIF basic	Large	Approx. 2.3 MB	8,000 frames	
	Medium	Approx. 1.7 MB	12,800 frames	Over 200 frames
	Small	Approx. 1.1 MB	22,200 frames	

- 1 Figures are for a SanDisk SD memory card (SDSDXPK-032G-JNJIP) with a NIKKOR Z DX 16–50mm f/3.5–6.3 VR lens mounted on the camera (as of July 2024).
- 2 The number of pictures that can be saved to the memory card or stored in the memory buffer varies with the scene recorded.
- 3 Maximum number of exposures that can be stored in memory buffer at ISO 100. If [Auto distortion control] is set to [ON], the number of exposures may drop.

Memory card capacity (videos)

The following table shows the approximate length of footage that can be stored on a 256 GB* card with different options selected for [Frame size/frame rate] (\square 224) in the video recording menu when [H.265 8-bit (MOV)] is selected for [Video file type].

- Each shot can be up to 125 minutes in length. Actual capacity varies with shooting conditions and the type of card.
- The maximum capacity for each option is the maximum combined length of files that can be shot at that frame size and rate.
- Even when space remains on the memory card, recording may end before the maximum length is reached if the battery runs low or camera temperature rises.

[Frame size/frame rate]	Maximum capacity	
[3840×2160; 60p]	Ammuny OA minutes	
[3840×2160; 50p]	Approx. 94 minutes	
[3840×2160; 30p]		
[3840×2160; 25p]	Approx. 187 minutes	
[3840×2160; 24p]		
[1920×1080; 120p]	A 107 : .	
[1920×1080; 100p]	Approx. 187 minutes	
[1920×1080; 60p]	America 260 minutes	
[1920×1080; 50p]	Approx. 369 minutes	
[1920×1080; 30p]		
[1920×1080; 25p]	Approx. 721 minutes	
[1920×1080; 24p]		

measured in July 2024	t).		

* Figures are for a SanDisk SD memory card (SDSDXEP-256G-JNJIP,

Battery endurance

The video footage or number of shots that can be recorded with a fully-charged EN-EL25a rechargeable Li-ion battery¹ is given below.² Actual endurance varies with such factors as the condition of the battery, the interval between shots, and the options selected in the camera menus.

■ Photo mode (single frame): Number of shots³

- [Viewfinder only] selected for monitor mode with:
 - [ON] selected for [Energy saving (photo mode)] in the setup menu: Approx. 240 shots
 - [OFF] selected for [Energy saving (photo mode)] in the setup menu: Approx. 220 shots
- [Monitor only] selected for monitor mode with:
 - [ON] selected for [Energy saving (photo mode)] in the setup menu: Approx. 250 shots
 - [OFF] selected for [Energy saving (photo mode)] in the setup menu: Approx. 230 shots

■ Video mode: Length of footage⁴

- [Viewfinder only] selected for monitor mode: Approx. 55 minutes
- [Monitor only] selected for monitor mode: Approx. 55 minutes

Actions such as the following can reduce battery endurance:

- · keeping the shutter-release button pressed halfway,
- repeated autofocus operations,
- · taking NEF (RAW) photographs,
- · slow shutter speeds,
- · using camera Wi-Fi (wireless LAN) and Bluetooth features,
- · using the camera with optional accessories connected,
- · repeatedly zooming in and out, and
- · taking pictures at low ambient temperatures.

To ensure that you get the most from rechargeable Nikon EN-EL25a batteries:

- Keep the battery contacts clean. Soiled contacts can reduce battery performance.
- Use batteries immediately after charging. Batteries will lose their charge if left unused.
- 1 EN-EL25 batteries can also be used. Note, however, that fewer pictures can be taken on a single charge than with the EN-EL25a.
- 2 Measured at 23 °C/73.4 °F (±2 °C/3.6 °F) with a SanDisk SDSDXPK-032G-JNJIP memory card.
- 3 Camera and Imaging Products Association (CIPA) standard. One photograph taken at default settings once every 30 s. Measured with a NIKKOR Z DX 16–50mm f/3.5–6.3 VR lens.
- 4 Actual battery endurance as measured under conditions specified by CIPA. Measured with a NIKKOR Z DX 16–50mm f/3.5–6.3 VR lens. Measurement performed at default settings.
 - · Each shot can be up to 125 minutes in length.
 - · If the temperature inside the camera rises, recording may end before the maximum length is reached or before the memory card is full.

Trademarks and licenses

- NVM Express is a trademark or registered trademark of NVM Express Inc.
- The SD, SDHC, and SDXC logos are trademarks of SD-3C, LLC.
- Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.
- Apple*, App Store*, the Apple logos, iPhone*, iPad*, Mac, and macOS are trademarks of Apple Inc. registered in the U.S. and/or other countries.
- Android, Google Play and the Google Play logo are trademarks of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.
- IOS is a trademark or registered trademark of Cisco Systems, Inc., in the United States and/or other countries and is used under license.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

HDMI

- The Bluetooth* word mark and logo are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Nikon is under license.
- Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance.
- · Powered by intoPIX technology.



 All other trade names mentioned in this document or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

- Use of the Made for Apple badge means that an accessory has been
 designed to connect specifically to the Apple products identified in
 the badge, and has been certified by the developer to meet Apple
 performance standards. Apple is not responsible for the operation of
 this device or its compliance with safety and regulatory standards.
 Please note that the use of this accessory with an Apple product may
 affect wireless performance.
- This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.

▼ FreeType License (FreeType2)

Portions of this software are copyright © 2012 The FreeType Project (https://www.freeType.org). All rights reserved.

MIT License (HarfBuzz)

Portions of this software are copyright © 2018 The HarfBuzz Project (https://www.freedesktop.org/wiki/Software/HarfBuzz). All rights reserved.

IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE AND ITS DOCUMENTATION, EVEN IF THE COPYRIGHT HOLDER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. THE COPYRIGHT HOLDER SPECIFICALLY DISCLAIMS ANY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE SOFTWARE PROVIDED HEREUNDER IS ON AN "AS IS" BASIS, AND THE COPYRIGHT HOLDER HAS NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT. UPDATES. ENHANCEMENTS, OR MODIFICATIONS.

Unicode° Character Database License (Unicode° Character Database)

The software for this product uses the Unicode® Character Database License open-source software. The terms of the software license are as follows:

Copyright © 1991-2024 Unicode, Inc. All rights reserved.

Distributed under the Terms of Use in

https://www.unicode.org/copyright.html

Permission is hereby granted, free of charge, to any person obtaining a copy of the Unicode data files and any associated documentation (the "Data Files") or Unicode software and any associated documentation (the "Software") to deal in the Data Files or Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Data Files or Software, and to permit persons to whom the Data Files or Software are furnished to do so, provided that either

- (i) this copyright and permission notice appear with all copies of the Data Files or Software, or
- (ii) this copyright and permission notice appear in associated

THE DATA FILES AND SOFTWARE ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE DATA FILES OR SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in these Data Files or Software without prior written authorization of the copyright holder.

AVC Patent Portfolio License

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR

(ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE http://www.mpegla.com

▼ BSD license (NVM Express driver)

The license for the open-source software included in the camera's NVM Express driver is as follows:

https://imaging.nikon.com/support/pdf/LicenseNVMe.pdf

▼ Other open-source software

Additional open-source licenses can be found at the URL below: https://imaging.nikon.com/oss/en/index.htm

Compliance information

■ Notes about wireless communication function

Use restriction

The use of wireless devices may be prohibited in some countries or regions. Familiarize yourself with and obey all applicable local regulations.

The Bluetooth transmitter in this device operates in the 2.4 GHz band.

Security note

Although one of the benefits of this product is that it allows others to freely connect for the wireless exchange of data anywhere within its range, the following may occur if security is not enabled:

- Data theft: Malicious third-parties may intercept wireless transmissions to steal user IDs, passwords, and other personal information.
- Unauthorized access: Unauthorized users may gain access to the network and alter data or perform other malicious actions. Note that due to the design of wireless networks, specialized attacks may allow unauthorized access even when security is enabled.
- Unsecured networks: Connecting to open networks may result in unauthorized access. Use secure networks only.
- Configuring the settings of the security features that are normally included in Wi-Fi (wireless LAN) products will reduce the possibility that the problems described above will occur.
- You should fully understand the problems that may occur if you use a product without configuring security settings. It is your responsibility to configure security settings at your own discretion before using the product.

• Precautions when exporting or carrying this product abroad

This product is controlled by the United States Export Administration Regulations (EAR). The permission of the United States government is not required for export to countries other than the following, which as of this writing are subject to embargo or special controls: Cuba, Iran, North Korea, Sudan, and Syria (list subject to change).

■ Notice for customers in the U.S.A.

• Federal Communications Commission (FCC) statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Class B Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/television technician for help.



FCC caution

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

• Compliance with FCC requirement 15.407(c)

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Frequency Tolerance: ±20 ppm

• FCC RF exposure statement

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of

low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. This product has been tested and found to comply with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. Please refer to the SAR test report that was uploaded to FCC website.

CAUTION

Interface cables (when interface cables are supplied)
 Use only the interface cables supplied with your camera. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules. If you have lost a cable or the cable has been damaged, contact the seller or Nikon Inc.

Nikon Inc., 1300 Walt Whitman Road, Melville,

New York 11747-3064, U.S.A.

Tel.: 631-547-4200

■ Notice for customers in Canada

 Innovation, Science and Economic Development Canada (ISED) statement

This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• ISED compliance label

CAN ICES-003(B) / NMB-003(B)

• ISED RF exposure statement

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. This product has been tested and found to comply with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules.

• Cancelling automatic transmission (compliance with RSS-247)

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Use restriction in Canada

For indoor use only (5150-5350 MHz).

■ Notice for customers in Europe and in countries complying with the EU legislation

• Declaration of conformity

Hereby, Nikon Corporation declares that the radio equipment type Z50II is in compliance with Directive 2014/53/EU.



The full text of the EU declaration of conformity is available at the following internet address:

https://imaging.nikon.com/imaging/support/pdf/DoC_N2318.pdf

• Use restriction in Europe

For this radio equipment, 5150–5350 MHz band is restricted to indoor operations only. This restriction on putting into service or of the requirement for authorization of use applies in AT, BE, BG, CY, CZ, DK, EE, FI, FR, DE, EL, MK, IE, IT, LV, LT, LU, MT, NL, PL, PT, RO, SK, LI, HU, SI, ES, SE, UK (NI), IS, ME, NO, CH, TR, HR and RS.

Wi-Fi

· Operating frequency:

- Asia, Africa (excluding the countries listed below), the Middle East (excluding the countries listed below), Guam, New Caledonia, and Tahiti: 2412–2462 MHz (channel 11) and 5745–5805 MHz
- Europe, Cyprus, Israel, Turkey, Algeria, Egypt, Morocco, and the Republic of the Congo: 2412–2462 MHz (channel 11) and 5180– 5320 MHz
- India: 2412–2472 MHz (channel 13) and 5180–5825 MHz (5180– 5700 MHz and 5745–5825 MHz)
- U.S.A., Canada, Mexico, Australia, New Zealand, and the Republic of Fiji: 2412-2462 MHz (channel 11) and 5180-5825 MHz (5180-5580 MHz, 5660-5700 MHz, and 5745-5825 MHz)

- Other countries in the Americas: 2412-2462 MHz (channel 11) and 5180-5805 MHz (5180-5320 MHz and 5745-5805 MHz)
- · Maximum output power (EIRP):
 - 2.4 GHz band: 4.6 dBm
 - 5 GHz band: 5.3 dBm

Bluetooth

- · Operating frequency:
 - Bluetooth: 2402-2480 MHz
 - Bluetooth Low Energy: 2402-2480 MHz
- · Maximum output power (EIRP):
 - Bluetooth: -0.9 dBm
 - Bluetooth Low Energy: -2.4 dBm

• Standby power consumption

This product complies with the implementation measures (standby and off mode, and networked standby, electric power consumption of electrical and electronic household and office equipment) adopted under the Ecodesign Directive 2009/125/EC.

Power consumption

- · Off mode: 0.2 W
- · Standby mode: 0.2 W
- · Networked standby mode (Bluetooth connections): 0.2 W

Default transition time

- · Standby mode: 1 minute
- · Networked standby mode (Bluetooth connections): 1 minute

• When using a charging AC adapter

When using a charging AC adapter to charge this camera, check that it conforms to the following standards.

The power delivered by the charger must be between min 7.5 Watts required by the radio equipment, and max 15 Watts in order to achieve the maximum charging speed.

USB PD fast charging



• Disposal information

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

This symbol indicates that electrical and electronic equipment is to be collected separately.



- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling help conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the battery indicates that the battery is to be collected separately.



- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

■ Notice for customers in UK

• Declaration of conformity

Hereby, Nikon Corporation declares that the radio equipment type Z50ll is in compliance with Radio Equipment Regulations 2017.

UK CA

The full text of the UKCA declaration of conformity is available at the following internet address:

https://imaging.nikon.com/imaging/support/pdf/

UKCA_DoC_N2318.pdf

• Use restriction in the UK

For this radio equipment, 5150–5350 MHz band is restricted to indoor operations only.

Wi-Fi

- · Operating frequency:
 - 2412-2462 MHz (channel 11) and 5180-5320 MHz
- · Maximum output power (EIRP):
 - 2.4 GHz band: 4.6 dBm
 - 5 GHz band: 5.3 dBm

Bluetooth

- · Operating frequency:
 - Bluetooth: 2402-2480 MHz
 - Bluetooth Low Energy: 2402-2480 MHz
- · Maximum output power (EIRP):

- Bluetooth: -0.9 dBm
- Bluetooth Low Energy: -2.4 dBm

• Compliance with the UK PSTI Act 2022

This product complies with the UK PSTI Act 2022 and the statement of compliance and security update period is available at the following internet address:

https://www.nikonimgsupport.com/eu/BV_article?lang=en_GB&articleNo=000066765

■ Notice for customers in Singapore

Trade Name: **Nikon** Model: Z50II

This device complies with radio-frequency regulations. The content of certification labels not affixed to the device is given below.

Complies with IMDA Standards DA103423

■ Notice for customers in Thailand

เครือ งโทรคมนาคมและอุปกรณ์นี้ มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

■ Notice for customers in Oman

Oman-TRA
D090024
TRA/TA-R/18768/24

II Conformity marking

The standards with which the camera complies can be viewed using the [**Conformity marking**] option in the setup menu.

Z50II Model Name: N2318

Index

Symbols, numerics

(Auto)101, 10	8
P (Programmed auto)14	4
S (Shutter-priority auto)14	5
A (Aperture-priority auto)14	6
M (Manual)14	7
U1, U2, U3 (User setting mode)15	0
SCN (Scene mode)15	2
S (Single frame)16	6
밀 L (Continuous L)16	6
밀 H (Continuous H)16	7
및 H (Continuous H (extended))16	7
⊒15 (C15)17	0
930 (C30)17	0
♦ (Self-timer)16	
(Pinpoint AF)12	5
[12] (Single-point AF)12	5
(Dynamic-area AF (S))12	6
(Dynamic-area AF (M))12	6
GL (Dynamic-area AF (L))120	6
‰ (Wide-area AF (S))12	7
Mol. (Wide-area AF (L))12	7
통경 (Wide-area AF (C1))12	7
통권 (Wide-area AF (C2))12	7
(3D) (3D-tracking)12	8
(Subject-tracking AF)12	8
(Auto-area AF)12	9
MENU button	2
i button79, 26.	2
i menu	2

4 1	
to button	
ISO button	
☑ (Exposure compensation) butto	on
	164
(Picture Control) button	. 71, 202
☐ (Release mode) button	166
ి (Self-timer) button	166
能 (० ¬) button137, 1	162, 271
(Help)	77
1920×1080; 24p ×5 (slow-motion) 225
1920×1080; 25p ×4 (slow-motion	
1920×1080; 30p ×4 (slow-motion	
3D-tracking	128
Α	
AC adapter	90
AC adapter	
ADL bracketing	519
ADL bracketingAdvanced Wireless Lighting	519
ADL bracketingAdvanced Wireless LightingAE & flash bracketing	519 472 510
ADL bracketing	519 472 510
ADL bracketing	519 519 510 510
ADL bracketing	519510510510510512
ADL bracketing	519 510 510 122 123
ADL bracketing	519510510123123
ADL bracketing	519510510123123
ADL bracketing	519510510510122123123
ADL bracketing	5195105105101221231231247, 147
ADL bracketing	519510510510123123124146146
ADL bracketing	519519510122123125125126127127128

Autoexposure (AE) lock	162	Dynamic-area AF (L)	126
D		Dynamic-area AF (M)	126
<u>B</u>		Dynamic-area AF (S)	126
Battery	86, 90	E	
Bluetooth	348		
Bluetooth remote control	750	Editing videos	323
Built-in microphone	109	Electronic front-curtain shutter	611
Bulb	160	Exposure compensation	164
Bulb (Long time-exposures)	160	Exposure indicators	149
Burst photography	166	External recorder	339
c		F	
C15	170	Filtered playback	277
C30	170	Flange-back distance	142
Camera setup	97	Flash bracketing	510
Camera-mounted flash units	468	Flash compensation	464
Choose image area	117	Flash control mode	471, 503
Cloud service	420, 452	Flash photography	457, 468
Color temperature	182, 189	Flexible program	145
Continuous AF	123	Fn1 button	70
Continuous H	167	Fn2 button	70
Continuous H (extended)	167	Focal plane mark	142
Continuous L	166	Focus indicator	140
D		Focus lock	137
<u>D</u>		Focus point	134
D-Lighting	309	Focus ring	140
Darken	317	Format memory card	702
Delete11	5, 281, 693	Frame rate	224
Detaching lenses	, ,	Full-frame playback	243
Diopter adjustment control		Full-time AF	123
DISP button		FV lock	465
Distortion control	311		

H		N	
Hi (ISO sensitivity)	175	N-Log	233
Hi-Res Zoom	235	Nikon Imaging Cloud	420, 452
High sensitivity (Hi)	175	NX Studio	364, 454
High-speed frame capture + .	170	NX Tether	413, 454
HLG	230, 484	•	
HLG video	230	0	
I		Overlay (add)	314
Image quality	118	P	
Image size	120	Perspective control	312
ISO sensitivity	174	Photo information	
ī		Photo/video selector	101, 108
L		Picture Control	200
Lighten	317	Pinpoint AF	125
Log recording	233	Playback zoom	269
Long time-exposures	160		
		Power off delay	88
<u>M</u>		Press the shutter-release but	ton all the
Manual (Shooting mode)	147	way down	104
Manual focus	123, 139	Press the shutter-release button halfway	
Mechanical shutter	611		103
Memory card	86, 868	Product review mode	53, 237
Memory card capacity	88, 869	Programmed auto	144
MF (Manual focus)	123	Protect	271
Mired	188	R	
ML-L7	837		
Monitor	47, 96	Rating	273
Monochrome	313	RAW processing	290
Motion blend	320	REC lamp	110
My Menu	769	Remote flash photography	472

Reset all settings		Trim	303
		U	
<u>S</u>		UltraSync BLUE	764
Scene mode	152	USB cable	90, 364
SDR	484	User setting mode	150
Select for upload	275	17	
Self-portrait mode	53	V	
Self-timer	167, 171	Video file type	
Shooting mode	143	Video recording time remaining	
Shutter speed	145, 147	Video self-timer	*
Shutter-priority auto	145	Video-record button	,
Silent mode	725	Voice memo	
Single AF	122		
Single frame	166	W	
Single-point AF	125	M/D lava alvatia a	F10
Slide show	279	WB bracketing White balance	
Slow-motion video	225	Wi-Fi access-point mode 352	
SnapBridge	346, 456	'	
Standby timer	88	Wi-Fi station mode354	
Straighten	310	Wide-area AF (C1)	
Streaming	239	Wide-area AF (C2)	
Subject-tracking AF	128	Wide-area AF (L)	
Synchronized release	436	Wide-area AF (S)	
Synchronizing camera clocks	451	Wireless LAN Wireless Transmitter Utility	
<u>T</u>			

 Thumbnail playback
 244

 Time
 160

 Time (Long time-exposures)
 160

 Touch controls
 64

 Touch shutter
 135

No reproduction in any form of this document, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

NIKON CORPORATION