

DIGITAL CAMERA

# ZR

## User's Manual (with Warranty)

- Read this document thoroughly before using the camera.
- To ensure proper use of the camera, be sure to read “For your safety”.
- After reading this document, keep it readily accessible for future reference.

No reproduction in any form of this document, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

NIKON CORPORATION  
© 2025 Nikon Corporation



Printed in Thailand  
6MO21211-01

En

| Nikon Europe Service Warranty Card |            |
|------------------------------------|------------|
| Model name                         | Serial No. |
| Nikon ZR                           |            |
| Purchase date                      |            |
| Name and address of customer       |            |
| Dealer                             |            |
| Distributor                        |            |
| Manufacturer                       |            |

**Warranty terms - Nikon Europe service warranty**

Dear Nikon customer,

We thank you for your purchasing this Nikon product. Should your Nikon product require warranty service, please contact the dealer from whom it was purchased or a member of our authorized service network within the sales territory of Nikon Europe B.V. (e.g. Europe/others). See details under: <https://www.nikoneurope.com>

In order to avoid any unnecessary inconvenience, we advise you to read the user manuals carefully before contacting the dealer or our authorized service network.

Your Nikon equipment is guaranteed against any manufacturing defects for one full year from the date of original purchase. If during this period of guarantee the product proves defective due to improper material or workmanship, our authorized service network within the sales territory of Nikon Europe B.V. will, without charge for labor and parts, repair the product in the terms and conditions set as below. Nikon reserves the right (at its sole discretion) to replace or repair the product.

- This warranty is only provided upon presentation of the completed warranty card and original invoice or purchase receipt indicating the date of purchase, product type and dealer's name, together with the product. Nikon reserves the right to refuse free-of-charge warranty service if the above documents cannot be presented or if the information contained in it is incomplete or illegible.
- This warranty will not cover:
  - necessary maintenance and repair or replacement of parts due to normal wear and tear.
  - modifications to upgrade the product from its normal purpose as described in user manuals, without the prior written consent of Nikon.
  - transport costs and all risks of transport relating directly or indirectly to the warranty of the products.
  - any damage resulting from modifications or adjustments which may be made to the product, without the prior written consent of Nikon, in order to comply with local or national technical standards in force in any other country than the ones for which the product was originally designed and/or manufactured.
- The warranty will not be applicable in the case of:
  - damage caused by misuse including but not limited to failure to use the product for its normal purpose or according to the user instructions on the proper use and maintenance, and to installation or use of the product inconsistent with the safety standards in force in the country where it is used.
  - damage caused by accidents including but not limited to lightning, water, fire, misuse or neglect.
  - defacing, illegibility or removal of the model or serial number on the product.
  - damage resulting from repairs or adjustments which have been conducted by unauthorized service organizations or persons.
  - defects in any system into which the product is incorporated or with which it is used.
- This service warranty does not affect the consumer's statutory rights under applicable national laws in force, nor the consumer's right against the dealer arising from their sales/purchase contract.

**Notice:** An overview of all authorized Nikon Service Stations can be found online by following this Link  
(URL = <https://www.nikoneurope.com>).

with WARRANTY

ZR Model Name: N2410

**Nikon user support**

Should you need technical support, we offer a number of options.

- **For users in the U.S.A.:** <https://www.nikonusa.com/>
- **For users in Canada:** <https://www.nikon.ca/>
- **For users in Mexico:** <https://www.nikon.com.mx/>
- **For users in Latin America:** <https://www.nikonamericalatina.com/>
- **For users in Europe:** <https://www.nikoneurope.com>
- **For users in Asia, Oceania, the Middle East, and Africa:** <https://www.nikon-asia.com/>

The ZR *User's Manual* and Reference Guide

In addition to this *User's Manual*, a *Reference Guide* is available for your camera.

■ **The User's Manual (this sheet)**

The *User's Manual* describes basic camera operations.

■ **The Reference Guide**

Camera features and operations are detailed in a *Reference Guide*, a supplement to the *User's Manual*. The *Reference Guide* can be viewed on computers, smartphones, and tablets.

nikon reference guide ZR

<https://onlinemanual.nikonimglib.com/zr/en/>

✓ **Lens kit lenses**

For information on lenses supplied as part of a lens kit, see the lens documentation available for download from the Nikon Download Center.

✓ **The Nikon Download Center**

Visit the Nikon download center to download the latest firmware for cameras and lenses, NX Studio and other Nikon software, and documentation for Nikon products including cameras, NIKKOR lenses, and flash units. <https://downloadcenter.nikonimglib.com/>

✓ **Downloading Nikon software**

Nikon computer software such as NX Studio is available from the Nikon Download Center. To download apps such as SnapBridge for smart devices, visit the Apple App Store® or Google Play™. For more information, see the “Reference Guide”.


### Package contents

- Be sure all items listed here were included with your camera.
- Camera body
  - BS-D1 digital accessory shoe cover
  - BF-N1 body cap
  - EN-EL15c rechargeable Li-ion battery
  - AN-DC26 strap
  - Warranty (see left)
  - *User's Manual* (this sheet)
  - USB cable (featuring Type C connectors at both ends)
- Memory cards are sold separately.
  - CFexpress (Type B), XQD, microSD, microSDHC, and microSDXC memory cards are referred to throughout this document as “memory cards”. Where it is necessary to distinguish between the different types, the terms “CFexpress memory card”, “XQD memory card”, and “microSD memory card” may be used.

### First steps


#### Attaching the strap

To attach a strap, follow the steps below.

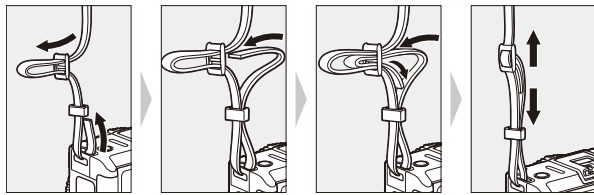

#### Inserting the battery and memory cards

- The camera is equipped with two memory card slots: a slot that takes one CFexpress or XQD memory card (①) and another that takes one microSD memory card (②), for a total of two cards, one of each type.
- Turn the camera off before inserting or removing the battery and memory cards.
  - Holding the memory card in the orientation shown, slide it straight into the slot until it clicks into place.
  - If you are using a microSD memory card, we recommend that you insert it before inserting the battery.
  - Using the battery to keep the orange battery latch pressed to one side, slide the battery into the battery chamber until the latch locks it in place.

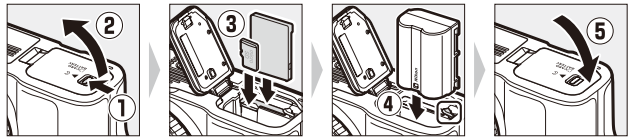


- **Approved memory cards**
- The camera can be used with CFexpress (Type B), XQD, microSD, microSDHC, and microSDXC memory cards.
  - microSDHC and microSDXC memory cards are UHS-I compliant.




### Attaching a lens


- The camera can be used with Z mount lenses. For more information on lenses, see the lens documentation available from the Nikon Download Center.
- The lens generally used in this document for illustrative purposes is a NIKKOR Z 24-70mm f/4 S.
- Be careful to prevent dust entering the camera.
- Confirm that the camera is off before attaching the lens.
  - Remove the camera body cap (①), ② and rear lens cap (③, ④).

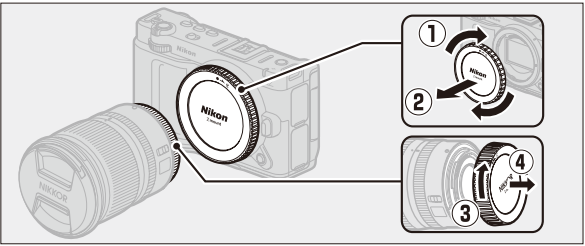

- Align the mounting marks on the camera (⑤) and lens (⑥). Do not touch the image sensor or lens contacts.

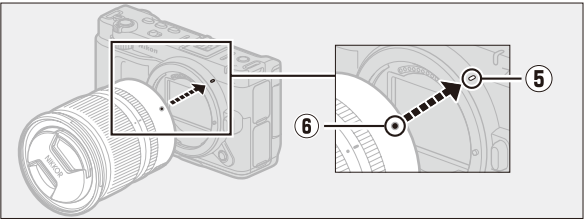


- Rotate the lens as shown until it clicks into place (⑦).

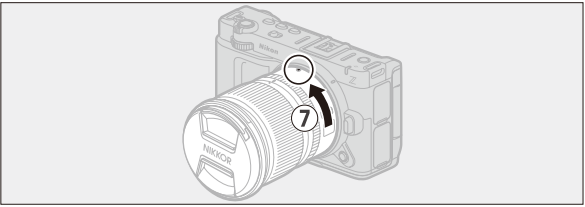

- Remove the front lens cap before taking pictures.

### Opening the monitor

Slowly rotate the monitor without using excessive force.

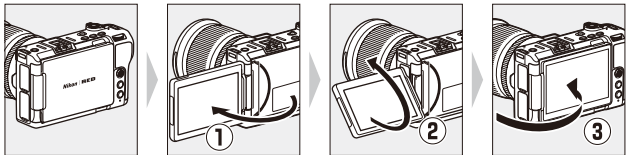


- Throughout this document, the display in camera monitor during shooting is referred to as the “shooting display”.


### Camera setup

Turn the camera on, choose a language, and set the clock. Before using the camera for the first time, follow the steps below to choose a language and time zone and set the clock so that the correct time and date will be recorded with any pictures you take.

- Press and hold the power switch to turn on the camera.**
  - To turn the camera on, firmly press the power switch.
  - When the camera turns on, the power-on lamp turns on for about 5 seconds.

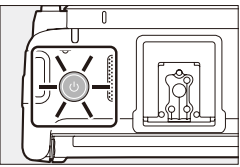


- Press and hold the menu button (①), and in the setup menu highlight [Language] and press the multi selector (②) right.**

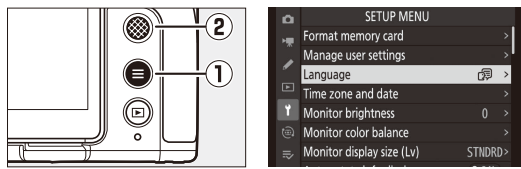


- Select a language.**

Press the multi selector up or down to highlight the desired language and press the center of the multi selector (the languages available vary with the country or region in which the camera was originally purchased).

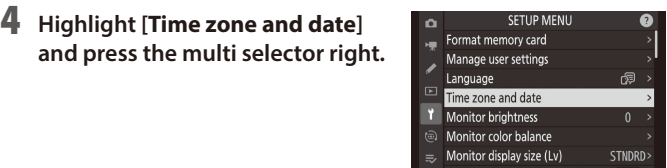



- Choose a time zone.**
  - Select **[Time zone]** in the **[Time zone and date]** display.
  - The display lists selected cities in the chosen zone and the difference between the time in the chosen zone and UTC.
  - Highlight a time zone in the **[Time zone]** display and press the center of the multi selector.


- Turn daylight saving time on or off.**
  - Select **[Daylight saving time]** in the **[Time zone and date]** display.
  - Select **[ON]** (daylight saving time on) or **[OFF]** (daylight saving time off).
  - Selecting **[ON]** advances the clock one hour; to undo the effect, select **[OFF]**.

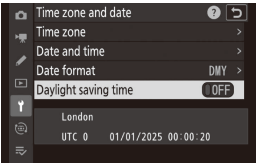

- Set the clock.**
  - Select **[Date and time]** in the **[Time zone and date]** display.
  - Press the center of the multi selector after using the multi selector to set the clock to the date and time in the selected time zone in the **[Date and time]** display (note that the camera uses a 24-hour clock).

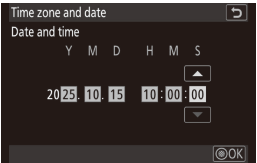


- Choose a date format.**
  - Select **[Date format]** in the **[Time zone and date]** display.
  - Highlight the desired date (year, month, and day) display order and press the center of the multi selector.

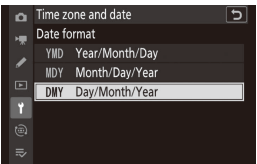

- Exit the menus.**

Lightly press the shutter-release/REC button halfway to exit to shooting mode.
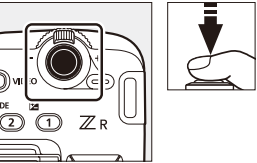
### Caring for the camera


- **Long-term storage**
- When the camera will not be used for an extended period, remove the battery. Before removing the battery, confirm that the camera is off. Do not store the camera in locations that:
- are poorly ventilated or subject to humidities of over 60%
  - are next to equipment that produces strong electromagnetic fields, such as televisions or radios
  - are exposed to temperatures above 50 °C (122 °F) or below –10 °C (14 °F)
- **Cleaning**
- The procedure varies with the part that requires cleaning. The procedures are detailed below.
- Do not use alcohol, thinner, or other volatile chemicals.

- **Camera body**
- Use a blower to remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off sand or salt with a cloth lightly dampened in distilled water and dry the camera thoroughly.
- Important:** The following are not covered under warranty:
- damage caused by the entry of dust, sand, or other foreign matter into the camera, and
  - damage caused by using an aerosol blower too close to the camera.


- **Lens**
- These glass elements are easily damaged: remove dust and lint with a blower. If using an aerosol blower, keep the can vertical to prevent the discharge of liquid that could damage glass elements. To remove fingerprints and other stains, apply a small amount of lens cleaner to a soft cloth and clean with care.
- **Monitor**
- Remove dust and lint with a blower. When removing fingerprints and other stains, wipe the surface lightly with a soft cloth or chamois leather. Do not apply pressure, as this could result in damage or malfunction.
- **Manual cleaning**
- Dirt or dust entering the camera when lenses are exchanged or the body cap is removed may adhere to the surface of the image sensor and affect your photographs. The sensor can be cleaned manually as described below. Note, however, that the sensor is extremely delicate and easily damaged; we recommend that manual cleaning be performed only by a Nikon-authorized service representative.

- Turn the camera off and remove the lens.**
- Holding the camera so that light can enter, examine the image sensor for dust or lint.**

If no foreign objects are present, proceed to Step 4.

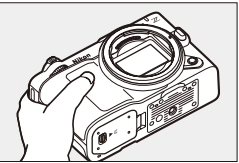- Remove any dust and lint from the sensor with a blower.**
  - Do not use a blower-brush. The bristles could damage the sensor.
  - Dirt that cannot be removed with a blower can only be removed by Nikon-authorized service personnel. Under no circumstances should you touch or wipe the sensor.

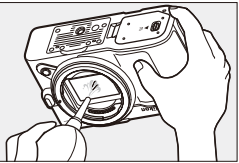

- Replace the lens or supplied body cap.**

- ✓ **Foreign matter on the image sensor**
- Foreign matter entering the camera when lenses or body caps are removed or exchanged (or in rare circumstances lubricant or fine particles from the camera itself) may adhere to the image sensor, where it may appear in photographs taken under certain conditions. To prevent entry of foreign matter when attaching the body cap or exchanging lenses, avoid dusty environments and be sure to remove all dust and other foreign matter that may be adhering to the camera mount, lens mount, or body cap. To protect the camera when no lens is in place, be sure to replace the supplied body cap. For foreign matter adhering to the image sensor, clean the image sensor as described in “Manual cleaning”, or have the sensor cleaned by authorized Nikon service personnel. Photographs affected by the presence of foreign matter on the sensor can be retouched using the clean image options available in some imaging applications.
- ✓ **Servicing the camera and accessories**
- The camera is a precision device and requires regular servicing; Nikon recommends that the camera be inspected once every one to two years, and that it be serviced once every three to five years (note that fees apply to these services).
- Frequent inspection and servicing are particularly recommended if the camera is used professionally.
  - Any accessories regularly used with the camera, such as lenses or optional flash units, should be included when the camera is inspected or serviced.

### Troubleshooting

You may be able to resolve any issues with the camera by following the steps below. Check this list before consulting your retailer or Nikon-authorized service representative.

- STEP 1** Check the list of common problems.
- Common problems and solutions are listed in the troubleshooting section of the *Reference Guide*.
- STEP 2** Turn the camera off and remove the battery, then wait about a minute, re-insert the battery and turn the camera on.
- ✓ The camera may continue to write data to the memory card after shooting. Wait at least a minute before removing the battery.
- STEP 3** Search Nikon websites.
- For support information and answers to frequently asked questions, visit the website for your country or region (see “Nikon user support” at the top left corner of this page).
  - To download the latest firmware for your camera, visit: <https://downloadcenter.nikonimglib.com/>
- STEP 4** Consult a Nikon-authorized service representative.

### For your safety

To prevent damage to property or injury to yourself or to others, read “For your safety” in its entirety before using this product.

After reading these safety instructions, keep them readily accessible for future reference.

- ⚠ **DANGER:** Failure to observe the precautions marked with this icon carries a high risk of death or severe injury.
- ⚠ **WARNING:** Failure to observe the precautions marked with this icon could result in death or severe injury.
- ⚠ **CAUTION:** Failure to observe the precautions marked with this icon could result in injury or property damage.



- Do not use while walking or operating a vehicle.**
- Failure to observe this precaution could result in accidents or other injury.
- Do not disassemble or modify this product. Do not touch internal parts that become exposed as the result of a fall or other accident.**
- Failure to observe these precautions could result in electric shock or other injury.
- Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately remove the battery or disconnect the power source.**
- Continued operation could result in fire, burns or other injury.
- Keep dry. Do not handle with wet hands. Do not handle the plug with wet hands.**
- Failure to observe these precautions could result in fire or electric shock.
- Do not let your skin remain in prolonged contact with this product while it is on or plugged in.**
- Failure to observe this precaution could result in low-temperature burns.
- Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.**
- Failure to observe this precaution could result in explosion or fire.
- Do not directly view the sun or other bright light source through the lens.**
- Failure to observe this precaution could result in visual impairment.
- Do not aim the flash at the operator of a motor vehicle.**
- Failure to observe this precaution could result in accidents.
- Keep this product out of reach of children.**
- Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. *Should a child swallow any part of this product, seek immediate medical attention.*
- Do not entangle, wrap or twist the straps around your neck.**
- Failure to observe this precaution could result in accidents.
- Do not use batteries, chargers, AC adapters, or USB cables not specifically designated for use with this product. When using batteries, chargers, AC adapters, and USB cables designated for use with this product, do not:**
- Damage, modify, forcibly tug or bend the cords or cables, place them under heavy objects, or expose them to heat or flame.
  - Use travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters.
- Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug when charging the product or using the AC adapter during thunderstorms.**
- Failure to observe this precaution could result in electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth.**
- Continued use could result in fire.
- Do not handle with bare hands in locations exposed to extremely high or low temperatures.**
- Failure to observe this precaution could result in burns or frostbite.

Continued overleaf ➡



