

Nikon

Quick Start Guide

Confirming the Package Contents	3
First Steps	5
Shooting and Playback	14
Using ViewNX 2	20
Other Functions	26
For Your Safety	32



En

COOLPIX S3600

Thank you for purchasing a Nikon COOLPIX S3600 digital camera. This guide introduces the procedures necessary for first time use of this camera.

To ensure proper use, please read and thoroughly understand the information in "For Your Safety" (pages 32–35) before using the camera.

For more detailed information, please refer to the digital *Reference Manual*, which is located on the Nikon website. For information on viewing the camera's digital *Reference Manual*, see "Downloading the "Reference Manual"" described below. Should you need technical support, we offer a number of options.

Internet

Please visit the Nikon support home page, where you can:

- Search Nikon's continuously updated Knowledge Database for the latest technical support information.
- Use "Ask Nikon a Question" to receive a prompt reply from a Nikon professional advisor to your e-mail.
- Download the latest versions of Nikon software or firmware updates for your product, or register to receive e-mail notification for software or firmware updates.

For customers in the United States: www.nikontechusa.com

For customers in Canada: help.nikon.ca (English), nikoncanada-fr.custhelp.com (Français)

For customers in Mexico: nikon.com.mx/soporte

For customers in Brazil: <http://nikon.com.br>

Telephone

Please call for technical support and other product assistance. Our professional advisers are standing by to help with your digital camera needs.

For customers in the United States: **1-800-NIKON-UX (1-800-645-6689)**

For customers in Canada: **1-877-534-9910**

For customers in Mexico: **001-888-565-5452**

For customers in Brazil: **0800-886-4566 (0800-88 NIKON)**



Downloading the "Reference Manual"

Refer to the Reference Manual (PDF format) for more detailed information. The Reference Manual can be downloaded from the Nikon website.

<http://nikonimglib.com/manual/>

The Reference Manual can be viewed using Adobe Reader, available for free download from the Adobe website.

An Important Notice about Accessories

Nikon COOLPIX digital camera is designed to the highest standards and includes complex electronic circuitry. Only Nikon accessories, such as battery chargers, batteries, Charging AC Adapters, and AC adapters are certified by Nikon specifically for your Nikon COOLPIX camera and are engineered and tested to operate within the requirements of the electronic circuitry of our cameras.

THE USE OF NON-NIKON ACCESSORIES MAY DAMAGE YOUR CAMERA AND WILL VOID YOUR NIKON WARRANTY.

Genuine Nikon accessories are available through your Nikon-authorized dealer.

Confirming the Package Contents

In the event that any items are missing, please contact the store where you purchased the camera.



COOLPIX S3600
Digital Camera




Camera Strap



Rechargeable Li-ion Battery
EN-EL19



Charging AC Adapter EH-70P*



USB Cable UC-E6



ViewNX 2 CD

- *Quick Start Guide* (this guide)
- Warranty


* A plug adapter is included if the camera was purchased in a country or region that requires a plug adapter. The shape of the plug adapter varies with the country or region of purchase (📖8). The included charging AC adapter is EH-70P in countries other than Brazil, and EH-69C in Brazil.

NOTE: A Secure Digital (SD) memory card, hereafter referred to as a “memory card,” is not provided.



This icon indicates that more information is available elsewhere in this guide.

Parts of the Camera

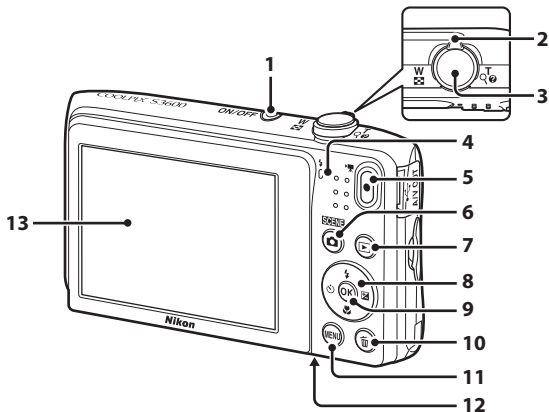


- 1 Power switch/power-on lamp
- 2 Zoom control
- 3 Shutter-release button
- 4 Charge lamp/flash lamp
- 5 ● (●/ movie-record) button
- 6 📷 (shooting mode) button
- 7 ▶ (playback) button

- 8 Multi selector
- 9 OK (apply selection) button
- 10 🗑️ (delete) button
- 11 MENU button
- 12 Battery-chamber/memory card slot cover
- 13 Monitor

First Steps


Step 1 Attach the Camera Strap

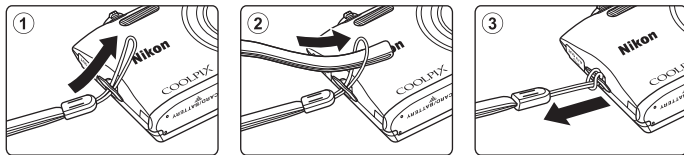

Step 2 Insert the Battery and Memory Card


If a memory card is inserted in the camera, image's data is saved on the memory card. If no memory card is inserted in the camera, the data is saved to the camera's internal memory.

2.1 Open the battery-chamber/memory card slot cover.

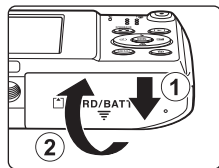


2.2 Insert the battery.

- Push the orange battery latch in the direction indicated by the arrow (①), and fully insert the battery (②).
- The battery locks into place when inserted correctly.


 **Be Careful to Insert the Battery in Correct Direction**

Inserting the battery upside down or backwards could damage the camera.

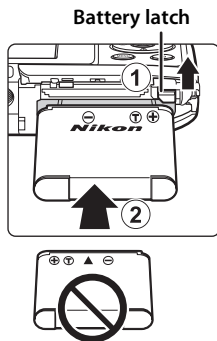


2.3 Insert the memory card.


- Slide the memory card in until it clicks into place.

 **Be Careful to Insert the Memory Card in Correct Direction**

Inserting the memory card upside down or backwards could damage the camera and memory card.

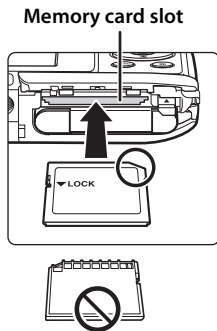

2.4 Close the battery-chamber/memory card slot cover.

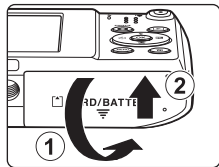


Removing the Battery and Memory Card

Turn the camera off and make sure that the power-on lamp and monitor have turned off, and then open the battery-chamber/memory card slot cover.

- The camera, battery, and memory card may be hot immediately after using the camera.


Removing the Battery

Move the battery latch in the direction indicated by the arrow (①) to eject the battery (②).

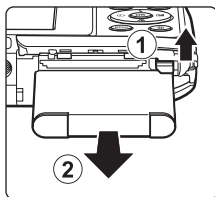

Removing the Memory Card

Gently push the memory card into the camera (①) to partially eject the card (②).

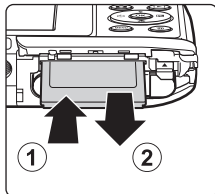


Step 3 *Charge the Battery*

Use the included Charging AC Adapter and USB cable to charge the battery while it is in the camera.

3.1 Prepare the included Charging AC Adapter.


If a plug adapter* is included with your camera, attach the plug adapter to the plug on the Charging AC Adapter. Push the plug adapter firmly until it is securely held in place. Once the two are connected, attempting to forcibly remove the plug adapter could damage the product.

* The shape of the plug adapter varies according to the country or region in which the camera was purchased. This step can be omitted if the plug adapter comes permanently bonded to the Charging AC Adapter.



3.2 Make sure the battery is installed in the camera, and then connect the camera to the Charging AC Adapter in order of ① to ③.

- Keep the camera turned off.
- Make sure that the plugs are properly oriented. Do not insert or remove the plugs at an angle when connecting or disconnecting them.

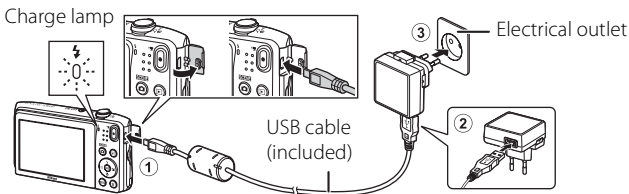


- The charge lamp slowly flashes green to indicate that the battery is charging.
- Shooting is not possible while the camera is connected to the Charging AC Adapter.
- About 2 hours and 50 minutes are required to charge a fully exhausted battery.

3.3 Disconnect the Charging AC Adapter from the electrical outlet and then disconnect the USB cable.




Step 4 Turn On the Camera

Press the power switch.

- The monitor turns on.




The Auto Off Function

- The time that elapses before the camera enters standby mode is about one minute. The time can be changed using the **Auto off** setting in the setup menu (📖29).
- While the camera is in standby mode, the monitor turns back on if you perform any of the following operations:
 - Press the power switch, shutter-release button,  (shooting mode) button,  (playback) button, or  (movie-record) button.


step 5 **Select a Language and Set the Camera Clock**




When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed.

Use the multi selector to make the settings.


- If you exit without setting the date and time,  will flash when the shooting screen is displayed.

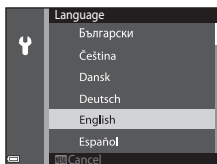5.1




Use the multi selector   to select the desired language and press the  button.


5.2

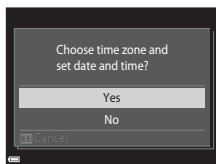


Select **Yes** and press the  button.

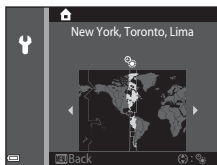

5.3




Select your home time zone and press the  button.

Daylight Saving Time

If daylight saving time is in effect, press  to enable the daylight saving time function.


- When the daylight saving time function is enabled,  is displayed above the map.
- Press  to disable the daylight saving time function.

5.4

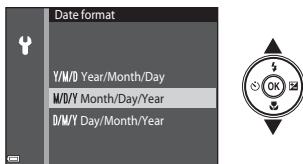

Select the date format and press the **OK** button.


5.5

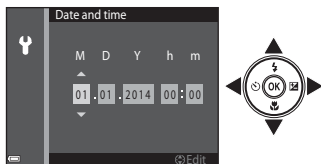

Edit the date and time.

- Select a field: Press **◀▶** (changes between **M**, **D**, **Y**, hour, and minute).
- Edit the date and time: Press **▲▼**.
- Confirm the settings: Select the minute field and press the **OK** button.

5.6

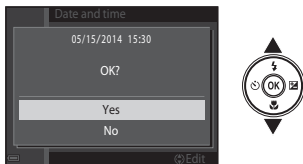

Select **Yes** and press the **OK** button.

- When settings are finished, the lens extends and the camera switches to shooting mode.

Imprinting the Date and Time on Images While Taking Images

After setting the date and time, enable the **Print date** option in the **Y** (setup) menu (📖29). Display the **Y** (setup) menu using the following procedure and change the settings. Press the **MENU** button → press the multi selector ◀→ use ▲▼ to select the **Y** (setup) menu icon and press the **OK** button → use ▲▼ to select an item and press the **OK** button.

Changing the Current Date, Time, or Language




Just as described under “Imprinting the Date and Time on Images While Taking Images” above, display the **Y** (setup) menu (📖29) and set **Language** or **Time zone and date**.

The next step explains basic shooting operations using **SCN** (scene auto selector) mode.


Shooting and Playback

Step 1 Check the Battery Level and the Number of Exposures Remaining

Battery Level Indicator

Display	Description
	The battery level is high.
	The battery level is low.
 Battery exhausted.	The camera cannot capture images. Recharge the battery.

Number of exposures remaining

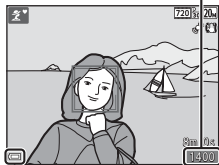

Battery level indicator


Number of Exposures Remaining

IN is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.

Step 2 Hold the Camera and Frame a Picture

2.1 Hold the camera steady in both hands.


- Keep fingers and other objects away from the lens, flash, etc.

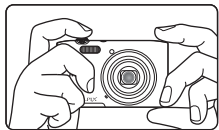

2.2 Frame the picture.

- When the camera automatically determines the scene mode, the shooting mode icon changes.


Shooting mode icon

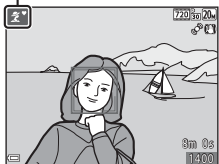

Using the Zoom

Move the zoom control.


- To zoom in closer to the subject, move the zoom control toward **T** (telephoto).
- To zoom out and view a larger area, move the zoom control toward **W** (wide-angle). When the camera is turned on, the zoom moves to the maximum wide-angle position.

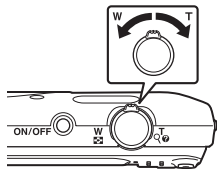

Step 3 **Focus and Shoot**


3.1 Press the shutter-release button halfway, i.e., press the button lightly until you feel a slight resistance.

- When the subject is in focus, the focus area glows green (multiple focus areas can glow green).
- When you are using digital zoom, the camera focuses in the center of the frame and the focus area is not displayed. When the camera has focused, the focus indicator glows green.
- If the focus area or focus indicator flashes, the camera is unable to focus. Modify the composition and try pressing the shutter-release button halfway again.

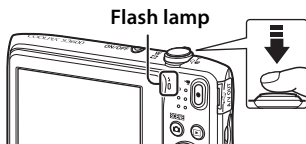

Flash lamp

The flash lamp indicates flash status when the shutter-release button is pressed halfway.

	On	The flash fires when an image is taken.
	Flashing	The flash is charging.*
	Off	The flash does not fire when an image is taken.


* If the battery level is low, the monitor turns off while the flash is charging.



3.2 Without lifting your finger, press the shutter-release button the rest of the way down to take the picture.

- The shutter is released and the image is saved.
- If you press the shutter-release button with too much force, the camera may shake, causing images to be blurred. Press the button gently.




Step 4 **Play Back Images**

Press the  (playback) button. The camera enters playback mode.

- The last image captured is displayed in full-frame playback mode.
- Use the multi selector  to display previous or next images.
- To return to shooting mode, press the  (shooting mode) button or shutter-release button.

 button

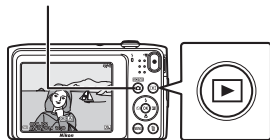




Display the previous image







Display the next image



Deleting Unwanted Images

To delete the image currently displayed in the monitor, press the  (delete) button.

When the deletion screen is displayed, use the multi-selector  to select **Current image** and press the  button.

When the confirmation dialog is displayed, select **Yes** and press the  button to delete the image that is displayed.

- After pressing the  button, use  to select **Erase selected images** and select multiple images to be deleted. Select **All images** to delete all images.
- **Deleted images cannot be recovered.** To cancel without deleting, select **No** in the confirmation dialog and press the  button.

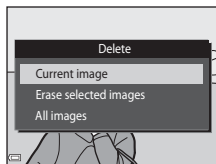

Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images. Install ViewNX 2 using the included ViewNX 2 CD-ROM.

Your Imaging Toolbox

ViewNX 2™



Step 1 Installing ViewNX 2

- An Internet connection is required.

Compatible Operating Systems

Windows

Windows 8.1, Windows 7, Windows Vista, Windows XP

Mac

OS X 10.9, 10.8, 10.7


Refer to the Nikon website for details on system requirements, including the latest information on operating system compatibility.

1.1 Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.

- Windows: If instructions for operating the CD-ROM are displayed in the window, follow the instructions to proceed to the installation window.
- Mac: When the **ViewNX 2** window is displayed, double-click the **Welcome** icon.

1.2 Select a language in the language selection dialog to open the installation window.

- If the desired language is not available, click **Region Selection** to choose a different region and then choose the desired language (the **Region Selection** button is not available in the European release).
- Click **Next** to display the installation window.

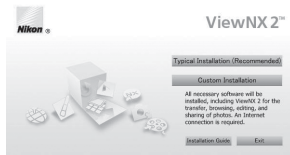

1.3 Start the installer.

- We recommend clicking **Installation Guide** in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click **Typical Installation (Recommended)** in the installation window.

1.4 Download the software.

- When the **Software Download** screen is displayed, click **I agree-Begin download**.
- Follow the on-screen instructions to install the software.

1.5 Exit the installer when the installation completion screen is displayed.

- Windows: Click **Yes**.
- Mac: Click **OK**.

The following software is installed:

- ViewNX 2 (consisting of the three modules below)
 - Nikon Transfer 2: For transferring images to the computer
 - ViewNX 2: For viewing, editing, and printing transferred images
 - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama photo using a series of images shot in panorama assist scene mode)

1.6 Remove the ViewNX 2 CD-ROM from the CD-ROM drive.


Step 2 *Transferring Images to the Computer*

2.1 Choose how images will be copied to the computer.

Choose one of the following methods:

- **Direct USB connection:** Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the USB cable. The camera automatically turns on.

To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.

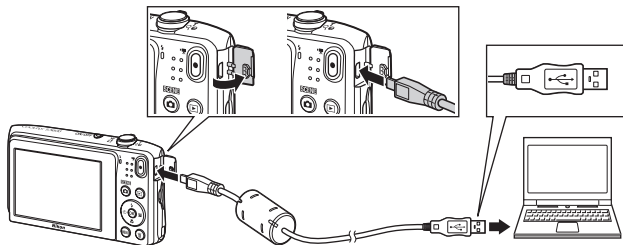

- **SD card slot:** If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader:** Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

- **When using Windows 7**

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

- 1 Under **Import pictures and videos**, click **Change program**. A program selection dialog will be displayed; select **Import File using Nikon Transfer 2** and click **OK**.



- 2 Double-click **Import File**.


If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

✓ Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

2.2 Transfer images to the computer.

- Click **Start Transfer**.

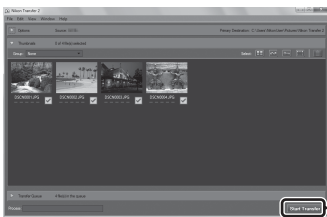

Start Transfer

- At default settings, all the images on the memory card will be copied to the computer.


2.3 Terminate the connection.

- If the camera is connected to the computer, turn the camera off, and disconnect the USB cable. If you are using a card reader or card slot, choose the appropriate option in the computer operating system to eject the removable disk corresponding to the memory card and then remove the card from the card reader or card slot.

Step 3 *Viewing Images*

Start ViewNX 2.

- Images are displayed in ViewNX 2 when transfer is complete.
- Consult online help for more information on using ViewNX 2.

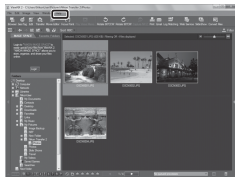

Starting ViewNX 2 Manually

- **Windows:** Double-click the **ViewNX 2** shortcut on the desktop.
- **Mac:** Click the **ViewNX 2** icon in the Dock.

Other Functions

Flash Mode, Self-Timer, Macro Mode, and Exposure Compensation

Use the multi selector in shooting mode to apply the following settings. Availability depends on the setting.


Flash Mode

The flash modes available are **⚡** AUTO (auto), **⚡👁** (auto with red-eye reduction), **🚫** (off), **⚡** (fill flash), and **⚡SLOW** (slow sync) modes.




Exposure Compensation

Overall image brightness or darkness can be adjusted by setting exposure compensation before taking images.




Macro Mode

Use for close-ups. The camera can focus at a closer distance when the zoom is at a position where **👁** and the zoom indicator glow green.






Self-Timer





The camera is equipped with ten- and two-second timers.

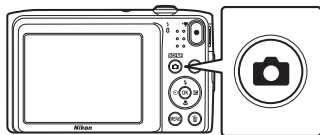

Selecting a Shooting Mode


Press the  button in shooting mode to display the shooting mode selection menu. Select a shooting mode with the multi selector, and press the  button to change to that mode.




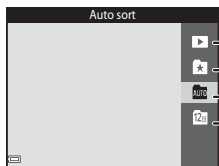
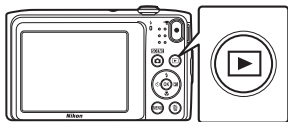
1.  Scene auto selector mode (📖15)
2.  Scene mode*
3. **SO** Special effects mode*
4.  Smart portrait mode
5.  Auto mode






* The icon displayed differs depending on which scene or effect was selected last.

Selecting a Playback Mode




Press the  button in playback mode to display the playback mode selection menu.


Select a playback mode with the multi-selector, and press the  button to change to that mode.



1.  Playback mode (all images)  18
2.  Favorite pictures mode
3.  Auto sort mode
4.  List by date mode

Recording Movies


You can record movies by simply pressing the  (movie-record) button. Press the  (movie-record) button to start movie recording. Press the  (movie-record) button again to stop movie recording.

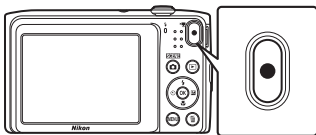

Using Camera Menus


A variety of shooting and playback settings can be adjusted from the camera menu.

Press the **MENU** button to display the menu for the current mode and use the multi selector to select an item (📖11).

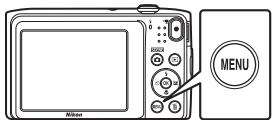


Select a menu icon on the left to switch to the menu of the selected icon.


Press the **MENU** button again to exit the menu.

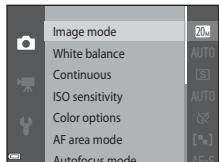


Switching Between Menu Icons

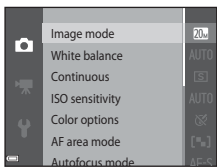

Press the multi selector ◀ to highlight a menu icon.

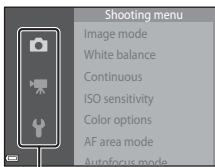

Use the multi selector ▲▼ to select another menu icon, and press either the **OK** button or ▶.

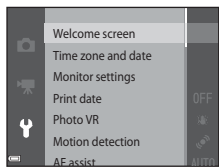








The selected menu is displayed.

Playback Mode

The following options are available in full-frame playback mode.



To	Use	Description
Select images		Use the multi selector to display previous or next images.
View thumbnails/ enable calendar display	W	Displays thumbnail playback mode. Move the zoom control toward W in the 16-image thumbnail playback to apply the calendar display (except in list by date mode).
Zoom during playback	T	Magnifies the image displayed in the monitor. Press the button to return to full-frame playback mode.
Play back movies		Plays back the movie currently displayed.
Apply effects to images		Press the button when OK : is displayed on a still image to select one of the displayed effects.
Delete images		Allows you to delete images. When using favorite pictures mode, auto sort mode, or list by date mode, images with the same album, category, or shooting date can be deleted.
Display menus	MENU	Displays the menu for the selected mode.

To	Use	Description
Switch to another playback mode		Displays the playback mode selection menu, allowing you to switch to favorite pictures mode, auto sort mode, or list by date mode.
Switch to shooting mode	  	Press the  button, shutter-release button, or  () button to switch to shooting mode.

For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.

The consequences that could result from failure to observe the precautions listed in this section are indicated by the following symbol:



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

WARNINGS

Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or Charging AC Adapter, unplug the Charging AC Adapter and remove the battery immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.

Do not disassemble

Touching the internal parts of the camera or Charging AC Adapter could result in

injury. Repairs should be performed only by qualified technicians. Should the camera or Charging AC Adapter break open as the result of a fall or other accident, take the product to a Nikon-authorized service representative for inspection, after unplugging the product and/or removing the battery.

Do not use the camera or Charging AC Adapter in the presence of flammable gas

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

⚠ Handle the camera strap with care

Never place the strap around the neck of an infant or child.

⚠ Keep out of reach of children

Particular care should be taken to prevent infants from putting the battery or other small parts into their mouths.

⚠ Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use

Parts of the devices become hot. Leaving the devices in direct contact with the skin for extended periods may result in low-temperature burns.

⚠ Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight


Failure to observe this precaution could cause damage or fire.

⚠ Observe caution when handling the battery

The battery may leak, overheat or explode if improperly handled. Observe the following precautions when handling the battery for use in this product:

- Before replacing the battery, turn the product off. If you are using the Charging AC Adapter/AC adapter, be sure it is unplugged.
- Use only a Rechargeable Li-ion Battery EN-EL19 (included). Charge the battery by using a camera that supports battery charging. To perform this operation, use either Charging AC Adapter EH-70P (included) or the **Charge by computer** function. The Battery Charger MH-66 (available separately) is also available to charge the battery without using a camera.
- When inserting the battery, do not attempt to insert it upside down or backwards.
- Do not short or disassemble the battery or attempt to remove or break the battery insulation or casing.

- Do not expose the battery to flame or to excessive heat.
- Do not immerse in or expose to water.
- Put the battery in a plastic bag, etc. in order to insulate it before transporting. Do not transport or store with metal objects such as necklaces or hairpins.
- The battery is prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the battery when no charge remains.
- Discontinue use immediately should you notice any change in the battery, such as discoloration or deformation.
- If liquid from the damaged battery comes in contact with clothing or skin, rinse immediately with plenty of water.
- Do not handle the plug or go near the Charging AC Adapter during lightning storms. Failure to observe this precaution could result in electric shock.
- Do not damage, modify, forcibly tug or bend the USB cable, place it under heavy objects, or expose it to heat or flames. Should the insulation be damaged and the wires become exposed, take it to a Nikon-authorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug or Charging AC Adapter with wet hands. Failure to observe this precaution could result in electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters. Failure to observe this precaution could damage the product or cause overheating or fire.

 **Observe the following precautions when handling the Charging AC Adapter**

- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.

Use appropriate cables

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

Handle moving parts with care

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

CD-ROMs

The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

Using the flash close to your subject's eyes could cause temporary visual impairment

The flash should be no less than 1 meter (3 ft 4 in.) from the subject. Particular care should be observed when photographing infants.

Do not operate the flash with the flash window touching a person or object

Failure to observe this precaution could result in burns or fire.

Avoid contact with liquid crystal

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

Turn the power off when using inside an airplane or the hospital

Turn the power off while inside the airplane during take off or landing. Do not use wireless network functions while in the air. Follow the instructions of the hospital when using while in a hospital. The electromagnetic waves emitted by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital.

If you are using an Eye-Fi card, remove it from the camera before boarding an aircraft or entering a hospital.

Notices

Notices for Customers in the U.S.A.

**IMPORTANT SAFETY INSTRUCTIONS—
SAVE THESE INSTRUCTIONS.**

**DANGER - TO REDUCE THE RISK OF FIRE
OR ELECTRIC SHOCK, CAREFULLY
FOLLOW THESE INSTRUCTIONS**

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet if needed.

The power supply unit is intended to be correctly orientated in a vertical or floor mount position.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the

FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Notice for Customers in the State of California

WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

Wash hands after handling.

Nikon Inc.,
1300 Walt Whitman Road
Melville, New York 11747-3064
USA
Tel: 631-547-4200

Notice for Customers in Canada

CAN ICES-3 B / NMB-3 B

Caring for the Camera

To ensure continued enjoyment of this Nikon product, observe the precautions described below in addition to the warnings in “For Your Safety” (32-35) when using or storing the device.

✔ Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.

✔ Do Not Drop

The product may malfunction if subjected to strong shock or vibration.

✔ Handle the Lens and All Moving Parts with Care

Do not apply force to the lens, lens cover, monitor, memory card slot, or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.

✔ Do Not Point the Lens at Strong Light Sources for Extended Periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the CCD image sensor, producing a white blur effect in photographs.

✔ Keep Away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.

✔ Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

✔ Turn the Product Off Before Removing or Disconnecting the Power Source or Memory Card

Do not remove the battery while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.

✔ Notes About the Monitor

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.
- White or colored streaks may be visible when bright subjects are framed in the monitor. This phenomenon, known as “smear,” occurs when extremely bright light strikes the image sensor; it is characteristic of image sensors and does not indicate a malfunction. Smear may also take the form of partial

discoloration in the monitor during shooting. It does not appear in images saved with the camera except in the cases of movies and of images saved with **Multi-shot 16** selected for **Continuous**. When shooting in these modes, we recommend that you avoid bright subjects such as the sun, reflected sunlight, and electric lights.

- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

✔ About the Manuals

Nikon will not be held liable for any damages resulting from the use of this product.

Before Taking Important Images

Before taking images on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, images of empty sky). Be sure to also replace any images selected for the **Select an image** option in the **Welcome screen** setting. Care should be taken to avoid injury or damage to property when physically destroying data storage devices.

Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mac and OS X are trademarks or registered trademarks of Apple Inc., in the U.S. and other countries.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.
- SDXC, SDHC, and SD Logos are trademarks of SD-3C, LLC.



- PictBridge is a trademark.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are the trademarks or registered trademarks of their respective holders.

FreeType License (FreeType2)

- Portions of this software are copyright © 2012 The FreeType Project (<http://www.freetype.org>). All rights reserved.

MIT License (HarfBuzz)

- Portions of this software are copyright © 2014 The HarfBuzz Project (<http://www.freedesktop.org/wiki/Software/HarfBuzz>). All rights reserved.



A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.

NIKON CORPORATION

© 2014 Nikon Corporation

YP3K01(11)
6MN38811-01