

<div><div></div><div>Nikon</div></div>	<div>Printed in China</div> <div>SBI F01(9R)</div> <div>7MMA689R-01 △</div>
<p>Mount Adapter</p> <h1>FTZ II</h1> <p>User's Manual</p>	<div><div></div><div>CE</div></div>
<div><div></div><div>Jp</div></div> <div><div></div><div>En</div></div> <div><div></div><div>Fr</div></div> <div><div></div><div>Es</div></div> <div><div></div><div>Sc</div></div> <div><div></div><div>Tc</div></div> <div><div></div><div>Kr</div></div> <div><div></div><div>Id</div></div> <div><div></div><div>Ar</div></div>	<div><div></div><div>NIKON CORPORATION</div></div>

マウントアダプター 使用説明書

ご使用の前に、本書およびカメラとレンズの説明書をよく読みの上、正しくお使いください。

このマウントアダプターをニコンZマウントのミラーレスカメラに装着すると、ニコンFマウント用のNIKKORレンズを取り付けられることがあります。

このマウントアダプターは、ニコンZマウントのデジタル一眼カメラおよびニコン1マウントの光学交換式デジタルカメラ（Nikon 1）に装着するものではありません。

このマウントアダプターにニコンレンズを取り付けることはできません。

カメラのファームウェアを最新バージョンにアップデートしておください。ファームウェアが最新になっていない場合、レンズやマウントアダプターを正しく認識しなかったり、機能の一部が使用できないことがあります。最新のファームウェアは、ニコンダウンロードセンターからダウンロードできます。

お使いのレンズによっては、オートフォーカスなどカメラの機能に制限が生じる場合があります。詳しくはニコンダウンロードセンターからダウンロードできる「使用できるFマウントレンズについて」でご確認ください。

ニコンダウンロードセンター：

<https://downloadcenter.nikonimglib.com/>

安全上のご注意

あなたや他人々への危害や財産への損害を未然に防止するため、ご使用の前に「安全上のご注意」をよくお読みの上、正しくお使いください。

本書を破損した場合は、いかなる保証もありません。

- 警告** 「**元または修理業者が実施されるおそれがある内容**」です。
- 注意** 「**軽傷を負うことや財産の損害が発生するおそれがある内容**」です。

お取り扱いの仕方を、以下の図記号で説明しています。

- 1** してはならない内容です。
- 2** 分解、修理または改造してはならない内容です。
- 3** 人体やものに害を及ぼしてはならない内容です。
- 4** 実行しなければならぬ内容です。

警告
修理、修理または改造をしない
修理業者が実施されるおそれが出たら、製造元に送らない
修理業者が原因になります。
1 破損する、腐敗する、こぼれぬいたり異音時は、直ちにカメラの電源を取り外す
放置すると、発火、けいどの原因になります。
2 水でぬらすらない
濡れた手で触らない
腐食や発火の原因になります。
3 引火、爆発のおそれのある場所では使わない
カメラの電池、ガス、ガスケットなどの引火性ガスや粉塵の発生する場所や近くで、爆発や火災の原因になります。
4 幼児の手の届くところに置かない
故障やけいこの原因になります。
小さな付属品を落とすおそれなく、身体に悪影響を及ぼします。飲み込んだら、すぐに医師の診断を受けるようにしてください。
5 高温環境や低温環境では、使用しない
カメラや低圧電池など、凍傷の原因になります。
注意
屋外の屋内や直射日光の当たる所など高温環境に放置しない
腐食や発火の原因になります。

このマウントアダプターについて

各部の名称（図1）

- | | |
|---------------|------------------|
| A レンズ側 | B カメラボディ側 |
| ① ニコンマウント蓋 | ③ カメラ取り付け指標 |
| ② レンズ信号端子 | ④ ニコンZマウント側 |
| ⑤ レンズ取り外しボタン | ⑥ CPU信号端子 |

取り付け方・取り外し方


マウントアダプターをカメラに取り付けたり取り外すとき、レンズをマウントアダプターに取り付けたり取り外すときは、ほごりなどおそれるような力を入れないように注意してください。

取り付け・取り外しは、必ずカメラの電源をOFFにしてください。

マウントアダプターをカメラに取り付けるときは、マウントアダプターのレンズ取り外しボタンやカメラのレンズ取り外しボタンを押さないようにご注意ください。

- 取り付け方（図2）**
- 1** **マウントアダプター**から**ボディキャップ**と**リアキャップ**を、**カメラ**から**ボディキャップ**を取り外す。
- 2** **マウントアダプター**を**カメラ**に取り付ける
- マウントアダプターのカメラ取り付け指標とカメラのレンズ装着指標を合わせ（a-①）、反時計回りにカメラと負がするまでマウントアダプターを回します（a-②）。
- 3** **レンズ**の**リアキャップ**を取り外す
- 4** **マウントアダプター**に**レンズ**を取り付ける
- マウントアダプターのレンズ取り付け指標とレンズのレンズ装着指標を合わせ（b-①）、反時計回りにカメラと負がするまでレンズを回します（b-②）。

- 取り外し方（図3）**
- 1** **マウントアダプター**から**レンズ**を取り外す
- マウントアダプターのレンズ取り外しボタンを押しながら（a-①）、時計回りにレンズを回して取り外す（a-②）。
- 取り外したレンズには、レンズキャップを取り付けてください。
- 2** **マウントアダプター**を**カメラ**から取り外す
- カメラのレンズ取り外しボタンを押しながら（b-①）、時計回りにマウントアダプターを回して取り外す（b-②）。
- 取り外したマウントアダプターには、ボディキャップとリアキャップを取り付けてください。また、カメラにボディキャップを取り付けてください。

修理に関するお問い合わせ先	
株式会社ニコンイメージングサービス修理センター	
修理センター/ナダイヤル	
0570-02-8200	
・営業時間などの詳細については、上記のホームページをご覧ください。	
https://www.nikon-image.com/support/repair/	
・ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター（03）6702-0577 におかけください。	

- お電話でのお申込み**
- お電話でもニコンビジュアルサービス専用フリーダイヤル
- 0120-02-8155

- サービスセンターでのお手続き**
- ニコンプラザのサービスセンター窓口でお見積り・受付をいたします。インターネットでの事前予約が必要となります。詳細については、上記のホームページをご覧ください。

修理に関するお問い合わせ先

株式会社ニコンイメージングサービス修理センター	
修理センター/ナダイヤル	
0570-02-8200	
・営業時間などの詳細については、上記のホームページをご覧ください。	
https://www.nikon-image.com/support/repair/	
・ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター（03）6702-0577 におかけください。	

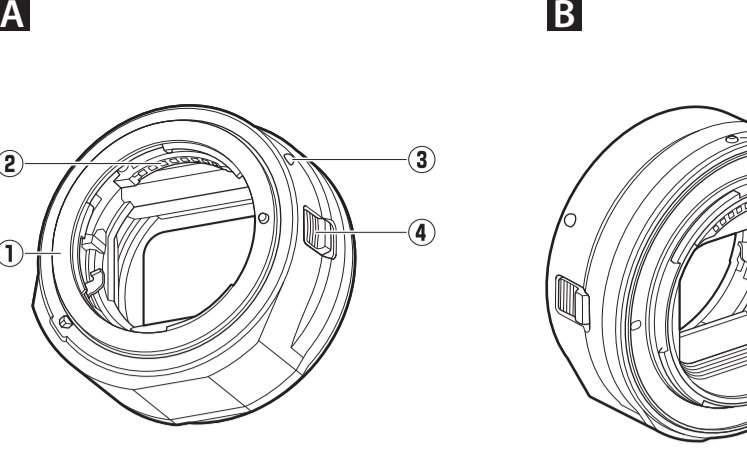


図1/Figure 1/Image1

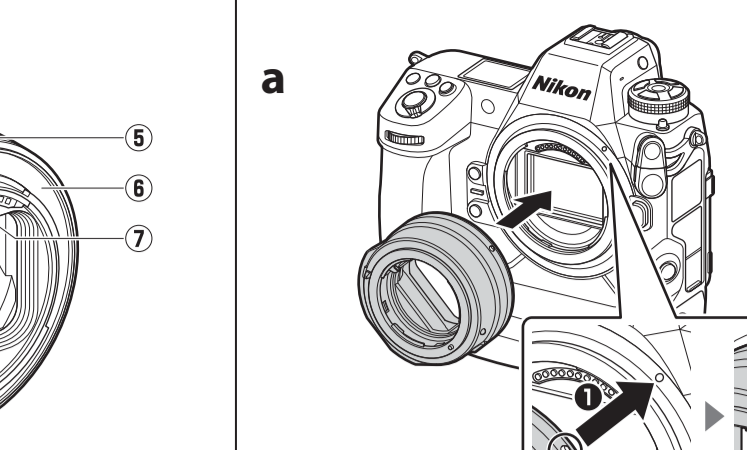


図2/Figure 2/Image2

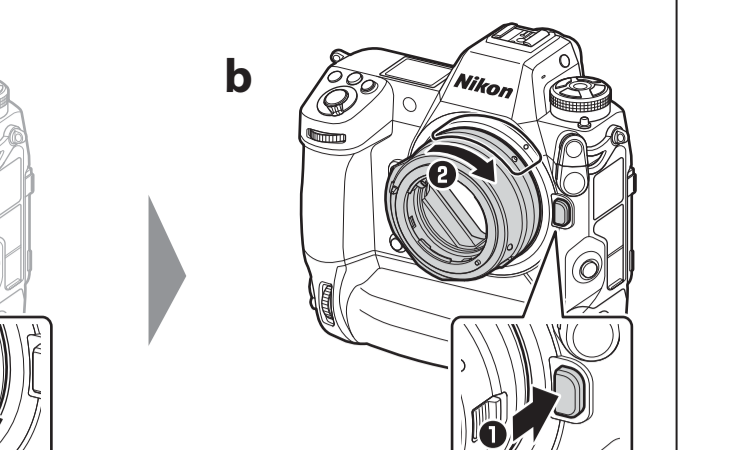




図3/Figure 3/Image3

- 1** 取り外しのあるCPUレンズについてのご注意
- 取り外しのあるCPUレンズをマウントアダプターに取り付ける場合は、最小絞り（最大F値）にしから取り付けてください。
- 2** 使用できないレンズおよびアクセサリ
- このマウントアダプターに次のレンズおよびアクセサリは使用できません。無理に装着しようとする、マウントアダプターやレンズが破損する恐れがありますのでご注意ください。次のレンズ以外も、個体の状態によっては装着できないことがあります。装着時にきこえる場合は、無理に装着しないでください。
- ・A: 遠望型、非A型レンズ（A方式以前の遠望型カメラ）
- ・IXシリーズ
- ・AFテクノロジー TC-16A5
- ・フォーカシングユニット AL-1 を必要とするレンズ（400mm f/4.5、600mm f/5.6、800mm f/8、1200mm f/11）
- ・フィッシュアイ（6mm f/5.6、7.5mm f/5.6、8mm f/8、CP10mm f/5.6）
- ・2.1cm f/4
- ・K2リング
- ・ED180-600mm f/8（製品 No.174041～174180）
- ・ED360-1200mm f/11（製品 No.174031～174127）
- ・200-600mm f/9.5（製品 No.280001～300490）
- ・F3AF用（AF80mm f/2.8、AF ED200mm f/3.5、テクノロジー TC-16S）
- ・PC28mm f/4（製品 No.180900 以前の製品）
- ・PC35mm f/2.8（製品 No.180901～906200）
- ・IG PC35mm f/4.5
- ・IEU1フリップス 1000mm f/6.3
- ・NIKKOR-H Auto 2.8cm f/3.5（28mm f/3.5）（No.361999 以前の製品）
- ・NIKKOR-S Auto 3.5cm f/2.8（35mm f/2.8）（No.927999 以前の製品）
- ・NIKKOR-S Auto 5cm f/2（50mm f/2）
- ・NIKKOR-Q Auto 13.5cm f/3.5（135mm f/3.5）（No.752999 以前の製品）
- ・Micro-NIKKOR 5.5cm f/3.5
- ・Medical-NIKKOR Auto 200mm f/5.6
- ・Auto NIKKOR Telephoto-Zoom 85-250mm f/4-4.5
- ・Auto NIKKOR Telephoto-Zoom 200-600mm f/9.5-10.5

ニコンプラザ所在地、営業時間などについては、下記URLをご覧ください。	
https://www.nikon-image.com/support/showroom/	

製品の使い方に関するお問い合わせ先

- インターネットでのお問い合わせ**
- <https://www.nikon-image.com/support/contact/>

- お電話でのお問い合わせ**
- ニコンカスタマーサポートセンター ナダイヤル
- 0570-02-8000**


・営業時間などの詳細については、上記のホームページをご覧ください。

・ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター（03）6702-0577 におかけください。

ニコンイメージング会員「製品登録」のご案内	
このマウントアダプターは、安心して使用いただくため「製品登録」へのご案内をおしえております。ご購入いただいた製品に関するファームアップ機能や機能をお知らせなどメールでご案内いたします。ニコンイメージング会員登録および製品登録は以下「ニコンメンバーページ」からお手続きください。	
ニコンイメージング会員のご案内	
https://www.nikon-image.com/enjoy/membership/about/	

ニコンイメージングサポートページのご案内

最新の製品やデジタル機能や、ソフトウェアのアップデート情報をご案内いたします。製品やサービスに関するお問い合わせなど、定期的なアクセスをおすすめします。

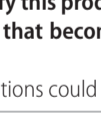
取扱い上のご注意	
質量が1300gを超えるレンズをカメラに装着した状態で、カメラだけを持って、カメラのストラップを使ったりしないでください。カメラのマウント部分が破損するおそれがありますので、必ずレンズを持ってください。 カメラの重量が、レンズや部品を落とさないようにご注意ください。 マウントアダプターをお手入れの際は、ブローでゴミやほりなどを軽く払ってから、乾いた柔らかい布で軽く拭いてください。 マウントアダプターを保管するときは、太陽光のあたることや防虫剤のあるところを避けてください。また、マウントアダプターを長期保管しないときは、カビや錆を防ぐために、高温多湿のころを避けて風通しのよい場所に保管してください。	

- このマウントアダプターは、使用できない場合があります。
- Update the camera firmware to the latest version. With earlier versions, the camera may fail to detect the lens or adapter correctly and some features may not be available. The latest version of the camera firmware can be downloaded from the Nikon Download Center.
- Note that depending on the lens, the adapter may limit autofocus or other camera features. For more information, see *Compatible F-Mount Lenses*, available from the Nikon Download Center.
- Nikon Download Center
- <https://downloadcenter.nikonimglib.com/>

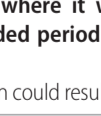
For Your Safety	
To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.	

After reading these safety instructions, keep them readily accessible for future reference.

- ▲ WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.**
- ▲ CAUTION: Failure to observe the precautions marked with this icon could result in injury or property damage.**

WARNING	
Do not disassemble or modify this product.	
Do not touch internal parts that become exposed as the result of a fall or other accident.	
Failure to observe these precautions could result in electric shock or other injury.	
Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the camera power source.	
Continued operation could result in fire, burns or other injury.	

- Keep dry.**
- Do not handle with wet hands.**
- Failure to observe these precautions could result in fire or electric shock.
- Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.**
- Failure to observe this precaution could result in explosion or fire.
- Keep this product out of reach of children.**
- Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.
- Do not handle with bare hands in locations exposed to extremely high or low temperatures.**
- Failure to observe this precaution could result in burns or frostbite.

CAUTION	
Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight.	
Failure to observe these precautions could result in fire or product malfunction.	

Notices for Customers in the U.S.A.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

修理に関するお問い合わせ先	
株式会社ニコンイメージングサービス修理センター	
修理センター/ナダイヤル	
0570-02-8200	
・営業時間などの詳細については、上記のホームページをご覧ください。	
https://www.nikon-image.com/support/repair/	
・ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター（03）6702-0577 におかけください。	

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

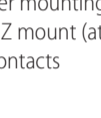
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

- CAUTIONS**
- Modifications**
- The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A. Tel: 631-547-4200

Notice for Customers in Canada

CAN ICES-3 B / NMB-3 B

The Mount Adapter	
Parts of the Adapter (Figure 1)	
A Lens Mount	B Camera Mount
① Nikon F mount (attaches to lens)	⑤ Adapter mounting mark
② Lens signal contacts	⑥ Nikon Z mount (attaches to camera)
③ Lens mounting mark	⑦ CPU contacts
④ Lens-release button	

最新の製品やデジタル機能や、ソフトウェアのアップデート情報をご案内いたします。製品やサービスに関するお問い合わせなど、定期的なアクセスをおすすめします。

- Attachment and Removal**
- Turn the camera off before attaching the adapter to or removing it from the camera or attaching lenses to or removing lenses from the adapter. Choose a location out of direct sunlight and be careful to prevent dust from entering the devices. While attaching lenses, avoid pressing the camera or adapter lens-release button.
- 1** **Attaching the Adapter and Lens (Figure 2)**
- 1** Remove the body and rear lens caps from the adapter and the body cap from the camera.
- 2** Attach the adapter to the camera.

 - Keeping the adapter mounting mark aligned with the mounting mark on the camera body (a-①), position the adapter on the camera and then rotate it counterclockwise until it clicks into place (a-②).

- 3** Remove the rear lens cap.
- 4** Attach the lens to the adapter.

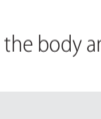
 - Keeping the lens mounting mark aligned with the lens mounting mark on the adapter (b-①), position the lens on the adapter and then rotate it counterclockwise until it clicks into place (b-②).

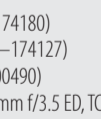
- Detaching the Lens and Adapter (Figure 3)**
- 1** Detach the lens.


 - Press and hold the adapter lens-release button (a-①) while turning the lens clockwise (a-②).
 - Attach the front and rear caps to the lens after removal.

- 2** Detach the adapter.

 - Press and hold the camera lens-release button (b-①) while turning the adapter clockwise (b-②).
 - After removing the adapter, attach the body and rear caps to the adapter and the body cap to the camera.

- ▲ WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.**
 - ▲ CAUTION: Failure to observe the precautions marked with this icon could result in injury or property damage.**
- | | |
|---|---|
| WARNING |  |
| Do not disassemble or modify this product. | |
| Do not touch internal parts that become exposed as the result of a fall or other accident. | |
| Failure to observe these precautions could result in electric shock or other injury. | |
| Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the camera power source. | |
| Continued operation could result in fire, burns or other injury. | |
- Keep dry.**
 - Do not handle with wet hands.**
 - Failure to observe these precautions could result in fire or electric shock.
 - Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.**
 - Failure to observe this precaution could result in explosion or fire.
 - Keep this product out of reach of children.**
 - Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.
 - Do not handle with bare hands in locations exposed to extremely high or low temperatures.**
 - Failure to observe this precaution could result in burns or frostbite.

CAUTION	
Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight.	
Failure to observe these precautions could result in fire or product malfunction.	

修理に関するお問い合わせ先	
株式会社ニコンイメージングサービス修理センター	
修理センター/ナダイヤル	
0570-02-8200	
・営業時間などの詳細については、上記のホームページをご覧ください。	
https://www.nikon-image.com/support/repair/	
・ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター（03）6702-0577 におかけください。	

Using the Mount Adapter

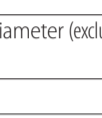
- Autofocus may not function as expected when the adapter is used with an F mount NIKKOR lens. If the camera has trouble focusing, set the AF-area mode to single point and select the center focus area, or focus manually.
- With some lenses, the camera vibration reduction feature may not function as expected or may cause vignetting or a drop in peripheral illumination.

- Precautions for Use**
- When using adapter with lenses weighing over 1300 g (2 lb 13.9 oz), support the lens when holding the camera and do not use the camera strap. Failure to observe these precautions could damage the camera lens mount.
- Keep the CPU and lens signal contacts clean.
- Do not leave the adapter in humid locations or in locations in which it may be exposed to moisture. Rusting of the internal mechanism can cause irreparable damage.
- Do not leave the adapter next to open flames or in other extremely hot locations. Extreme heat could damage or warp the adapter.

Caring for the Adapter

- Do not touch the interior of the mount adapter. Use a blower or soft brush to remove dust, being careful not to touch or scratch the inside of the adapter.
- When cleaning the adapter, use a blower to remove dust and lint and then wipe the adapter gently with a soft, dry cloth.
- Never use organic solvents such as paint thinner or benzene to clean the adapter.
- Do not store with naphtha or camphor moth balls or in direct sunlight. If the adapter is not to be used for an extended period, store it in a cool, dry location to prevent mold and rust.

Accessories	
Supplied Accessories	
• BF-1B Body Cap	
• LF-N1 Lens Cap (rear cap)	

Specifications	
Type	Mount Adapter
Supported cameras	Nikon Z mount mirrorless cameras
Dimensions	Approx. 70 mm/2.8 in. maximum diameter (excluding projection) × 70 mm/2.8 in.
Weight	Approx. 125 g (4.5 oz)

Nikon reserves the right to change the appearance, specifications, and performance of this product at any time and without prior notice.

Fr Adaptateur pour montage Manuel d'utilisation	
Avant d'utiliser ce produit, lisez attentivement ce document et la documentation fournie avec l'appareil photo et l'objectif.	
• Cet adaptateur pour montage permet de fixer les objectifs NIKKOR à montage Nikon F sur les appareils photo hybrides dotés d'une monture Nikon Z.	
• Cet adaptateur pour montage ne peut pas être fixé sur les reflex numériques dotés d'une monture Nikon F ou sur les appareils photo évolués à objectif interchangeable dotés d'une monture 1 (appareils photo Nikon 1).	
• Cet adaptateur pour montage ne peut pas être utilisé avec les objectifs NIKKOR 1.	
• Mettez à jour le firmware de l'appareil photo vers la dernière version. Si c'est doté d'une version antérieure, l'appareil photo risque de ne pas parvenir à détecter l'objectif et l'adaptateur connecté et certaines fonctionnalités peuvent ne pas être disponibles. La dernière version du firmware de l'appareil photo est téléchargeable depuis le Centre de téléchargement Nikon.	
• Notez que selon l'objectif, l'adaptateur peut limiter l'autofocus ou d'autres fonctionnalités de l'appareil photo. Pour en savoir plus, reportez-vous à l'objectif à l'emplacement <i>F-Mount Lenses</i> , disponible dans le Centre de téléchargement Nikon.	
• Centre de téléchargement Nikon	
https://downloadcenter.nikonimglib.com/	

- **Ne démontez pas ou ne modifiez pas ce produit.**
- **Ne touchez pas les composants internes qui sont exposés suite à une chute ou à un autre accident.**
- **Si vous observez des anomalies provenant du produit comme de la fumée, de la chaleur ou des odeurs inhabituelles, débranchez immédiatement la source d'alimentation de l'appareil photo.**
- **Consentez ce produit hors de portée des enfants.**
- **Ne manipulez pas le matériel à mains nues dans des lieux exposés à des températures extrêmement basses ou élevées.**
- **Ne laissez pas le produit exposé à des températures excessivement chaudes pendant une période prolongée, comme dans une voiture fermée ou en plein soleil.**
- **Le non-respect de cette consigne peut provoquer un incendie ou le dysfonctionnement du produit.**

- **Ne démontez pas ou ne modifiez pas ce produit.**
- **Ne touchez pas les composants internes qui sont exposés suite à une chute ou à un autre accident.**
- **Si vous observez des anomalies provenant du produit comme de la fumée, de la chaleur ou des odeurs inhabituelles, débranchez immédiatement la source d'alimentation de l'appareil photo.**
- **Consentez ce produit hors de portée des enfants.**
- **Ne manipulez pas le matériel à mains nues dans des lieux exposés à des températures extrêmement basses ou élevées.**
- **Ne laissez pas le produit exposé à des températures excessivement chaudes pendant une période prolongée, comme dans une voiture fermée ou en plein soleil.**
- **Le non-respect de cette consigne peut provoquer un incendie ou le dysfonctionnement du produit.**

Pour votre sécurité

Avant d'utiliser ce produit, lisez attentivement ce document et le document fourni avec l'appareil photo et l'objectif.

• Ce adaptateur pour montage permet de fixer les objectifs NIKKOR à montage Nikon F sur les appareils photo hybrides dotés d'une monture Nikon Z.

• Cet adaptateur pour montage ne peut pas être fixé sur les reflex numériques dotés d'une monture Nikon F ou sur les appareils photo évolués à objectif interchangeable dotés d'une monture 1 (appareils photo Nikon 1).

• Cet adaptateur pour montage ne peut pas être utilisé avec les objectifs NIKKOR 1.

• Mettez à jour le firmware de l'appareil photo vers la dernière version. Si c'est doté d'une version antérieure, l'appareil photo risque de ne pas parvenir à détecter l'objectif et l'adaptateur connecté et certaines fonctionnalités peuvent ne pas être disponibles. La dernière version du firmware de l'appareil photo est téléchargeable depuis le Centre de téléchargement Nikon.

• Notez que selon l'objectif, l'adaptateur peut limiter l'autofocus ou d'autres fonctionnalités de l'appareil photo. Pour en savoir plus, reportez-vous à l'objectif à l'emplacement *F-Mount Lenses*, disponible dans le Centre de téléchargement Nikon.

• Centre de téléchargement Nikon

<https://downloadcenter.nikonimglib.com/>

- **Ne démontez pas**

