

ご使用前に、この使用説明書をよくお読みの上、正しくお使いください。また、カメラの説明書もご覧ください。
 ・このレンズは、ニコン Z マウントのミラーレスカメラ専用です。

安全上のご注意

あなたや他人への危害や財産への損害を未然に防止するため、ご使用前に「安全上のご注意」をよくお読みの上、正しくお使いください。
 この説明書をお読みになった後は、いつでも参照できるように保管してください。

- 警告** 「死にまたは重傷を負うおそれがある内容」です。
 - 注意** 「怪我を負うことや財産の損害が発生するおそれがある内容」です。
- お守りいただく内容を、以下の図解で区分します。
- は、**死にまたは重傷を負うおそれがある内容**です。
 - ◎ は、**実行しなければならぬ内容**です。

- 警告**
- 分解禁止** 分解、修理または改造をしない
落下などによる破損で内部が露出したら、露出部に触らない
感電やけがの原因になります。
- 実行** 強くなる、弾き出る、こぼれ落ちるなどの異常時は、直ちにカメラの電源を取り外す
放置すると、発火、やけどの原因になります。
- 禁止** 水でぬらさない
ぬれた手で触らない
感電や発火の原因になります。
- 禁止** 引火、爆発のおそれがある場所では使わない
アルコール、ガソリン、可燃性スプレーなどの引火性ガスや可燃物の発生する場所で使うと、爆発や火災の原因になります。
- 禁止** レンズで直接太陽や強い光を見ない
失明や視力障害の原因になります。
- 禁止** 幼少児の手が届くところに置かない
故障やけがの原因になります。
かたむき指輪を装着して撮影すると、身体に影響を及ぼします。飲み込んだら、すぐに医療機関を受診してください。
- 禁止** 高温環境や低温環境では、直接触れない
やけどや低温やけど、凍傷の原因になることがあります。

- 注意**
- 禁止** レンズを水筒や強い衝撃を受けやすい場所に置かない
レンズの内部が壊れる原因になります。
レンズを水筒や強い衝撃を受けやすい場所に置かない
レンズの内部が壊れる原因になります。
- 禁止** レンズを水筒や強い衝撃を受けやすい場所に置かない
レンズの内部が壊れる原因になります。
レンズを水筒や強い衝撃を受けやすい場所に置かない
レンズの内部が壊れる原因になります。
- 禁止** レンズを水筒や強い衝撃を受けやすい場所に置かない
レンズの内部が壊れる原因になります。
レンズを水筒や強い衝撃を受けやすい場所に置かない
レンズの内部が壊れる原因になります。

レンズの使い方

各部の名称と機能
 左図で示されている各部の名称と機能は以下の通りです。

1 レンズフード着脱指標	このレンズにレンズフードを取り付けるときは指標を回転させてください。	詳しくは ➡
2 スームリング	このリングを回転させるとズームリングができます。 ・撮影時にレンズを緩ら出してください。	詳しくは ➡
3 焦点距離目盛	ズームリング時の焦点距離の目安として使用します。	—
4 焦点距離目盛指標	オートフォーカス時 このリングを回転させると、「フォーカス (M/A)」や「絞り」などカメラで設定した機能を使用できます。詳しくは、カメラの説明書に記述されている「 カスタムボタンの機能 」または「 カスタムボタンの機能 (撮影) 」の説明をご覧ください。	—
5 コントロールリング	マニュアルフォーカス時 このリングを回転させると手動でピント合わせができます。	詳しくは ➡
6 レンズ着脱指標	カメラにレンズを取り付けるときは指標です。	詳しくは ➡
7 CPU 番号接点	カメラとレンズの間で情報を伝達します。	—
8 レンズフード* 指標	画像に影響を及ぼす光線をカットします。レンズ蓋の保護にも役立ちます。	—
9 レンズフードセット 指標	レンズにレンズフードを取り付けるときは指標です。	詳しくは ➡
10 レンズフード取り外し指標	—	—
11 レンズキャップ (フロントキャップ)	—	—
12 レンズキャップ (リアキャップ)	—	—

* レンズフードは別売です。

カメラへの取り付け方・取り外し方

- 取り付け方**
1) カメラの電源を OFF にして、レンズのリアキャップとカメラのボディキャップを外す
- 2) カメラとレンズのレンズ着脱指標を合わせ、反時計回りにカチッと音がするまでレンズを回す

- 取り外し方**
1) カメラの電源を OFF にする
- 2) レンズ取り外しボタンを押しながら、時計回りにレンズを回して取り外す

撮影前の準備


このレンズは沈胴機構を採用しており、撮影するにはレンズを繰り出す必要があります。ズームリングを矢印の方向にカチッと音がするまで回すと、レンズが繰り出します。焦点距離目盛が 24-50 の範囲内のみ撮影できます。



- ・レンズを収納するときは、レンズを繰り出すときと逆の方向に、● の位置までズームリングを回してください
- ・レンズを繰り出す時に電源を ON にすると、警告メッセージが表示されます。撮影するときにはレンズを繰り出してください。

レンズフードの取り付け方・取り外し方

- ・レンズフード着脱指標とレンズフード取り外し指標を合わせて、●、レンズフードを外す (● の方向に回転させ、レンズフード着脱指標とレンズフードセット指標を合わせてください) (●)。

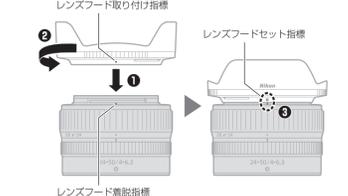

- ・レンズフード先端を強くつかむと着脱が困難になります。着脱の際は、レンズフード取り外し指標 (●) 付近を持って回転させてください
- ・取り外しは、取り外し逆の手で行ってください
- ・取外時はレンズフードを逆向きにしてレンズに取り付けられます。

内蔵フラッシュ搭載のカメラでフラッシュ撮影するときのご注意

内蔵フラッシュの光がレンズやレンズフードでさえぎられると画像に影が写り込みます。レンズフードは取り外して撮影してください。

カメラにレンズを取り付けたときのご注意

ピント合わせを行った後に、カメラの電源を OFF にして再び ON にするとピント位置が変わることがあります。ピントをあらかじめ合わせておいて被写体を持つ位置でピント撮影などは、ピントを合わせてからシャッターを押すまでにカメラの電源を OFF にしないことをおすすめします。

取り扱い上のご注意

- ・レンズフードをレンズに装着した状態で、レンズフードだけを持たないでください。
- ・CPU 情報接收は巧みでないようにご注意ください。
- ・レンズをカメラに装着してはいないときは、必ずレンズキャップを取り付けてください。
- ・レンズを保管するときは、レンズ内部を保護するために太陽光のあたらない所に保管してください。
- ・レンズを水にぬらしたり、湿気の多い場所に置かないでください。感度がサビつくなどして故障の原因になりますのでご注意ください。
- ・火の近くなど、極端に温度が高くなる場所に置かないでください。外側の一部に使用している樹脂が変形する可能性があります。
- ・極端に温度差のある場所に急にレンズを持ち込むと、レンズ内外に水蒸気が生じ、故障の原因となります。レンズをバッグやビニール袋などに入れて、周囲の湿度になじませてからお使いください。
- ・レンズを傷から守るために、持ち運ぶときはレンズケースに入れることをおすすめします。

レンズのお手入れ

- ・レンズ面を清掃する場合は、適量ほろこりを払う程度にしてください。
- ・レンズ面に指紋など油が付くついたときは、少量の無水アルコール (エタノール) や中性洗剤の薄めた液で優しく拭き取ってください。清潔な布または有孔のレンズクリーニングペーパーを使って、レンズの中心から外縁へ順番に拭いてください。その場合、拭きムラや拭き残りのないように注意してください。
- ・シンナーやベンジンなどの有機溶剤は絶対に使用しないでください。
- ・レンズ表面の汚れや傷を防ぐために、別売のニユートルカラー NC フィルターなどの使用をおすすめします。
- ・レンズを長期間使用しないときは、カビやサビを防ぐために、高温多湿の場所を避けて風通しのよい場所に保管してください。また、直射日光のあたるところ、防虫剤のあるところも避けてください。

アクセサリ

付属アクセサリ

- ・レンズキャップ LC-52B (フロントキャップ)
- ・レンズキャップ LF-N1 (リアキャップ)

使用できるアクセサリ

- ・レンズフード HB-98
- ・レンズケース CL-C4
- ・52 mm ネジ込みフィルター

UV フィルターを使用する場合

- ・フィルターは 1 枚で使用してください。
- ・フィルターは、レンズフードを取り外してから装着してください。また、円偏光フィルターの偏光効果の調節も、レンズフードを取り外した状態で行ってください。

仕様


マウント	ニコン Z マウント
焦点距離	24 mm - 50 mm
最大口径径	1:4 - 6.3
レンズ構成	10 群 11 枚 (ED レンズ 2 枚、非球面レンズ 3 枚)
画角	84° - 47° (撮像範囲 FX)
焦点距離目盛	24, 28, 35, 40, 50 mm
フォーカシング方式	IF (インターナルフォーカス) 方式
最短撮影距離	撮像面から 0.35 m (ズーム全開)
最大撮影倍率	0.17 倍 (焦点距離 50 mm)
絞りの枚数	7 枚 (円形絞)
絞りの範囲	・ 最高速 24 mm 時: f/4 - 22 ・ 焦点距離 50 mm 時: f/6.3 - 36
アタッチメントサイズ	52 mm (P=0.75mm)
寸法	約 73.5 mm (最大径) × 51 mm (レンズマウント基準面から)
質量	約 195 g

製品の外形・仕様・性能は予告なく変更することがありますので、ご了承ください。

サービスとサポート

修理サービスのご案内

インターネットでのお申込み
 コニイメーキングジャパン(株)修理センターで承ります。下記ホームページからお申込みいただけます。
<https://www.nikon-image.com/support/repair/>

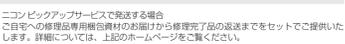

・ニコニックスアップサービスで発送する場合
 ご自宅への修理依頼書(修理依頼書)の貼付から修理完了の送達までをセットでご提供いたします。詳細については、上記のホームページをご覧ください。

■ お電話でのお申込み
 いつでもニコニックスアップサービスをご利用いただけます。詳細については、上記のホームページをご覧ください。

ニコニックスアップサービス専用フリーダイヤル
0120-02-8155

■ サービスセンターでのお手続き
 ニコンアジアのサービスセンター窓口でお見積り・受付を行います。インターネットでの事前予約が必要となります。詳細については、上記のホームページをご覧ください。

修理に関するお問い合わせ先
 株式会社コニイメーキングジャパン(株)修理センター
 〒100-0001 東京都千代田区千代田 1-1-1
0570-02-8200

・営業時間など詳細については、下記のホームページをご覧ください。
<https://www.nikon-image.com/support/repair/>
 ・ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター (03) 6702-0577 におかけください。

ニコンプラザについて
 コンプラザが、ショールーム、サービスセンター、ギャラリーを統合したニコン製品取扱の総合情報サイトです。
 ニコンアジアサービスセンターでは持ち込み修理の受け付けもしています。インターネットでの事前予約が必要となります。詳細については、下記ホームページをご覧ください。

ニコンプラザショールーム ナビダイヤル
0570-02-8080
 コニックスアップサービスセンター ナビダイヤル
0570-02-8060

・お問い合わせいただいたお申し込みは、ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター (03) 6702-0577 におかけください。

ニコンプラザの所在地、営業時間などについては、下記 URL をご覧ください。
<https://www.nikon-image.com/support/showroom/>



製品の使い方に関するお問い合わせ先
インターネットでのお問い合わせ
<https://www.nikon-image.com/support/contact/>
お電話でのお問い合わせ
0570-02-8000
 ナビダイヤル

・営業時間など詳細については、上記のホームページをご覧ください。
 ・ナビダイヤルをご利用いただける場合は、ニコンカスタマーサポートセンター (03) 6702-0577 におかけください。

ニコニイメージング会員「製品登録」のご案内
 ニコンでは製品を安全に、安心してご撮影いただくため「製品登録」へのご協力をお願いしております。ご登録いただいた製品に関するフォームアップ情報や重要なお知らせなどをメールでご案内いたします。ニコニイメージング会員登録および製品登録は以下ニコンホームページからお申し込みください。

ニコニイメージング会員のご案内
<https://www.nikon-image.com/enjoy/membership/about/>

ニコニイメージングサポートページのご案内
<https://www.nikon-image.com/support/>

最新の製品テクニカル情報や、ソフトウェアのアップデート情報をご覧ください。
 また、製品をより有効にご利用いただくために、定期的なアクセスをおすすめします。



Before using this product, please read these instructions carefully. You will also need to consult the camera manual.

This lens is intended exclusively for use with mirrorless cameras featuring a Nikon Z Mount.

For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

Keep these safety instructions where all those who use this product will read them.

▲ **WARNING:** Failure to observe the precautions marked with this icon could result in death or severe injury.

▲ **AUTION:** Failure to observe the precautions marked with this icon could result in injury or property damage.

- **Do not disassemble or modify this product.**
Do not touch internal parts that become exposed as the result of a fall or other accident.
Failure to observe these precautions could result in electric shock or other injury.
- **Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the camera power source.**
Continued operation could result in fire, burns or other injury.
- **Keep dry.**
Do not handle with wet hands.
Failure to observe these precautions could result in fire or electric shock.
- **Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.**
Failure to observe this precaution could result in explosion or fire.
- **Do not directly view the sun or other bright light source through the lens.**
Failure to observe this precaution could result in visual impairment.
- **Keep this product out of reach of children.**
Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.
- **Do not handle with bare hands in locations exposed to extremely high or low temperatures.**
Failure to observe this precaution could result in burns or frostbite.

▲ **CAUTION**

• **Do not leave the lens pointed at the sun or other strong light sources.**
Light focused by the lens could cause fire or damage to product's internal parts. When shooting backlit subjects, keep the sun well out of the frame. Sunlight focused into the camera when the sun is close to the frame could cause fire.

• **Do not leave the product where it will be exposed to extremely high temperatures for an extended period such as in an enclosed automobile or in direct sunlight.**
Failure to observe this precaution could result in fire or product malfunction.

• **Do not transport cameras or lenses with tripods or similar accessories attached.**
Failure to observe this precaution could result in injury or product malfunction.

▲ **NOTICES FOR CUSTOMERS IN THE U.S.A.**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Radio Frequency Interference Statement
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTIONS
 Modifications
 The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A. Tel: 631-547-4200

Notices for Customers in Canada
 CAN ICES-3 B / NMB-3 B

Using the Lens

Parts of the Lens: Names and Functions
 Refer to the diagram on the left edge of this sheet.

① Lens hood mounting mark	Use when attaching the lens hood.	See ●
② Zoom ring	Rotate to zoom in or out. Be sure to extend the lens before use.	See ◎
③ Focal length scale	Determine the approximate focal length when zooming the lens in or out.	—
④ Focal length mark	—	—
⑤ Control ring	—	—
⑥ Lens mounting mark	Use when mounting the lens on the camera.	See ▲
⑦ CPU contacts	Used to transfer data to and from the camera.	—
⑧ Lens hood*	Lens hoods block stray light that would otherwise cause flare or ghosting. They also serve to protect the lens.	—
⑨ Lens hood lock mark	—	See ●
⑩ Lens hood alignment mark	Use when attaching the lens hood.	—
⑪ Lens cap (front cap)	—	—
⑫ Lens cap (rear cap)	—	—

* Available separately.

Attachment and Removal

Attaching the Lens


- Turn the camera off, remove the body cap, and detach the rear lens cap.
- Position the lens on the camera body, keeping the mounting mark on the lens aligned with the mounting mark on the camera body, and then rotate the lens counterclockwise until it clicks into place.

Removing the Lens

- Turn the camera off.
- Press and hold the lens release button while turning the lens clockwise.

Before Use

The lens is retractable and must be extended before use. Rotate the zoom ring as shown until the lens clicks into the extended position. Pictures can only be taken when the focal length mark points to positions between 24 and 50 on the focal length scale.

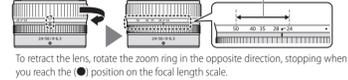

To retract the lens, rotate the zoom ring in the opposite direction, stopping when you reach the ● position on the focal length scale.

If the camera is turned on with the lens retracted, a warning will be displayed. Extend the lens before use.

Align the lens hood mounting mark with the lens hood alignment mark (●) and then rotate the hood (●) until the mounting mark is aligned with the lens hood lock mark (●).



When attaching or removing the hood, hold it near the lens hood alignment mark (●) and avoid gripping the front of the hood too tightly. The hood can be reversed and mounted on the lens when not in use.

Using the Lens on Cameras with a Built-In Flash
 Shadows will be visible in photos where the light from the built-in flash is obscured by the lens or hood. Remove the lens hood before shooting.

When the Lens is Attached
 The focus position may change if you turn the camera off and then on again after focusing. If you have focused on a pre-selected location while waiting for your subject to appear, we recommend that you do not turn the camera off until the picture is taken.

Precautions for Use

- Do not pick up or hold the lens or camera using only the lens hood.
- Keep the CPU contacts clean.
- Replace the lens caps when the lens is not in use.
- To protect the interior of the lens, store it out of direct sunlight.
- Do not leave the lens in humid locations or in locations in which it may be exposed to moisture. Rusting of the internal mechanism can cause irreparable damage.
- Do not leave the lens next to open flames or in other extremely hot locations. Extreme heat could damage or warp exterior parts made from reinforced plastic.
- Rapid changes in temperature may cause damaging condensation inside and outside the lens. Before taking the lens from a warm to a cold environment or vice versa, place it in a bag or plastic case to slow the change in temperature.
- We recommend that you place the lens in its case to protect it from scratches during transport.

Lens Care
 Removing dust is normally sufficient to clean the glass surfaces of the lens. Smudges, fingerprints, and other oily stains can be removed from the lens surface using a soft, clean cotton cloth or lens cleaning tissue lightly dampened with a small amount of ethanol or lens cleaner. Wipe gently from the center outwards in a circular motion, taking care not to leave smears or touch the lens with your fingers.

Never use organic solvents such as paint thinner or benzene to clean the lens.

Neutral Color (NC) filters (available separately) and the like can be used to protect the front lens element.

If the lens will not be used for an extended period, store it in a cool, dry location to prevent mold and rust. Do not store in direct sunlight or with naphtha or camphor moth balls.

Accessories

Supplied Accessories
 • LC-52B Lens Cap (front cap)
 • LF-N1 Lens Cap (rear cap)

Compatible Accessories
 • HB-98 Lens Hood
 • CL-C4 Lens Case
 • 52 mm screw-on filters

Filters
 Use only one filter at a time.
 Remove the lens hood before attaching filters or rotating circular polarizing filters.

Specifications

Mount Nikon Z mount
 Focal length 24 - 50 mm
 Maximum aperture f/4 - 6.3

Lens construction 11 elements in 10 groups (including 2 ED elements and 3 aspherical elements)
 Angle of view • FX format: 84° - 47°
 • DX format: 61° - 31° 30'

Focal length scale Graduated in millimeters (24, 28, 35, 40, 50)
 Focusing system Internal focusing system

Minimum focus distance 0.35 m (1.15 ft) from focal plane at all zoom positions

Maximum reproduction ratio 0.17x (50 mm zoom position)

Diaphragm blades 7 (rounded diaphragm opening)
 Aperture range • 24 mm zoom position: f/4 - 22
 • 50 mm zoom position: f/6.3 - 36

Filter attachment size 52 mm (P = 0.75 mm)

Dimensions Approx. 73.5 mm (2.9 in.) maximum diameter x 51 mm (2.1 in.) (distance from camera lens mount flange when lens is retracted)
 Approx. 195 g (6.9 oz)

Nikon reserves the right to change the appearance, specifications, and performance of this product at any time and without prior notice.

Avant d'utiliser ce produit, veuillez lire ces instructions attentivement. Vous devez également consulter le manuel de l'appareil photo.

Cet objectif est destiné exclusivement aux appareils photo hybrides dotés d'une monture Nikon Z.

Pour votre sécurité

Afin d'éviter de provoquer des dommages matériels ou de vous blesser ou de blesser un tiers, lisez intégralement « Pour votre sécurité » avant d'utiliser ce produit.

Conservez ces consignes de sécurité dans un endroit facilement accessible à tous ceux qui pourraient en servir de ce produit.

▲ **AVERTISSEMENT:** le non-respect des consignes indiquées par cette icône peut vous exposer à un danger de mort ou à de graves blessures.

▲

